

Chapter 10 The Hunter 16 Editor

This chapter describes EDIT, the text editor supplied as standard with **Hunter 16**.

10.1 Introduction

EDIT is quick and easy to use, providing a wide range of screen-editing functions. You can use EDIT to write, alter or examine standard ASCII text files, such as reports, correspondence, orders, etc. This is particularly useful if you need to write 'on the move' - in trains, planes, hotel rooms, etc. You can print the text when you return to your office, or even print it on the move using the **Hunter 16 Printer Sidebox** (see Chapter 13).

You may also use it to edit other text files such as CONFIG.SYS, batch files such as AUTOEXEC.BAT, and GWBASIC programs that have been saved in ASCII form (ie by using the command SAVE "name" A).

10.2 Selecting EDIT

To use the editor, select MS-DOS command node and type:

```
EDIT [filename] [options] [RETURN]
```

Where filename is the name of the file to edit or create (see section 10.3) and options can be used to change behaviour of the editor (see section 10.4). For example:

```
EDIT C:\DATA\MYFILE.TXT /KEY /60 [RETURN]
```

10.3 File handling

If you specify a filename in the EDIT command, and the file exists already, it will be loaded into memory for you to edit. If the filename includes a DOS drive or pathname, this drive or directory will also be used as the default drive and directory for all file operations within EDIT.

If you do not specify a drive or pathname, the current drive and directory are assumed. If you omit the extension, TXT will be assumed. If you do not specify a filename, EDIT will assume the filename `noname.txt`.

EDIT uses the free DOS memory for the file you are editing, so this dictates the maximum size file you can edit. If you attempt to edit a file which is too large, the following message will be displayed:

```
Disk read incomplete- file too big
```

and you will be able only be able to edit the first part of the file. If you want to do this, make sure that you save it with a different name, or you will lose the remainder of the file.

If your edits increase the size of the file to the limit of available memory, you will see the message:

```
Short of memory- save file NOW!
```

If you want to continue editing the file, either split it in two (by using the BLOCK WRITE command), or delete some text before carrying on.

Editing takes place in memory, so it has no effect on the disk file until you use the SAVE command. You can save the file with the same name, or use a different name, drive or path.

10.4 EDIT options

You can alter various aspects of EDIT's behaviour by including options in the EDIT command. These are as follows:

Option	Description
/IGNORE	When searching for text, EDIT will normally not match capital and small letters. Use this option to ignore case during searches, so that, for example, searching for the will match the, The, THE, etc.
/LF	EDIT normally stores the [RETURN] key as a CR character (ASCII 0DH). Use this option to store it as CR-LF (ASCII 0DH, 0AH).

<code>/WRAP</code>	Lines which are longer than the LCD will normally extend to the right of it, so you must use the cursor keys to view the line ends. Use this option to turn wrapping on, so that text will be formatted to fit in the LCD window.
<code>/TAB</code>	TABs are normally stored in the file as a number of spaces. Use this option to store them as TAB characters (ASCII 09H).
<code>/60</code>	EDIT normally uses the 8x6 font, displaying 8 lines of 40 characters on the LCD screen. Use this option to select the smaller 6x4 font, to display 10 lines of 60 characters.
<code>/KEY</code>	EDIT normally uses the current keyboard layout. Use this option to force the standard keyboard layout.
<code>/BROWSE</code>	EDIT normally allows editing. Use this option to select browse mode, which prevents editing.

To select an option, include it in the EDIT command after the filename, separated by a / character. You can type options as capitals or small letters, abbreviate them by supplying just the first one or two characters, and can use them in any combination or order, as long as they are separated by / characters.

For example, to select a 60-character screen, force the default keyboard layout, and disable wrapping, type:

```
EDIT filename /60/ KEY/WRAP[RETURN]
```

or even:

```
EDIT filename /6/K/W[RETURN]
```


You can also select some of these options from within EDIT by using the SET command (see later).

You can also change the line wrap, font, line delimiter and case ignore settings by using the SET command (see later), once EDIT has loaded.

10.5 Editing screen

The normal mode for the LCD displays 8 lines of 40 characters, but the 60 option displays 10 lines of 60 characters.

On entry to EDIT (in the normal 40-character mode), if the specified file does not already exist, the screen will look like this:

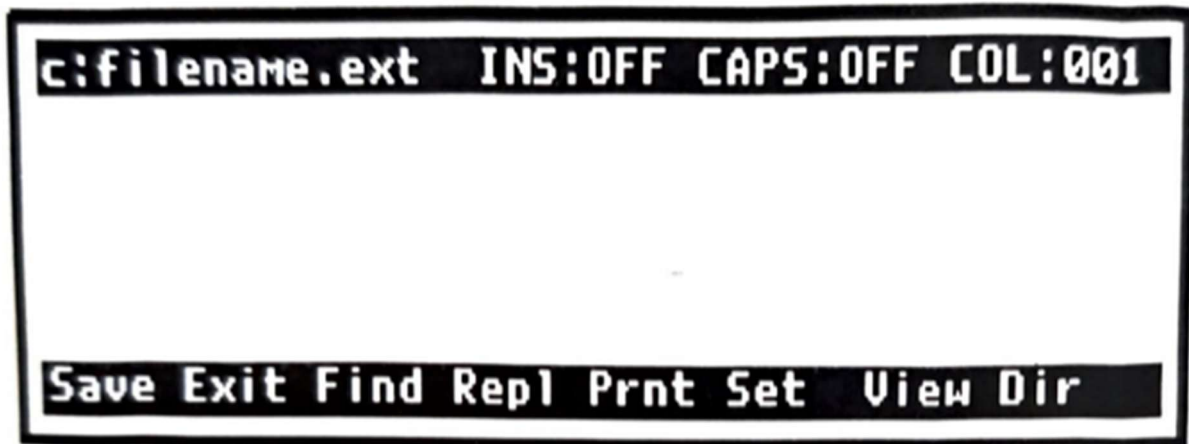

The top line is the Status Line. It contains the following information:

`c:filename.ext` This shows the name of the file you are editing.

`INS: ON` This shows whether character insert is on or off.

If insert is on, any text typed will be inserted at the cursor position and any text already present will move to make room.

With insert off, the display will show: `INS: OFF`
In this case, typing will overwrite existing text.

`CAPS: OFF` This shows the state of the CAPS LOCK function.

NOTE: In CAPS LOCK mode, alphabetic keys type capitals unless used with [Shift], when they type lowercase letters. This is NOT a 'Shift Lock' function.


COL: 01

This shows the column of the virtual screen which the cursor is in. It is in the range 1 to 255. As the cursor moves, it is kept updated and may be used for aligning tables, indents in text, etc.

Column 1 is the left of the virtual screen. Column 80 is the extreme right of the virtual screen.


The bottom line is the **Function Line**. This shows the commands performed by typing the function keys ([PAW][1], [PAW][2] etc). These and the other editing functions are described later in this chapter. The function line is also used to display prompts and messages.

The lines between the status line and function line are called the Edit Area. The edit area displays the text you are working with. When you enter EDIT, if the file exists, you will see its first few lines in the edit area, like this:

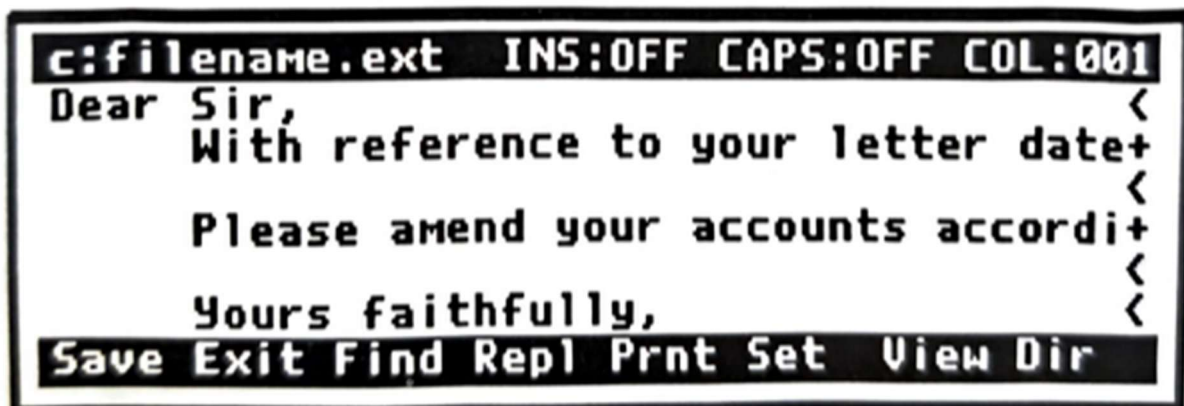

This is the display with line wrapping disabled, which shows only the first 39 characters of any lines which are wider than the LCD screen.

If you have specified the WRAP option, any lines which are longer than the width of the LCD will be continued on the next LCD line, like this:

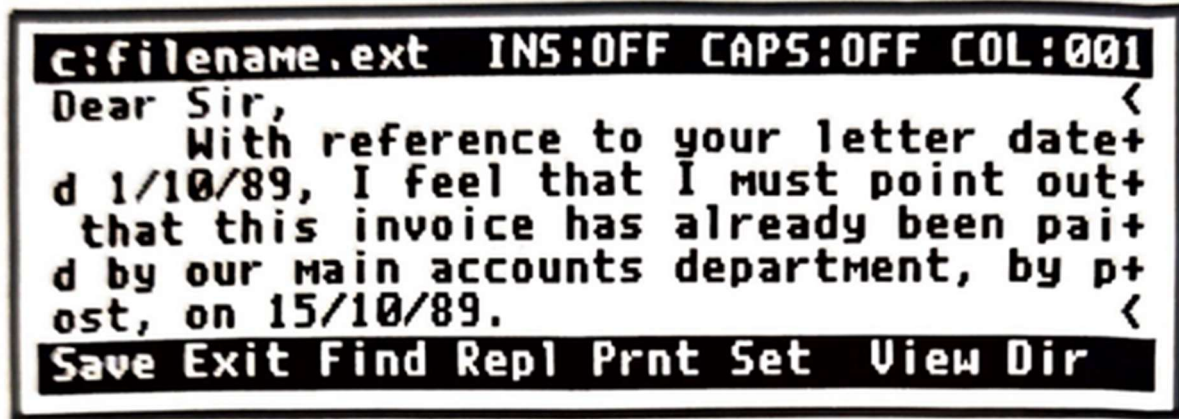

The last column of the edit area contains characters which indicate the line length, as follows:

Character	Significance
<	no more data to right (ie all of the line is visible on this line of the LCD)
+	more data to the right (or on next screen line, if line wrapping is on)
B	line contains the block start marker (described later)
K	line contains the block end marker (described later)

If there is more data to the right, you can view it with line wrapping disabled by using the [Right] key.

10.6 Facilities

The most important facility provided by EDIT is text entry. Text is entered at the cursor position, which can be moved at will through the file. You can enter lines of up to 232 characters; if a line is longer than the width of the LCD, with wrapping enabled, it will simply continue on the next screen line.

To end a line, use [RETURN]; this is displayed as [Left pointing triangle]. This is normally stored in the file as CR (0DH), but the LF option will make EDIT store it as the two characters CR and LF (0DH, 0AH).

Remember that you're working with a temporary copy of the disk file: the disk file is not updated until you use the SAVE command. This means that you can abandon any changes you have made by leaving EDIT without saving the file.

Commands are executed by typing certain keypad, function and control keys. These provide the following facilities:

Typing Mode

CHARACTER INSERT	Switch between overwrite mode (typed characters replace characters at the cursor) and insert mode (typed characters are inserted before text at the cursor)
------------------	---

Cursor movement

CURSOR KEYS	Move up/down/left/right a character/line at a time
WORD SKIP	Move left/right a word
TAB	Move right to the next tab stop (normally every 8 columns)
LINE START/END	Move to the start or end of the line

Screen movement

PAGE UP/DOWN	Scroll up/down a screenful
FILE START/END	Scroll to the start/end of the file

Searching

FIND	Move to the next occurrence of the specified text
REPLACE	Replace the next Occurrence of the specified text

Deleting text

DELETE RIGHT	Delete the character at cursor
DELETE LEFT	Delete the character to the left of the cursor
WORD DELETE	Delete from cursor to the next word
DELETE LINE	Delete the current line
UNDELETE	Reverse the last simple delete operation (not BLOCK DELETE)

Block operations

BLOCK MARK	Define block start/end
------------	------------------------

BLOCK MOVE	Move marked block
BLOCK COPY	Copy marked block
BLOCK DELETE	Delete marked block
BLOCK WRITE	Write marked block to another file

File operations

SAVE	Save the file to disk and exit
EXIT	Exit without saving the file
READ FILE	Insert another disk file at cursor position
DELETE FILE	Delete a file
DIRECTORY	Display a directory

Printing

PRINT SCREEN	Print edit area to COM1
VIEW FILE	Display overview of file contents

Settings

COMMAND OPTIONS	Specify options in EDIT command (see section 10.4)
SET	Change settings from within EDIT

The words in capitals are the command names, which are used to identify the commands throughout this chapter. The keystrokes used to invoke the commands are summarised in section 10.7. The commands are described in more detail in the remainder of this chapter.

NOTE: EDIT only uses a small area of the CGA display, corresponding to the area of the LCD screen, so there is no point in using the viewing keys ([PAW][UP], [PAW][RIGHT], etc) to move the LCD window over the CGA as the rest of the CGA is blank; use the cursor and scrolling keys instead.

10.7 The commands

The editing facilities are invoked by typing special keys, as follows. Otherwise, the keyboard behaves exactly as described in Chapter 5.

To interrupt most commands, press the [Esc] key. (The few exceptions are indicated in the individual command descriptions.)

10.7.1 Control Keys

You can type editing commands by using Control codes ([Ctrl][A]), [Ctrl][B], etc), which are based on those used in the industry-standard wordprocessor WordStar:

Key	Command
[Ctrl][A]	Skip left
[Ctrl][B]	Not used
[Ctrl][C]	Page down
[Ctrl][D]	Cursor right
[Ctrl][E]	Cursor up
[Ctrl][F]	Skip right
[Ctrl][G]	Delete right
[Ctrl][H]	Delete left
[Ctrl][I]	TAB
[Ctrl][J]	Not used
[Ctrl][K]	Block commands
[Ctrl][L]	Not used
[Ctrl][M]	CR
[Ctrl][N]...	Not used
[Ctrl][P]	
[Ctrl][Q][S]	Line start
[Ctrl][Q][D]	Line end
[Ctrl][R]	Page up
[Ctrl][S]	Cursor left
[Ctrl][T]	Word delete
[Ctrl][U]	Undelete
[Ctrl][V]	Character insert
[Ctrl][W]	File start
[Ctrl][X]	Cursor down
[Ctrl][Y]	Line delete
[Ctrl][Z]	File end

10.7.2 Function Keys

The commands performed by the function keys ([PAW][1],[PAW][2] etc) are as follows.

Key	Command
-----	---------

[PAW][1]	Save file
[PAW][2]	Exit
[PAW][3]	Find
[PAW][4]	Replace
[PAW][5]	Print screen
[PAW][6]	Set
[PAW][7]	View file
[PAW][8]	Directory
[PAW][9]	Not used
[PAW][0]	Not used

Their functions are also indicated by legends on the bottom line of the screen (the Function Line).

10.7.3 Other Keys

A number of other keys also have special effects within EDIT:

Key	Command
[Ins]	Character insert
[Tab]	TAB
[Delete]	Delete left
[Del]	Delete right
[PgUp]	Page up
[PgDn]	Page down
[Home]	File start
[End]	File end

NOTE: NUM LOCK mode is not available while using EDIT; the [Num Lock] key is ignored.

BLOCK COPY: [Ctrl][K][C]

Form

[Ctrl][K][C]

Use

BLOCK COPY copies a block defined by using BLOCK START and BLOCK END, to the current cursor position.

Notes

This command does not affect the original block, except that the copy of the block is left marked.

You cannot copy a block into itself ie the cursor must not be within the block when you select the BLOCK COPY command.

If you attempt to copy a block when there is no block defined, you will see the following error message:

No block marked... Press any key

Press any key to carry on.

BLOCK DELETE: [Ctrl][K][Y]

Form

[Ctrl][K][Y]

Use

BLOCK DELETE deletes the block defined by using BLOCK START and BLOCK END.

Notes

BLOCK DELETE removes the block text and the block markers from the file. The cursor may be positioned within the block; its position is immaterial.

You cannot reverse a BLOCK DELETE by using the UNDELETE command.

If you attempt to delete a block when there is no block defined, you will see the following error message:

No block marked... Press any key

Press any key to carry on.

BLOCK MOVE: [Ctrl][K][V]

Form

[Ctrl][K][V]

Use

BLOCK MOVE moves the block defined by using BLOCK START and BLOCK END, to the current cursor position.

Notes

The block remains defined ie it is still marked.

You cannot move a block into itself ie the cursor must not be within the block when you select the BLOCK MOVE command.

If you attempt to move a block when there is no block defined, you will see the following error message:

No block marked... Press any key

Press any key to carry on.

BLOCK START/END: [Ctrl][K][B], [Ctrl][K][K]

Form

[Ctrl][K][B] BLOCK START

[Ctrl][K][K] BLOCK END

Use

BLOCK START and BLOCK ND are used to define a block of text so it can be moved, deleted, copied, or written using the other block commands.

Notes

The extent of the block is shown by reversing the text within it.

If you have defined the block start but not the block end, the block end is assumed to be the end of the current line (ie the next CR). To define a different end, use the BLOCK END command.

The start of a block is also indicated by a B in the last column of the screen; the end is marked by a K.

The start of a block must come before the end! If not, when you try to use the block, you will see the error message:

No block marked... Press any key

Press any key to carry on.

BLOCK WRITE: [Ctrl][K][W]

Form

[Ctrl][K][W]

Use

BLOCK WRITE writes a copy of the block defined by using BLOCK START and BLOCK END, to a named file. It prompts you for the name by displaying:

Write block file name>

Type the filename to write to. EDIT will assume the extension .TXT if you do not type one. If you do not specify a drive or path, EDIT will write the file to the current drive and directory.

Notes

The block remains unaffected by use of BLOCK WRITE; it is not moved and is still marked.

The saved file overwrites any existing file with the same name, without warning.

If you attempt to write a block when there is no block defined, you will see the following error message:

No block marked... Press any key

Press any key to carry on.

CHARACTER INSERT: [Ins]

Form

[Ins] or [Ctrl][V]

Use

CHARACTER INSERT switches between insert mode and overwrite mode. The mode is shown on the top line. For example:

INS: ON

In overwrite mode, characters entered replace (overwrite) existing text. In insert mode, text is inserted before the cursor position. This is useful for adding characters to the middle of a line.

Notes

There are two exceptions to the above rule: [RETURN] and the TAB command.

In overwrite mode, [RETURN] simply moves the cursor to the beginning of the next line and [Tab] moves to the next tab stop (or inserts spaces, if at the end of a line). However, if the cursor is on a [RETURN], any characters typed will be inserted before [RETURN] rather than overtyping it.

In insert mode, [RETURN] inserts a [RETURN] character just like any other character, causing the line to break at the cursor, while [Tab] inserts a TAB character or sufficient spaces to move to the next tab stop (depending on the use of the TAB option; see section 10.4).

Even in overwrite mode, both keys will insert text if the cursor is at the end of the file.

CURSOR KEYS: [Up], [Down], [Left], [Right]

Form

[Up]	or [Ctrl][E] – CURSOR UP
[Down]	or [Ctrl][X] – CURSOR DOWN
[Left]	or [Ctrl][S] – CURSOR LEFT
[Right]	or [Ctrl][D] – CURSOR RIGHT

Use

These keys move the cursor a character or line at a time in the indicated direction. They may be used to move the cursor to any character within the text, where you can begin typing, deleting or other editing operations.

They cannot move the cursor to before the beginning of the file or after the end of the file, but can be used to move past the end of a line.

Notes

CURSOR LEFT will move to the end of the previous line if the cursor is at the start of the line. Similarly, CURSOR RIGHT will move to the start of the next line if the cursor is at the end of a line.

[Shift][Left], [Shift][Right], [Shift][Up] and [Shift][Down] are normally used to move the LCD screen window over the virtual screen, as described in section 5.5.3, but this is not necessary within EDIT.

DELETE FILE: [Ctrl][K][E]

Form

[Ctrl][K][E]

Use

DELETE FILE deletes a file from the current or specified directory.

It displays the prompt:

Erase file>

Type the filename, including a drive or path if required. If you simply type a filename, the current directory will be assumed.

To prevent the deletion, press [Esc] before the disk access.

DELETE LEFT/RIGHT: [Del arrow], [Del]

Form

[Del arrow] or [Ctrl][H] - DELETE LEFT

[Del] or [Ctrl][G] - DELETE RIGHT

Use

DELETE LEFT deletes the character to the left of the cursor, then moves the cursor left.

DELETE RIGHT deletes the character under the cursor, without moving the cursor.

Notes

If you delete a [RETURN], this will join that line with the next.

WARNING: If you hold down a delete key, it will 'auto-repeat', storing delete commands, so that when you release the key, several more deletes will be performed. Do not hold a Delete key down. Instead, use single key depressions, LINE DELETE or BLOCK DELETE.

To insert the deleted text at the cursor, use UNDELETE.

DIRECTORY: [PAW][8]

Form


[PAW][8]

Use

DIRECTORY displays a directory of the current or specified drive and directory. It displays a prompt like this:

Directory>

To list the current directory just type [RETURN]. To list another directory, type its pathname, followed by [RETURN]. To list only certain files, use wildcards (see your MS-DOS manual). This displays a directory in the following form:

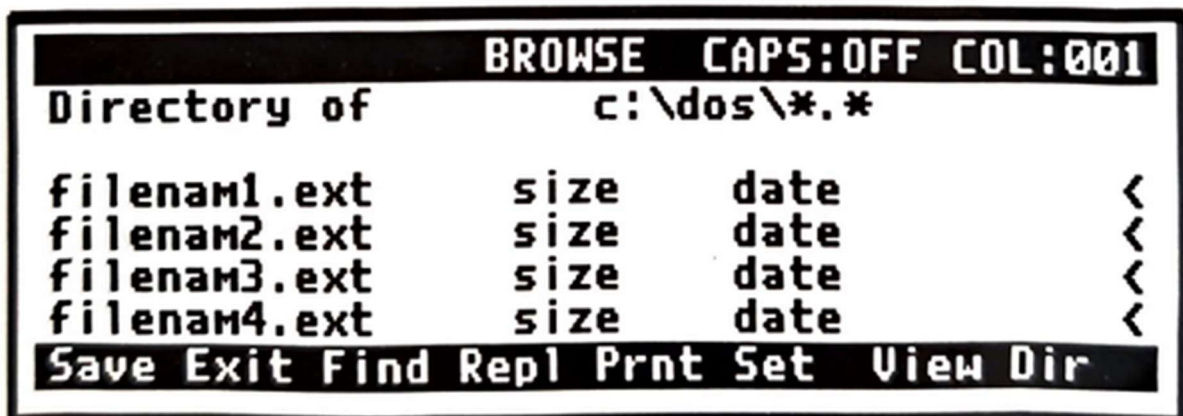

Use the [PgUp] and [PgDn] keys to scroll the directory. Press [PAW][8] or [PAW][2] to return to editing.

EXIT: [PAW][2]

Form

[PAW][2]

Use

EXIT quits EDIT. If you have not saved the file since making any changes, it displays the following prompt:

Exit editor (Y/N) ?

Press [N] to continue editing.

Press [Y] to leave the editor without saving the file. Note that if you do this, any changes you have made to an existing file will be lost; if you were creating a file, it will be lost entirely.

To save the text, use the SAVE command.

FILE START/END: [Home], [End]

Form

[Home] or [Ctrl][W] - FILE START

[End] or [Ctrl][Z] - FILE END

Use

These commands move the cursor to the very beginning or end of the file.

FIND: [PAW][3]

Form

[PAW][3]

Use

FIND is used to search the file for a specified string. Searching starts from the cursor position and continues to the end of the file. To search the whole file, move to the start first (by using the FILE START command).

FIND displays the following prompt on the function line:

Find>

Or, if you have already specified a search string, it will be displayed for you to edit. Type the text to look for (up to 50 characters) or edit the displayed text, then press [RETURN]. Be exact, as FIND will only find an exact match (including use of spaces). Normally, FIND will consider capital and small letters as different, but you can change this by using the IGNORE option in the EDIT command, or by using the SET command to select case-ignore. If the text is split over the end of a screen line FIND will still find it correctly.

While searching is in progress the following message will be displayed on the function line:

Searching...

If an exact match is found then the cursor is moved to its first character. If no match is found, the following message is displayed on the function line:

Search failed...

and the cursor remains where it was.

Notes

To halt the search, press [Esc].

To find and replace, use the REPLACE command.

LINE DELETE: [Ctrl][Y]

Form

[Ctrl][Y]

Use

LINE DELETE deletes the line on which the cursor is placed. The cursor can be anywhere within the line.

Note that LINE DELETE only deletes a single screen line. To delete an entire sentence or paragraph, you will probably need to use it several times.

LINE START/END: [Ctrl][Q][S], [Ctrl][Q][D]

Form

[Ctrl][Q][S] - LINE START

[Ctrl][Q][D]- LINE END

Use

These keys move the cursor to the beginning or end of the current line.

PAGE UP/DOWN: [PgUp], [PgDn]

Form

[PgUp] or [Ctrl][R] - PAGE UP

[PgDn] or [Ctrl][C] - PAGE DOWN

Use

These keys are used to scroll the text, a screenful (six lines) at a time. (This is quicker than using [Up] and [Down])

If the cursor is not on the bottom screen line, PAGE DOWN will put it there. If the cursor is on the bottom line, PAGE DOWN will move the LCD screen six lines nearer the end of the file.

Similarly, PAGE UP will place the cursor on the top screen line, or move the LCD screen 6 lines nearer the start of the file.

Notes

These commands are useful for scanning quickly through files.

PRINT SCREEN: [PAW][5]

Form

[PAW][5]

Use

Prints the current contents of the edit area to COM1.

READ FILE: [Ctrl][K][R]

Form

[Ctrl][K][R]

Use

READ FILE inserts a specified file at the cursor position. It displays the following prompt:

Read block file name>

READ FILE will normally read a file from the current directory. To read a file from a different directory include the drive and/or path before the filename.

If you do not specify an extension, .TXT will be assumed.

Notes

If the read fails for any reason (eg no such file or drive not ready), an error message will be displayed. Refer to section 10.8 for details.

REPLACE: [PAW][4]

Form

[PAW][4]

Use

REPLACE is used to search the file for a specified string and replace it with a second string. Searching starts from the cursor position and continues to the end of the file. To search the whole file, move to the start first (by using the FILE START command).

REPLACE displays the following prompt on the function line:

Find>

Or, if you have already used REPLACE or FIND, it will display the previous search string for you to edit. Type the text to look for (up to 50 characters), or edit the displayed text, and press e. Be exact, as REPLACE will only find an exact match (including use of spaces). Normally, REPLACÉ will consider capital and small letters as different, but you can change this by using the IGNORE option in the EDIT command, or by using the SET command to select case-ignore. If the text is split over the end of a screen line REPLACE will still find it correctly.

REPLACE then prompts for the replacement text:

Replace>

If you have already use REPLACE, it will display the previous replace string 50 characters, for you to edit. Type or edit the string, which may be up to ending with [RETURN] and searching will being.

While the searching function is in progress the following message will be displayed on the function line:

Searching...

If an exact match is found then the found string is replaced by the replacement string cursor and the cursor is moved to its first character.

If no match is found, the following message is displayed on the function line:

Replace failed...

and the cursor remains where it was.

Notes

To halt the search, press [Esc].

To search without replacing, use the FIND command.

SAVE: [PAW][1]

Form

[PAW][1]

Use

SAVE saves the text to a disk file. It displays the following prompt:

File name> filename.ext

Where **filename.ext** is the filename specified in the EDIT command or a previous SAVE command. To save the file with this name, just press [RETURN]. To save it with a different name, edit the displayed name and press [RETURN]. Note that if you do not specify a path, this will save the file to the current directory.

If you do not specify an extension, .TXT will be assumed.

Notes

If the save fails for any reason (eg disk full or file is read-only), an error message will be displayed. See section 10.8 for details.


SET: [PAW][6]

Form

[PAW][6]

Use

This command can be used to examine or change the optional settings which change the behaviour of EDIT. It displays a menu like this:

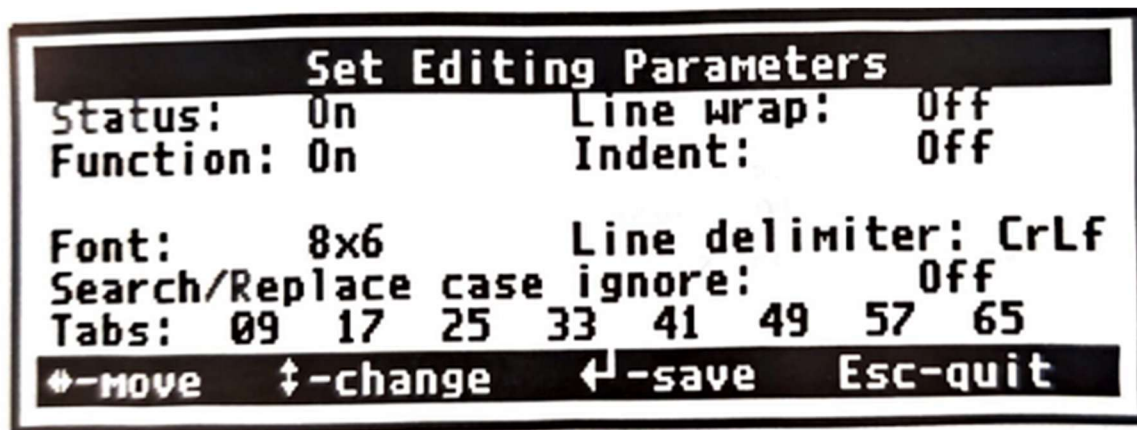

To change a setting, press [Left] or [Right] to move to it, then press [Up] or [Down] until the setting is correct.

When you have finished, press [RETURN] to use the change settings, or [Esc] to ignore them.

The options are as follows:

Status	Use the top line for a status display (On) or for text (Off). The default is On.
Function	Use the top line for function key display (On) or for text (Off). The default is On.
Line wrap	Display just the first 39 characters of each line (Off) or wrap each line onto the next screen LCD line (On). The default is Off.
Indent	Move the cursor to column 1 each time is pressed (Off) or to a specified column (1..9) in insert mode. The default is Off.

Font	Use the standard text font (8x6) to display 8 lines of 40 characters or use the compressed font (6x4) for 10 lines of 60 characters. The default is 8x6.
Line delimiter	When the user presses [RETURN], place a CR character or a CR plus LF in the file.
Search/Replace Case ignore	Require an exact match (Off) or ignore case (On) for SEARCH and REPLACE functions. The default is Off.
Tabs	Defines the 10 tab stops that are used when you press the TAB key ([Ctrl][I] or [TAB]). Tab stops are initially set every 8 columns (ie 9, 17, 25, 33 etc).

Notes

You can also specify the line wrap, font, line delimiter and case ignore settings by using EDIT command line options (see section 10.4).

If you have already used TABs in the file, changing the tab settings will move any TABs which were entered as TAB characters, but will have no effect on TABs which were entered as spaces. (See the description of the TAB command for more details.)

TAB: [TAB]

Form

[TAB] or [Ctrl][I]

Use

TAB moves the cursor to the next tab stop, making it easier to indent text and lay out tables. Tab stops are normally set every 8 characters ie at column 9, 17, 25, etc, but you can change the spacing by using the SET command. (If there is no tab stop to the right of the cursor, the cursor will not move.)

The way that TAB moves the cursor depends on the typing mode and use of the TAB option in the EDIT command.

In insert mode, TAB normally inserts a which moves the cursor (and text to the right of the cursor) to the next tab stop on the current line. However, if tabs have been turned off by using the TAB option in the EDIT command (see section 10.4), TAB will instead insert sufficient spaces to move to the next tab stop.

In insert mode, TAB normally inserts sufficient spaces to move the cursor (and text to the right of the cursor) to the next tab stop on the current line. However, if tabs have been turned on by using the TAB option in the EDIT command (see section 10.4), TAB will simply insert a TAB character (ASCII 09H), which moves the cursor and text to the next tab stop.

In overwrite mode, TAB normally simply moves the cursor to the next tab position on the current line without moving the text or inserting anything in the file, but it will insert sufficient TAB characters or spaces (depending on use of the TAB option) to move to the next tab stop if that is beyond the current line end.

Notes

TABs inserted as TAB characters will move if the tab stops are moved by using the SET command. TABs inserted as spaces will not move.

Another way to indent text is to use the indent option provided by the SET command.

UNDELETE: [Ctrl][U]

Form

[Ctrl][U]

Use

Inserts the text deleted by the previous DELETE LEFT, DELETE RIGHT, LINE DELETE or WORD DELETE command. This will reverse the effect of the command if the cursor is in the same place.

Notes

UNDELETE simply inserts the text deleted by the previous delete command. It will NOT reverse a BLOCK DELETE command.


VIEW FILE: [PAW][7]

Form

[PAW][7]

Use

VIEW FILE tells EDIT to 'zoom' the LCD, to show a graphics representation of the file contents starting from the current LCD screen position, like this:

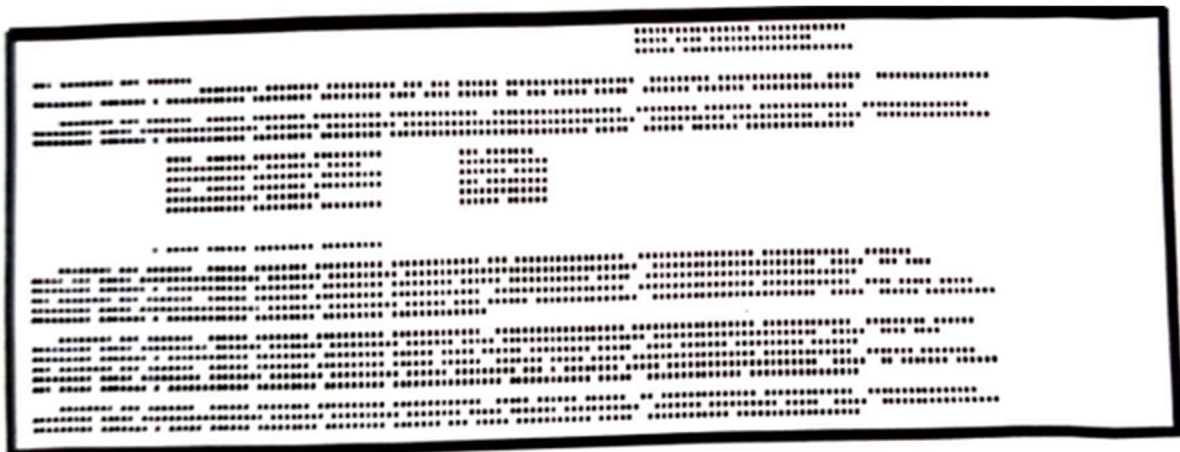

This shows each non-space character as one black plus one white pixel, and each space character as two white pixels, allowing the LCD to represent up to 120 characters per line (if a line is longer than this, the excess characters are not displayed.) Each line of pixels is separated from the next by a blank line, so the LCD can show the contents of 32 text lines.

In VIEW FILE mode, you cannot use any other commands. To return to the normal view and continue editing, press [Esc] or [RETURN].

WORD DELETE: [Ctrl][T]

Form

[Ctrl][T]

Use

If the cursor is within a word, WORD DELETE deletes from the cursor to the start of the next word.

If the cursor is between words, WORD DELETE deletes from the cursor to the start of the next word.

Notes

To insert the deleted text at the cursor position, use UNDELETE.

WORD SKIP: [Ctrl][A], [Ctrl][F]

Form

[Ctrl][A] - SKIP LEFT

[Ctrl][F] -SKIP RIGHT

Use

SKIP RIGHT moves the cursor to the start of the next word, while SKIP LEFT moves the cursor to the start of the previous word.

Notes

These keys provide a quick way to move around text.

10.8 Error Messages

EDIT displays error messages on the last line. They are as follows:

beep

You have typed an illegal answer to a prompt, or used a command when it is not valid, such as deleting when in BROWSE mode, or typed an unrecognised command, such as [Ctrl][B].

Browse mode only

You have attempted to edit a file after loading it with the browse option (/BROWSE). If you want to edit it, EXIT, then repeat the EDIT command but without the /BROWSE option.

Copy invalid: cursor within block

You have tried to copy a block into itself. Move the cursor outside the block and try again.

Disk full... file truncated

There was not enough room to fit the whole file on the specified disk, so only part of it has been written. If you want to save the whole file, either use another disk, or delete some files first (using DELETE FILE).

Disk read failed

EDIT could not read the disk: it may be corrupt or not ready.

Disk read incomplete- file too big

There is insufficient room in memory to load the entire specified file, so as much as would fit into memory has been loaded. You may now edit this part of the file as long as your edits do not increase its size, but when you SAVE it, specify a new filename or you will overwrite the original file, losing that part which did not load. (To load the entire file try increasing the free DOS memory, for example by removing any installed TSR software.)

Disk write failed

EDIT could not write to the disk. For example, there may already be a write-protected file with the specified name, or the drive may not be ready. Press [Esc] to abort the command and continue using EDIT.

File not found

EDIT could not find the file specified in the EDIT command. EXIT, then check your typing. Remember that the filename must come before any options.

Filename contains invalid chars

Self-explanatory. Refer to your MS-DOS manual for full details of file names.

Invalid directory path

Self-explanatory. Refer to your MS-DOS manual for full details of path names.

Invalid filename

Self-explanatory. Refer to your MS-DOS manual for full details of file names.

Invalid option

You have included an option in an EDIT command which is not one of those specified in section 10.4. Remember that options come after the filename and must be separated by / characters.

Move invalid: cursor within block

You have tried to move a block into itself. Move the cursor outside the block and try again.

No block marked... press any key

You have tried to use a block command (BLOCK COPY, MOVE, DELETE or WRITE) but have not defined the block. Press any key to continue. Use BLOCK START and BLOCK END to define the block.

No files found

You have specified a pathname in the DIRECTORY command that does not match any files.

Replace failed...

EDIT could not find the specified text in the file, or there was insufficient room in memory to make the replacement. Remember that searching starts at the cursor position and the specified text must match exactly. If you think the problem may be with capitalisation, use the case-ignore option (SET command).

Search failed...

EDIT could not find the specified text in the file. Remember that searching starts at the cursor position and the specified text must match exactly. If you think the problem may be with capitalisation, use the case-ignore option (SET command).

Searching...

This is not an error message; it simply indicates that EDIT is searching for the specified text.

Short of memory- save file NOW!

There is no room in memory for any more text. If you can, make more room by deleting some text. If you wish to add more text, you must split the file in two (using BLOCK WRITE), then load and edit each half separately. If this is not possible, you must save the file (SAVE command), increase the free DOS memory (for example by removing any installed TSR software), then start editing again.