

Part Number: PT944-35253**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Organizer
2	1	Lantern
3	1	Care Card

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		
4		
5		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	No need any protection
Special Tools	No tool needed.

General Applicability

MY24 and newer Tacoma/HV, 4Runner/HV models

Recommended Sequence of Application

Item #	Accessory
1	
2	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.**OPERATOR SAFETY:** Use caution to avoid risk of injury.**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.**SAFETY TORQUE:** This mark indicates that torque is related to safety.**REGULATORY MARK:** This mark indicates the component is related to regulatory compliance



Fig. 1-1

1. Preparation before fit.

- Place care card in glove box
- Do not remove battery pull tab from lantern
- Twist the Lantern to remove it from the Organizer (Fig.1-1).

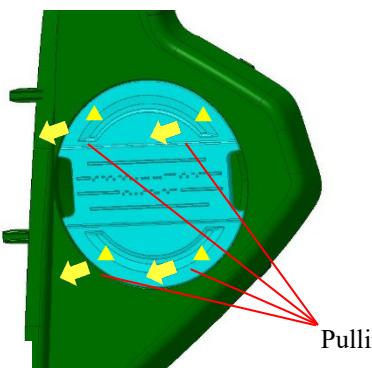


Fig. 2-1

2. Remove the Cover at Driver side Instrument panel and Install the Organizer

- Remove the Cover at driver side Instrument panel by pulling the Cover / disengaging the hooks located at the Cover and (Fig. 2-1).
- Place cover in glove box

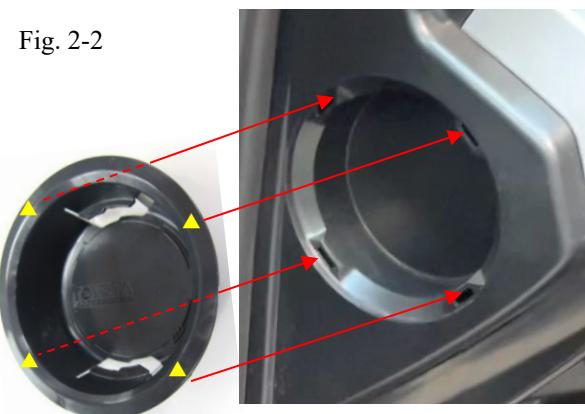


Fig. 2-2

- Install the Organizer to the vehicle. With the  mark on the back facing upward, fix the four hooks (Fig.2-2)

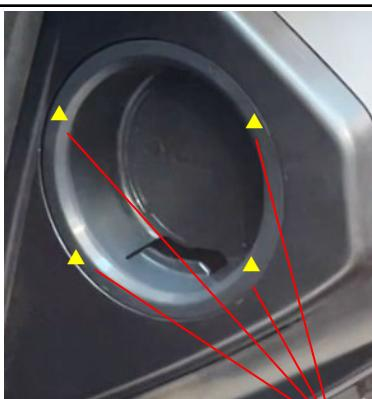


Fig. 2-3

- Check that the four hooks are fit (Fig.2-3).



Fig. 3-1

3. Mounting the Lantern

- (a) Locate Lantern and twist to lock into the position (Fig.3-1).

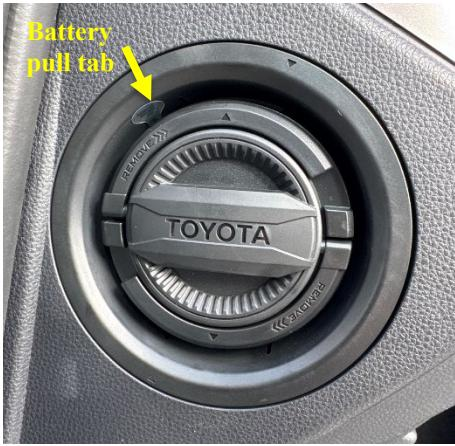


Fig. 3-2

- (b) Leave battery pull tab in place (Fig.3-2).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
	<u>Accessory Function Checks</u>
<input type="checkbox"/> Inspect Lantern	<ul style="list-style-type: none">○ Verify part is secure to the IP○ Ensure Toyota Logo is upright○ Verify battery pull tab in place
<input type="checkbox"/> Care card	<ul style="list-style-type: none">○ Placed in the glove box
	<u>Vehicle Function Checks</u>
	<u>Vehicle Appearance Checks</u>
<input type="checkbox"/> Removed Panel	<ul style="list-style-type: none">○ Ensure removed panel is placed in glove box