SYNTHIAM

Assembly Instructions

Visible Spectrum Camera + Wide Angle Lens Rev 4





#	Qty	Name
1	1	HDF-3M-811-WX13 Camera
2	1	100° Wide Angle Lens with 850nm Infrared filter
3	1	Black permanent Marker






IMPORTANT Ensure the 850nm Infrared filter is present

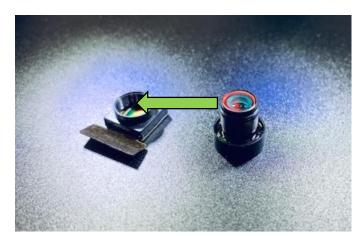

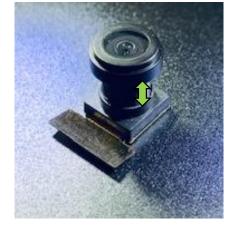

Focused Position

Step 1. Thread the 100° Wide Angle Lens with Infrared filter into the Camera housing until the clear focus position has be achieved.

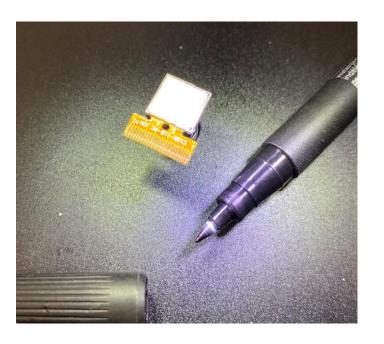

Step 2. Turn the camera over and place a black mark on the orange flexible PCB with the marker



Visible Spectrum Camera is now complete!