

FIT1047 - Week 9


Networks: Physical and Data Link layers



Goals for this week


- Understand how messages can be transmitted over physical media such as copper cables, optical fibres or radio waves
- Look at Media Access Control (Data Link layer): when is a device allowed to transmit?
- Study the basic structure of Ethernet and WiFi networks

Basic LAN components

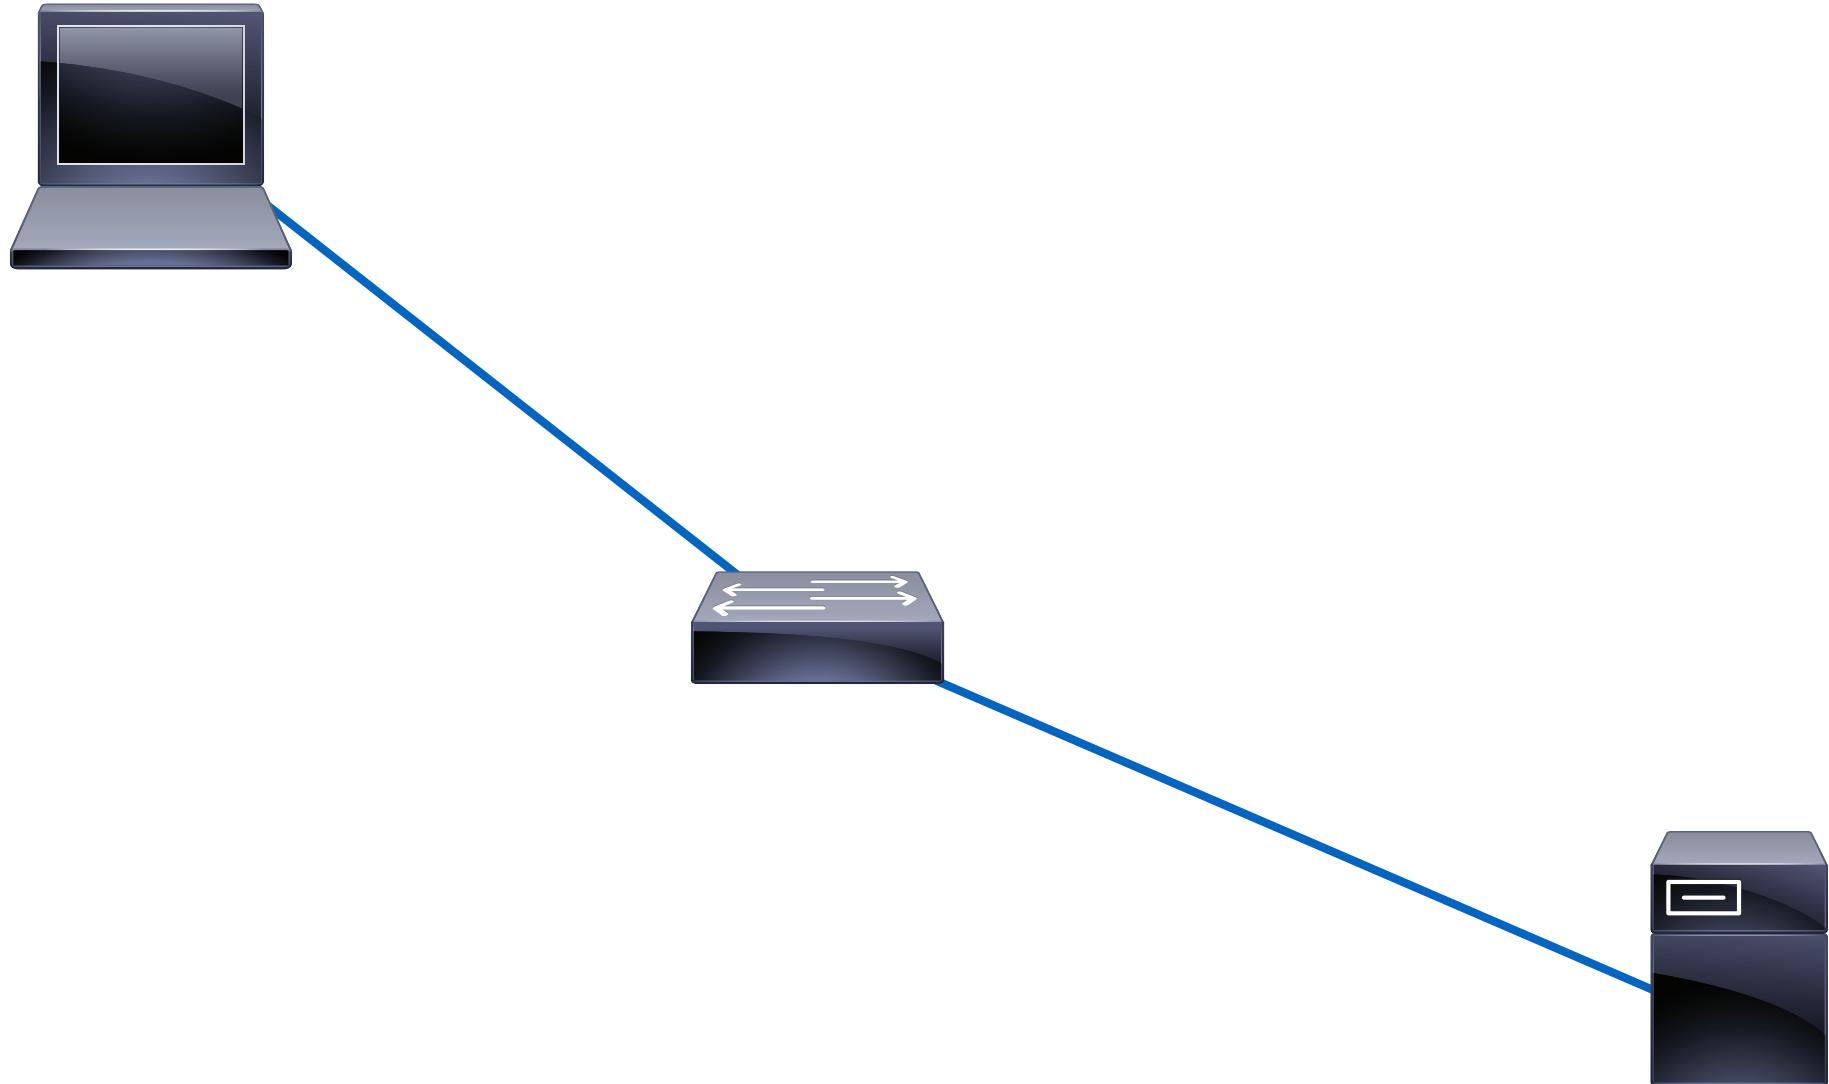

Basic LAN components


Client computer

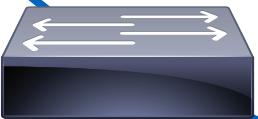


Server




Basic LAN components

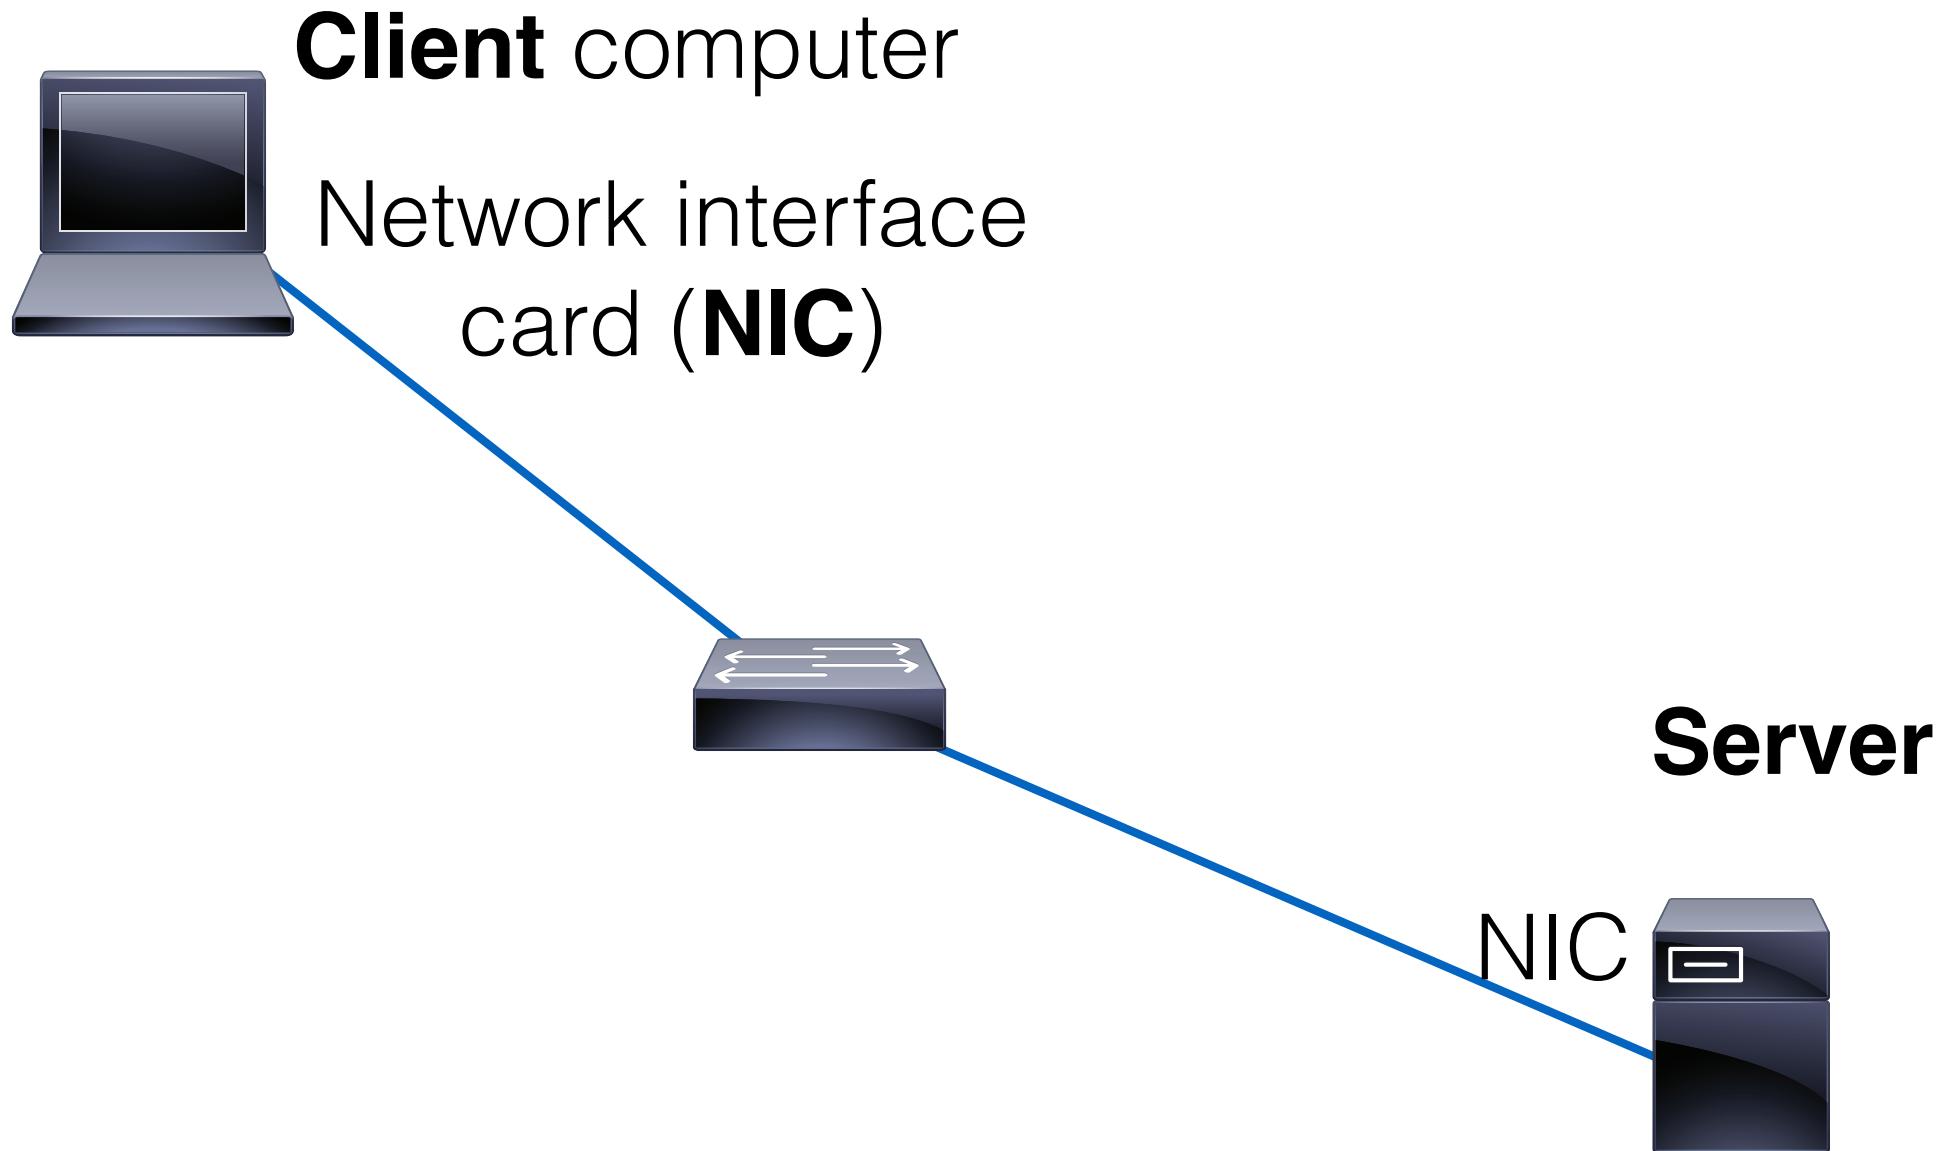

Basic LAN components

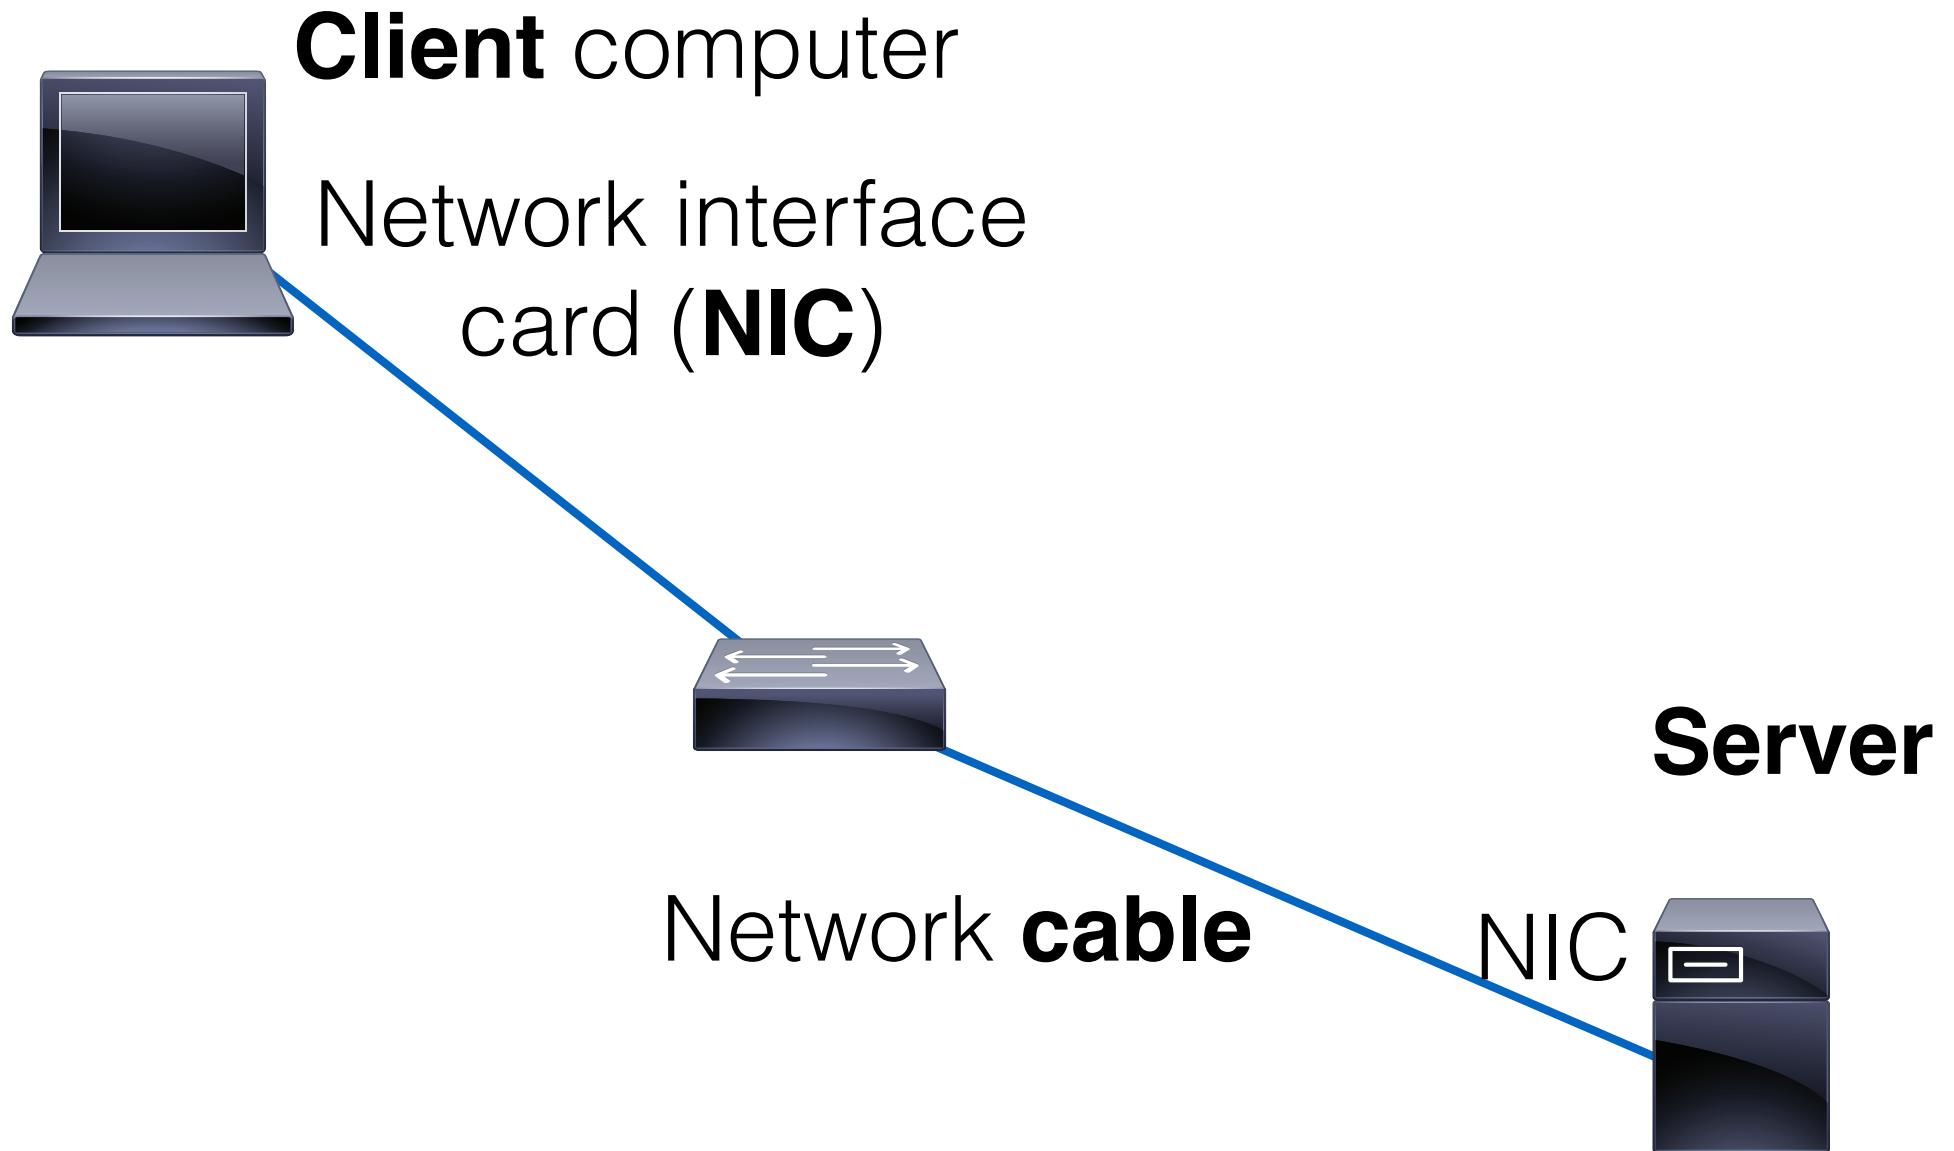

Basic LAN components

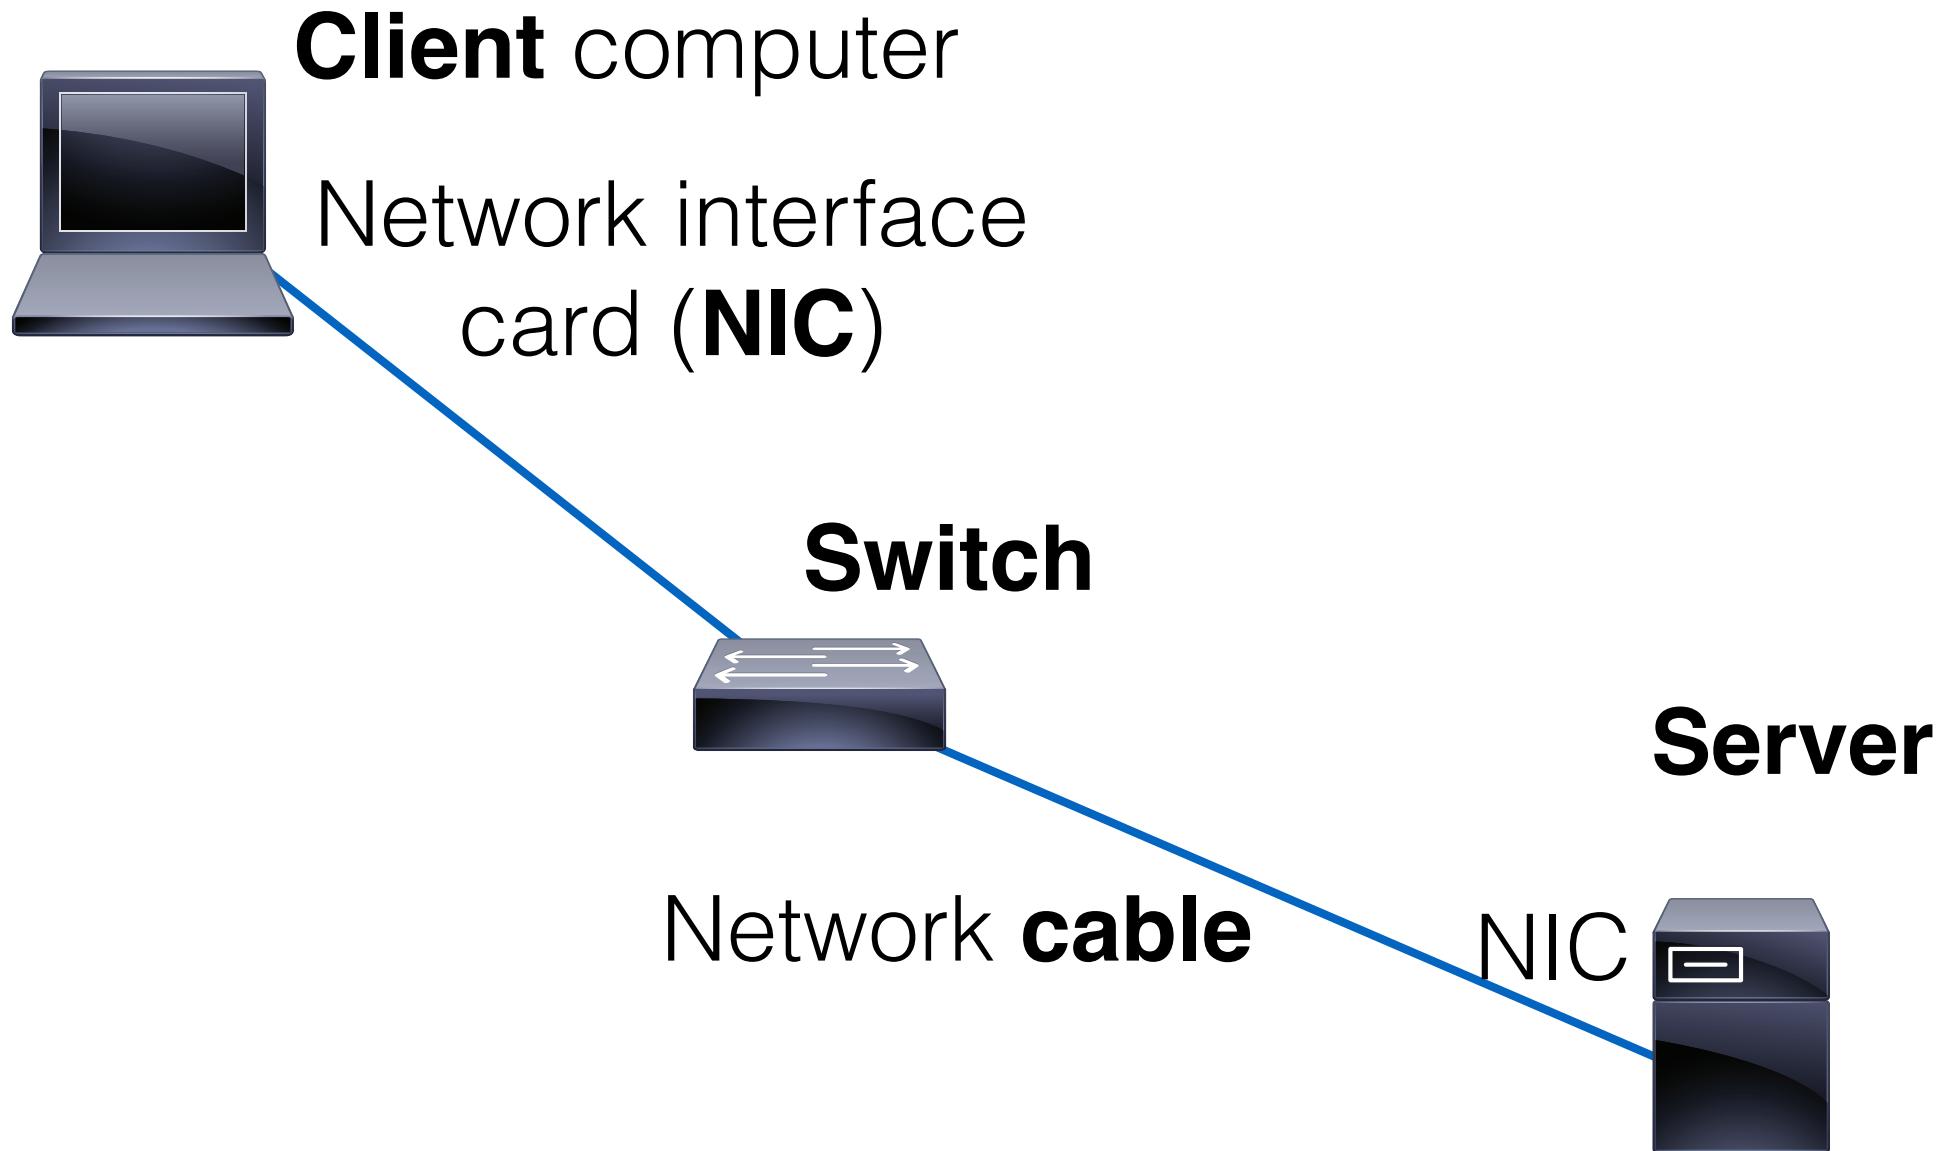

Network interface card (NIC)

Implements physical and data link layer

- includes unique data link layer address (MAC address)
- provides physical connection to the network (socket or antenna)
- implements protocols (error detection, construction of frames, modulation or encoding etc)

Network interface card (NIC)

Implements physical and data link layer

- includes unique data link layer address (MAC address)
- provides physical connection to the network (socket or antenna)
- implements protocols (error detection, construction of frames, modulation or encoding etc)

Connection to the computer


- often built into motherboards
- or connected via USB, PCI Express etc

Network interface card (NIC)

Network interface card (NIC)



Network interface card (NIC)

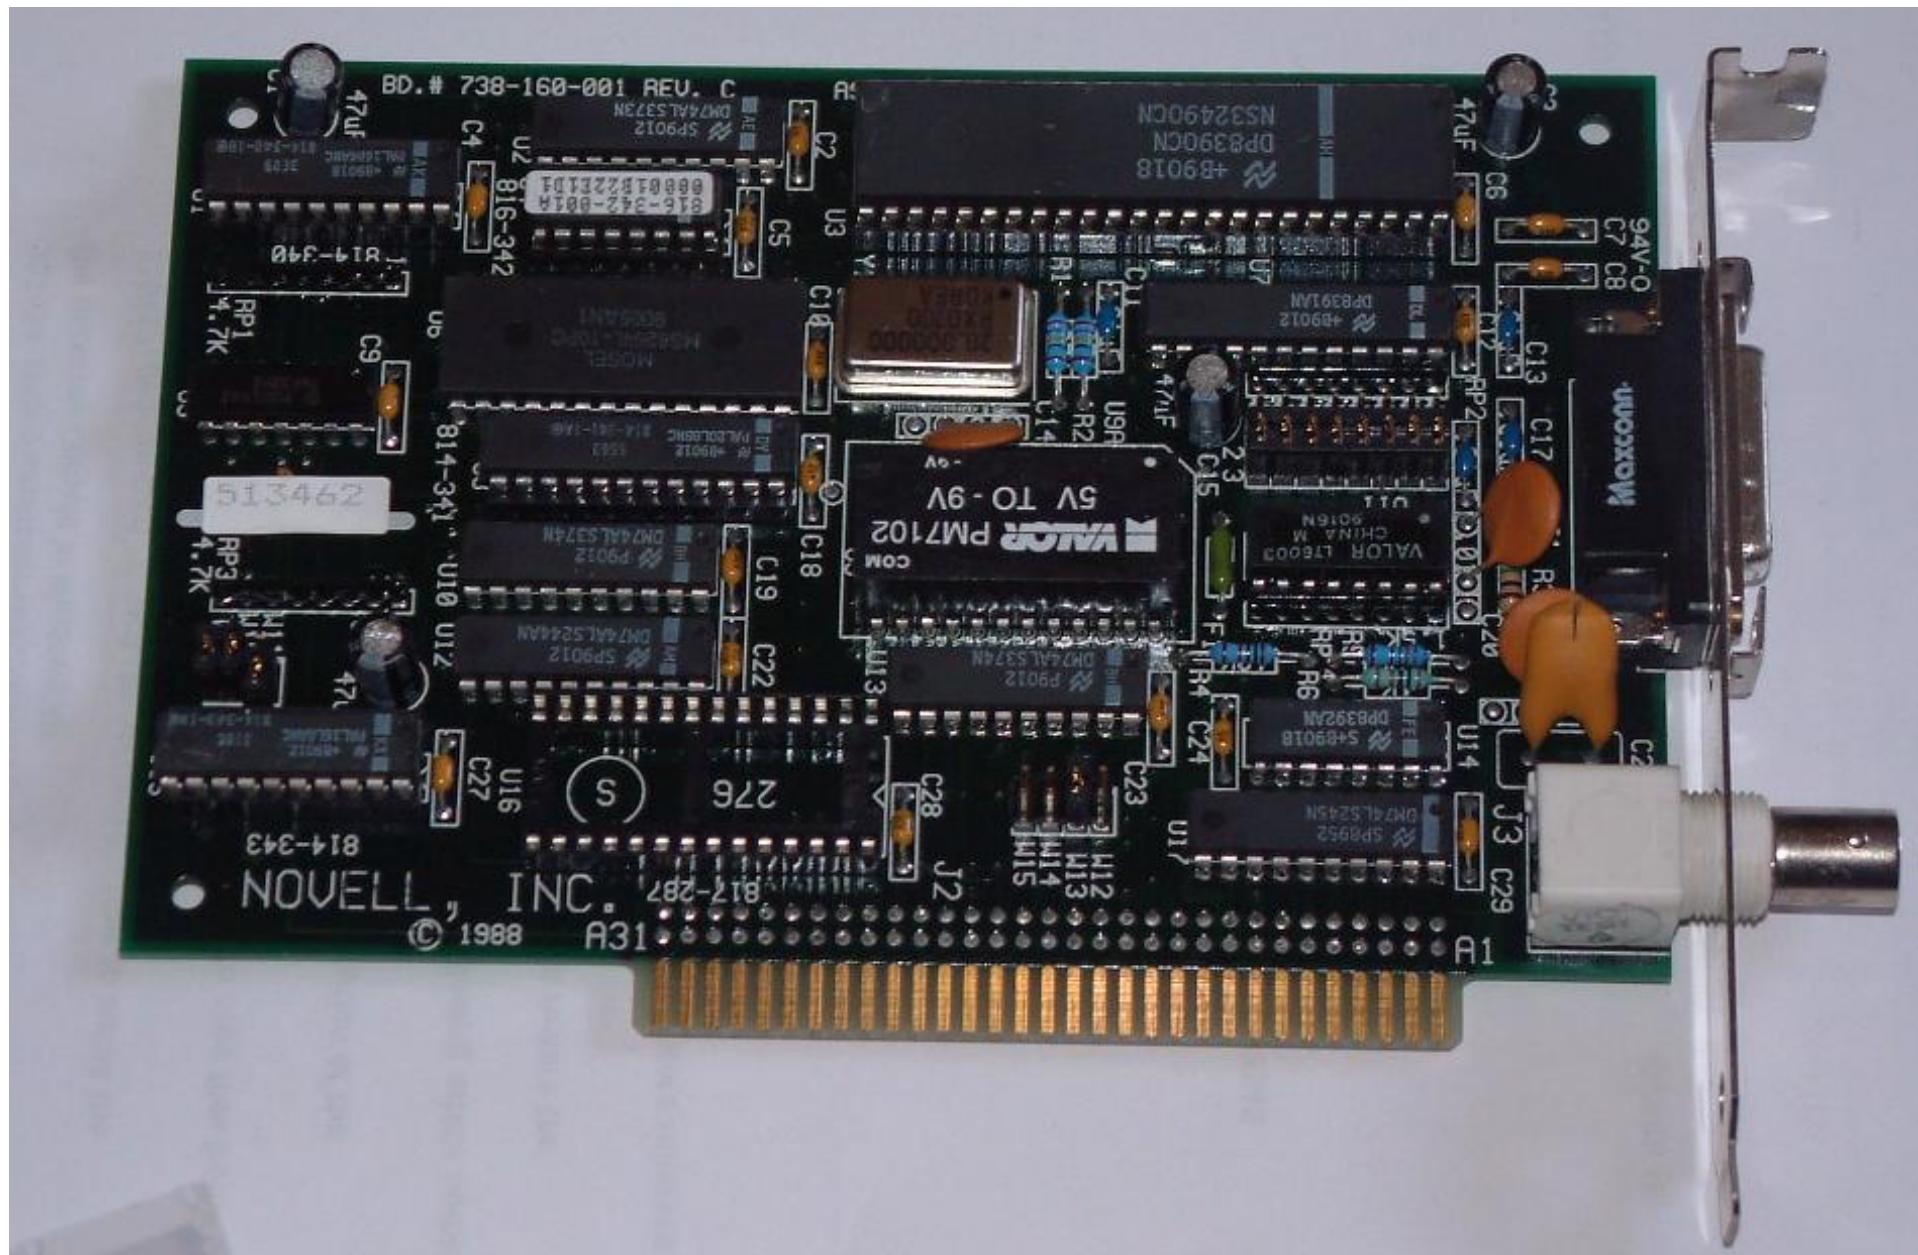

Network interface card (NIC)



Network interface card (NIC)



Network Cables

Physical connection between network devices

Different types:

- UTP (unshielded twisted pair, most common type for LAN)
- STP (shielded twisted pair)
- Optical fibre (not yet common in LANs)
- Coaxial (only old LANs)

Network Cables

Name	Data Rate	Cables
10BASE-T	10Mbps	UTP cat 3 / cat 5
100BASE-T	100Mbps	UTP cat 5
1000BASE-T	1Gbps	UTP cat 5, 5e, 6
1000BASE-X	1Gbps	optic fiber (single mode or multi-mode)
10GbE	10Gbps	UTP cat 5e, 6, 7 optic fibre
40GbE	40Gbps	optic fiber

Physical layer

Physical media

- We transmit information using **physical signals**
- A signal travels through a **medium**:
 - **electrical** signals through e.g. copper wires
 - **radio waves** through “air” (or, really, space)
 - **light** signals through space or optical fibres

Digital vs Analog

- **Digital data:**
 - Discrete values (e.g. 0 and 1, or characters in the alphabet)
 - Discrete step from one symbol to the next

Digital vs Analog

- **Digital data:**
 - Discrete values (e.g. 0 and 1, or characters in the alphabet)
 - Discrete step from one symbol to the next
- **Analog data:**
 - Range of possible values (e.g. temperature, air pressure)
 - Continuous variation over time

Digital vs Analog

- Digital **signal**:
 - Waveform with limited number of **discrete states**

Digital vs Analog

- Digital **signal**:
 - Waveform with limited number of **discrete states**
- Analog **signal**:
 - Continuous, often **sinusoidal wave**
 - E.g. sound (pressure wave in air), light and radio (electromagnetic waves)

Transmission types

- analog signals for analog data:
 - e.g. analog FM radio
- digital signals for digital data:
 - e.g. old Ethernet, USB, the bus in a computer
- analog signals for digital data
 - e.g. modems, ADSL, Ethernet, WiFi, 4G, ...

digital transmission

Digital transmission

- Digital signals are typically transmitted through copper cables

Digital transmission

- Digital signals are typically transmitted through copper cables
- A digital signal encodes 0s and 1s into different **voltage levels** on the cable

Digital transmission


- Digital signals are typically transmitted through copper cables
- A digital signal encodes 0s and 1s into different **voltage levels** on the cable
- This results in a **square wave**

Digital transmission


- Digital signals are typically transmitted through copper cables
- A digital signal encodes 0s and 1s into different **voltage levels** on the cable
- This results in a **square wave**
- Simplest encoding: **unipolar**

Digital transmission

- Digital signals are typically transmitted through copper cables
- A digital signal encodes 0s and 1s into different **voltage levels** on the cable
- This results in a **square wave**
- Simplest encoding: **unipolar**

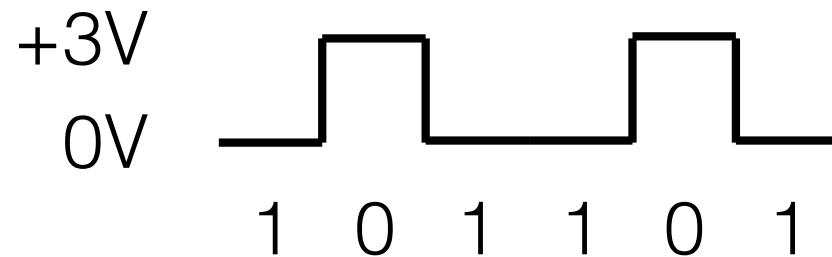


Digital transmission

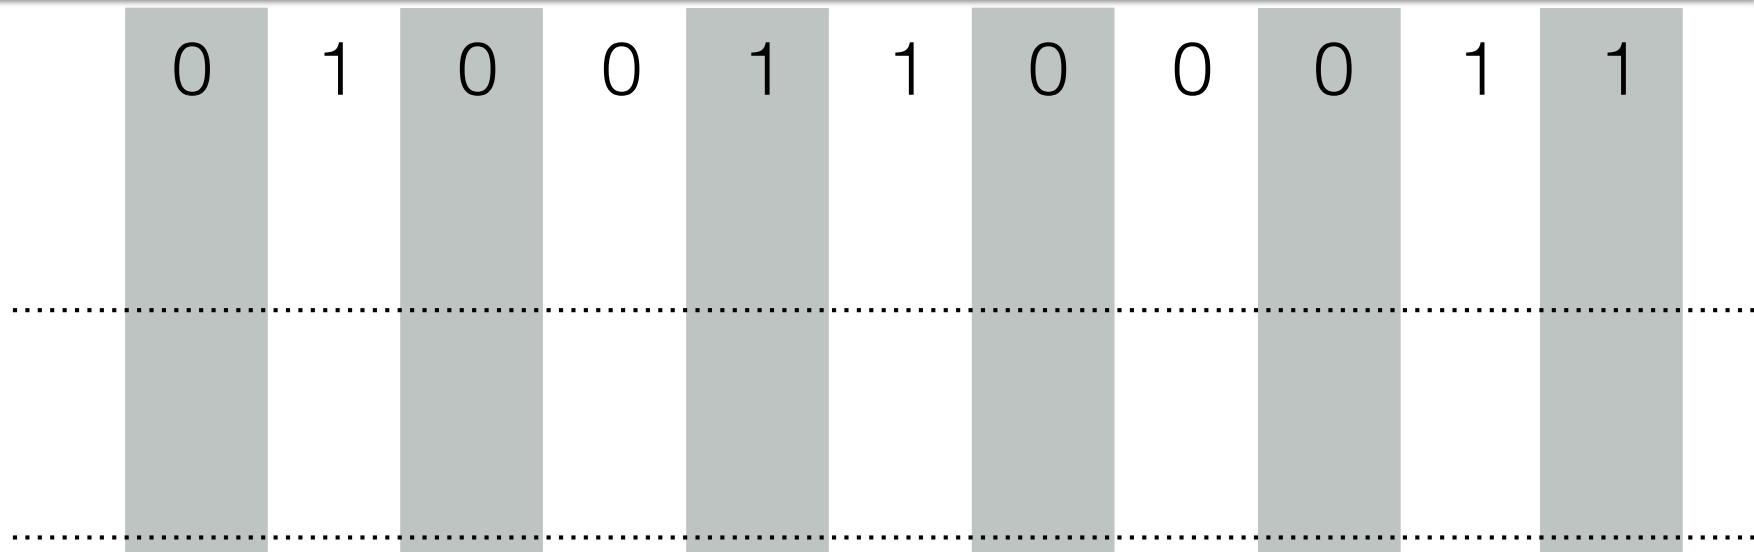


Digital transmission


NRZ

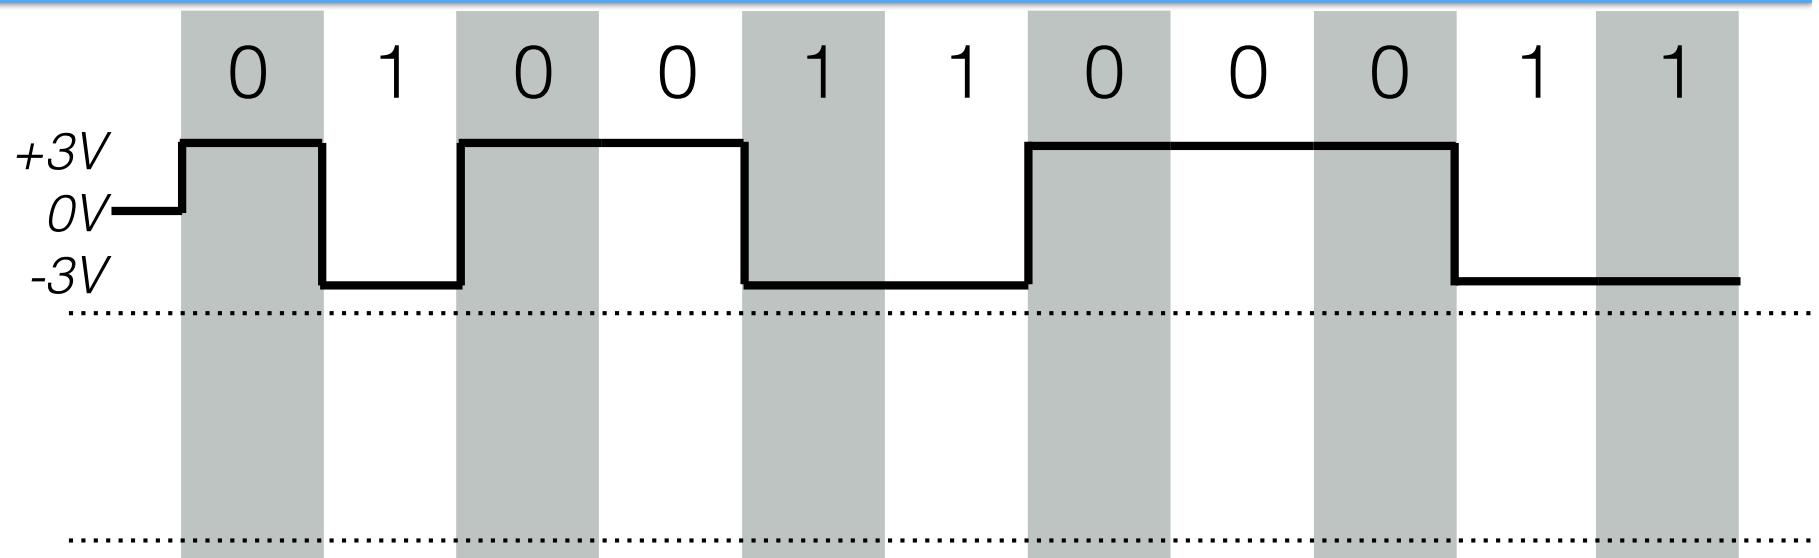


Digital transmission

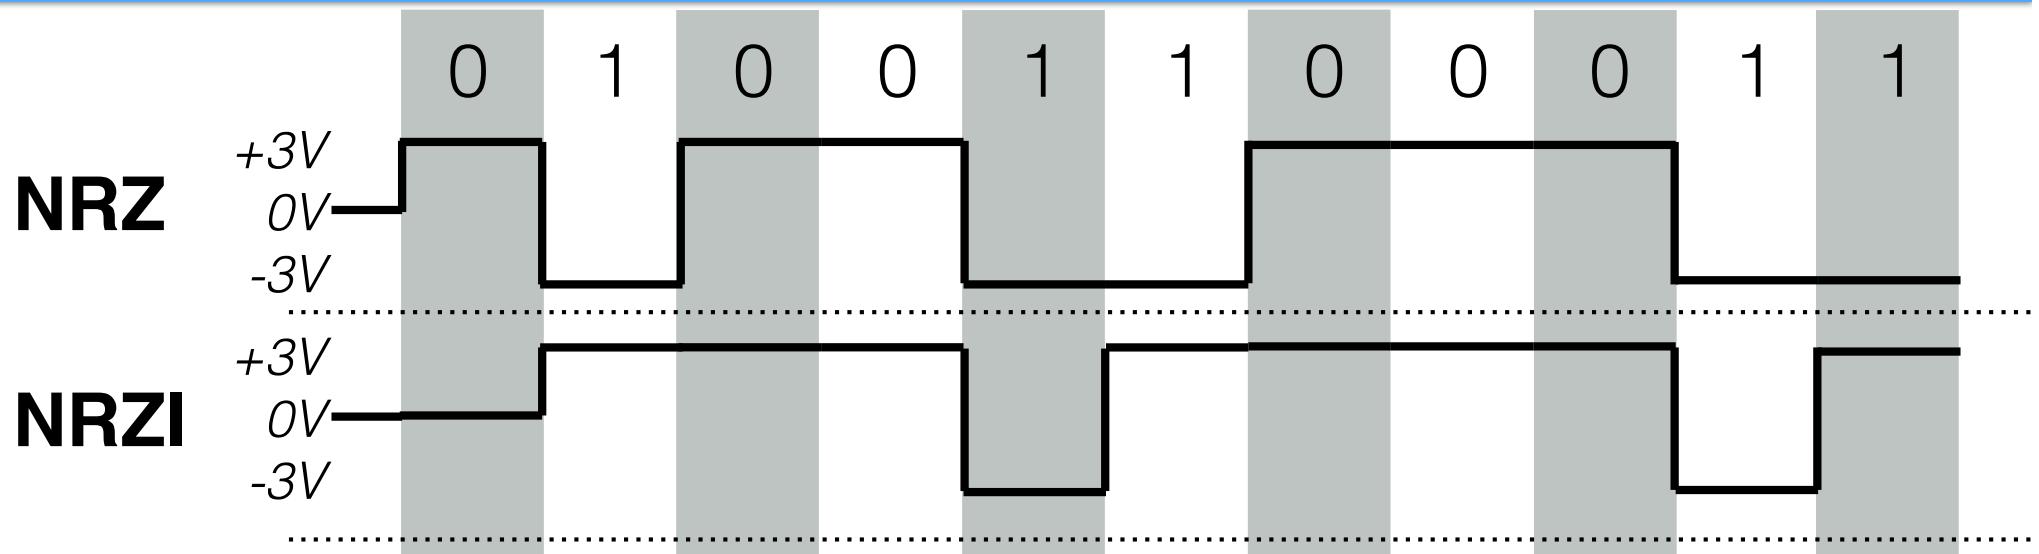


Digital transmission

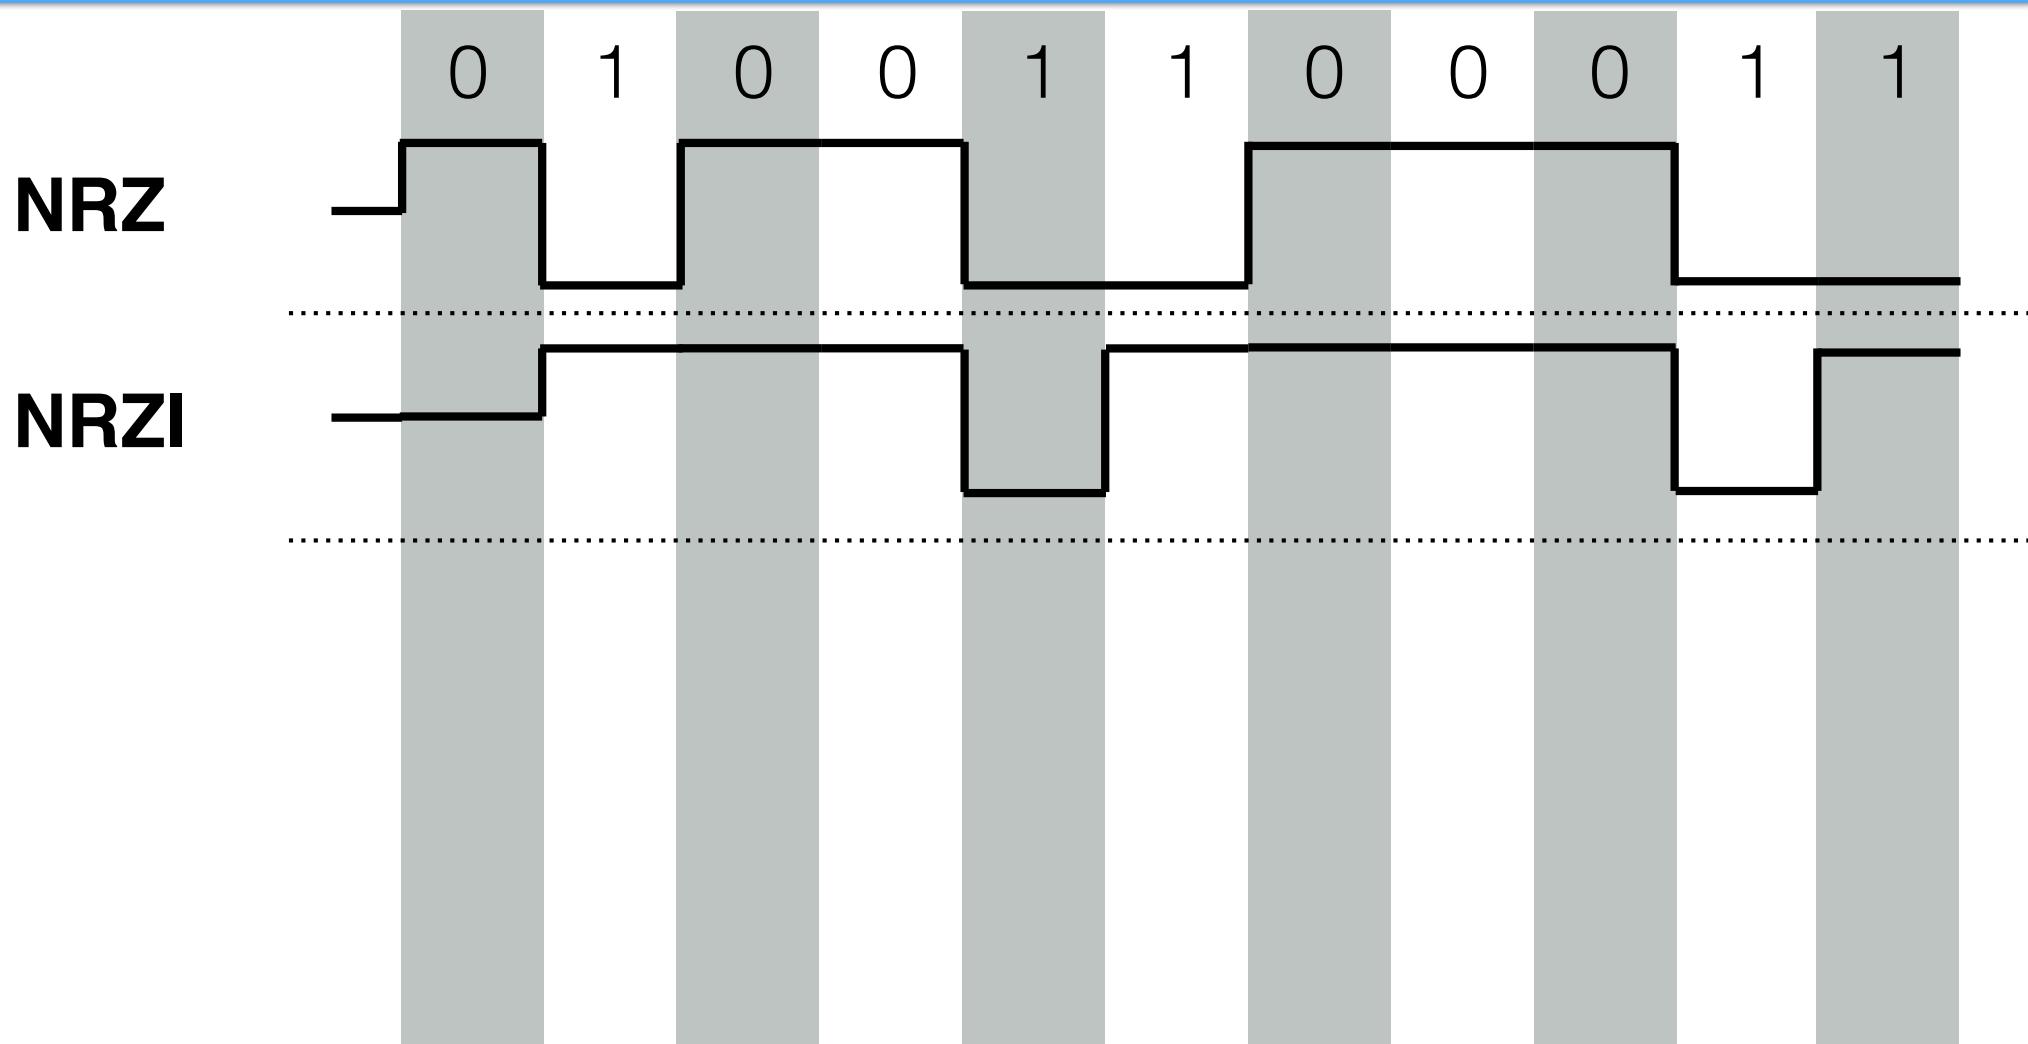

Digital transmission

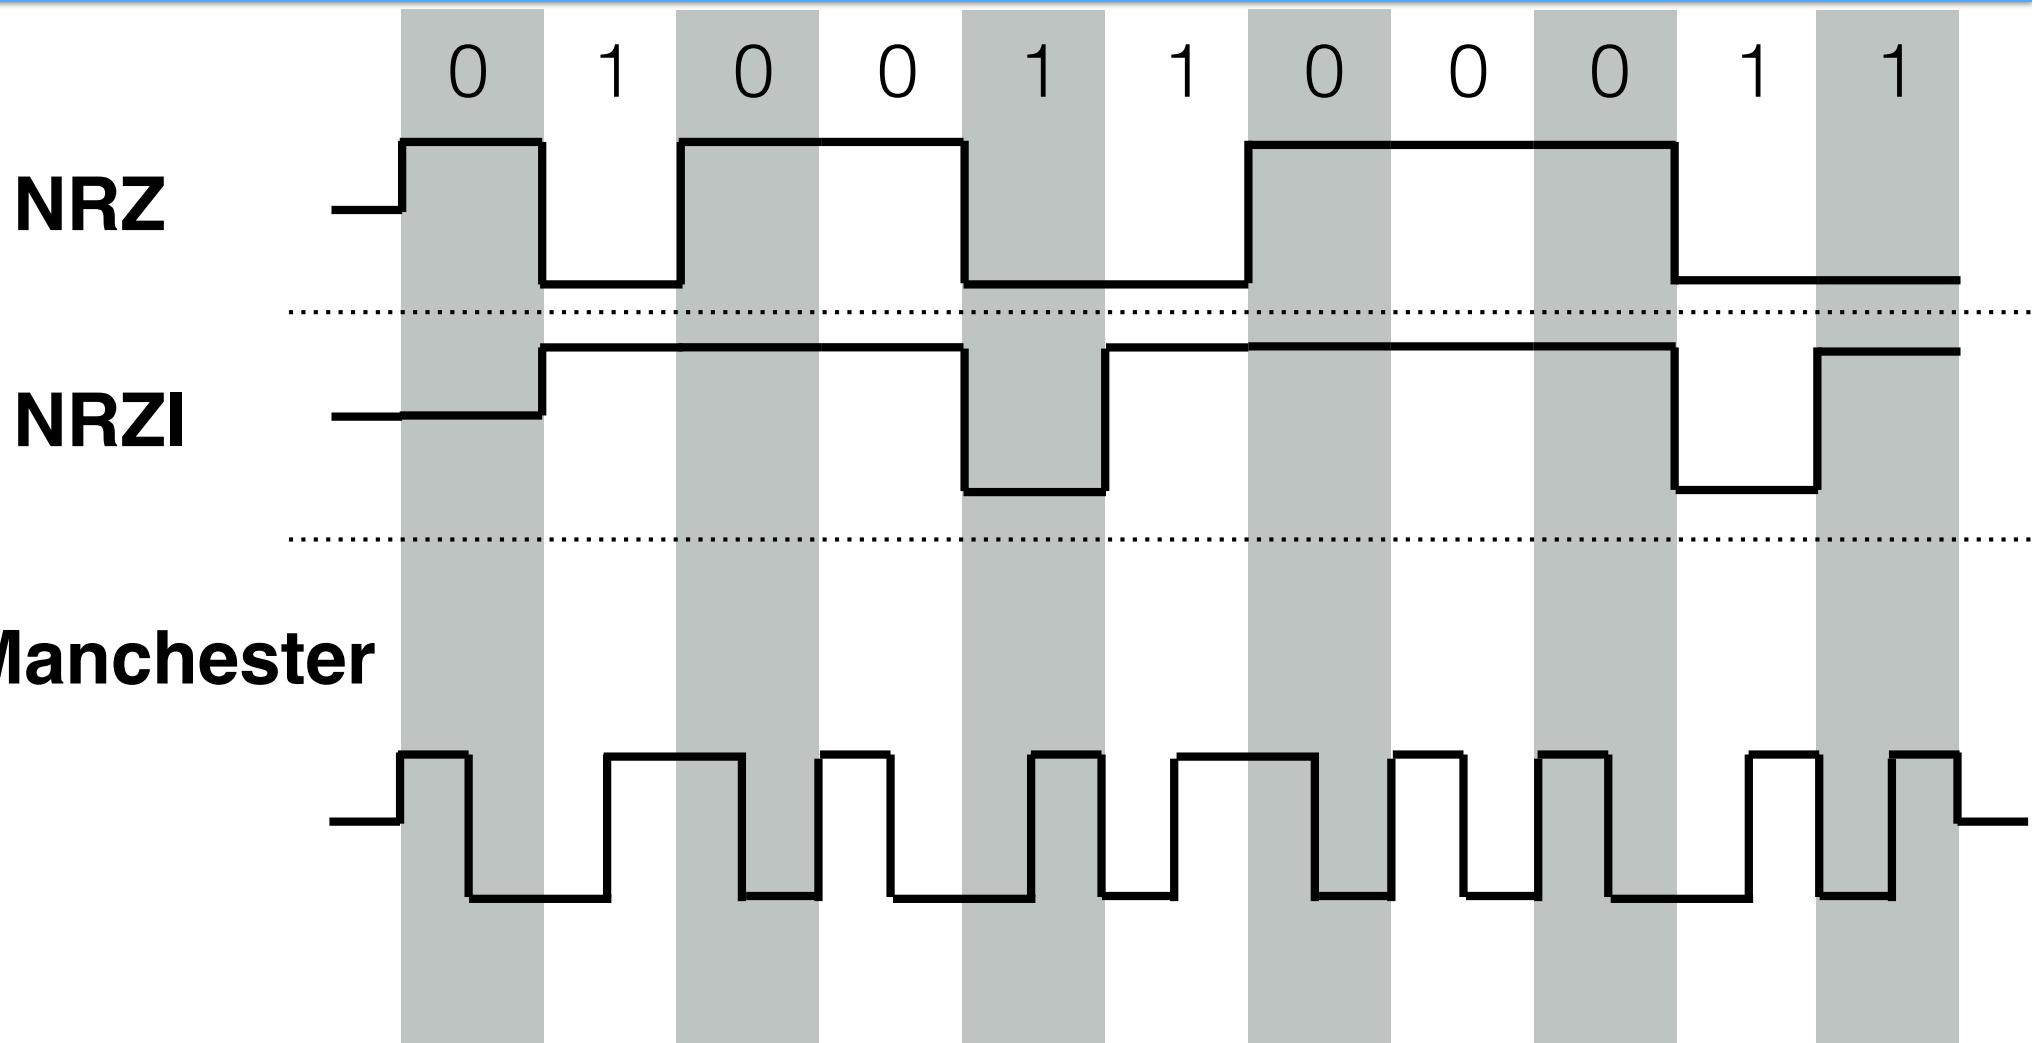


Digital transmission

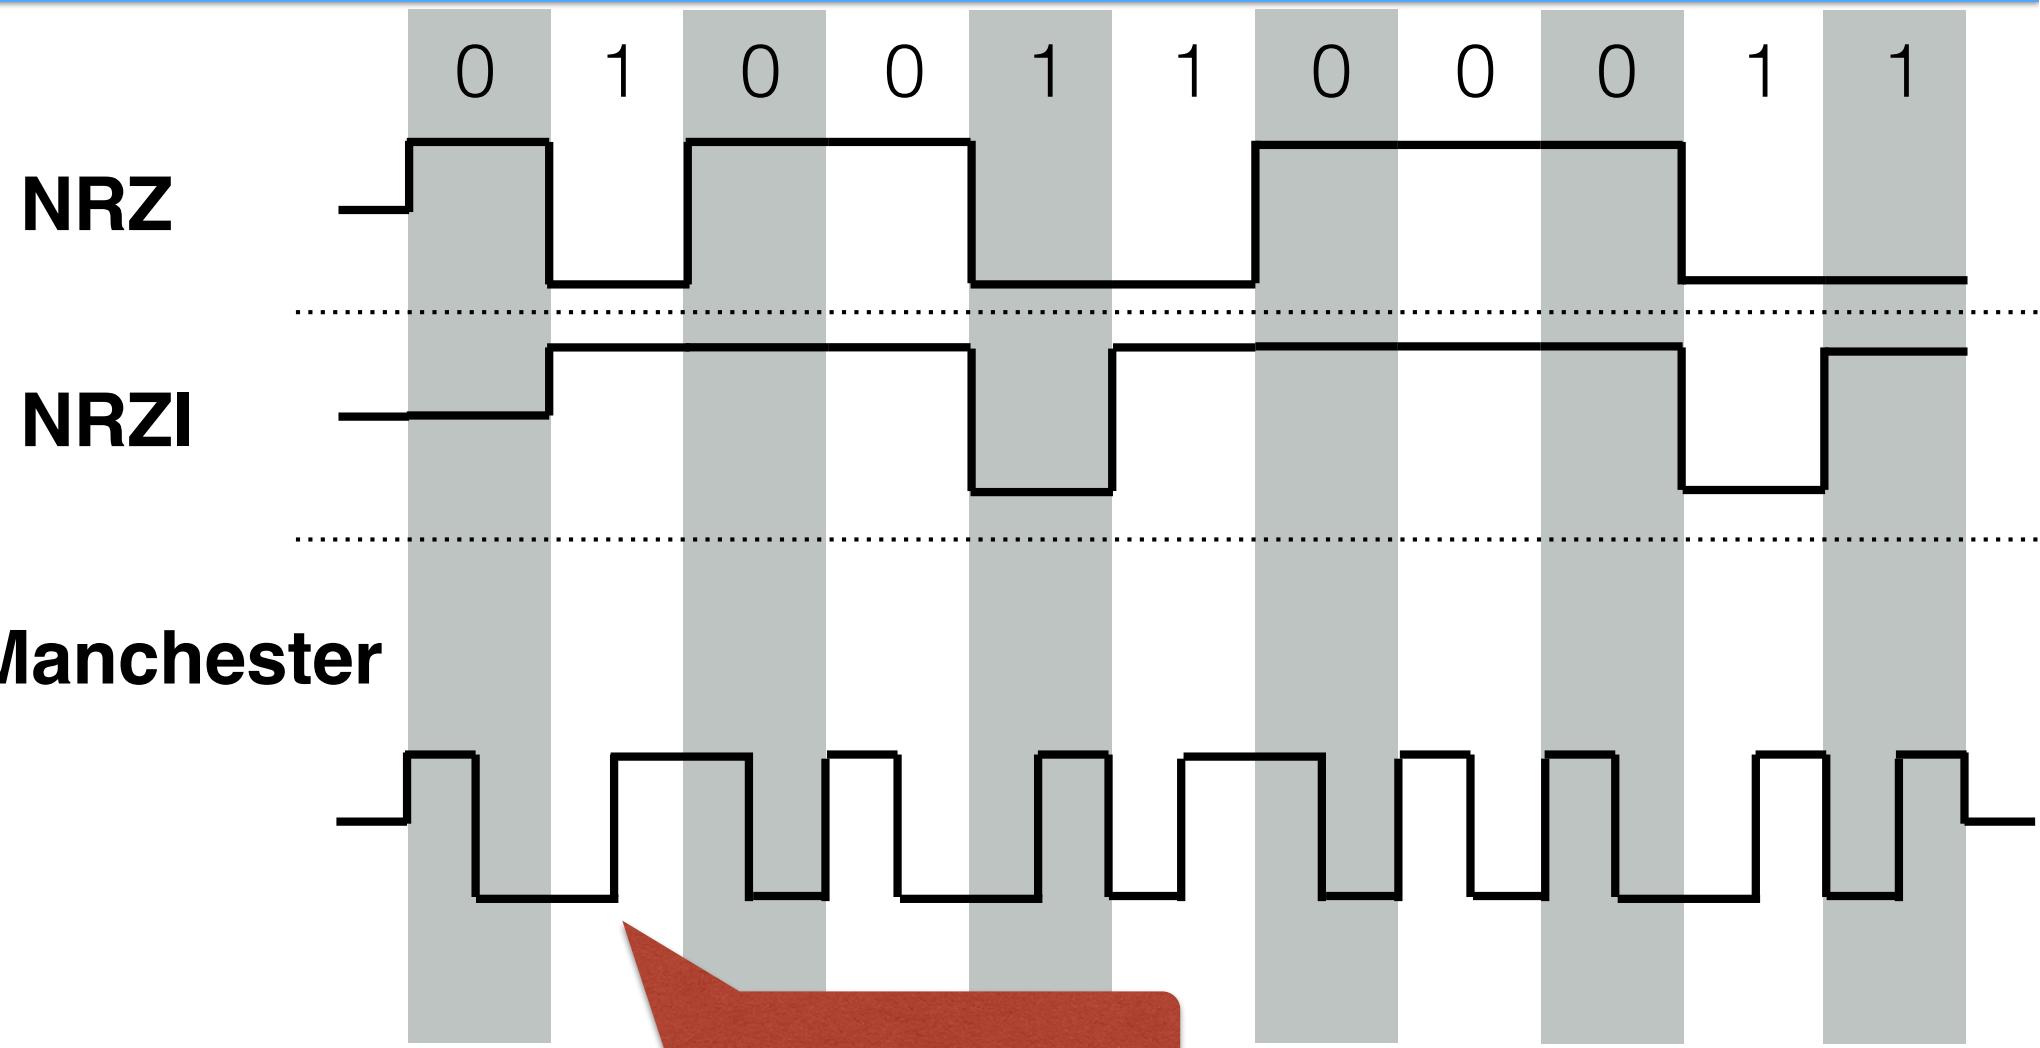

low-to-high
in the middle of a
bit


Digital transmission


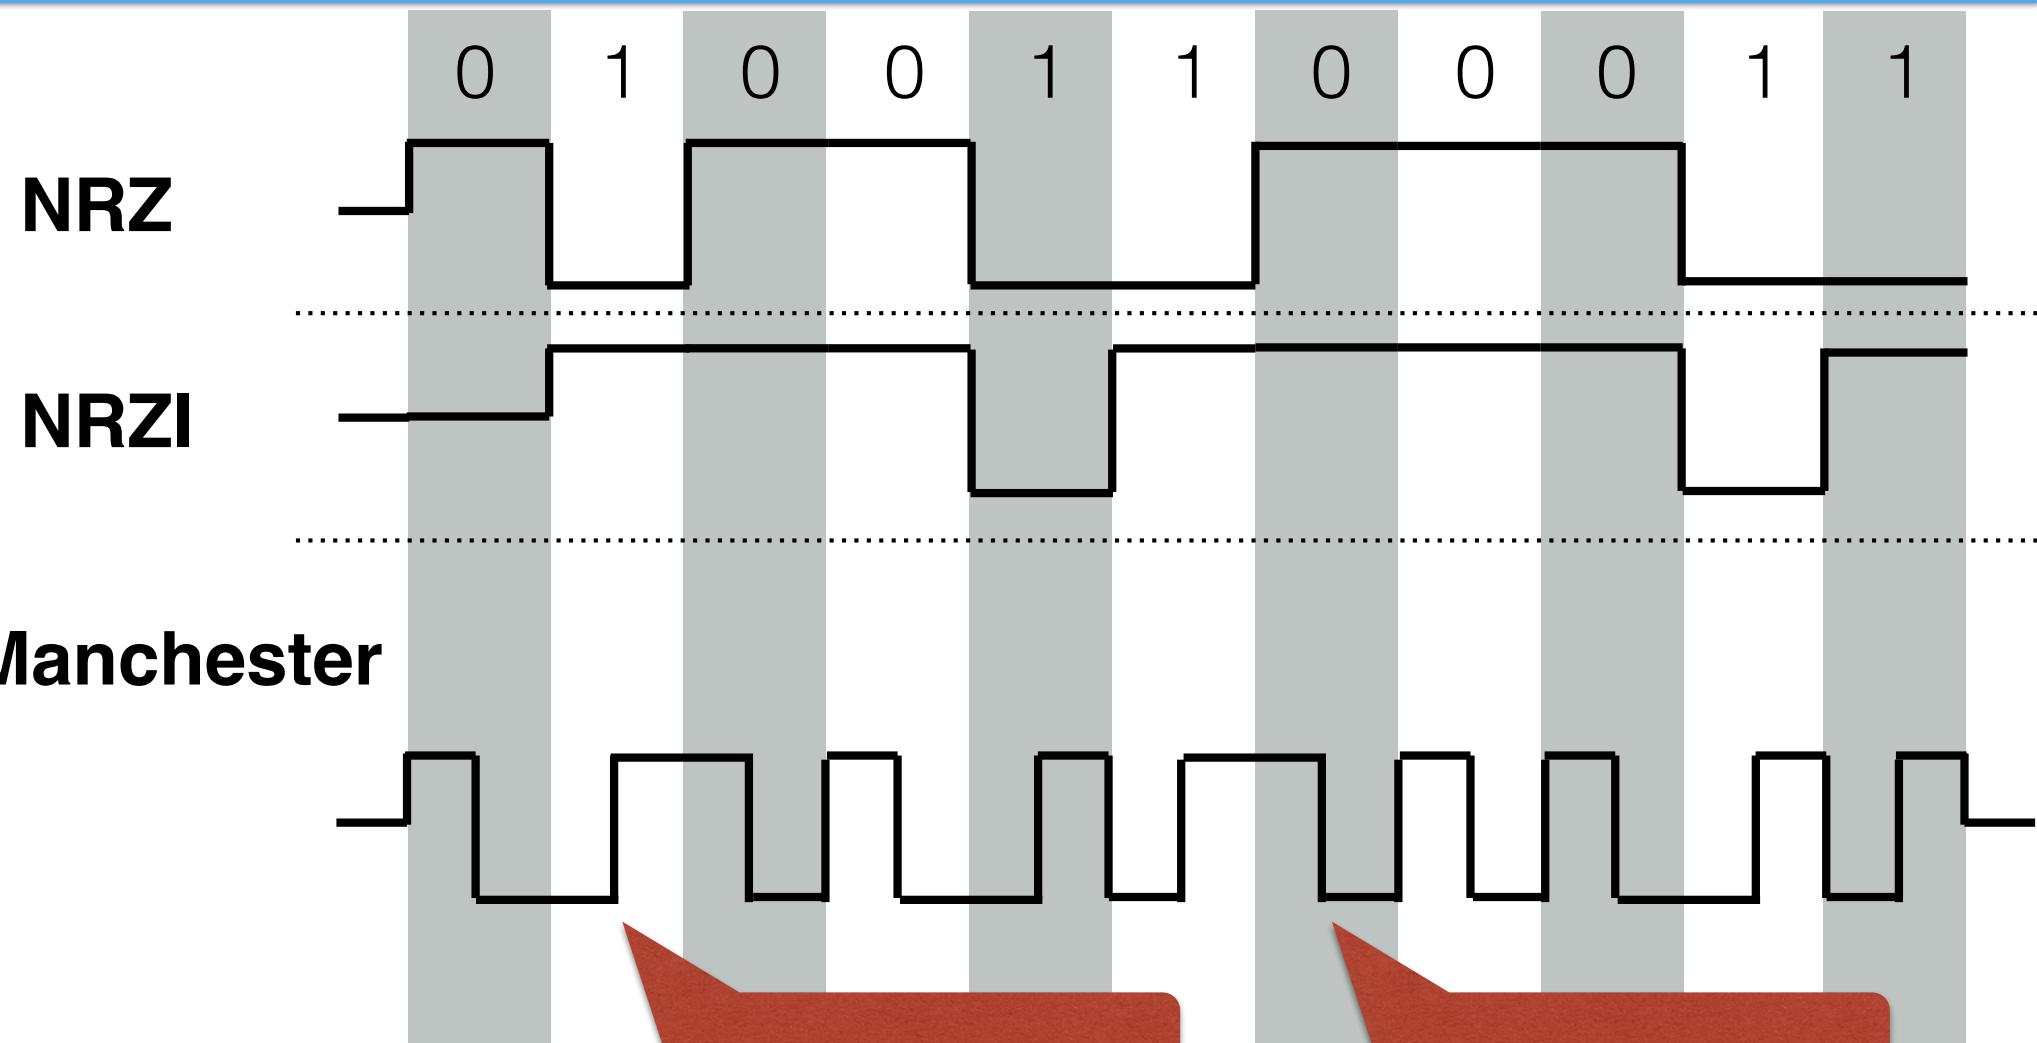


low-to-high in
the middle of a
bit


high-to-low in
the middle of a
bit

analog transmission

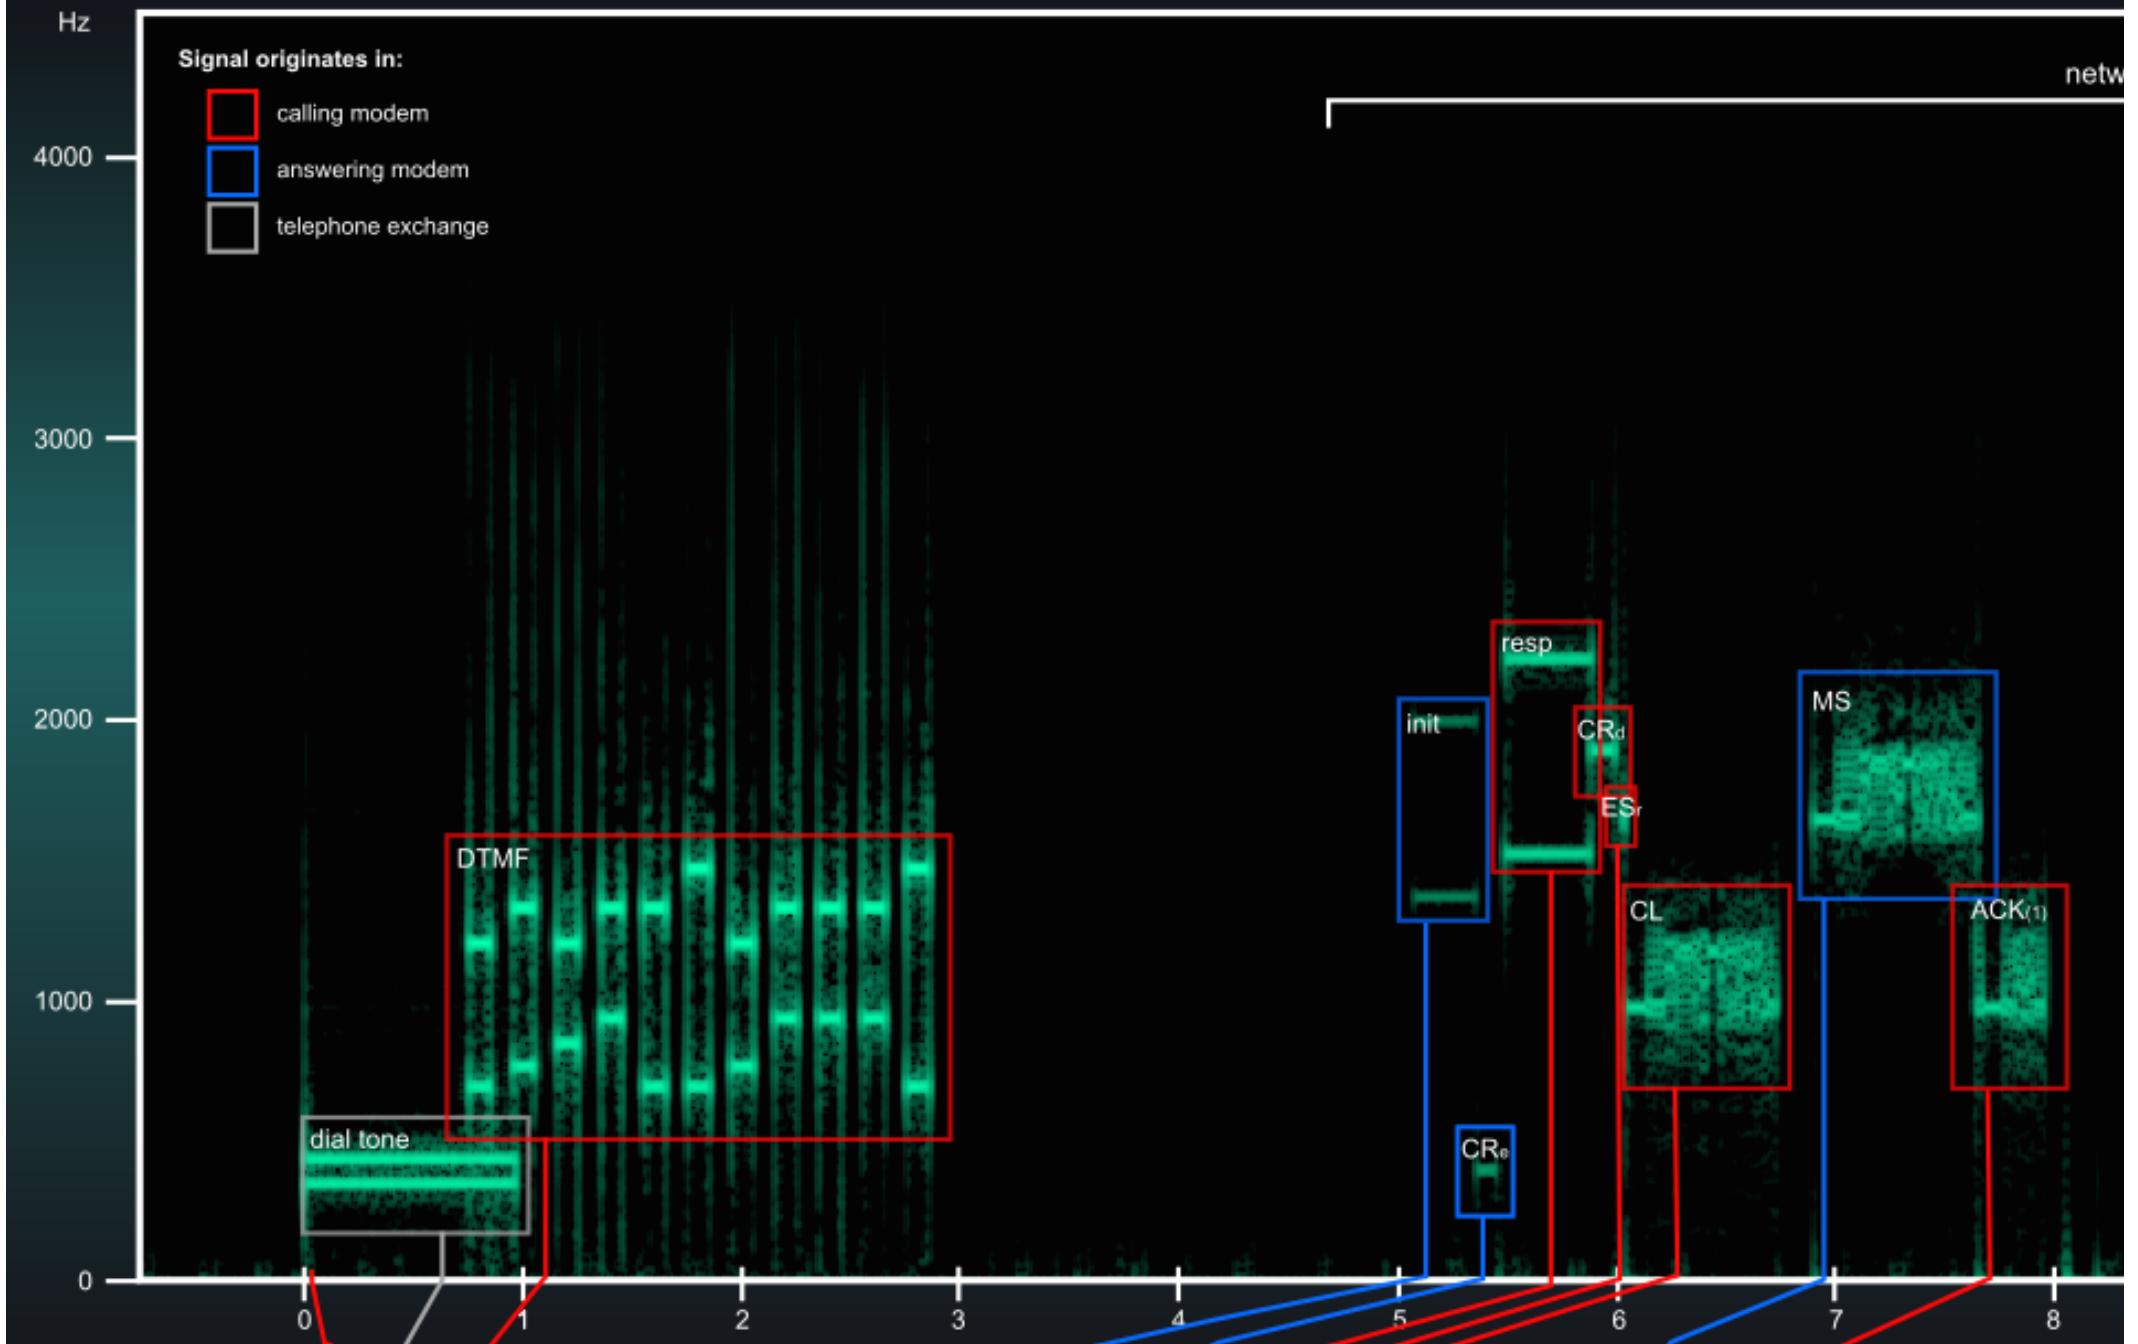

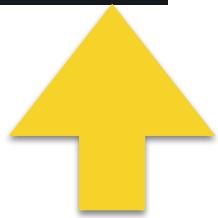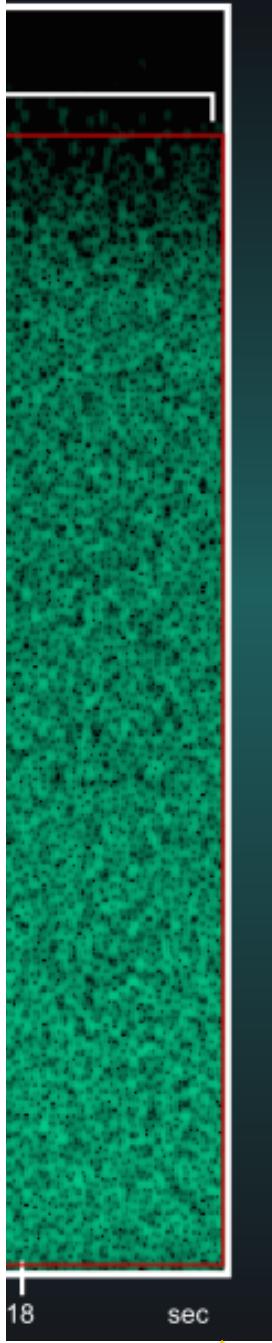


<http://www.windytan.com/2012/11/the-sound-of-dialup-pictured.html>

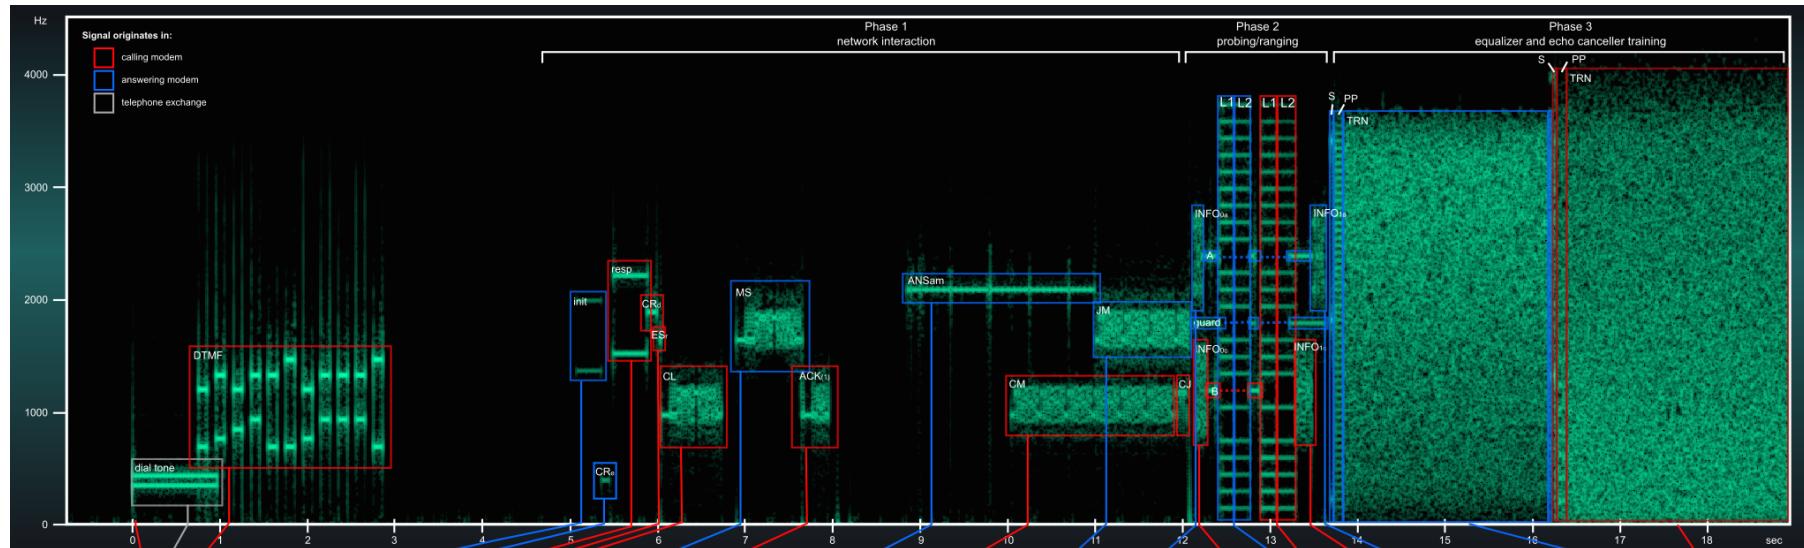


Frequency Modulation


Frequency Modulation

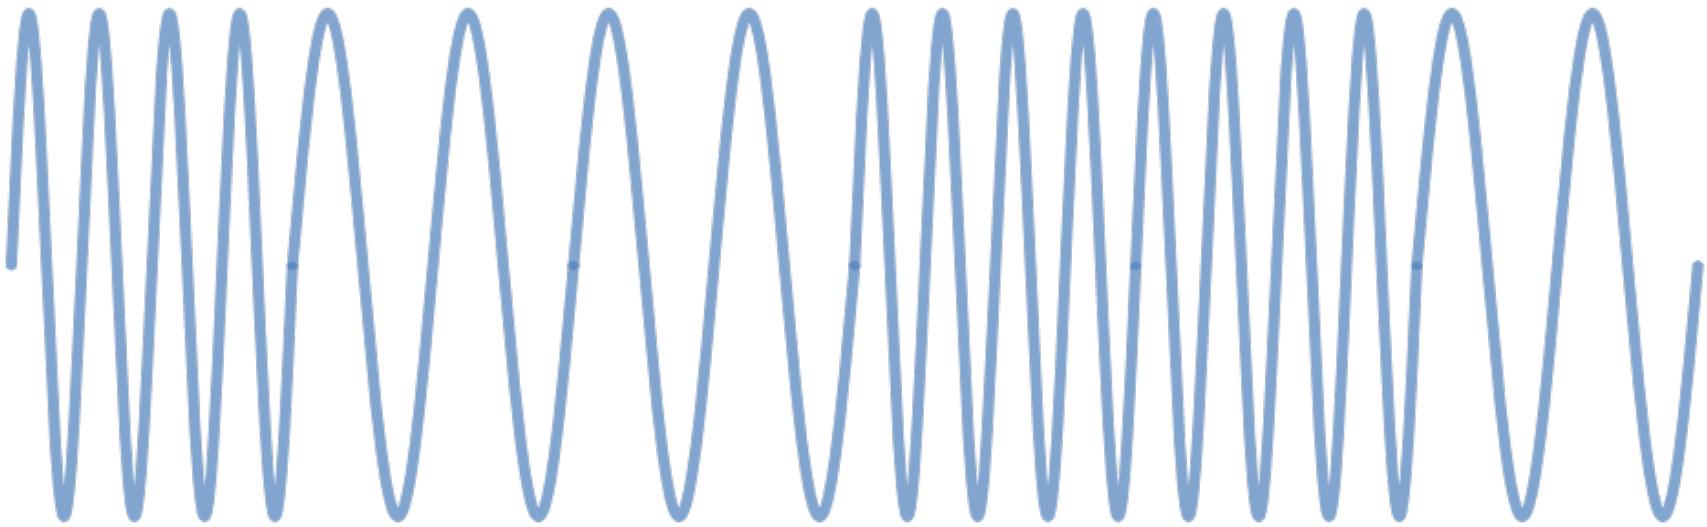

Frequency Modulation

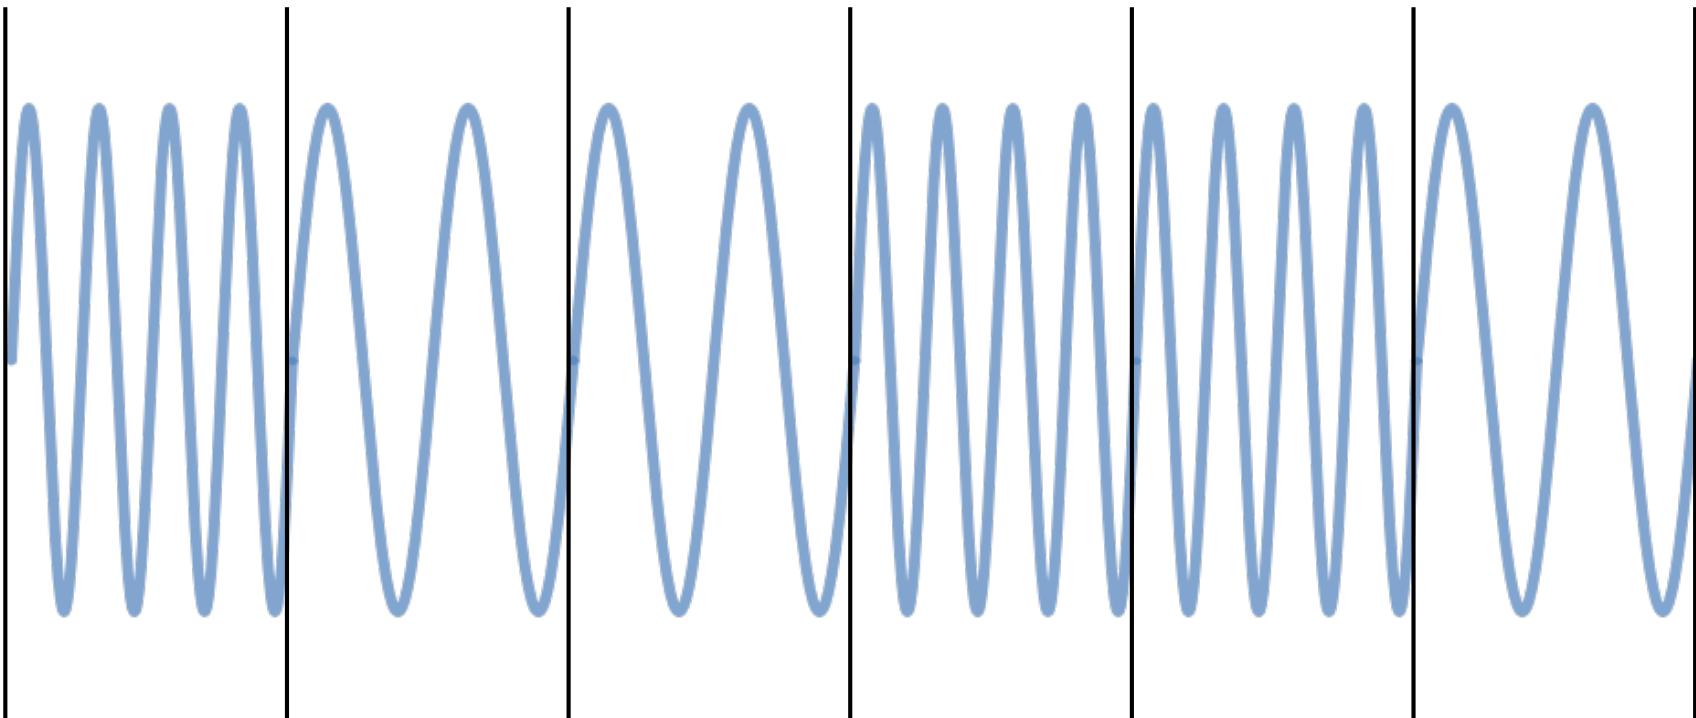

Frequency Modulation

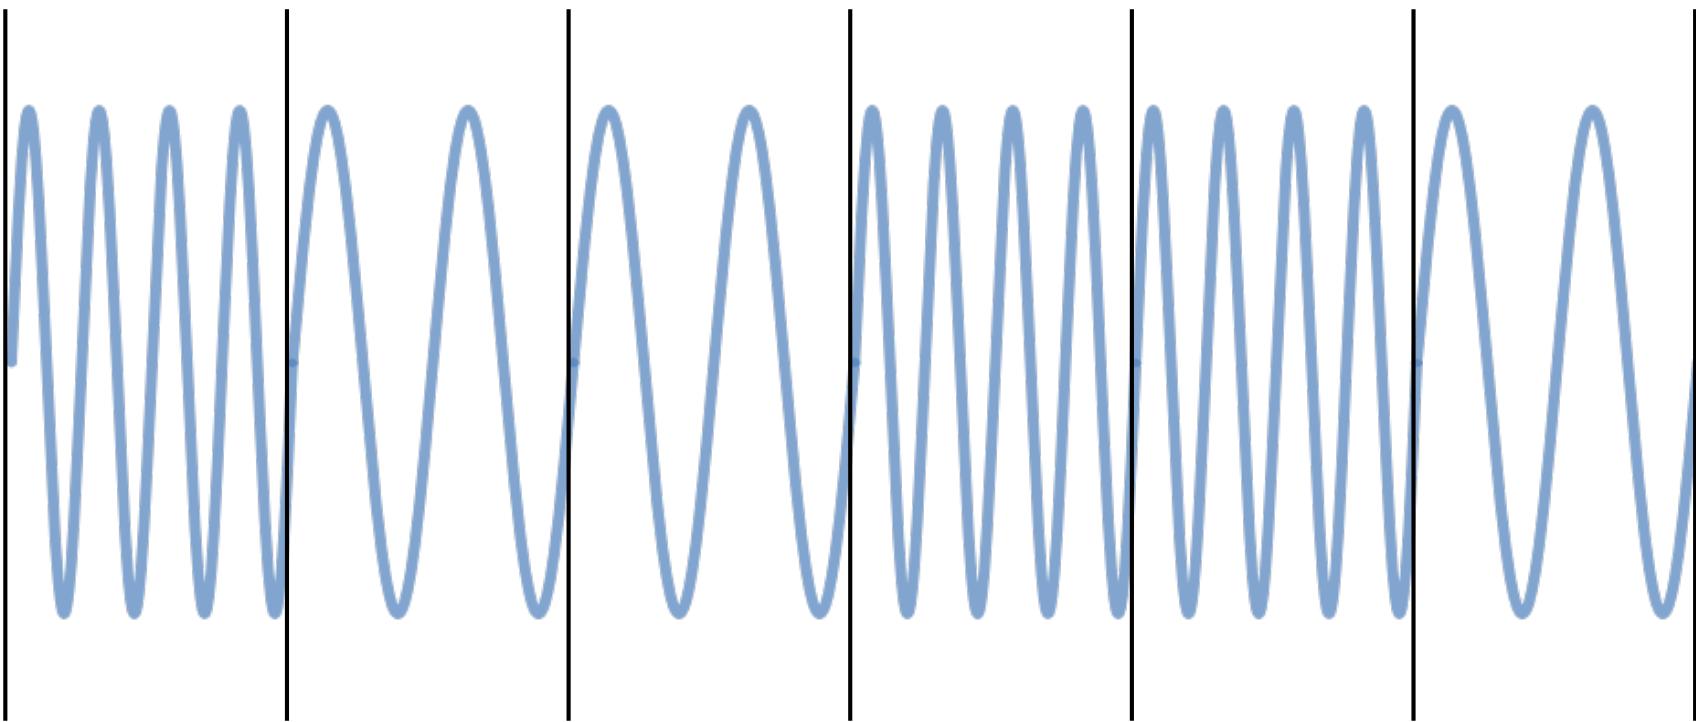

1

0

0


1

1


0

Amplitude Modulation


Amplitude Modulation

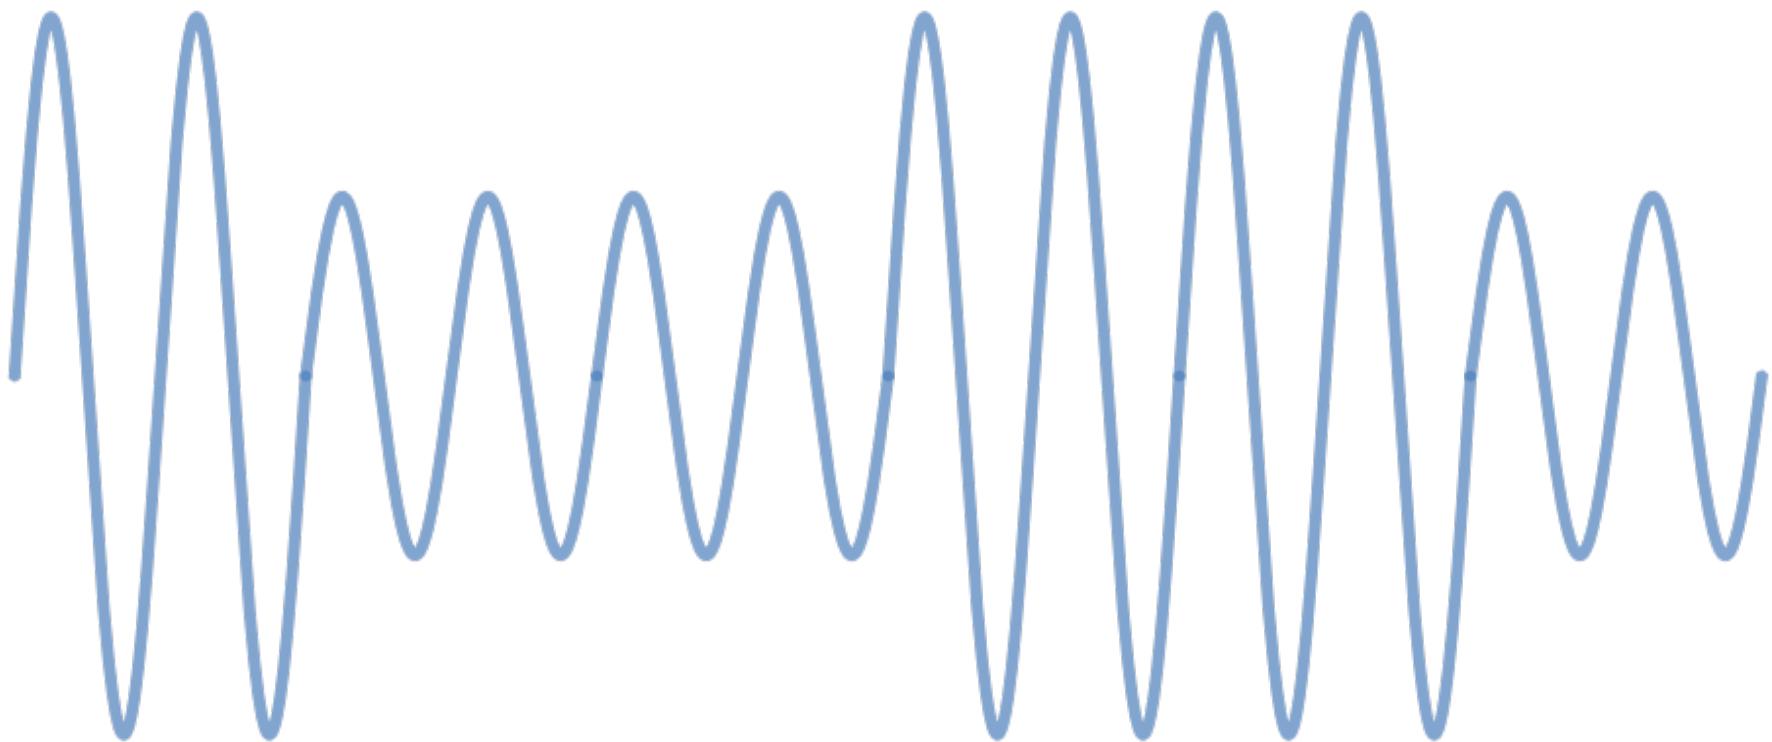

Amplitude Modulation

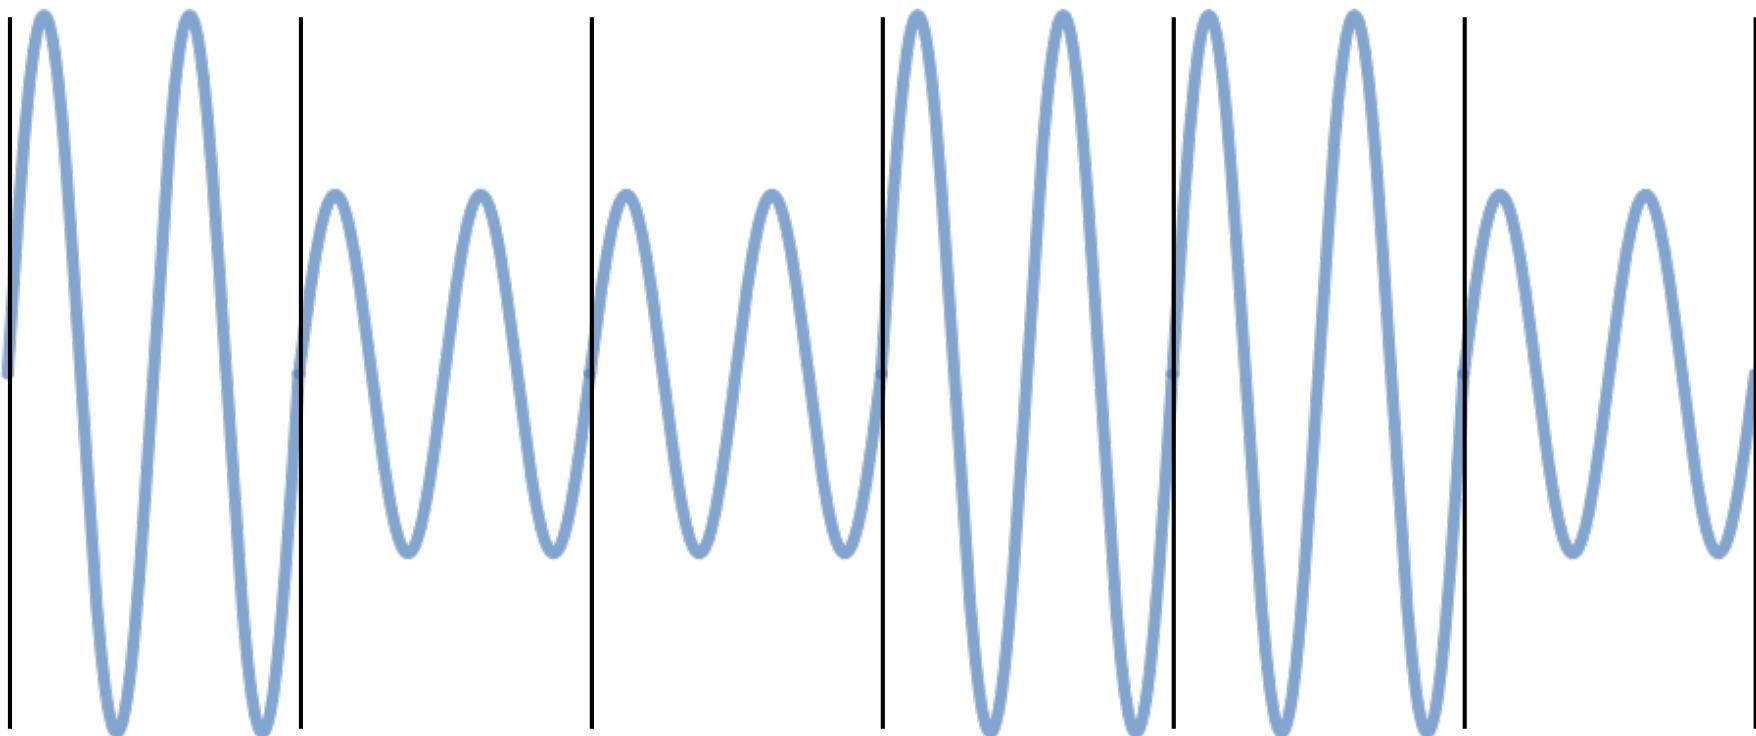


Amplitude Modulation

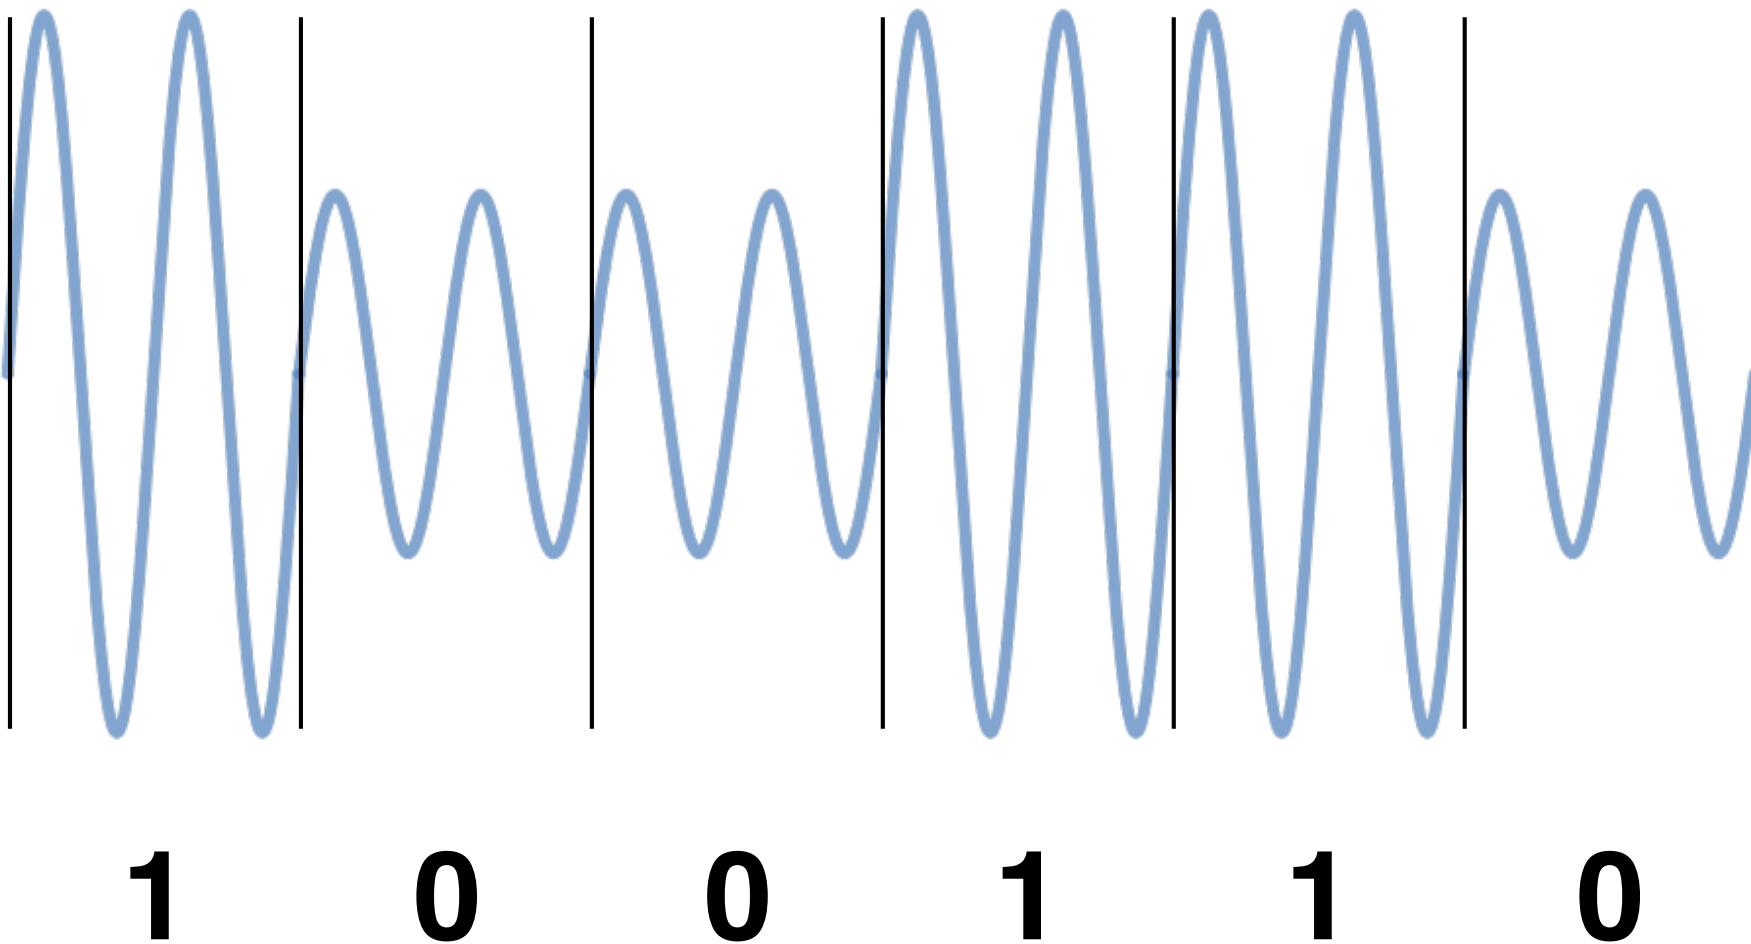


Phase Modulation


Phase Modulation

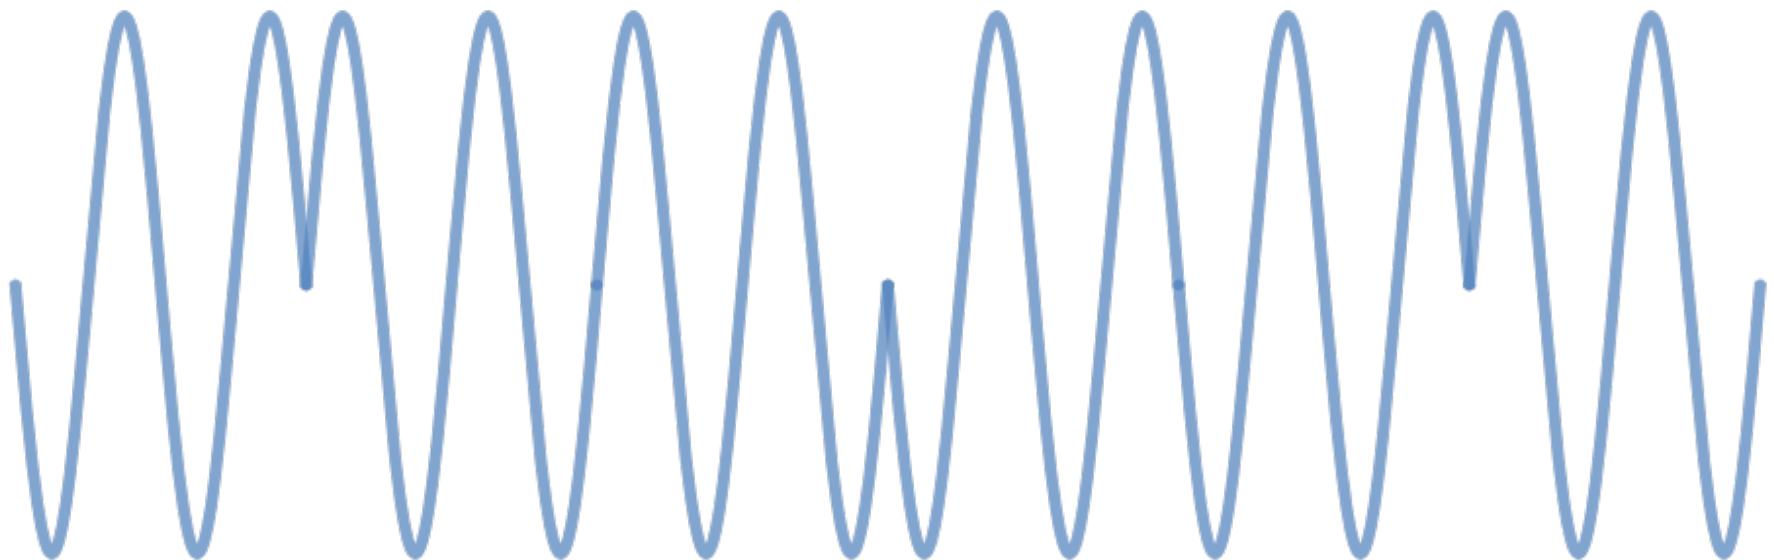

Phase Modulation

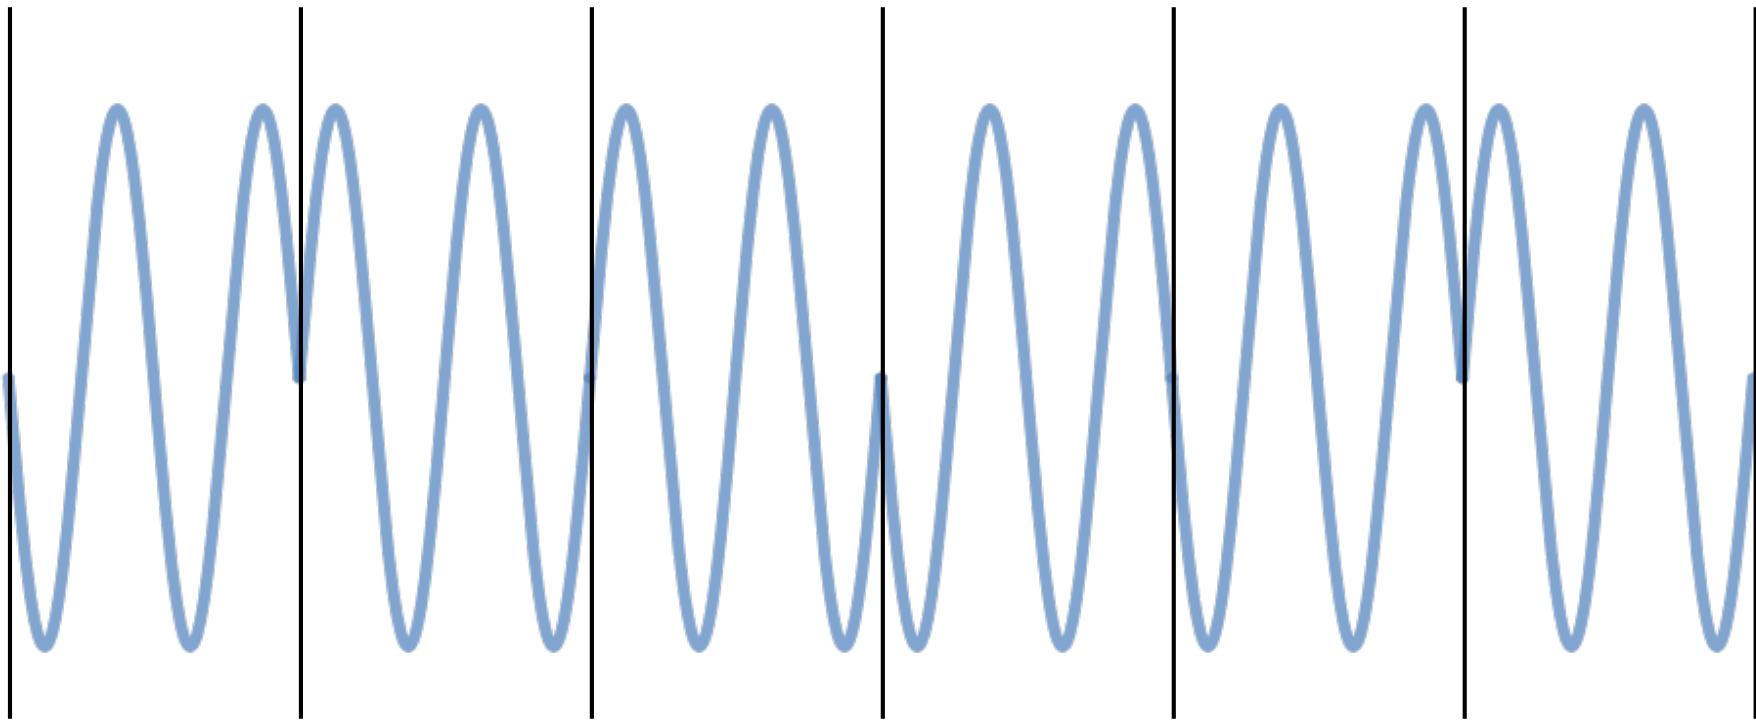

Phase Modulation

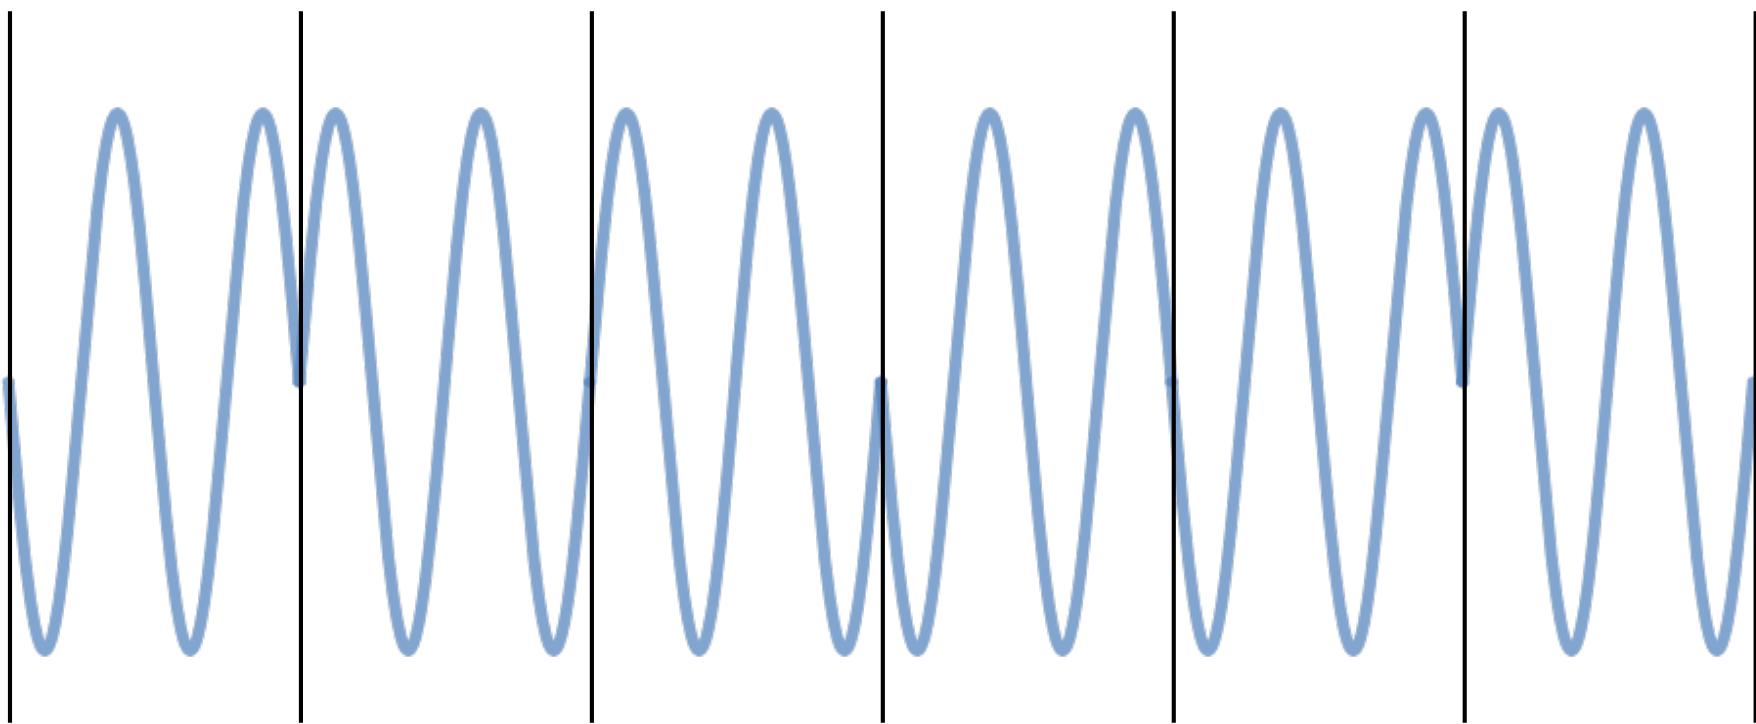

1

0

0

1

1

0

Data Link layer

Data Link Layer

- Now we've seen how we can convert digital data into a signal and back
- The data link layer
 - **controls** access to the physical layer
(MAC = Media Access Control)
 - **encodes/decodes** between frames and signals
 - implements **error detection**
 - **interfaces** to the network layer

Contention-based MAC

Any device can transmit at any time

- “first come first served”

Contention-based MAC

Any device can transmit at any time

- “first come first served”

Collisions: two devices transmitting at the same time

- packets in a collision are damaged
- **avoid** collisions by carrier sensing
(listening on the network for transmission)
- **detect** collisions and re-transmit

Contention-based MAC

Any device can transmit at any time

- “first come first served”

Collisions: two devices transmitting at the same time

- packets in a collision are damaged
- **avoid** collisions by carrier sensing
(listening on the network for transmission)
- **detect** collisions and re-transmit

Used in Ethernet

Ethernet

Dominant LAN technology

- Standardised as IEEE 802.3
- used by almost all LANs
- developed in 1973, standardised in 1980

Ethernet

Dominant LAN technology

- Standardised as IEEE 802.3
- used by almost all LANs
- developed in 1973, standardised in 1980

Physical layer

- Originally 10Mbps over shared media coaxial cable
- Now mostly switched 100Mbps or 1Gbps over UTP
- Standards exist for optic fiber up to 100Gbps

Ethernet MAC

Media Access Control: CSMA/CD

Ethernet MAC

Media Access Control: CSMA/CD

- Carrier Sense (**CS**):
listen on bus, only transmit if no other signal is "sensed"

Ethernet MAC

Media Access Control: CSMA/CD

- Carrier Sense (**CS**):
listen on bus, only transmit if no other signal is "sensed"
- Multiple Access (**MA**):
several devices access the same medium


Ethernet MAC

Media Access Control: CSMA/CD


- Carrier Sense (**CS**):
listen on bus, only transmit if no other signal is "sensed"
- Multiple Access (**MA**):
several devices access the same medium
- Collision Detection (**CD**):
when signal other than own is detected:
 - transmit jam signal (so all other devices detect collision)
 - both wait random time before re-transmitting

Ethernet

Topology:
shared bus (multi-point)

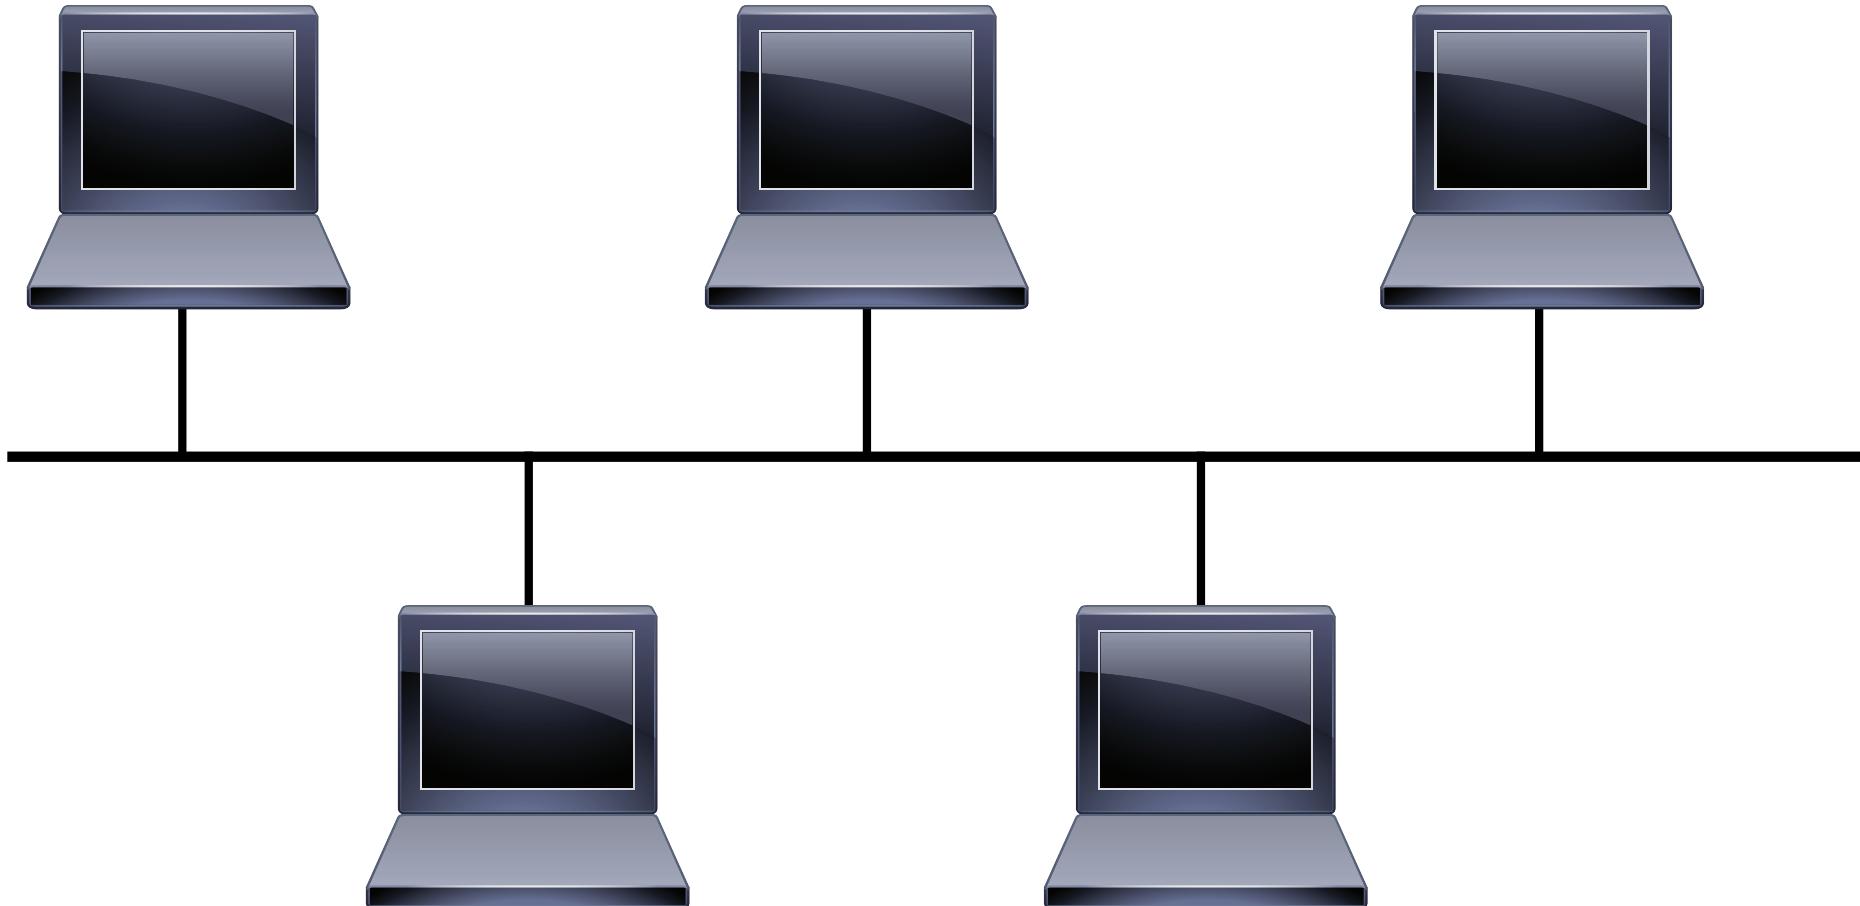


Ethernet

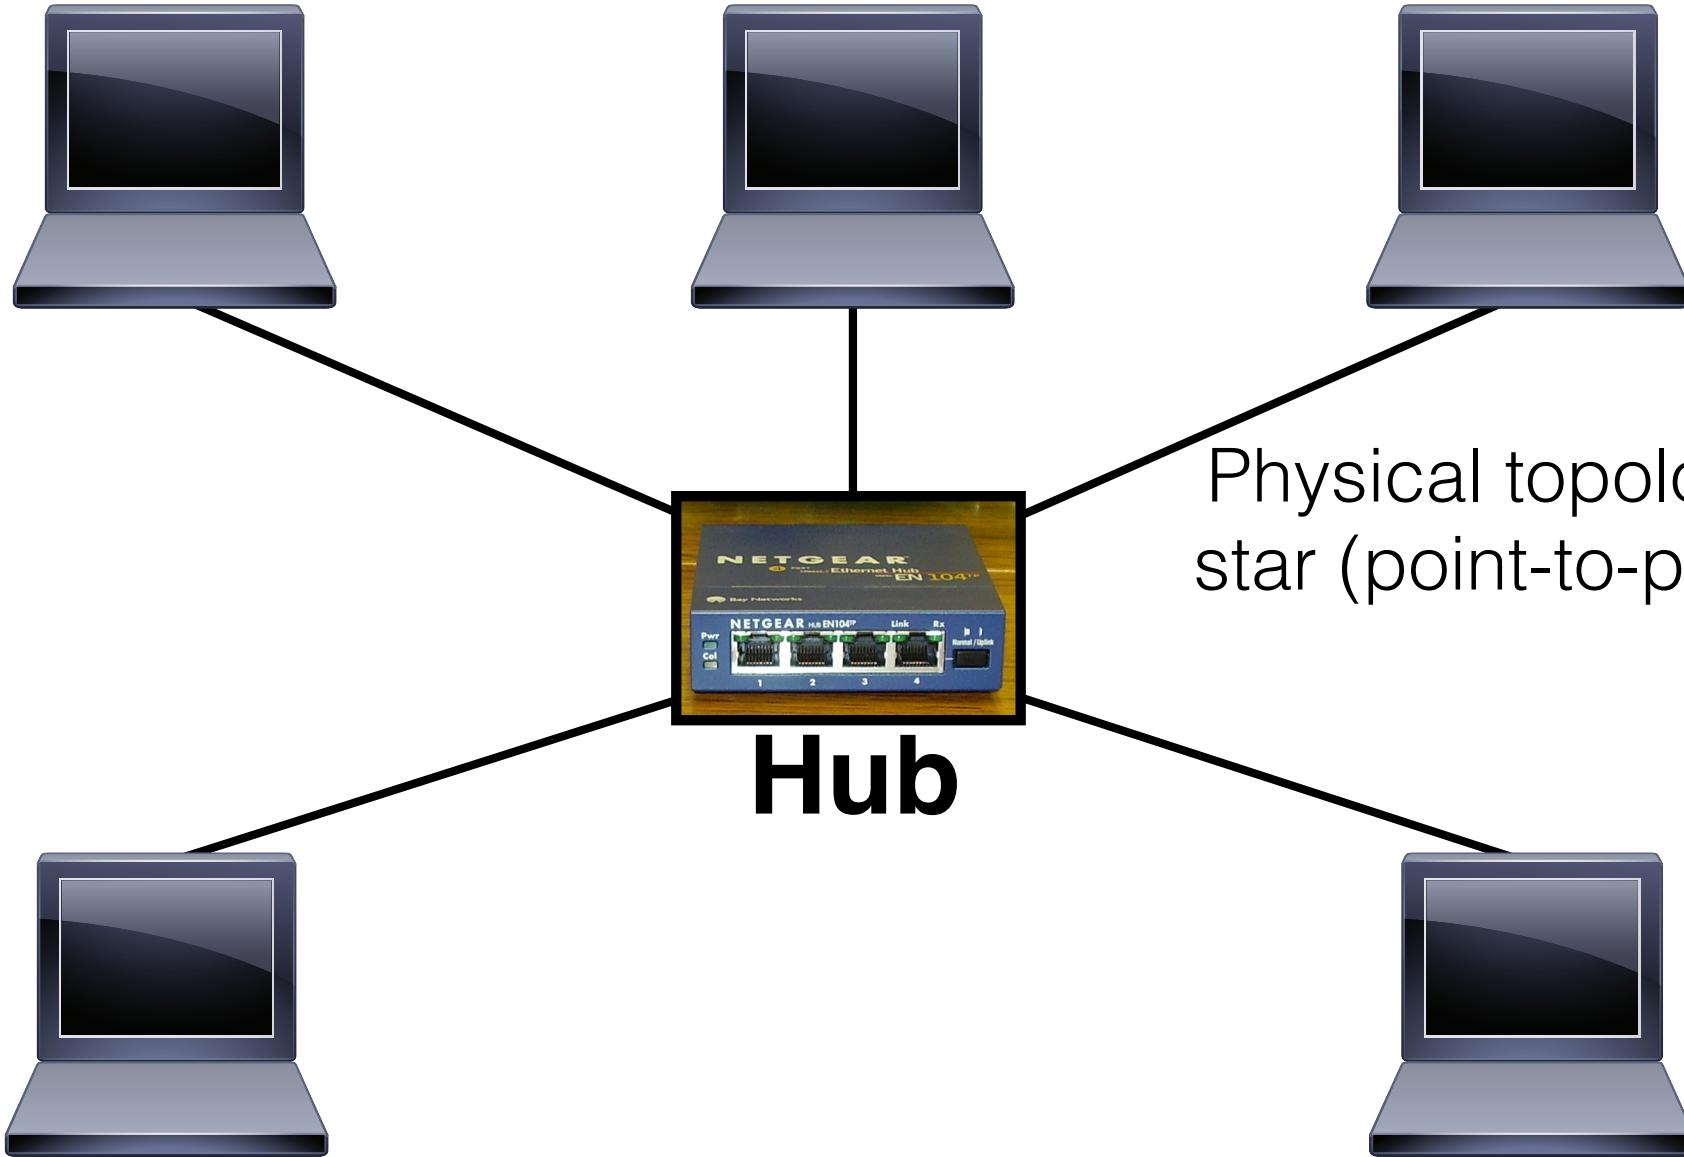


Ethernet




Ethernet

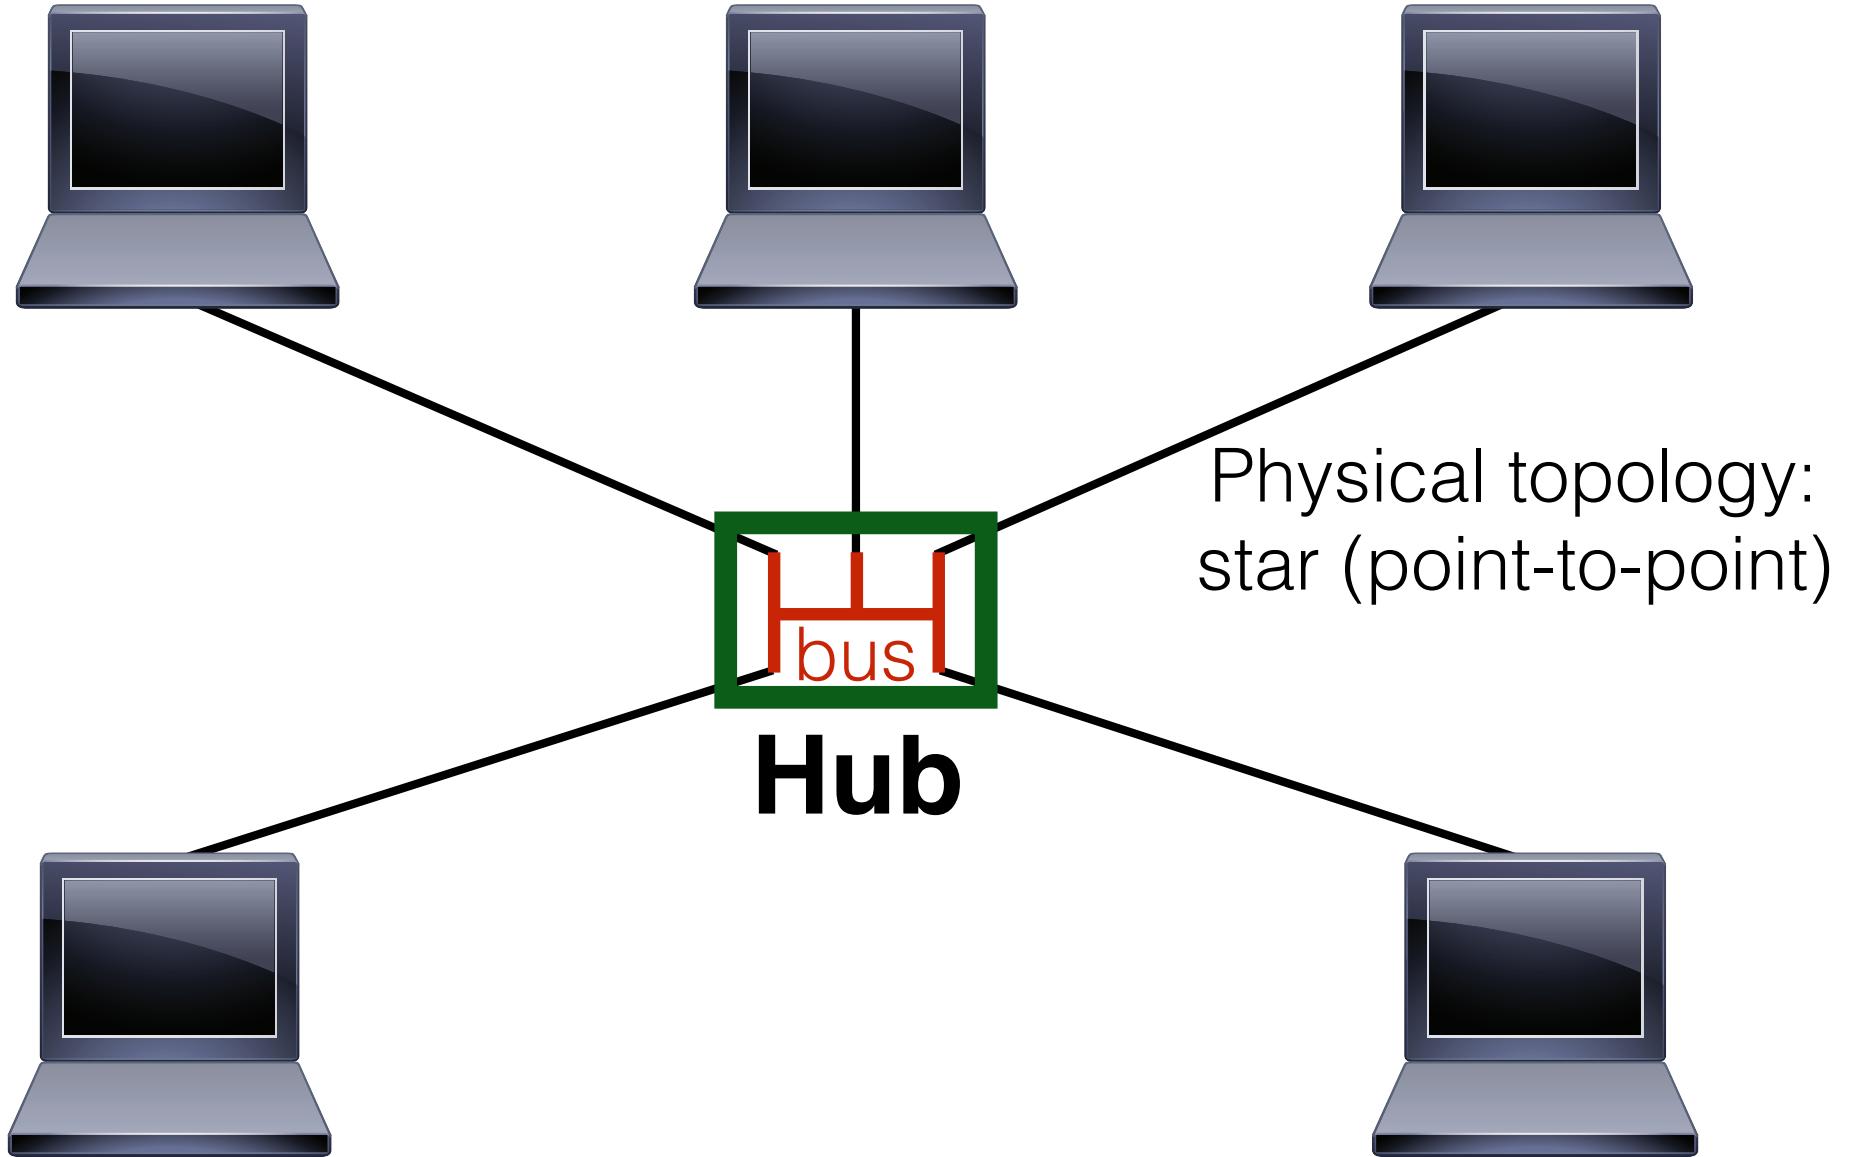

Ethernet

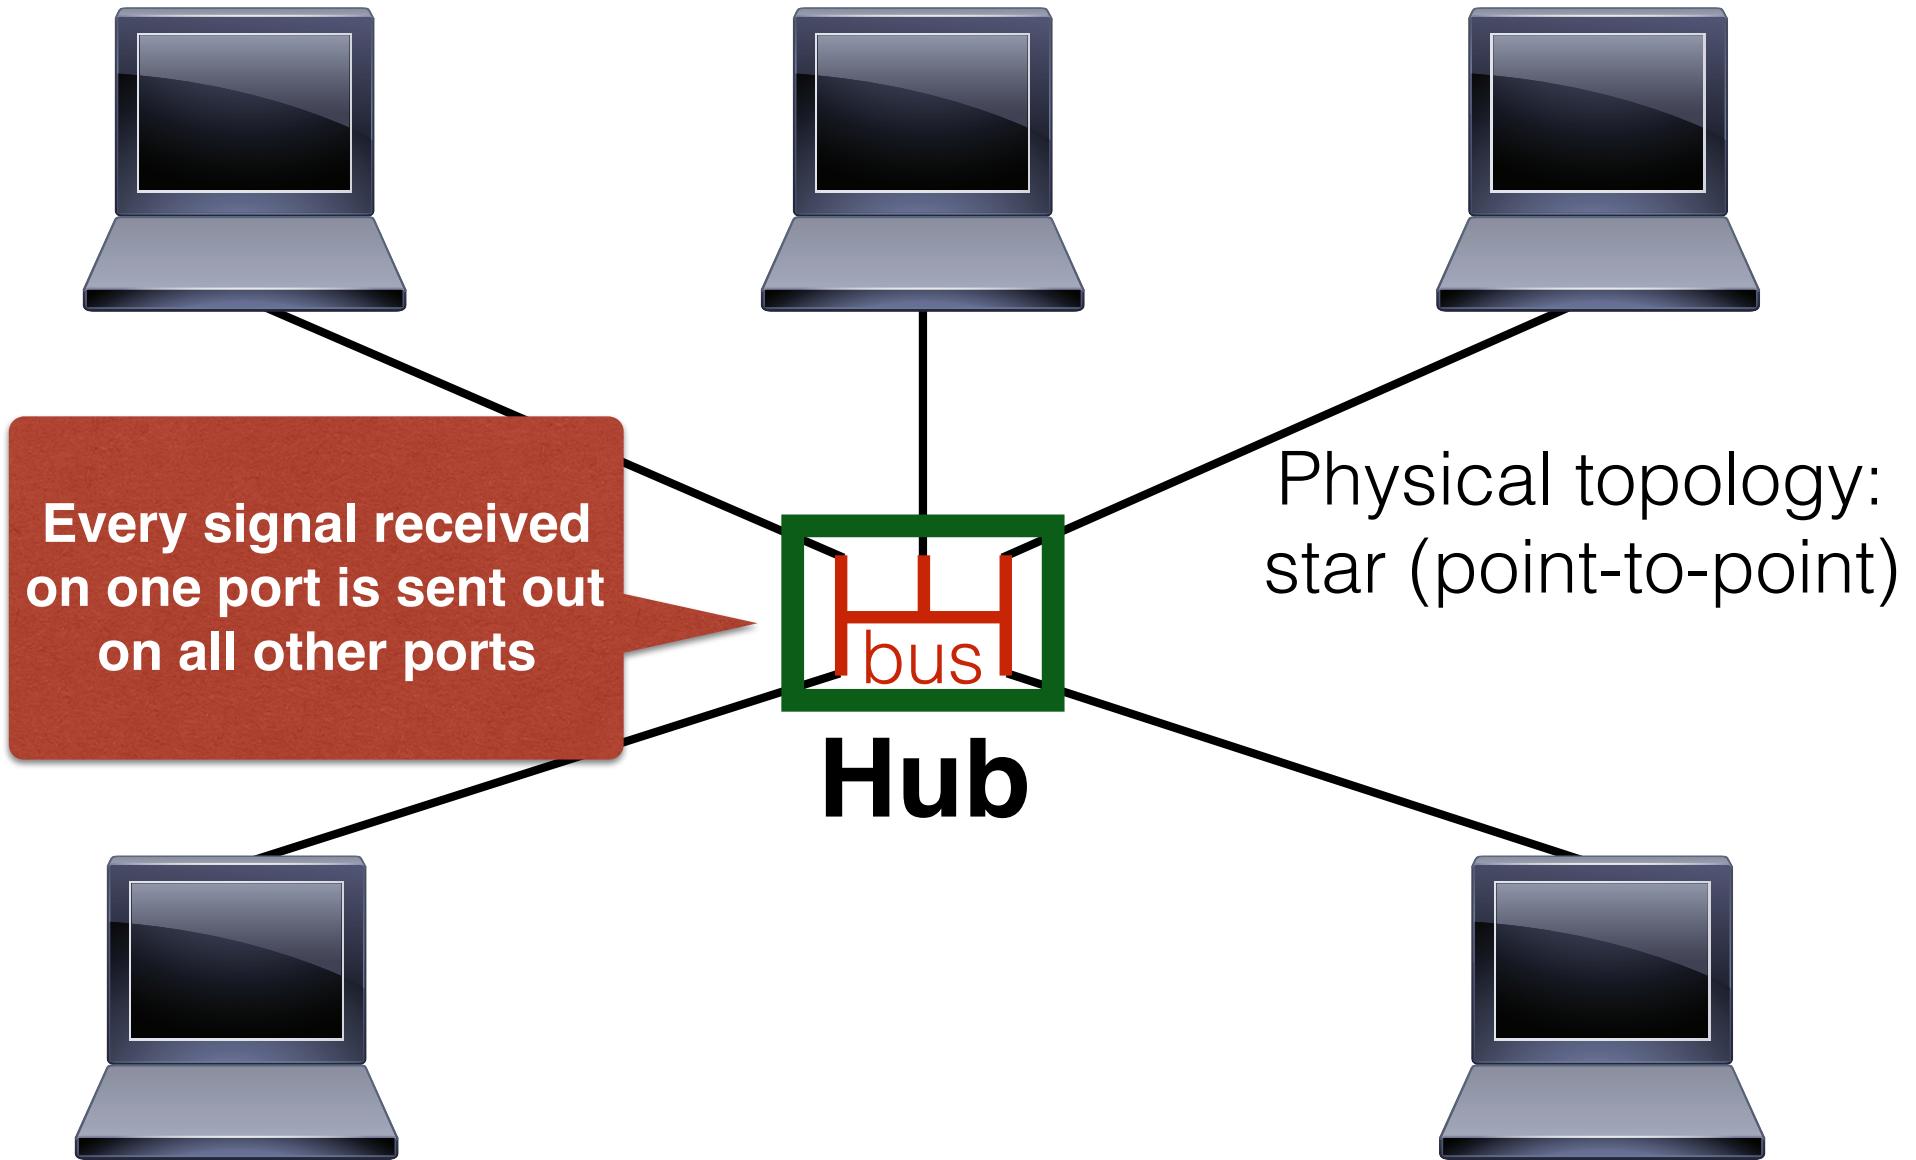

Ethernet

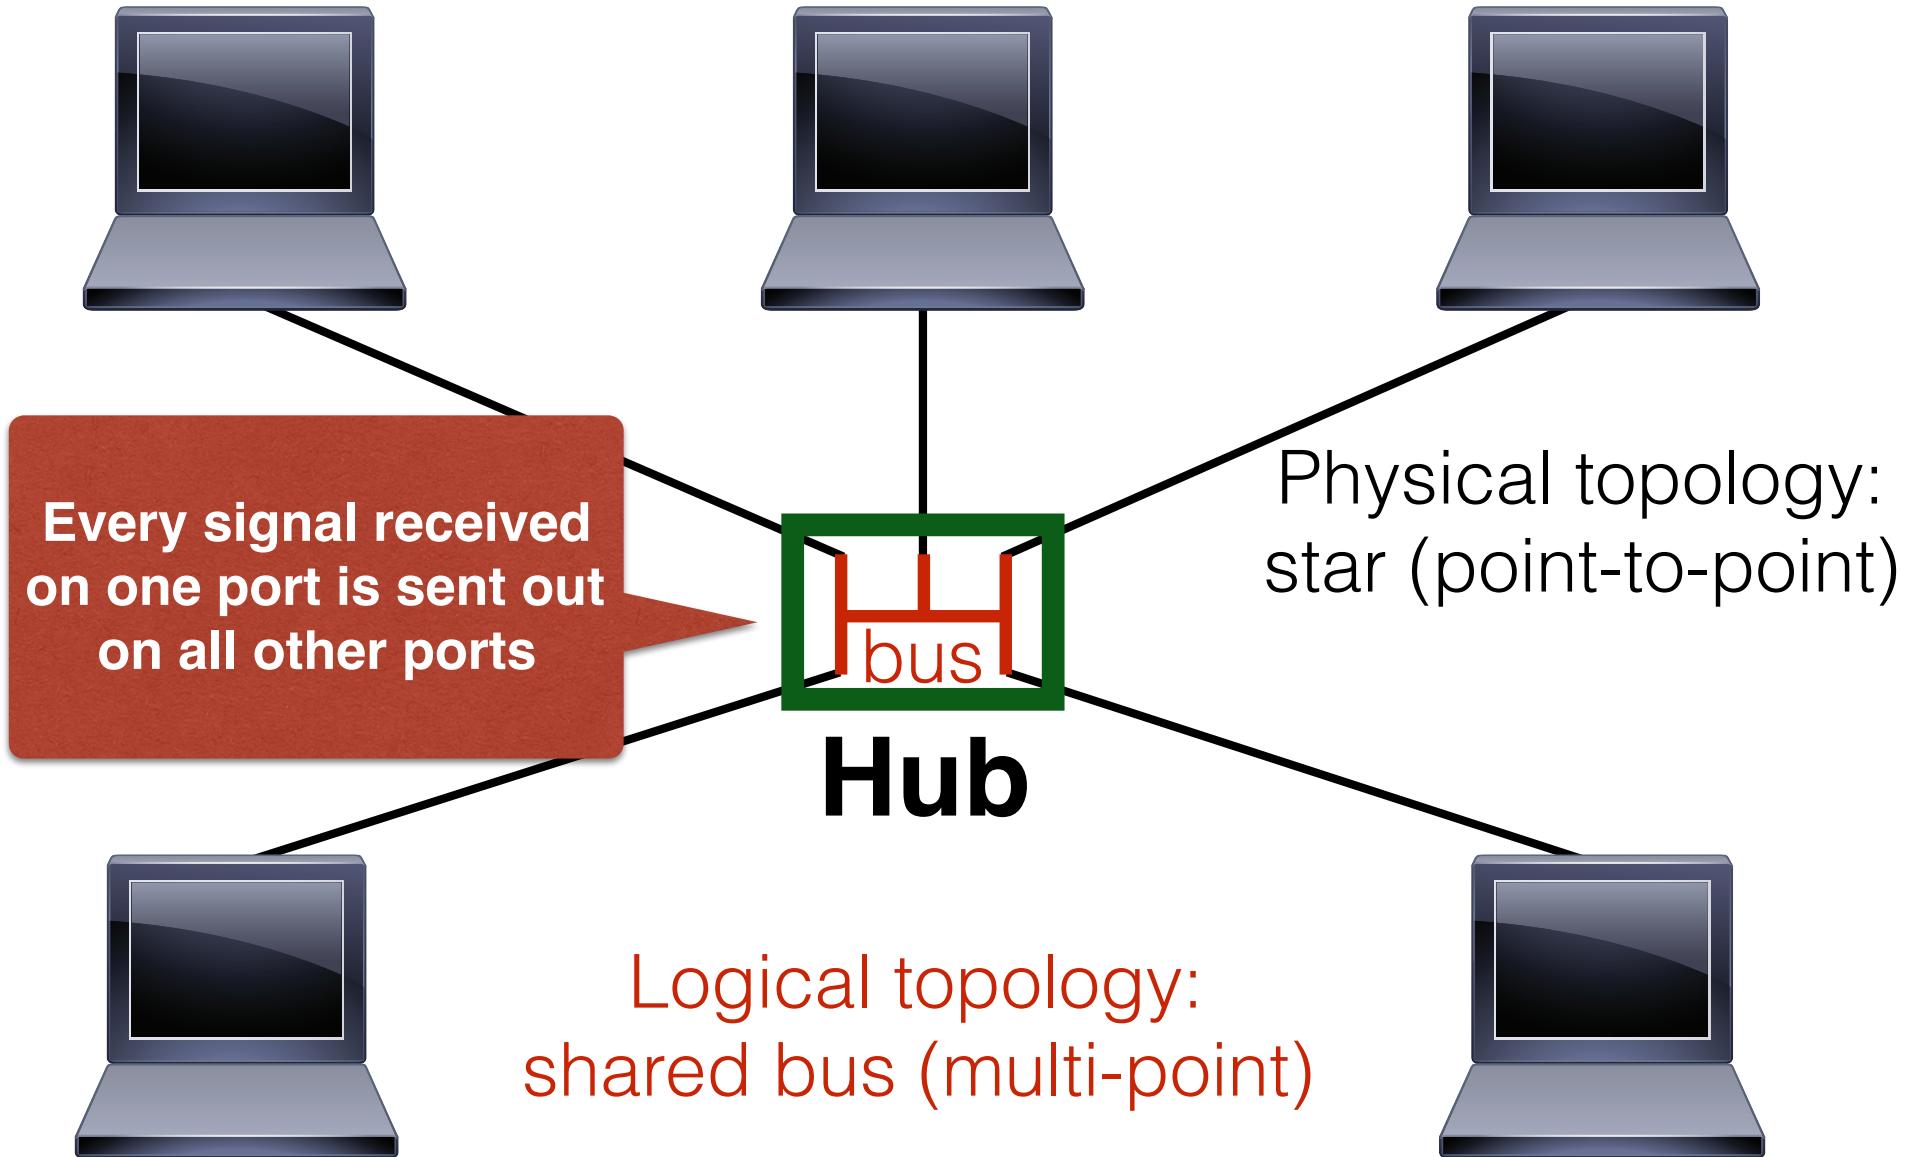

Problems with Shared Ethernet

Half-duplex

- only one device can send at a time

Problems with Shared Ethernet

Half-duplex

- only one device can send at a time

Broadcasting

- all frames are delivered to all devices, not just destination

Problems with Shared Ethernet

Half-duplex

- only one device can send at a time

Broadcasting

- all frames are delivered to all devices, not just destination

Limited network size

- CSMA/CD limits size of **collision domain**

Problems with Shared Ethernet

Half-duplex

- only one device can send at a time

Broadcasting

- all frames are delivered to all devices, not just destination

Limited network size

- CSMA/CD limits size of **collision domain**

Solution: implement logical star topology!

Switched Ethernet

Switched Ethernet

Network switch

- looks like hub
- 16 to 24 ports for UTP cables
- **but:** circuit no longer shared!

Switched Ethernet

Network switch

- looks like hub
- 16 to 24 ports for UTP cables
- **but:** circuit no longer shared!

A switch is a layer 2 device

- reads MAC address of frame
- transmits **only** to destination port

Switched Ethernet

Network switch

- looks like hub
- 16 to 24 ports for UTP cables
- **but:** circuit no longer shared!

A switch is a layer 2 device

- reads MAC address of frame
- transmits **only** to destination port


How does the switch know the destination port?

FIT1047 - Week 9


Networks: Physical and Data Link layers




Switch Forwarding Table

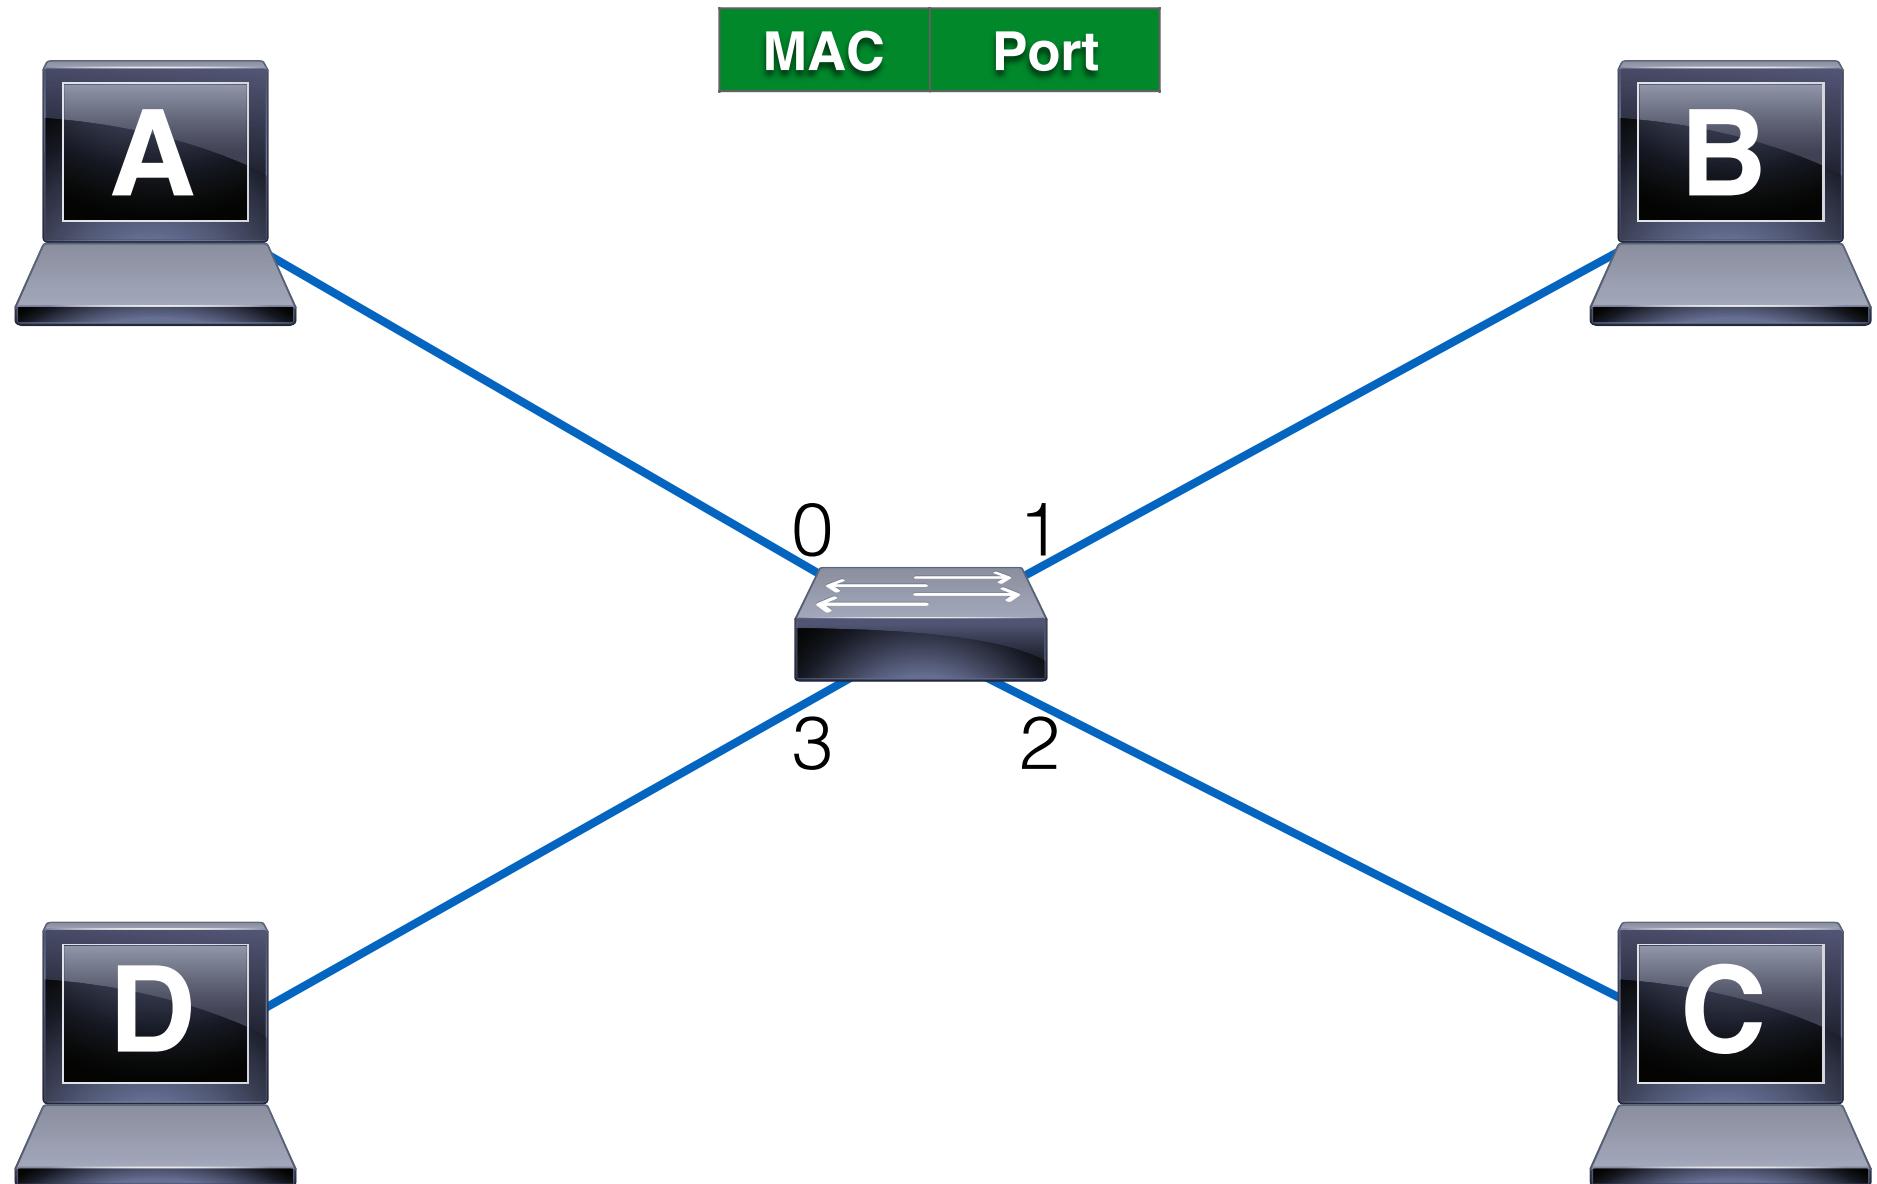


Switch Forwarding Table

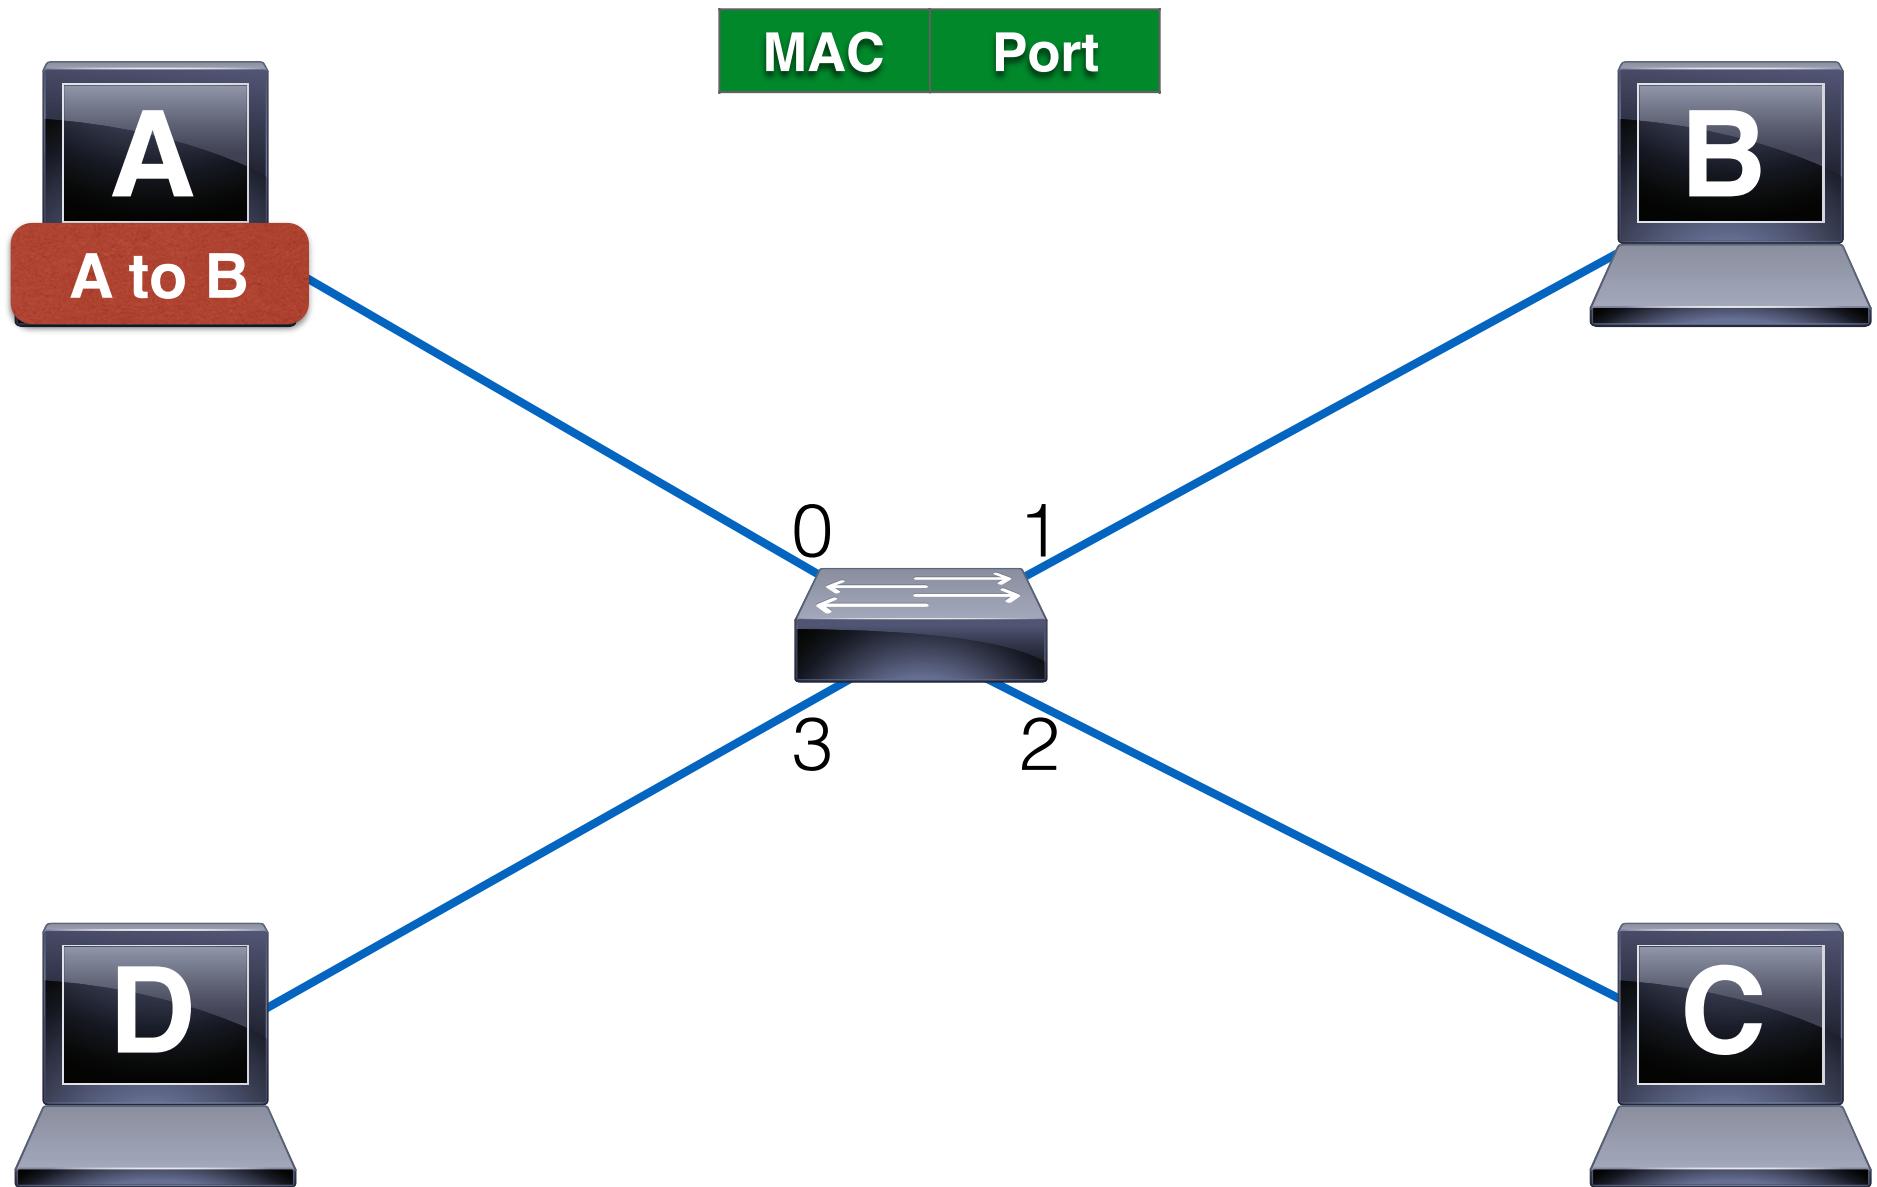


Switch Forwarding Table

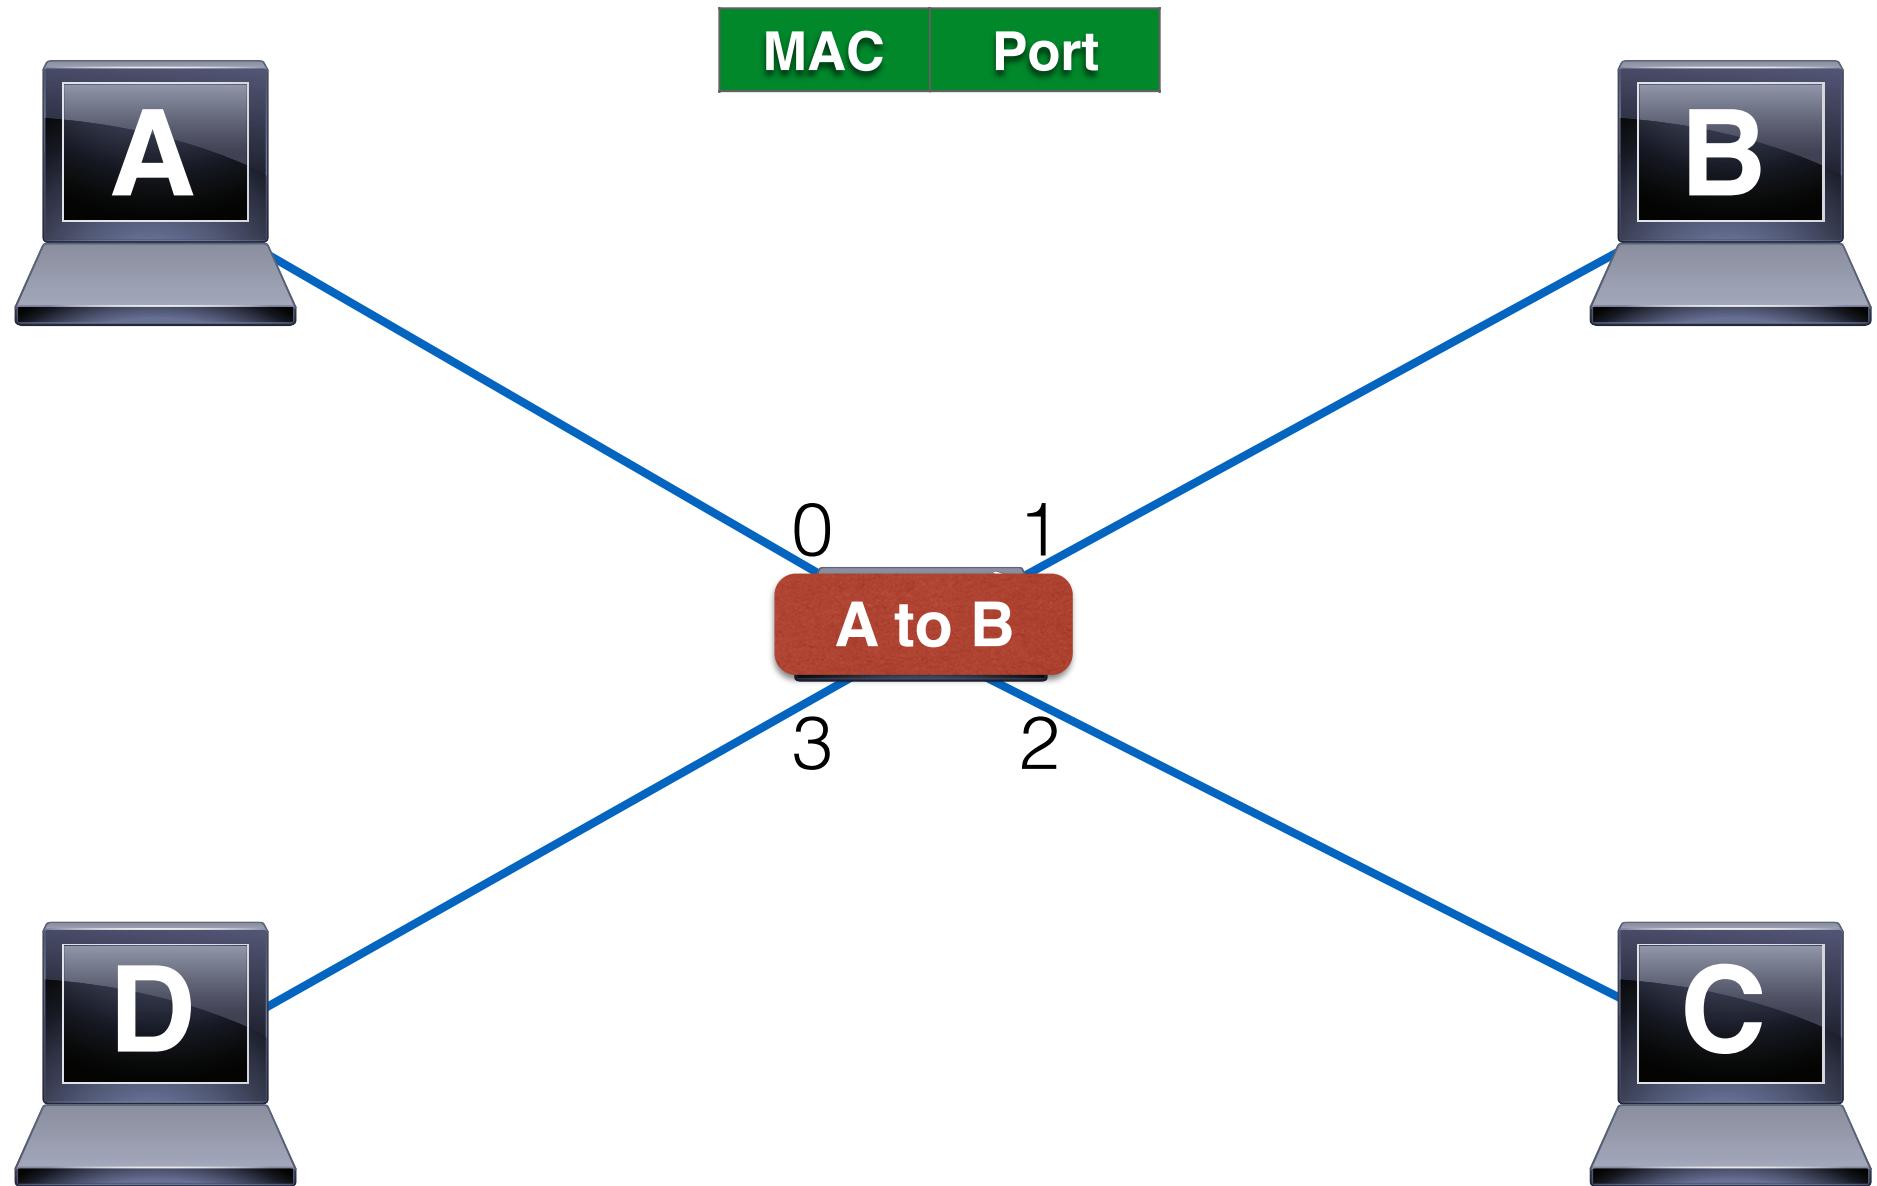


Switch Forwarding Table

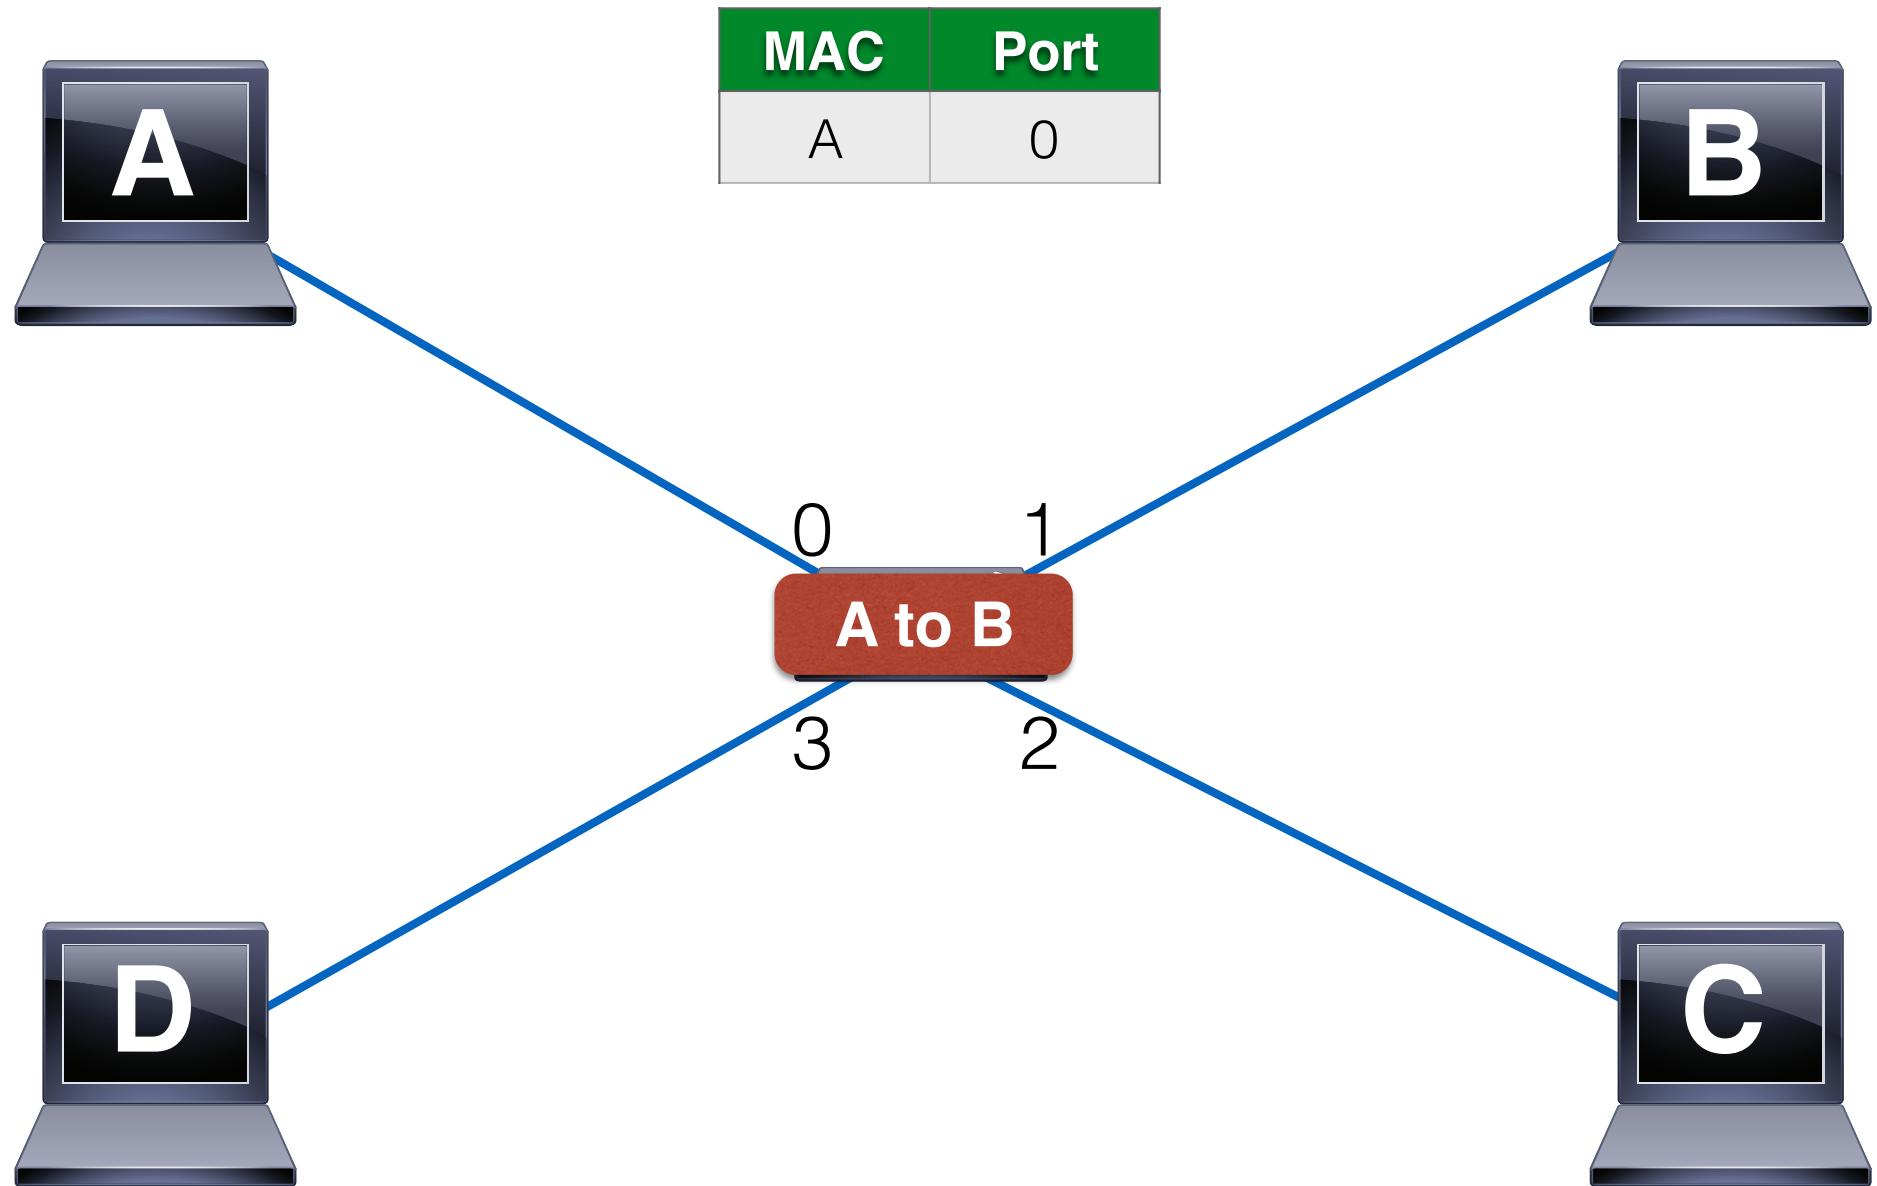


Switch Forwarding Table

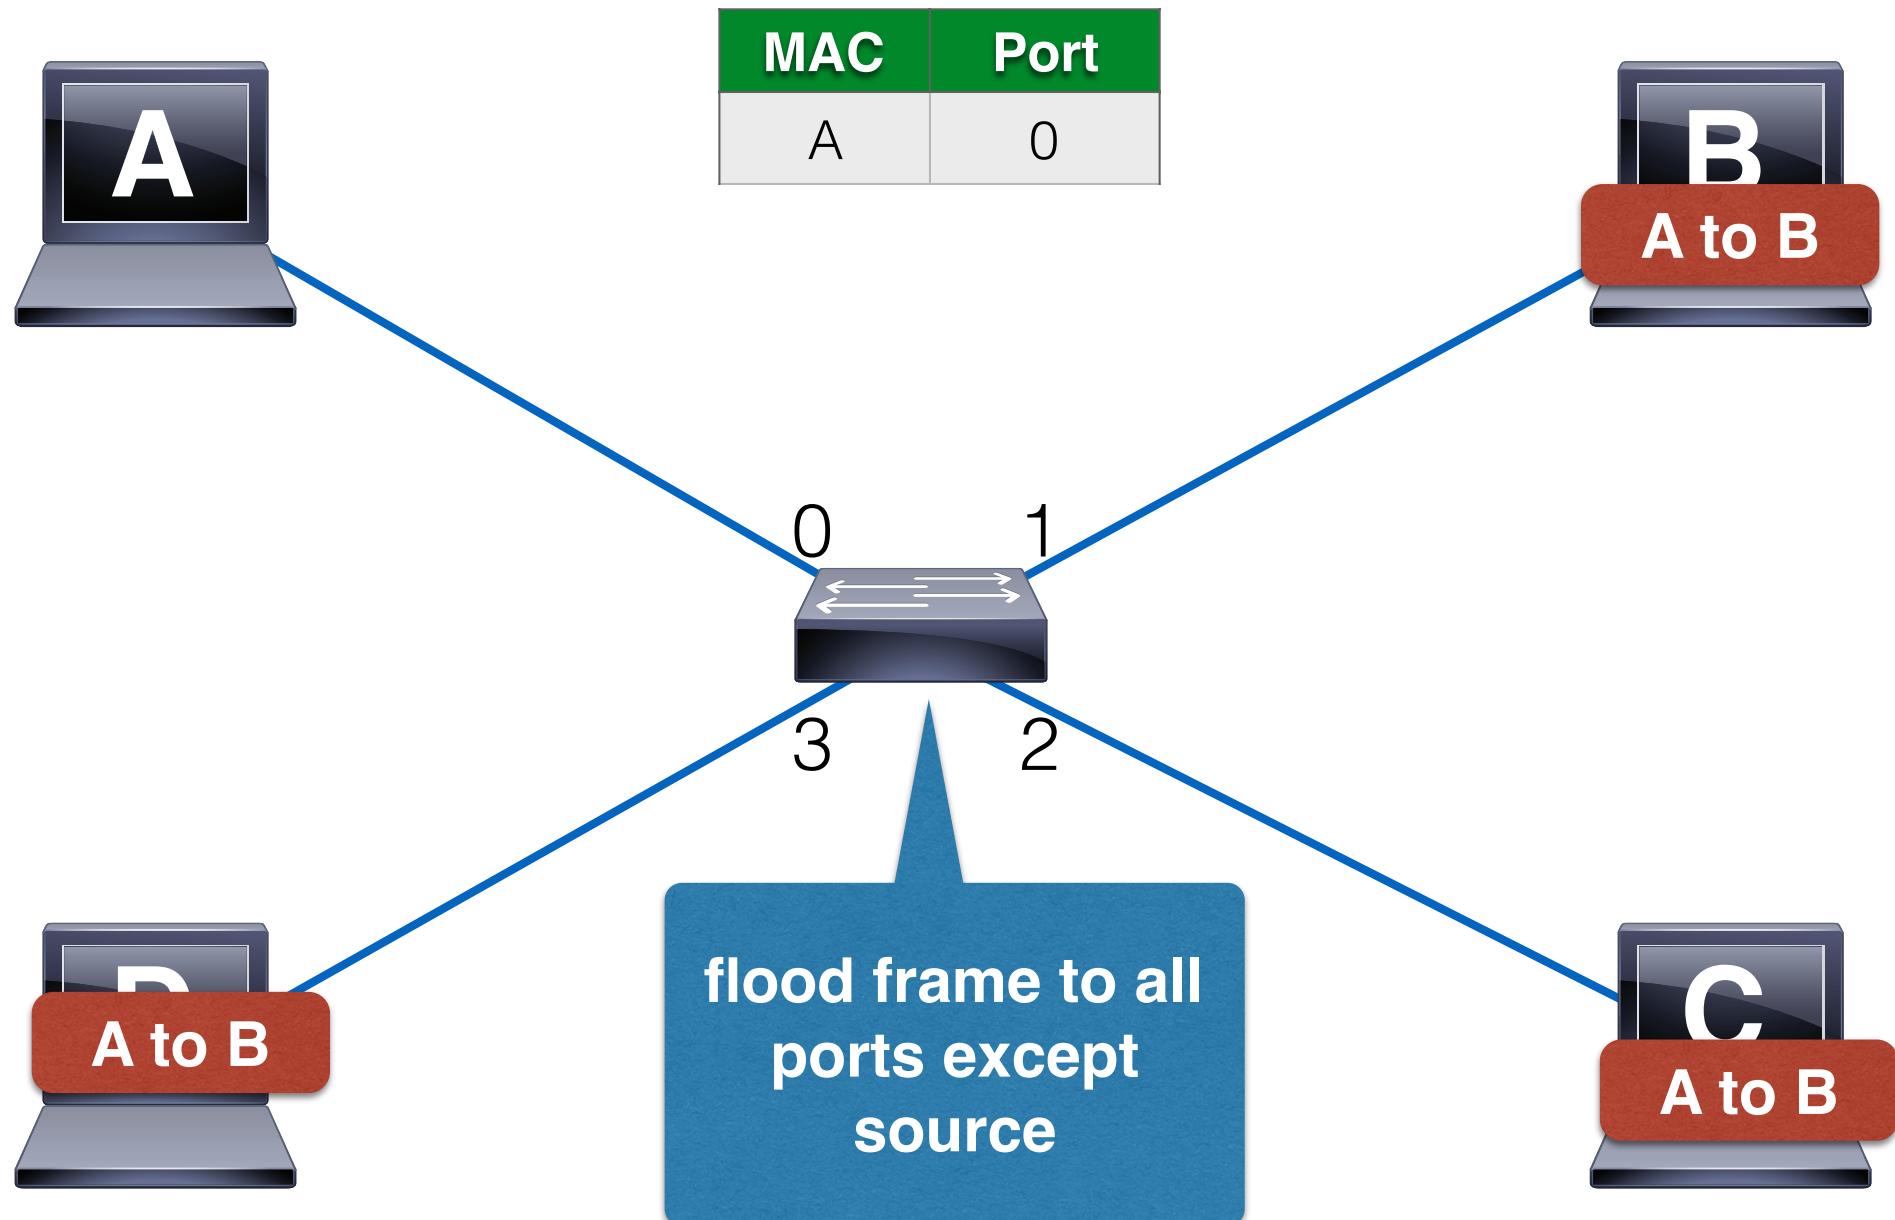


Switch Forwarding Table

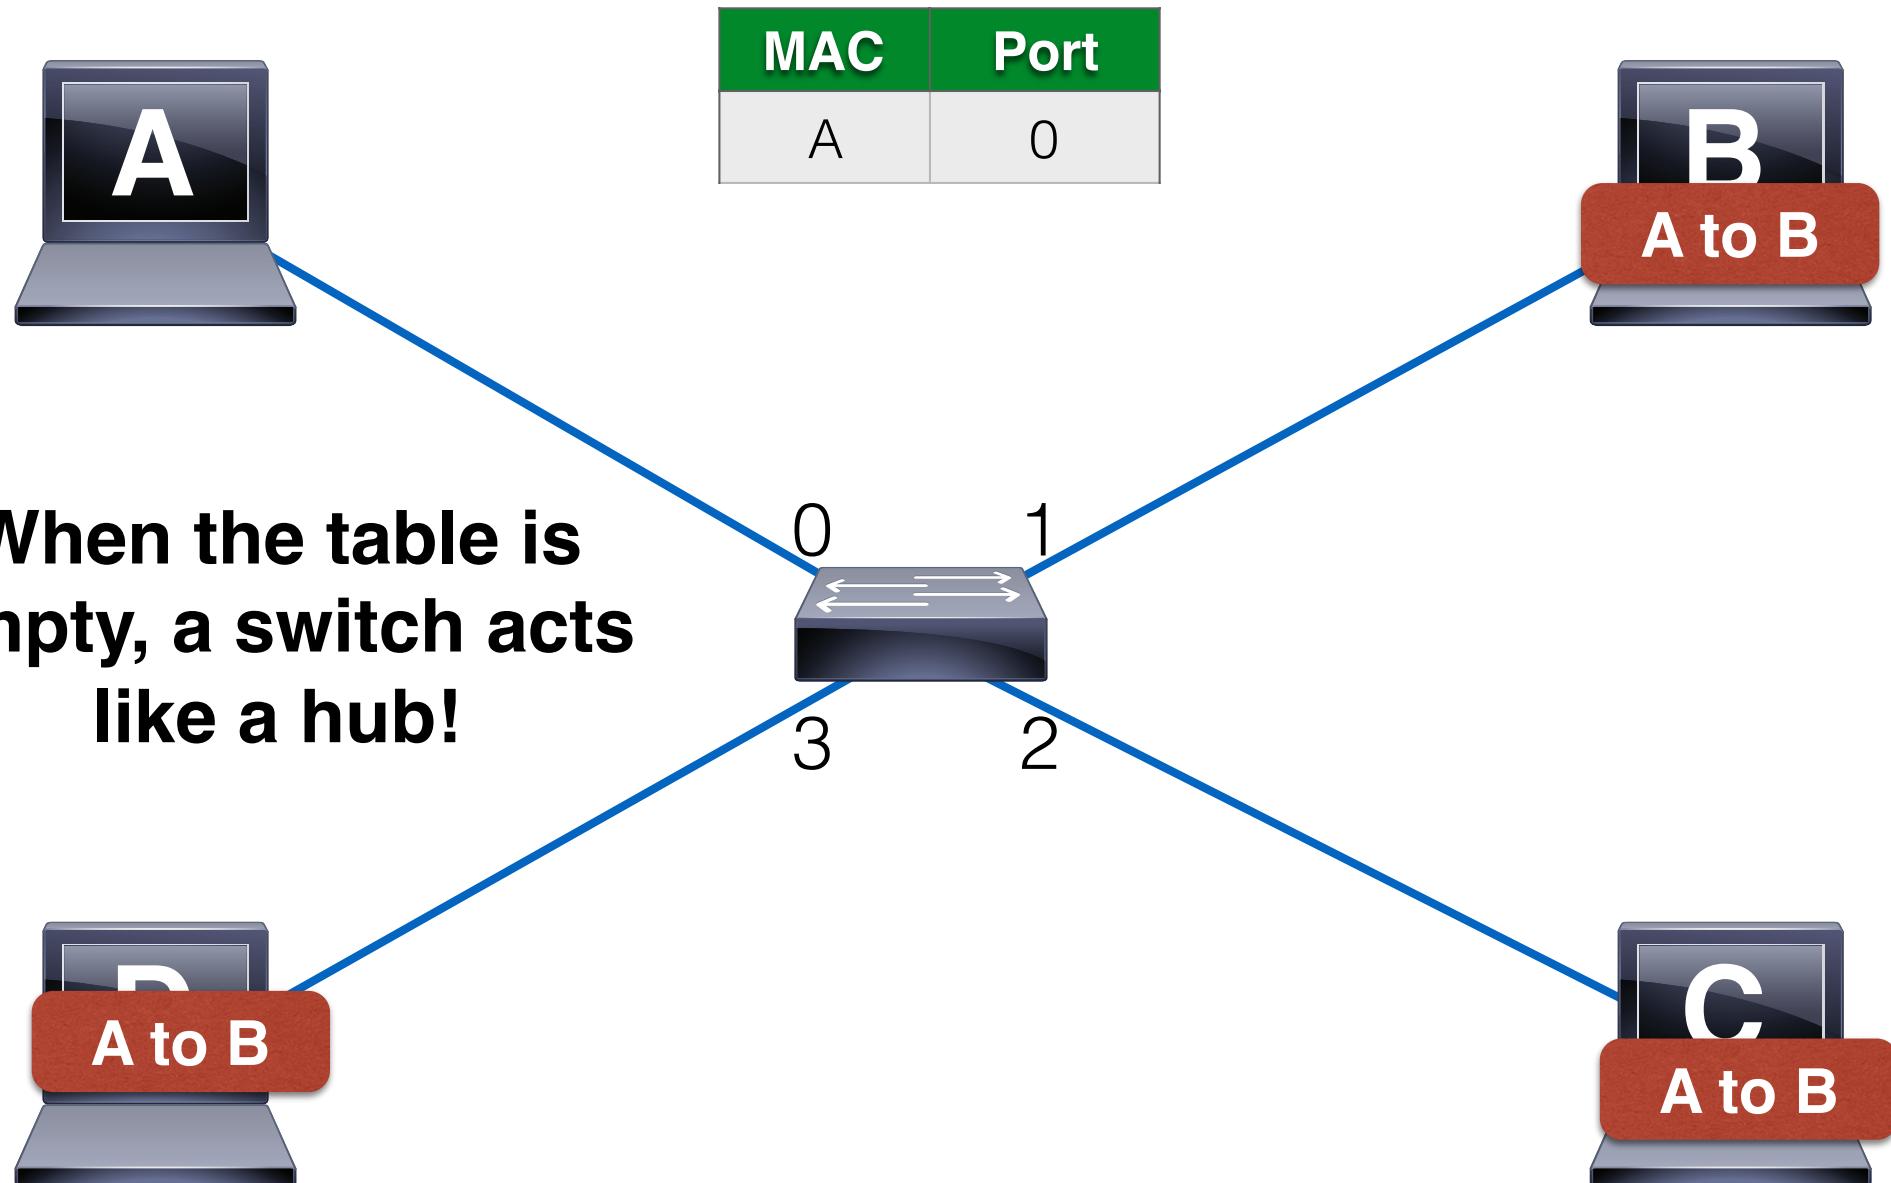


Switch Forwarding Table

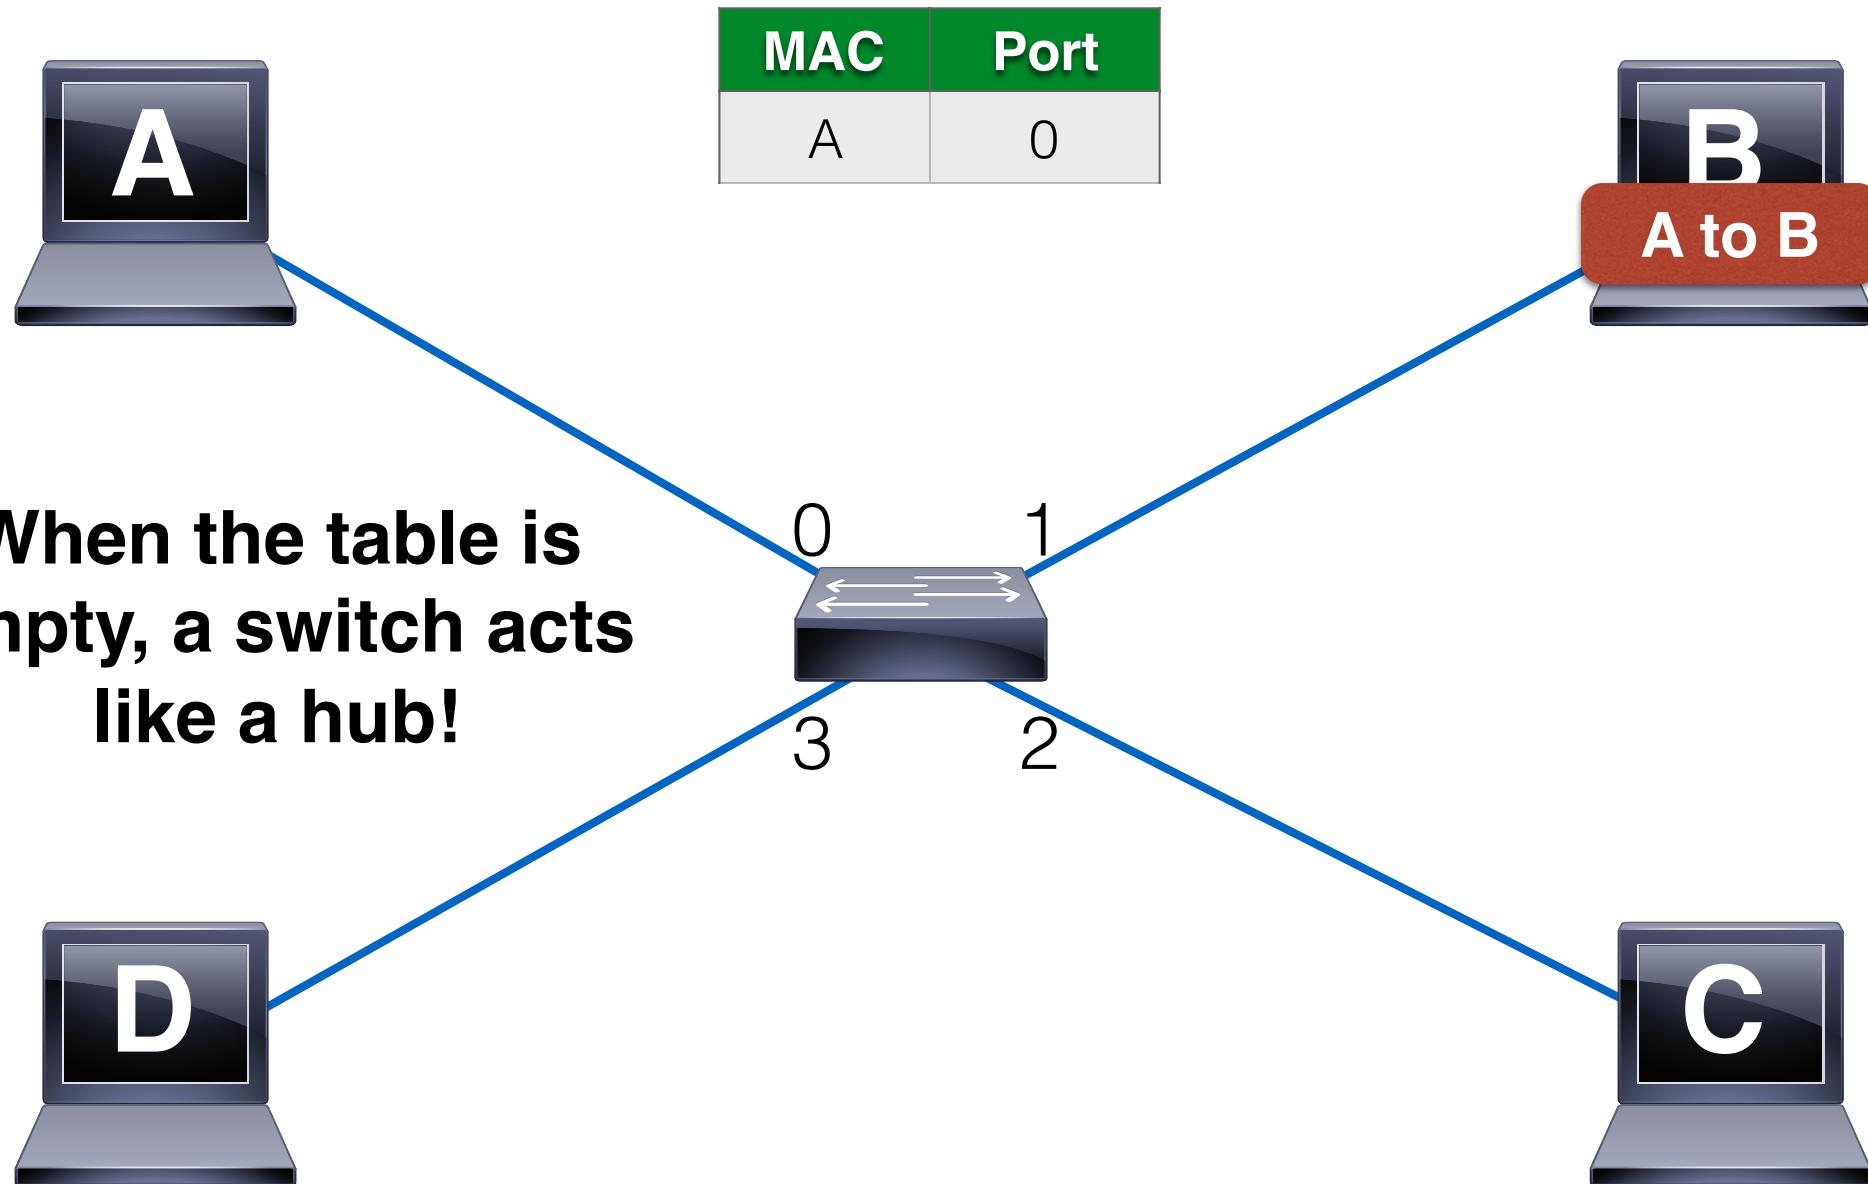


Switch Forwarding Table

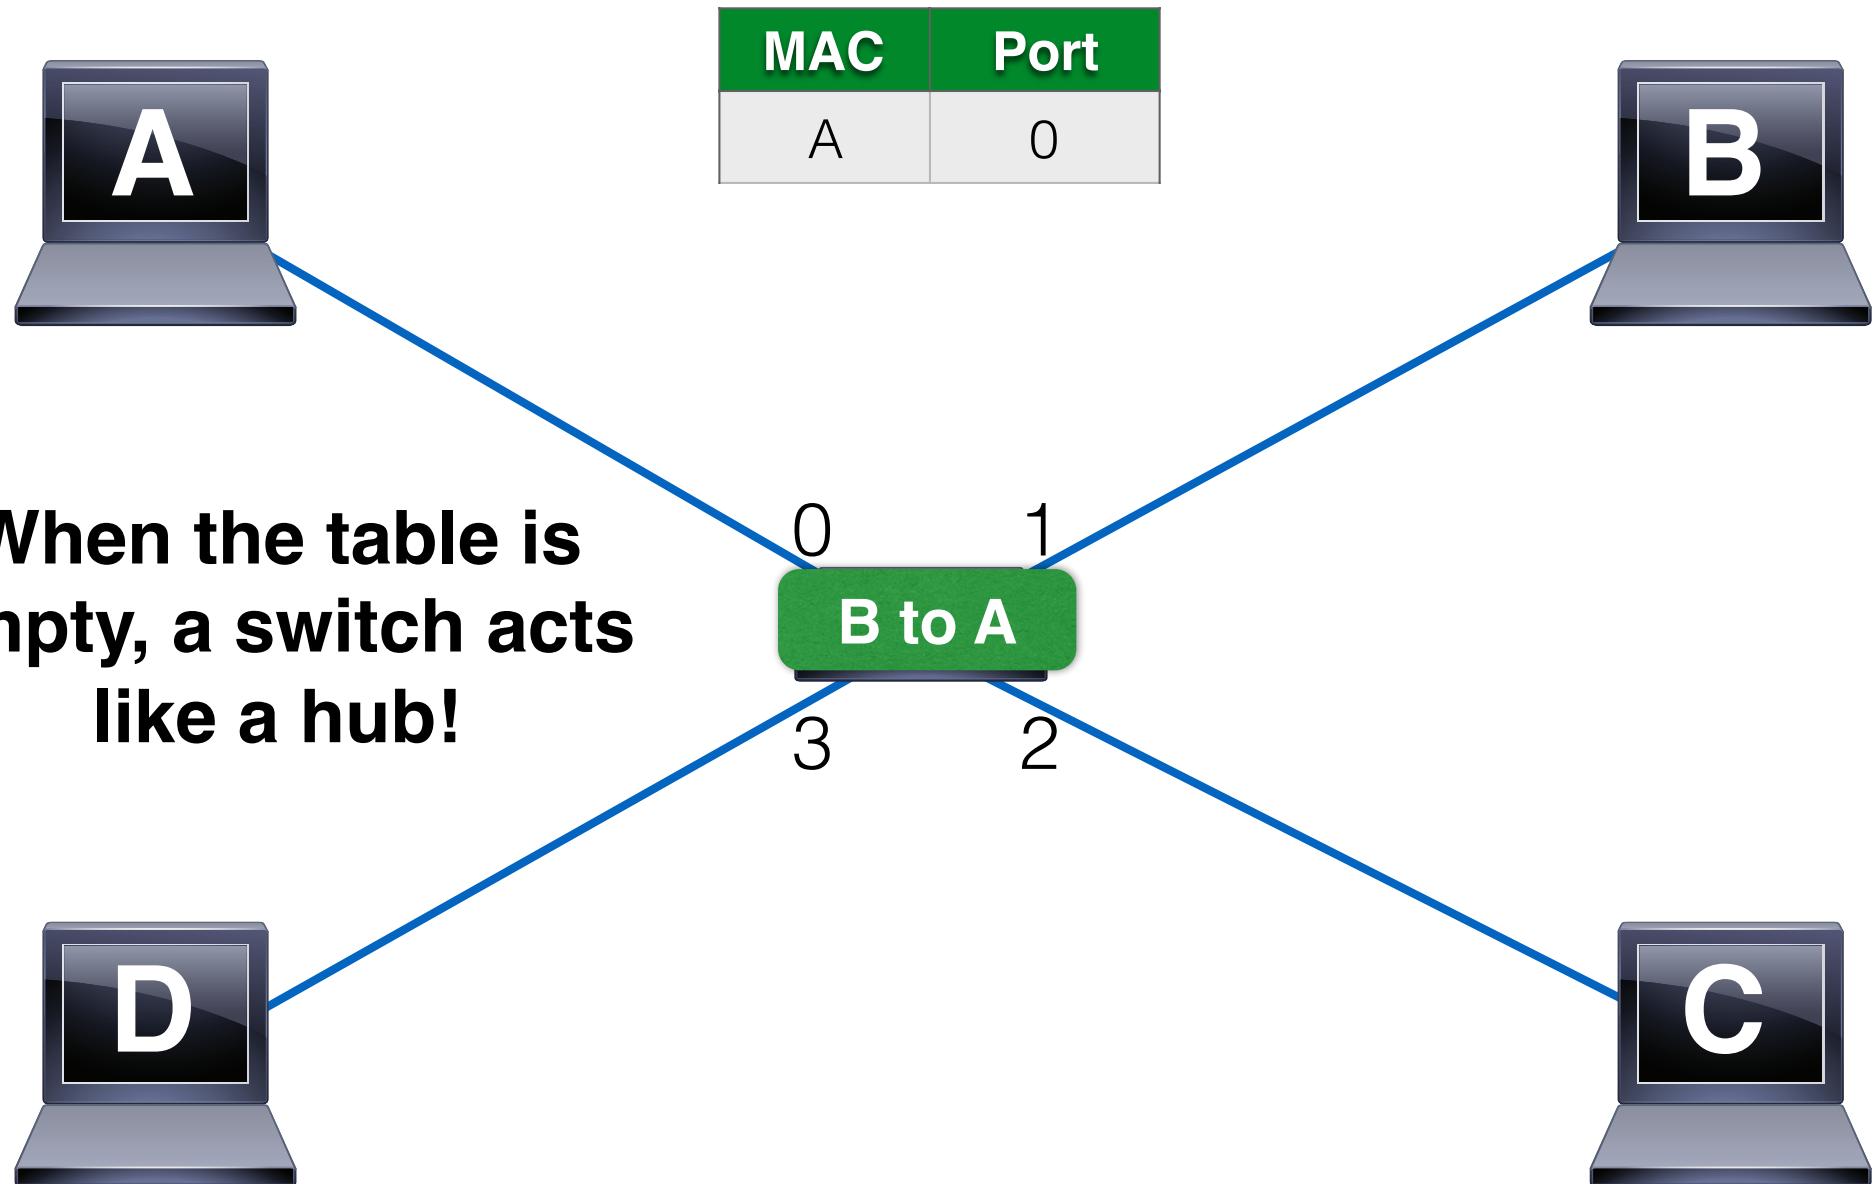


Switch Forwarding Table

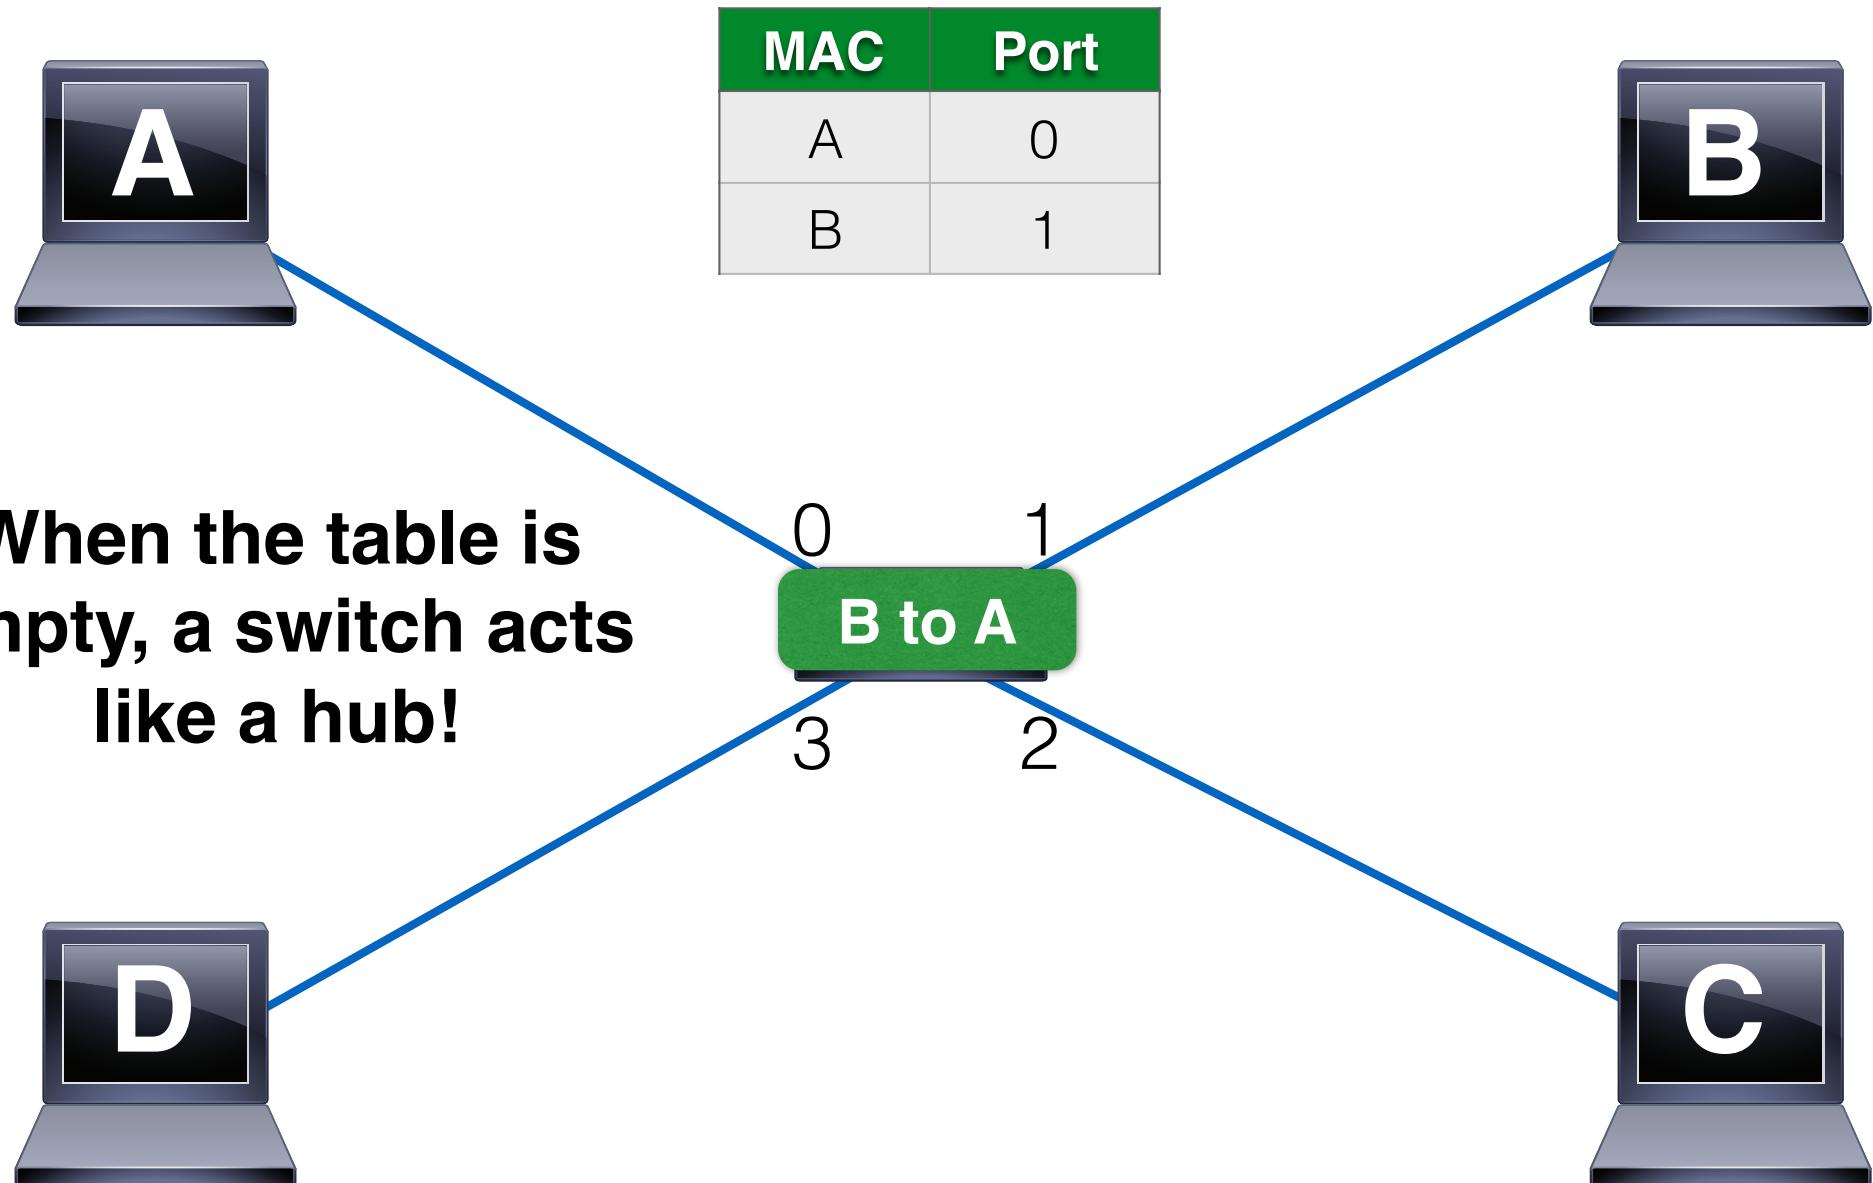


Switch Forwarding Table

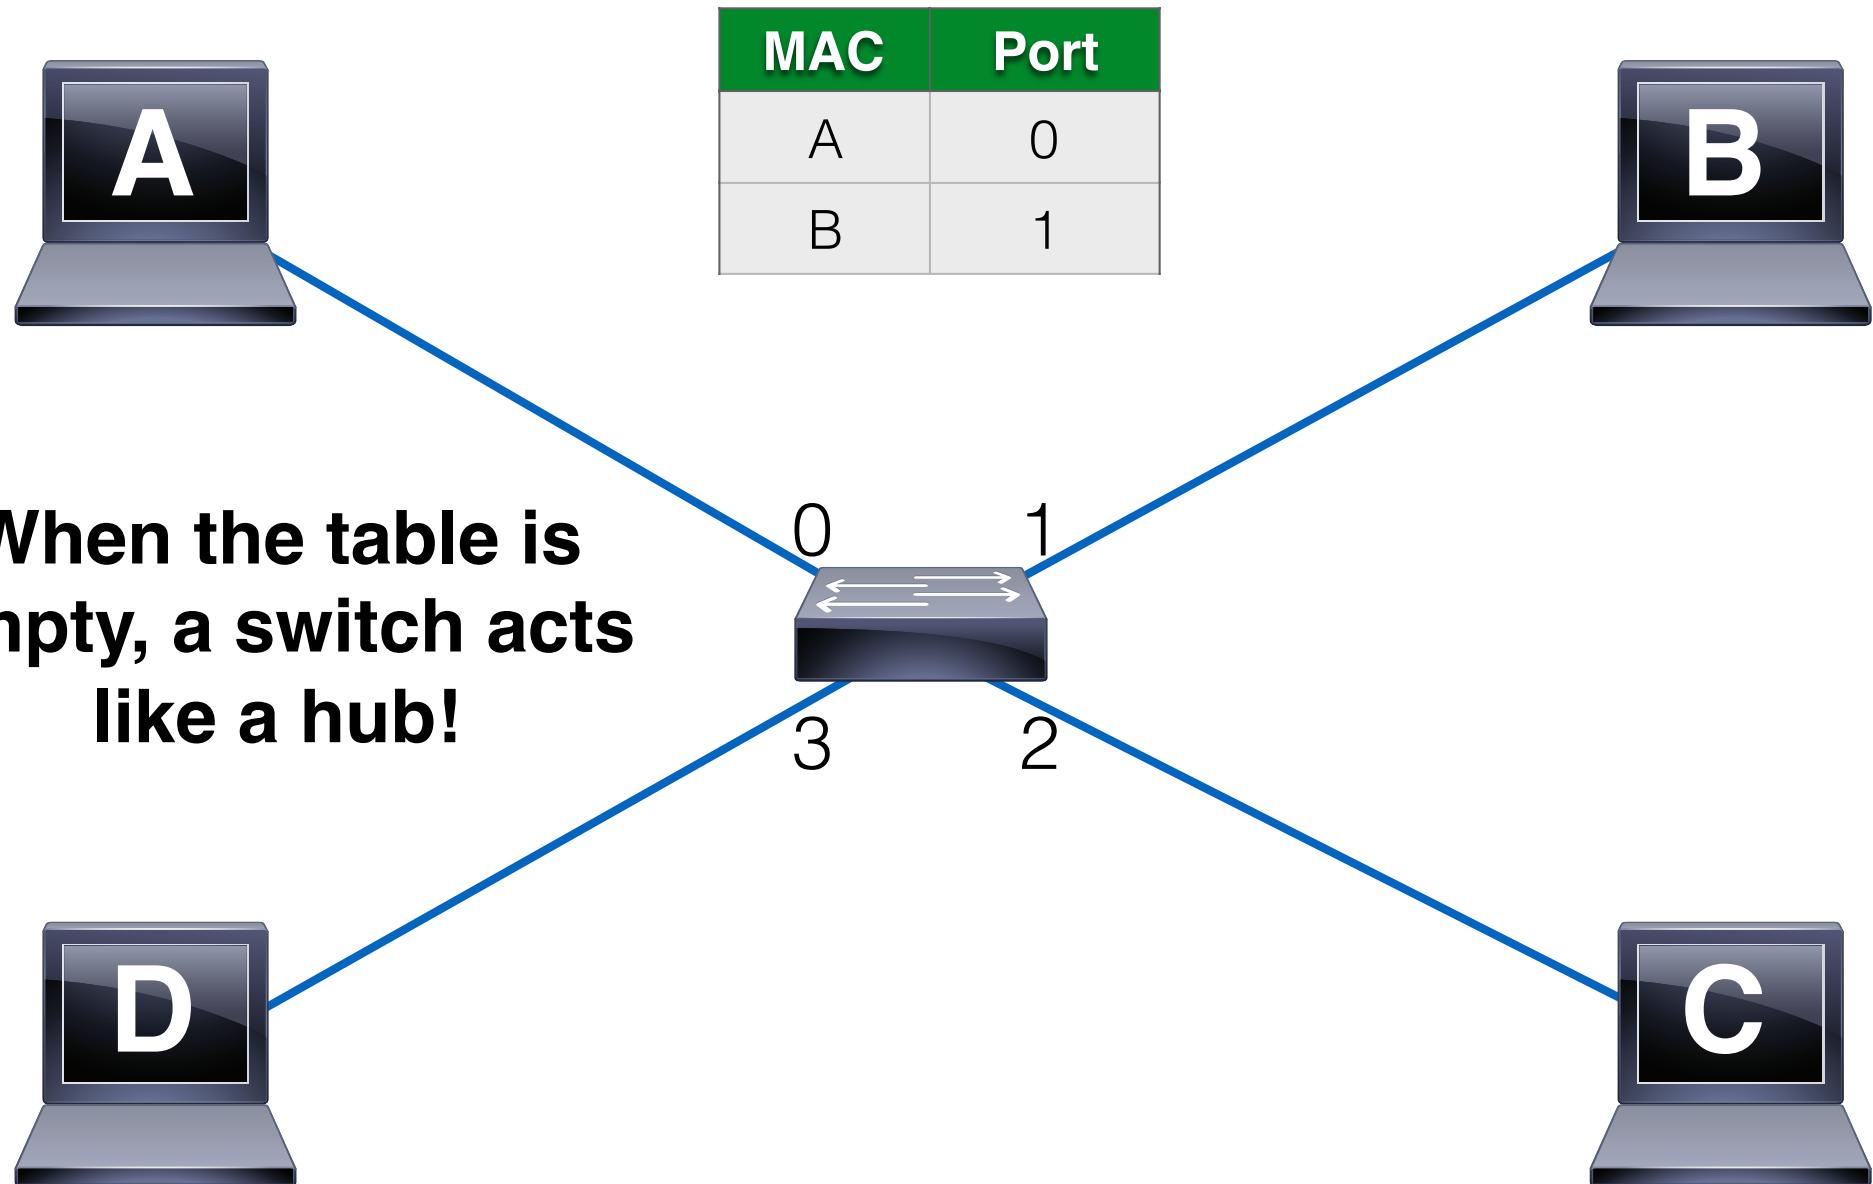


Switch Forwarding Table

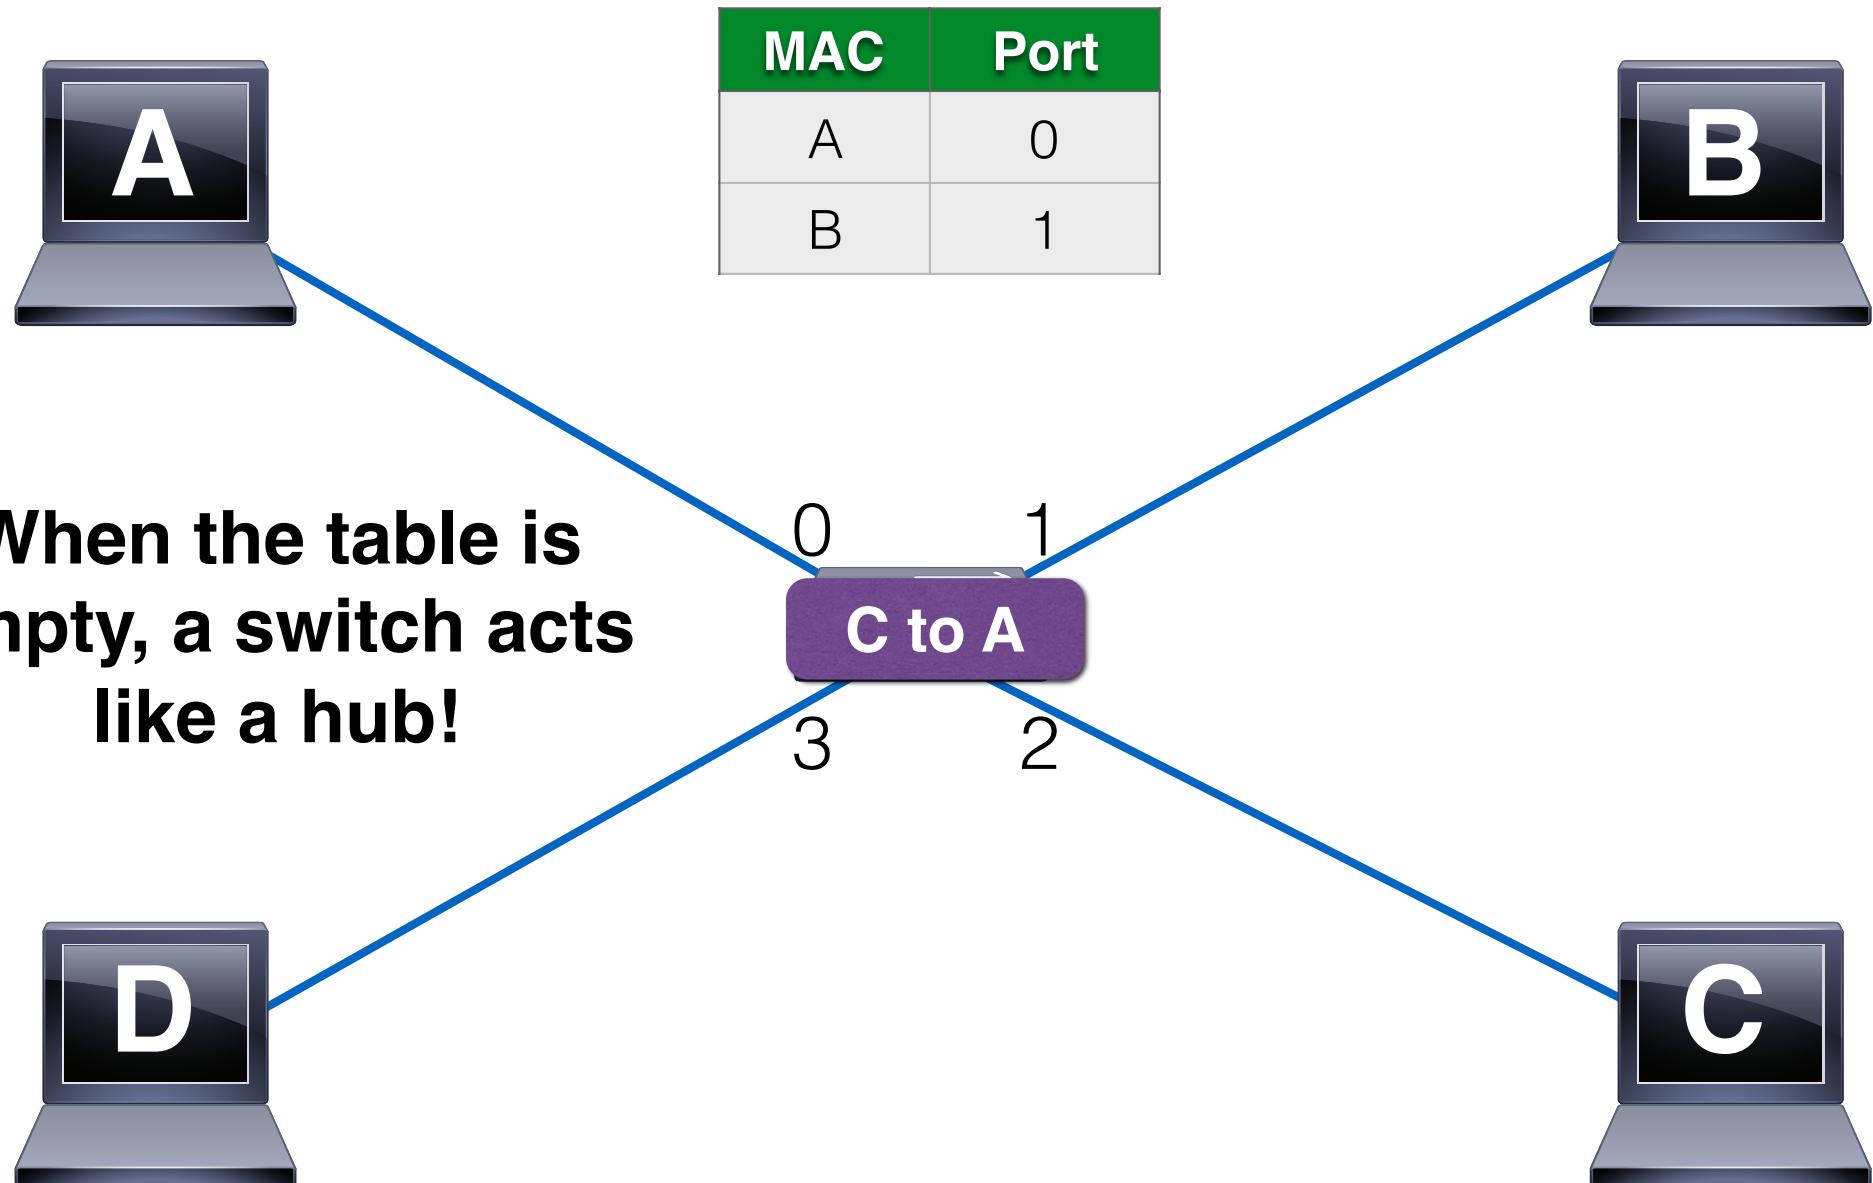

Switch Forwarding Table

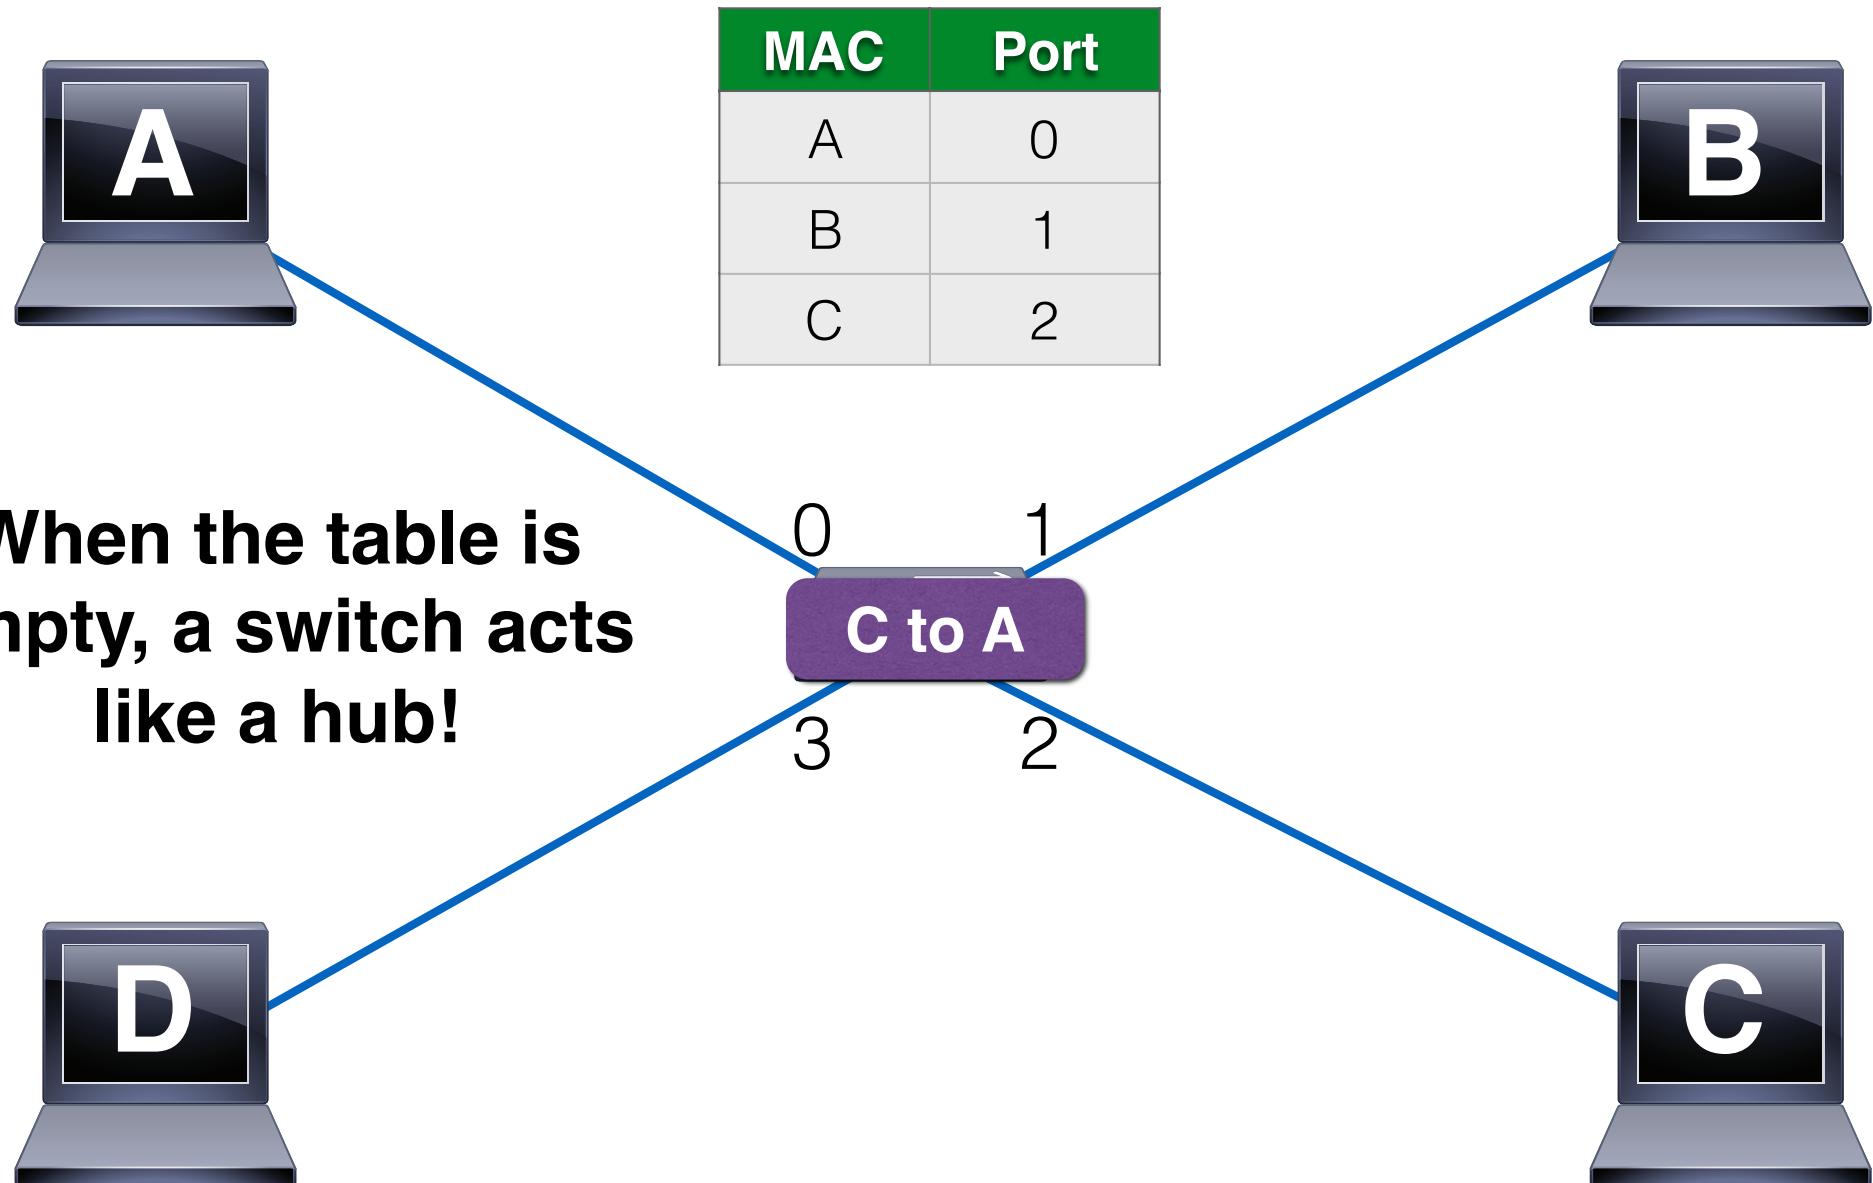

Switch Forwarding Table

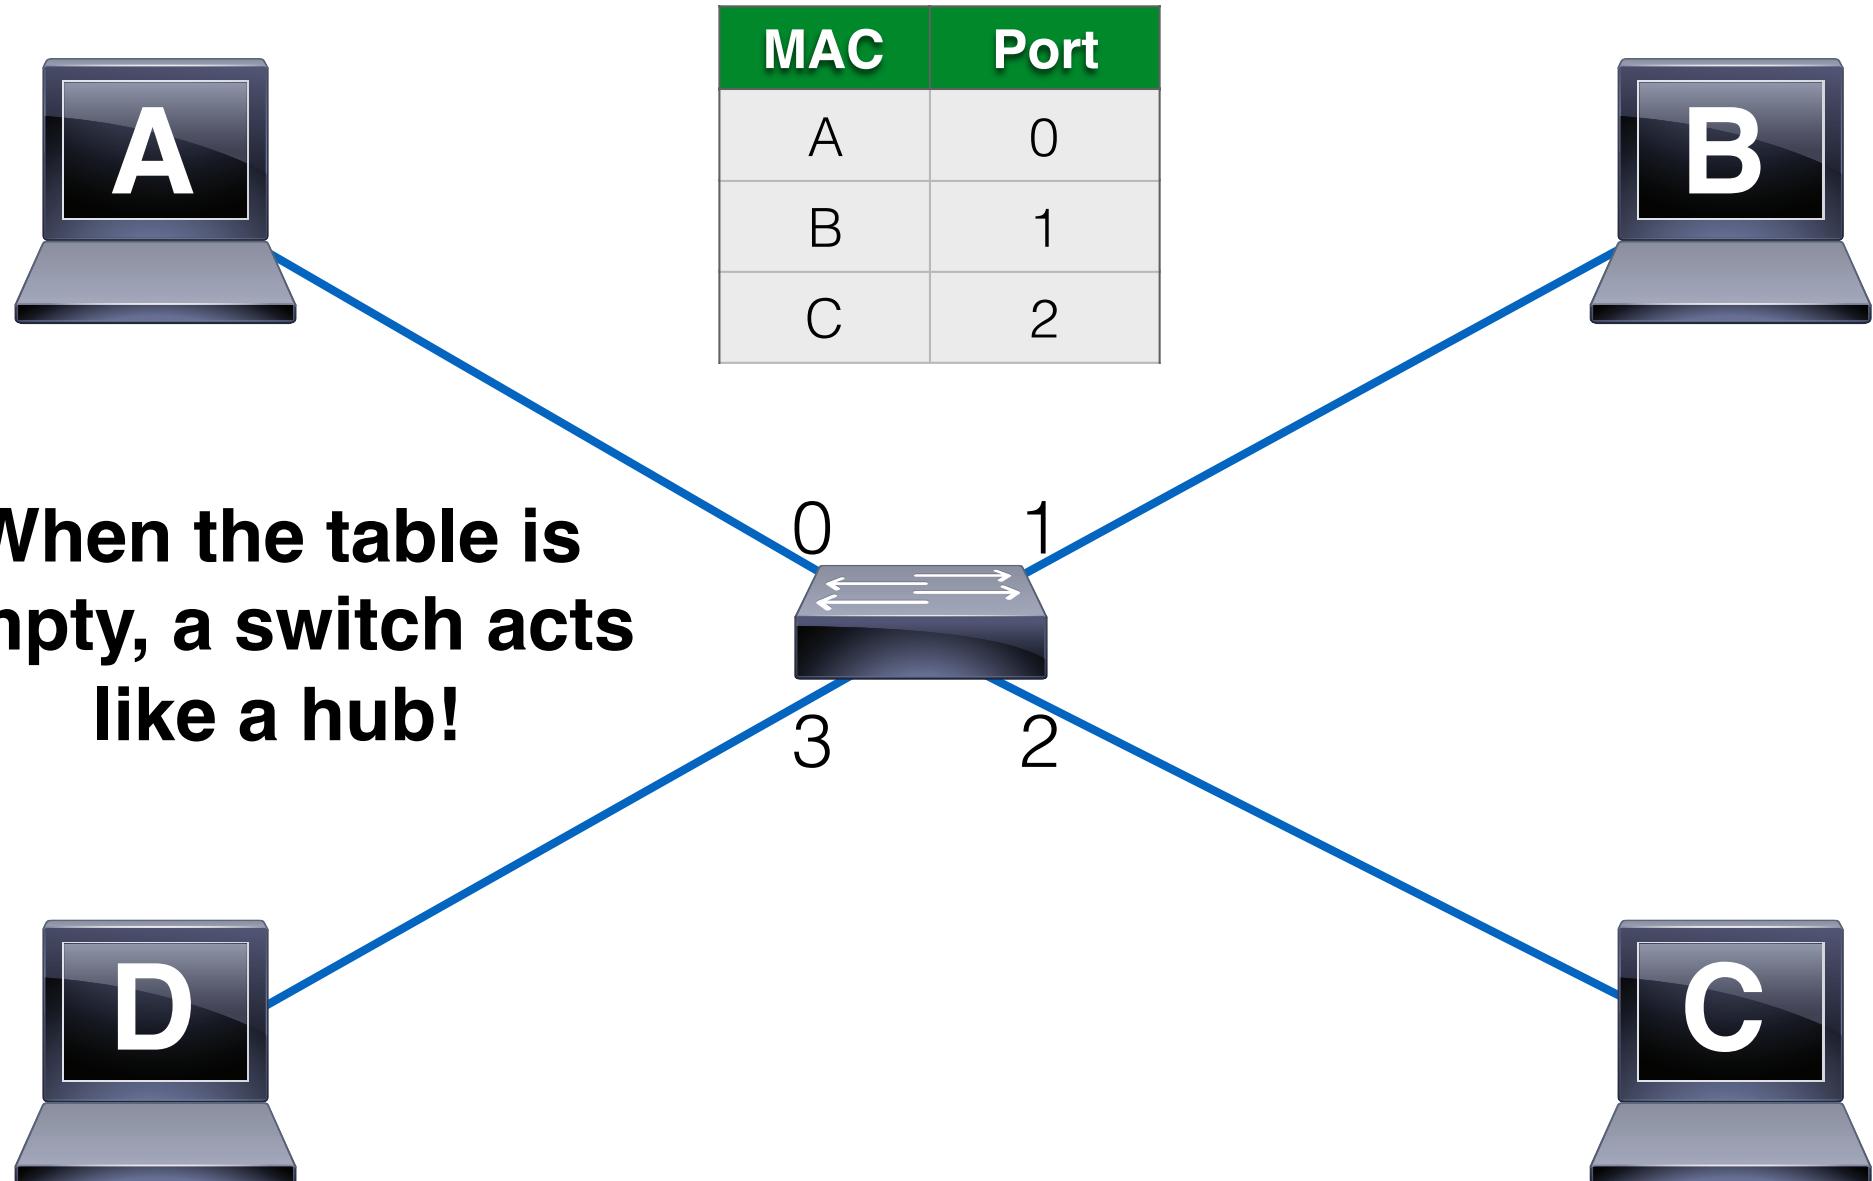

Switches and MAC

Full-duplex circuits

- point-to-point connection between computer and switch
- no collisions possible

Switches and MAC

Full-duplex circuits

- point-to-point connection between computer and switch
- no collisions possible

But frames may still be sent at the same time

- e.g. A sends to B while C sends to D
- or A and B both send to C simultaneously
- switch has **memory**: stores second frame until transmission of first frame is finished, then forwards the second - **store and forward**

Switches and MAC

Full-duplex circuits


- point-to-point connection between computer and switch
- no collisions possible

But frames may still be sent at the same time

- e.g. A sends to B while C sends to D
- or A and B both send to C simultaneously
- switch has **memory**: stores second frame until transmission of first frame is finished, then forwards the second - **store and forward**


Switched Ethernet runs at up to 95% capacity, compared to 50% for shared Ethernet!

Rack-mounted switches

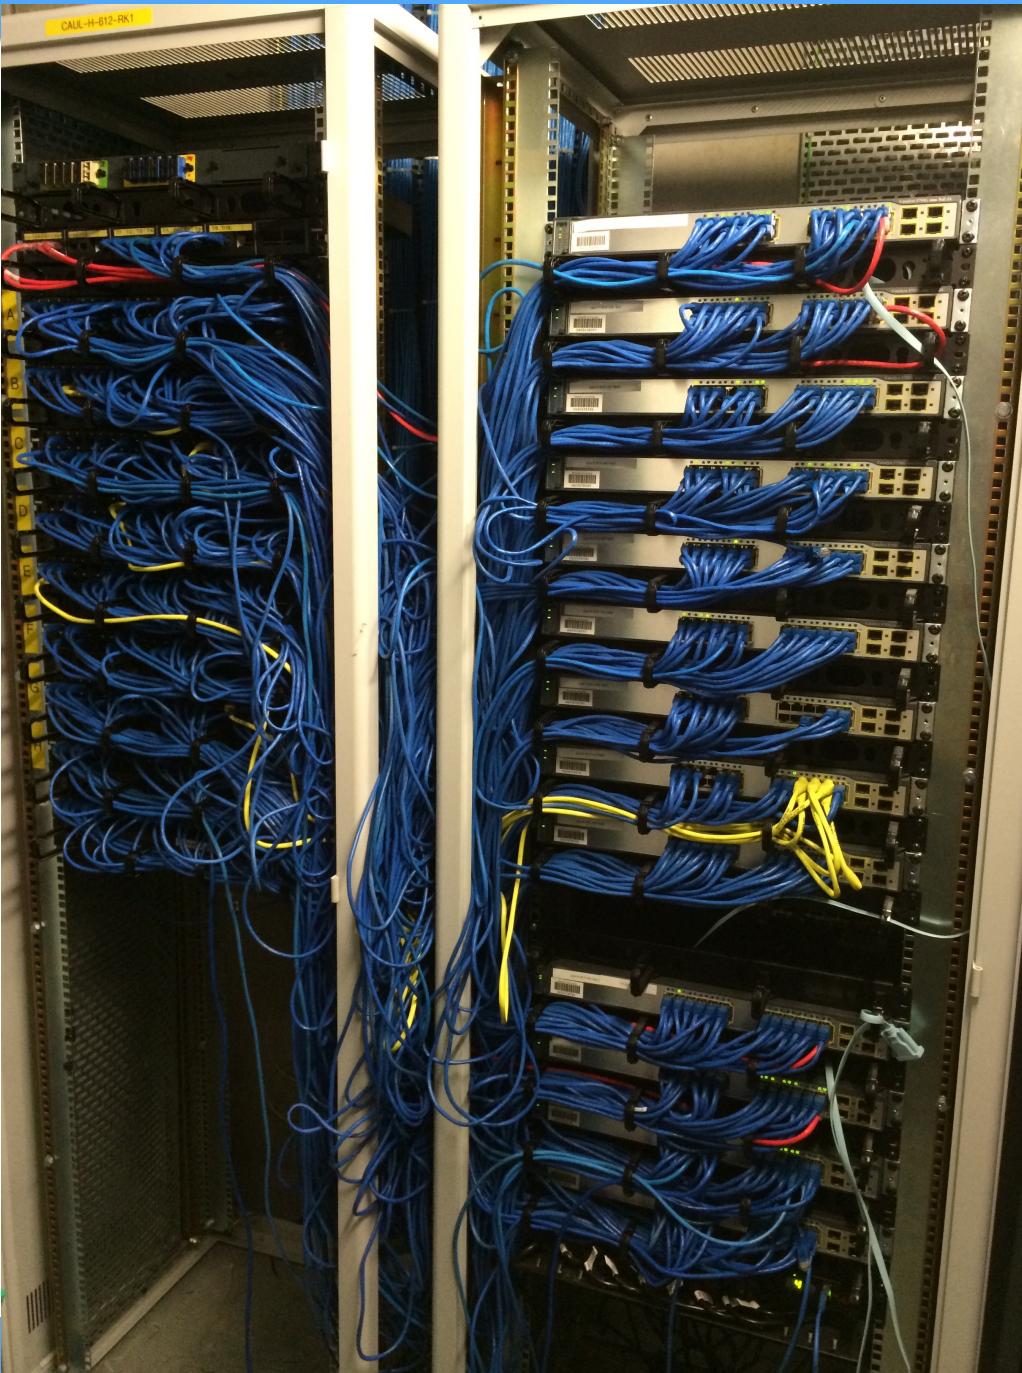


Monash
communications
cabinet, Caulfield,
Bldg. H level 6

Rack-mounted switches

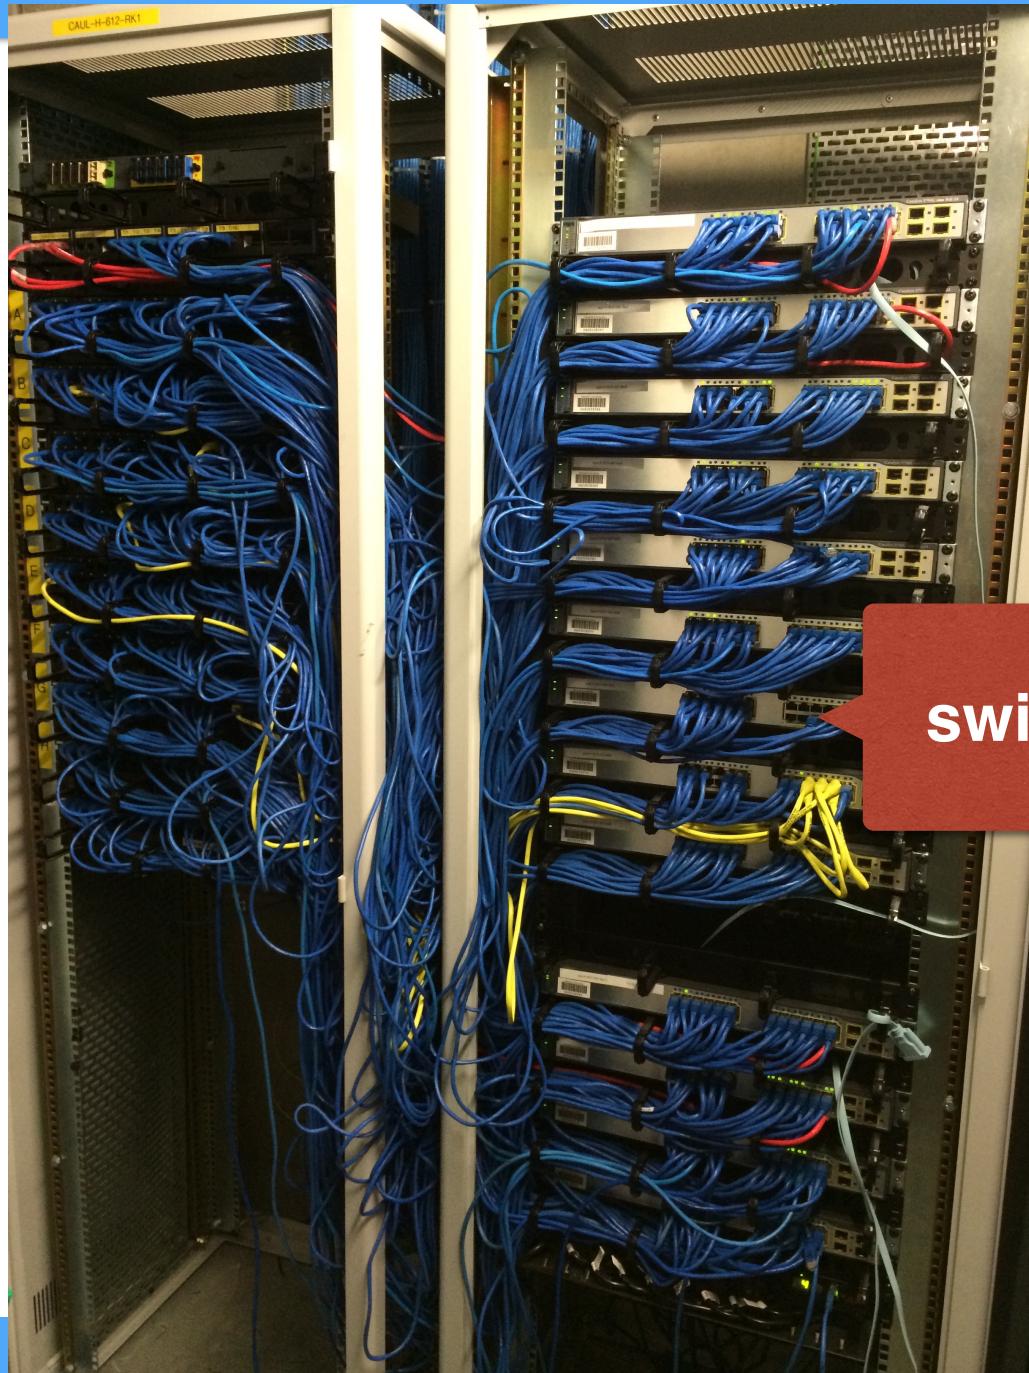

Monash
communications
cabinet, Caulfield,
Bldg. H level 6

Rack-mounted switches

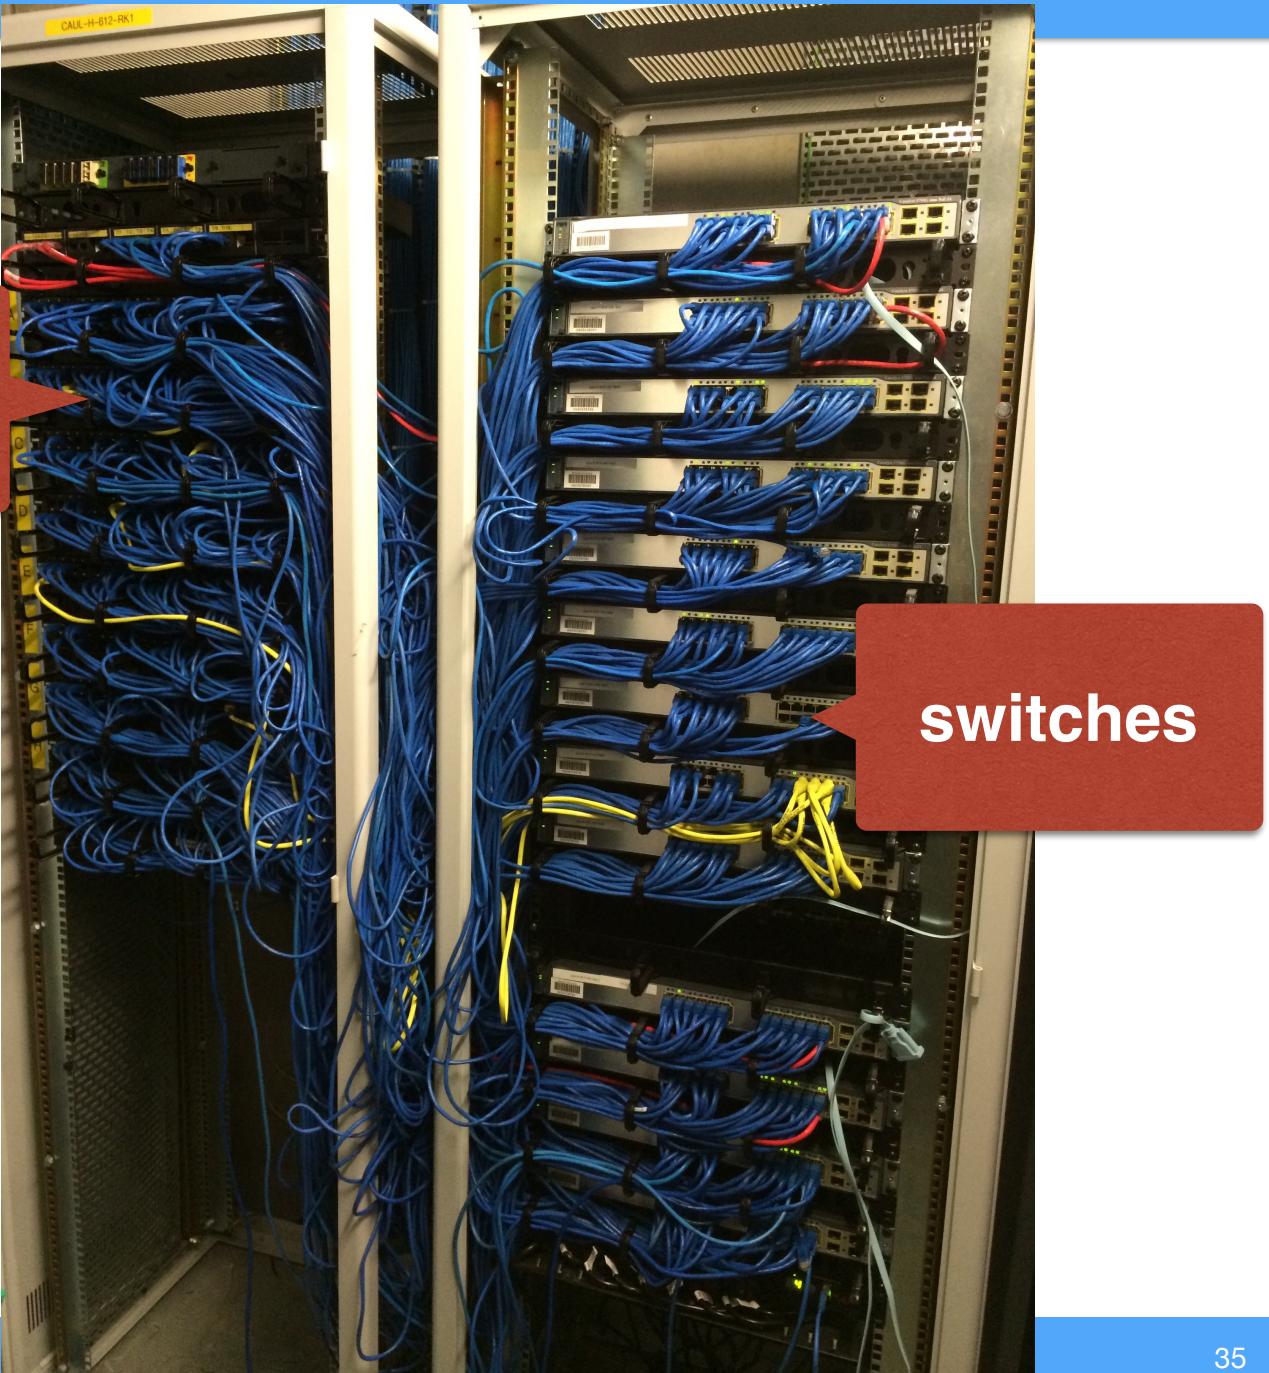

Monash
communications
cabinet, Caulfield,
Bldg. H level 6

Rack-mounted switches



Rack-mounted switches



Wireless Local Area Networks

Why WiFi?

Wireless LANs

- eliminate cables (heritage buildings, rented apartments, ...)
- allow for more flexible network access
- facilitate mobile workers (e.g. hospital)

Why WiFi?

Wireless LANs

- eliminate cables (heritage buildings, rented apartments, ...)
- allow for more flexible network access
- facilitate mobile workers (e.g. hospital)

Basic setup

- WLAN NICs connect to Access Points (APs) using radio frequencies
- APs are connected to wired LANs (or backbones)

WLAN Technology

Wi-Fi (or “Wireless Ethernet”)

- IEEE 802.11 family of standards
- Original standard from 1997-1999 (802.11a, 802.11b)
- Widely used: 802.11g (2003), 802.11n (2009)
- Latest: 802.11ac

WLAN Technology

Wi-Fi (or “Wireless Ethernet”)

- IEEE 802.11 family of standards
- Original standard from 1997-1999 (802.11a, 802.11b)
- Widely used: 802.11g (2003), 802.11n (2009)
- Latest: 802.11ac

Other wireless LAN technologies

- WiMAX (802.16)
- Bluetooth (802.15), also called WPAN (Wireless Personal Area Network)

WLAN Radio Frequencies

Most WLANs use the 2.4GHz and/or 5GHz range

- high frequencies allow for large bandwidth
- but higher frequencies have stronger attenuation

WLAN Radio Frequencies


Most WLANs use the 2.4GHz and/or 5GHz range

- high frequencies allow for large bandwidth
- but higher frequencies have stronger attenuation


WLAN channels

- Networks in the same area should not use the same frequencies
- WLAN spectrum is divided into **channels**, each network is set to a different channel


WLAN channels (802.11n)

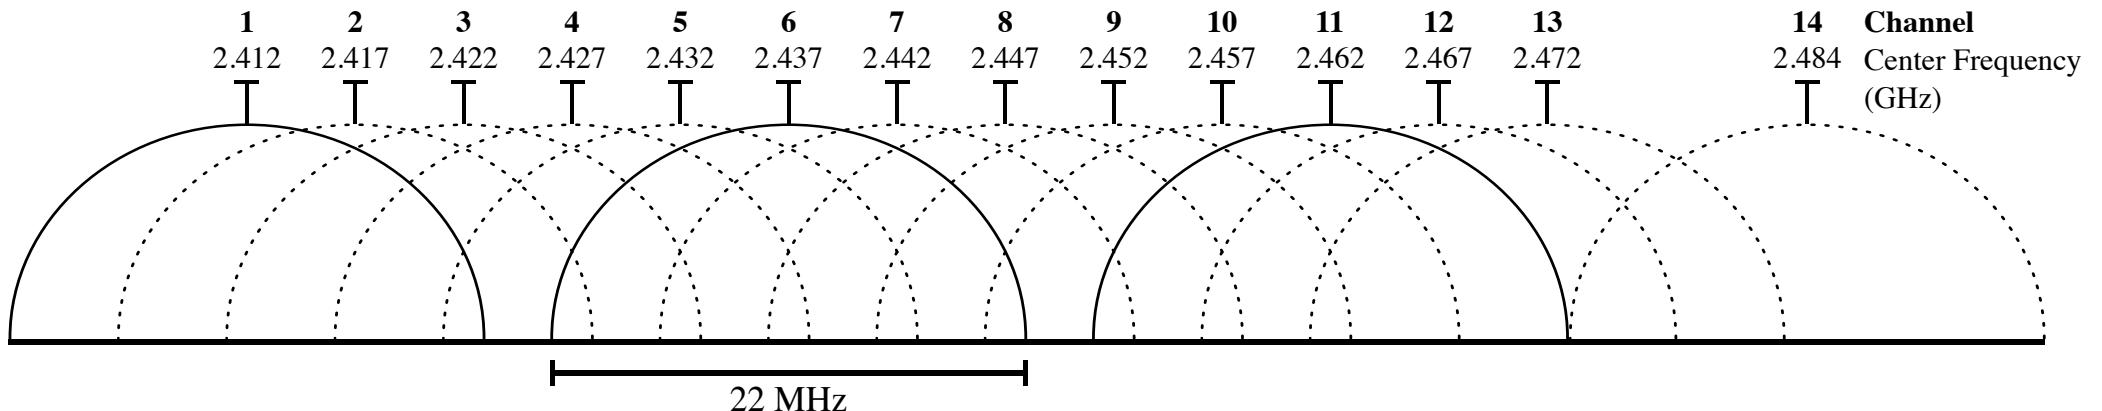


WLAN channels (802.11n)

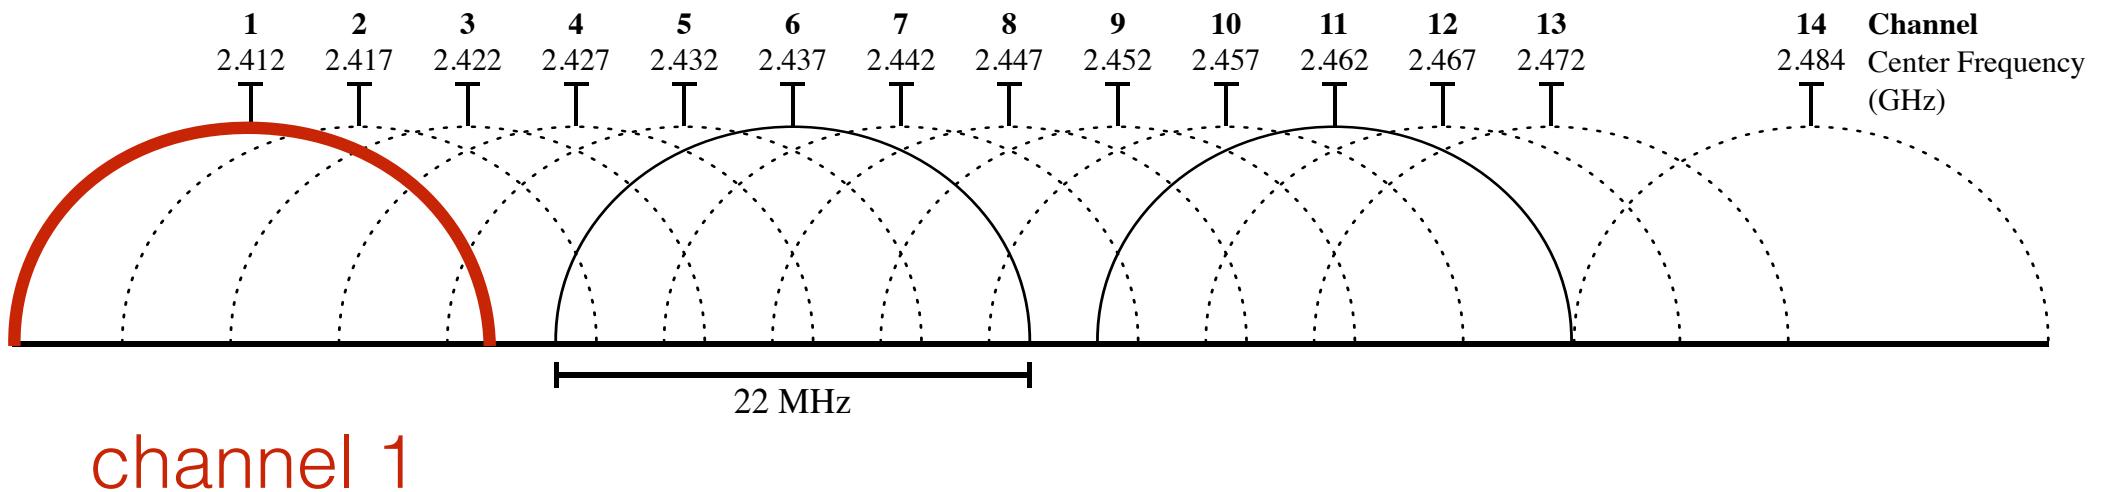


WLAN channels (802.11n)

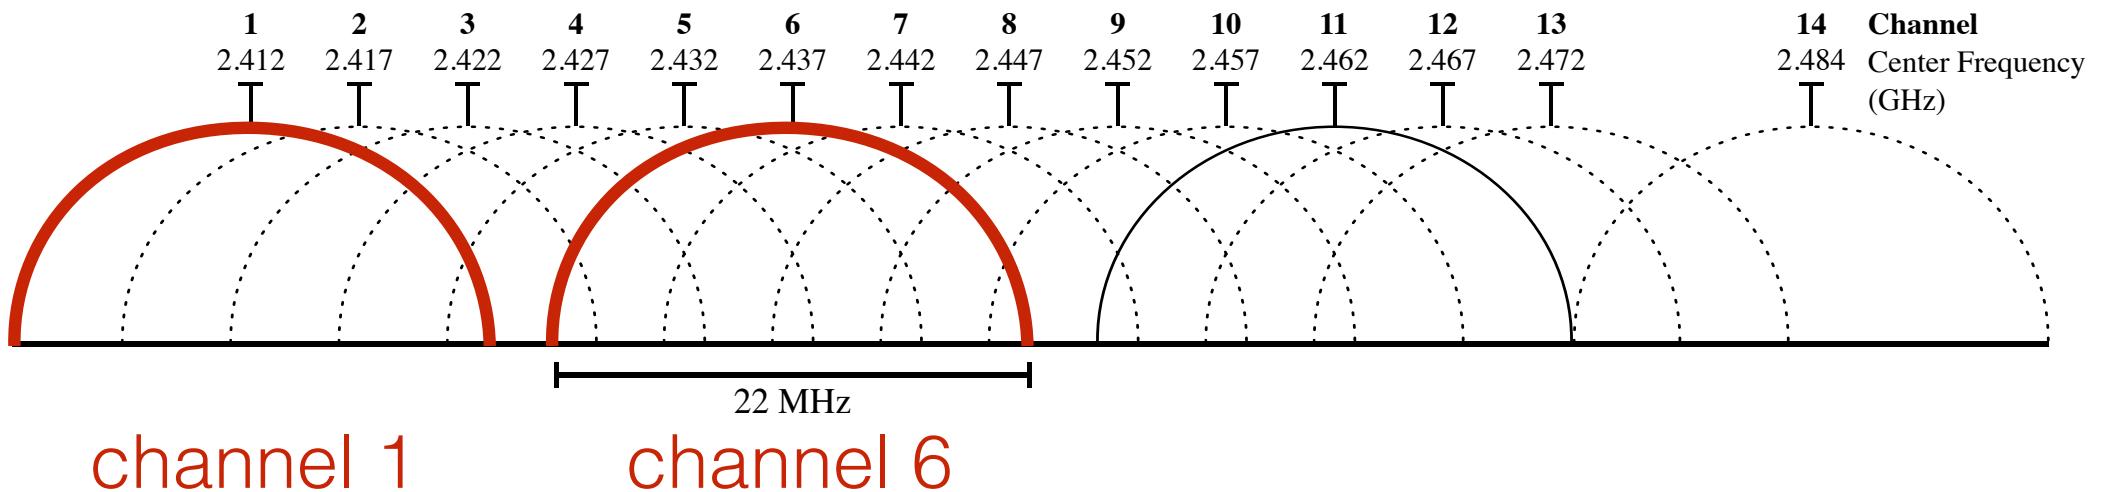

WLAN channels (802.11n)

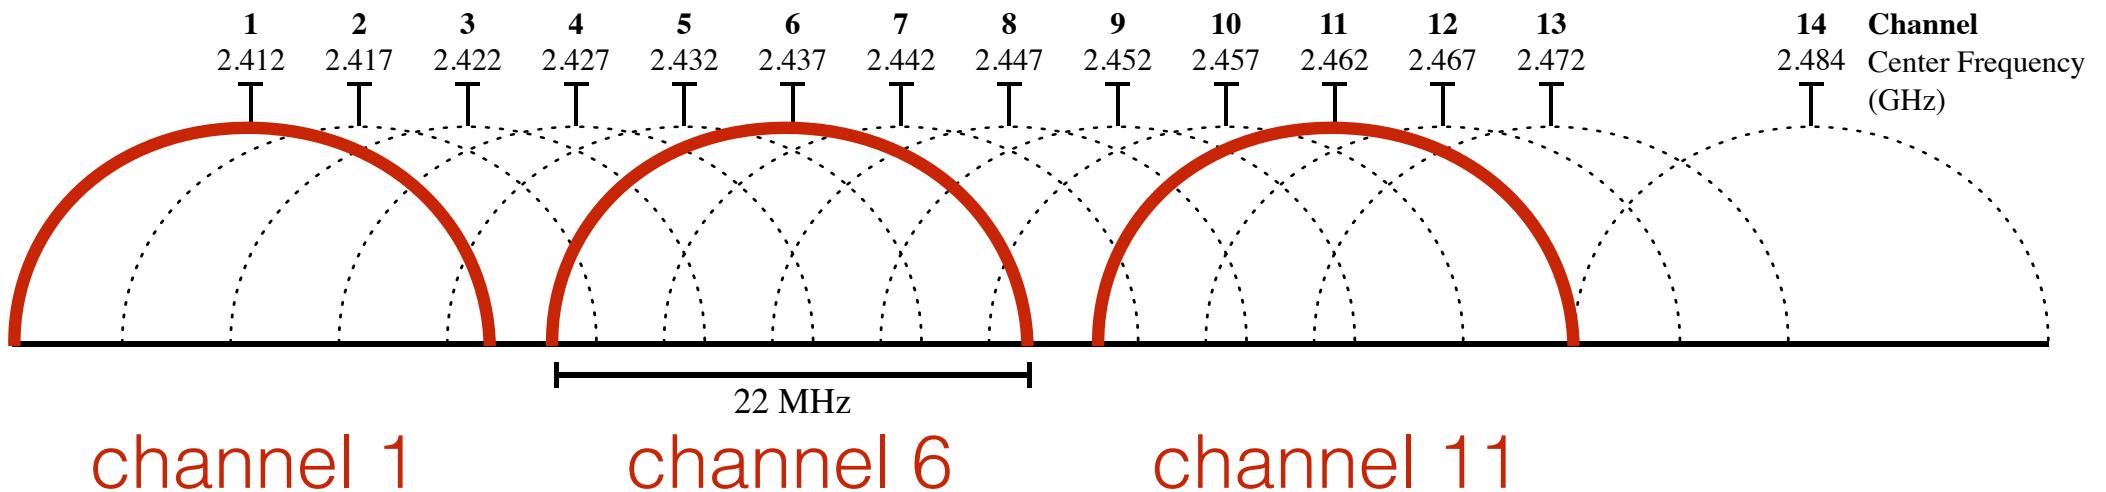

WLAN channels (802.11n)

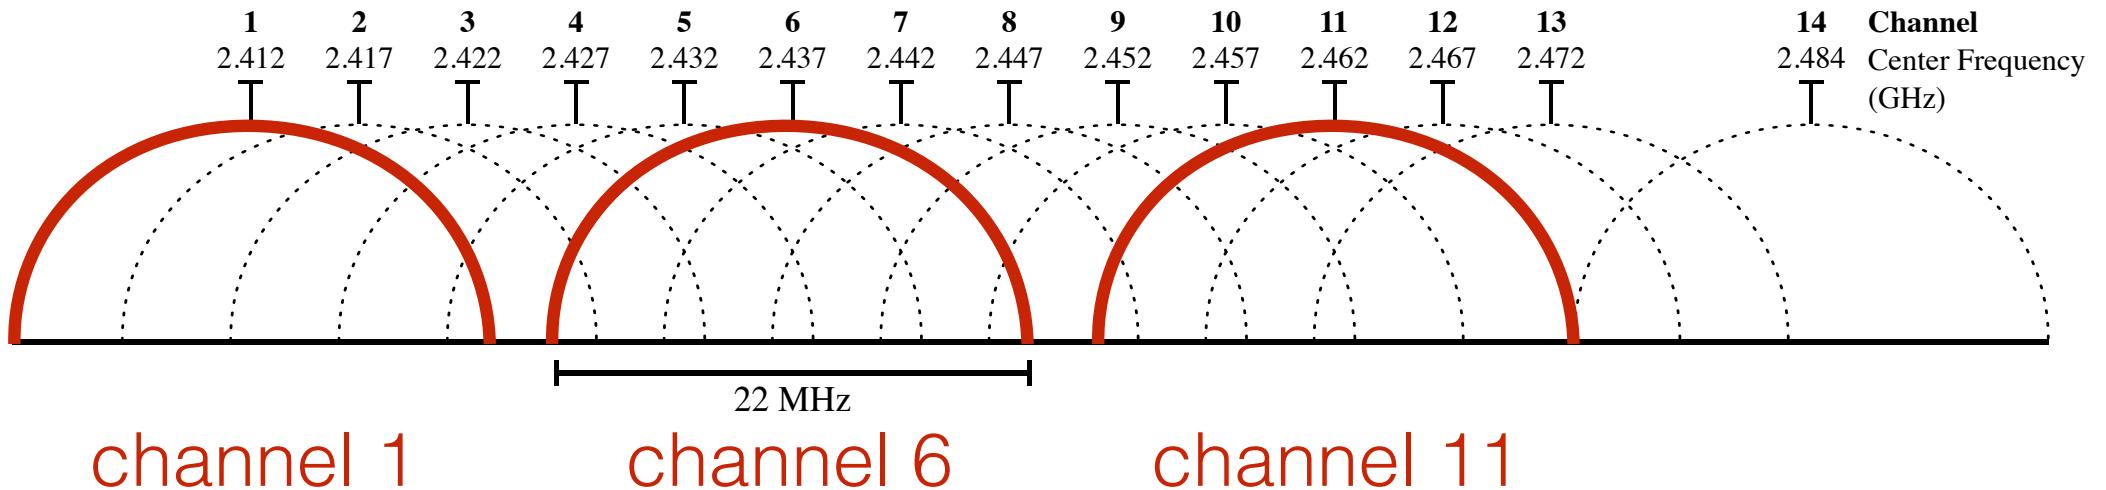

2.4GHZ band

- 2.4000-2.4835 GHz
- 13 channels, each 22 MHz wide
- But channels overlap! Only 5 MHz apart

CSMA/CA Media Access Control

All devices in a WLAN share the medium

- use the same channel (frequency band)
- need to deal with collisions

CSMA/CA Media Access Control

All devices in a WLAN share the medium

- use the same channel (frequency band)
- need to deal with collisions


CSMA/CA

- Carrier Sense, Multiple Access
- Collision Avoidance
- Compare to 802.3: Collision Detection
- Devices try to **actively avoid** collisions


Why is WLAN different?



Why is WLAN different?

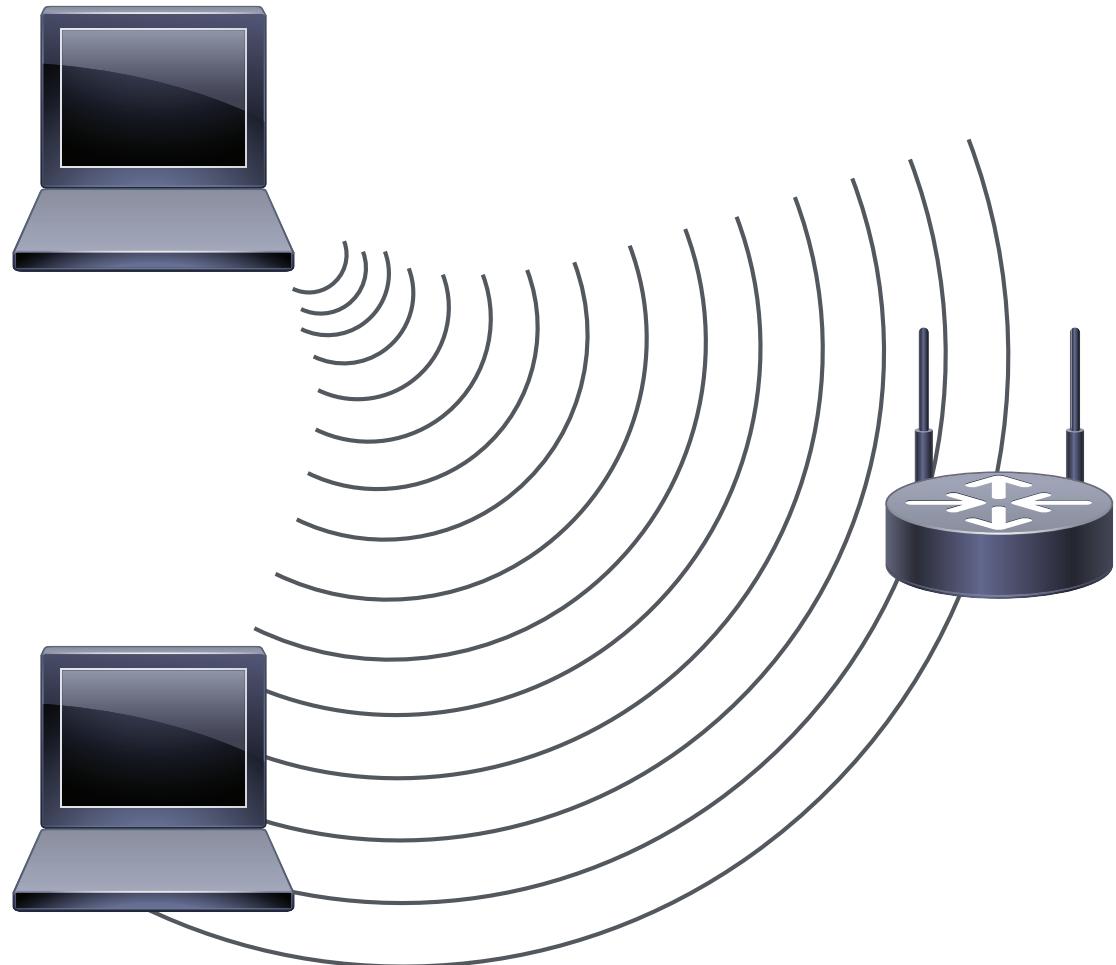


Why is WLAN different?

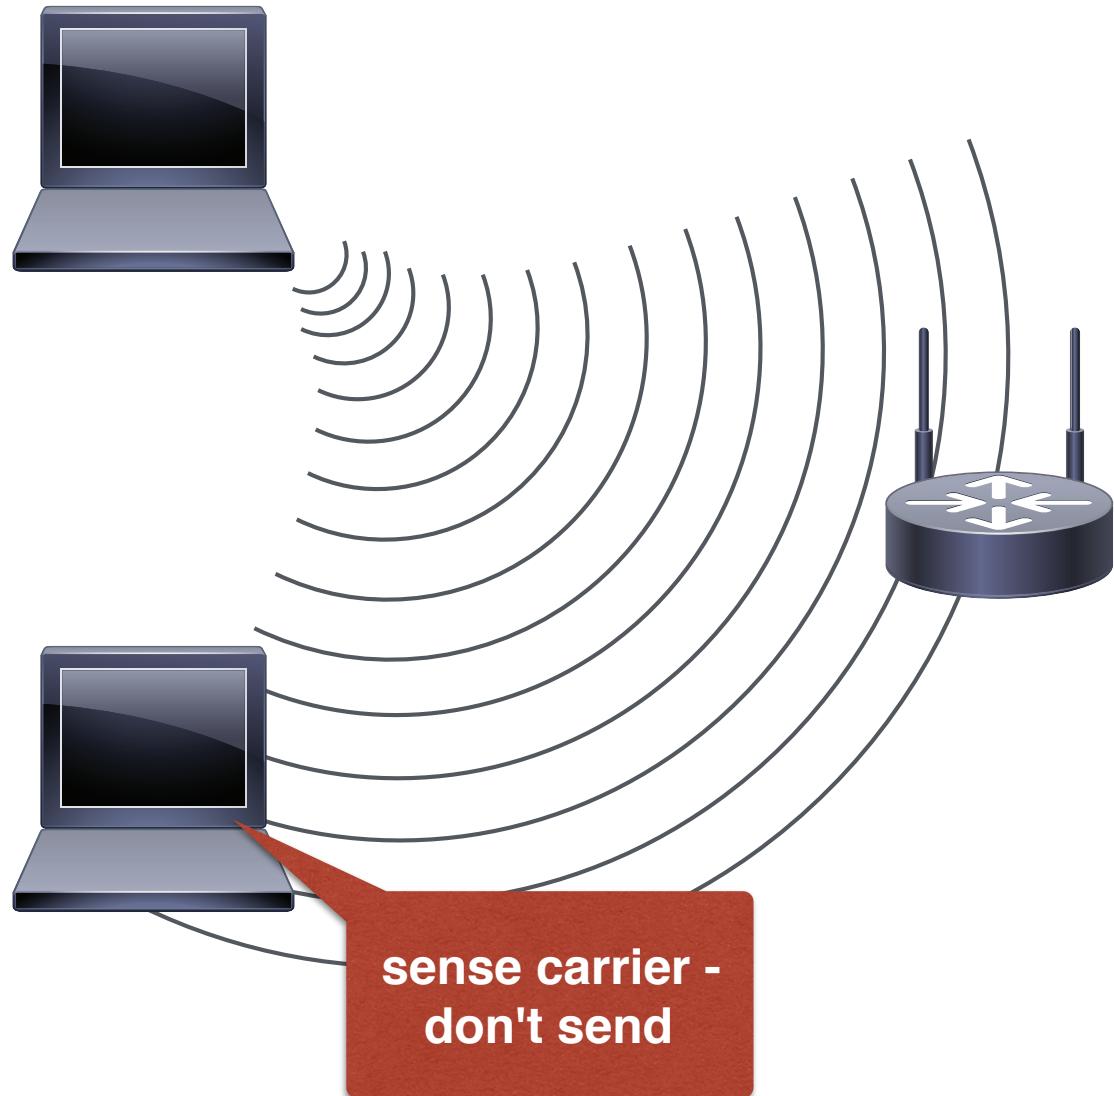


Why is WLAN different?



Why is WLAN different?

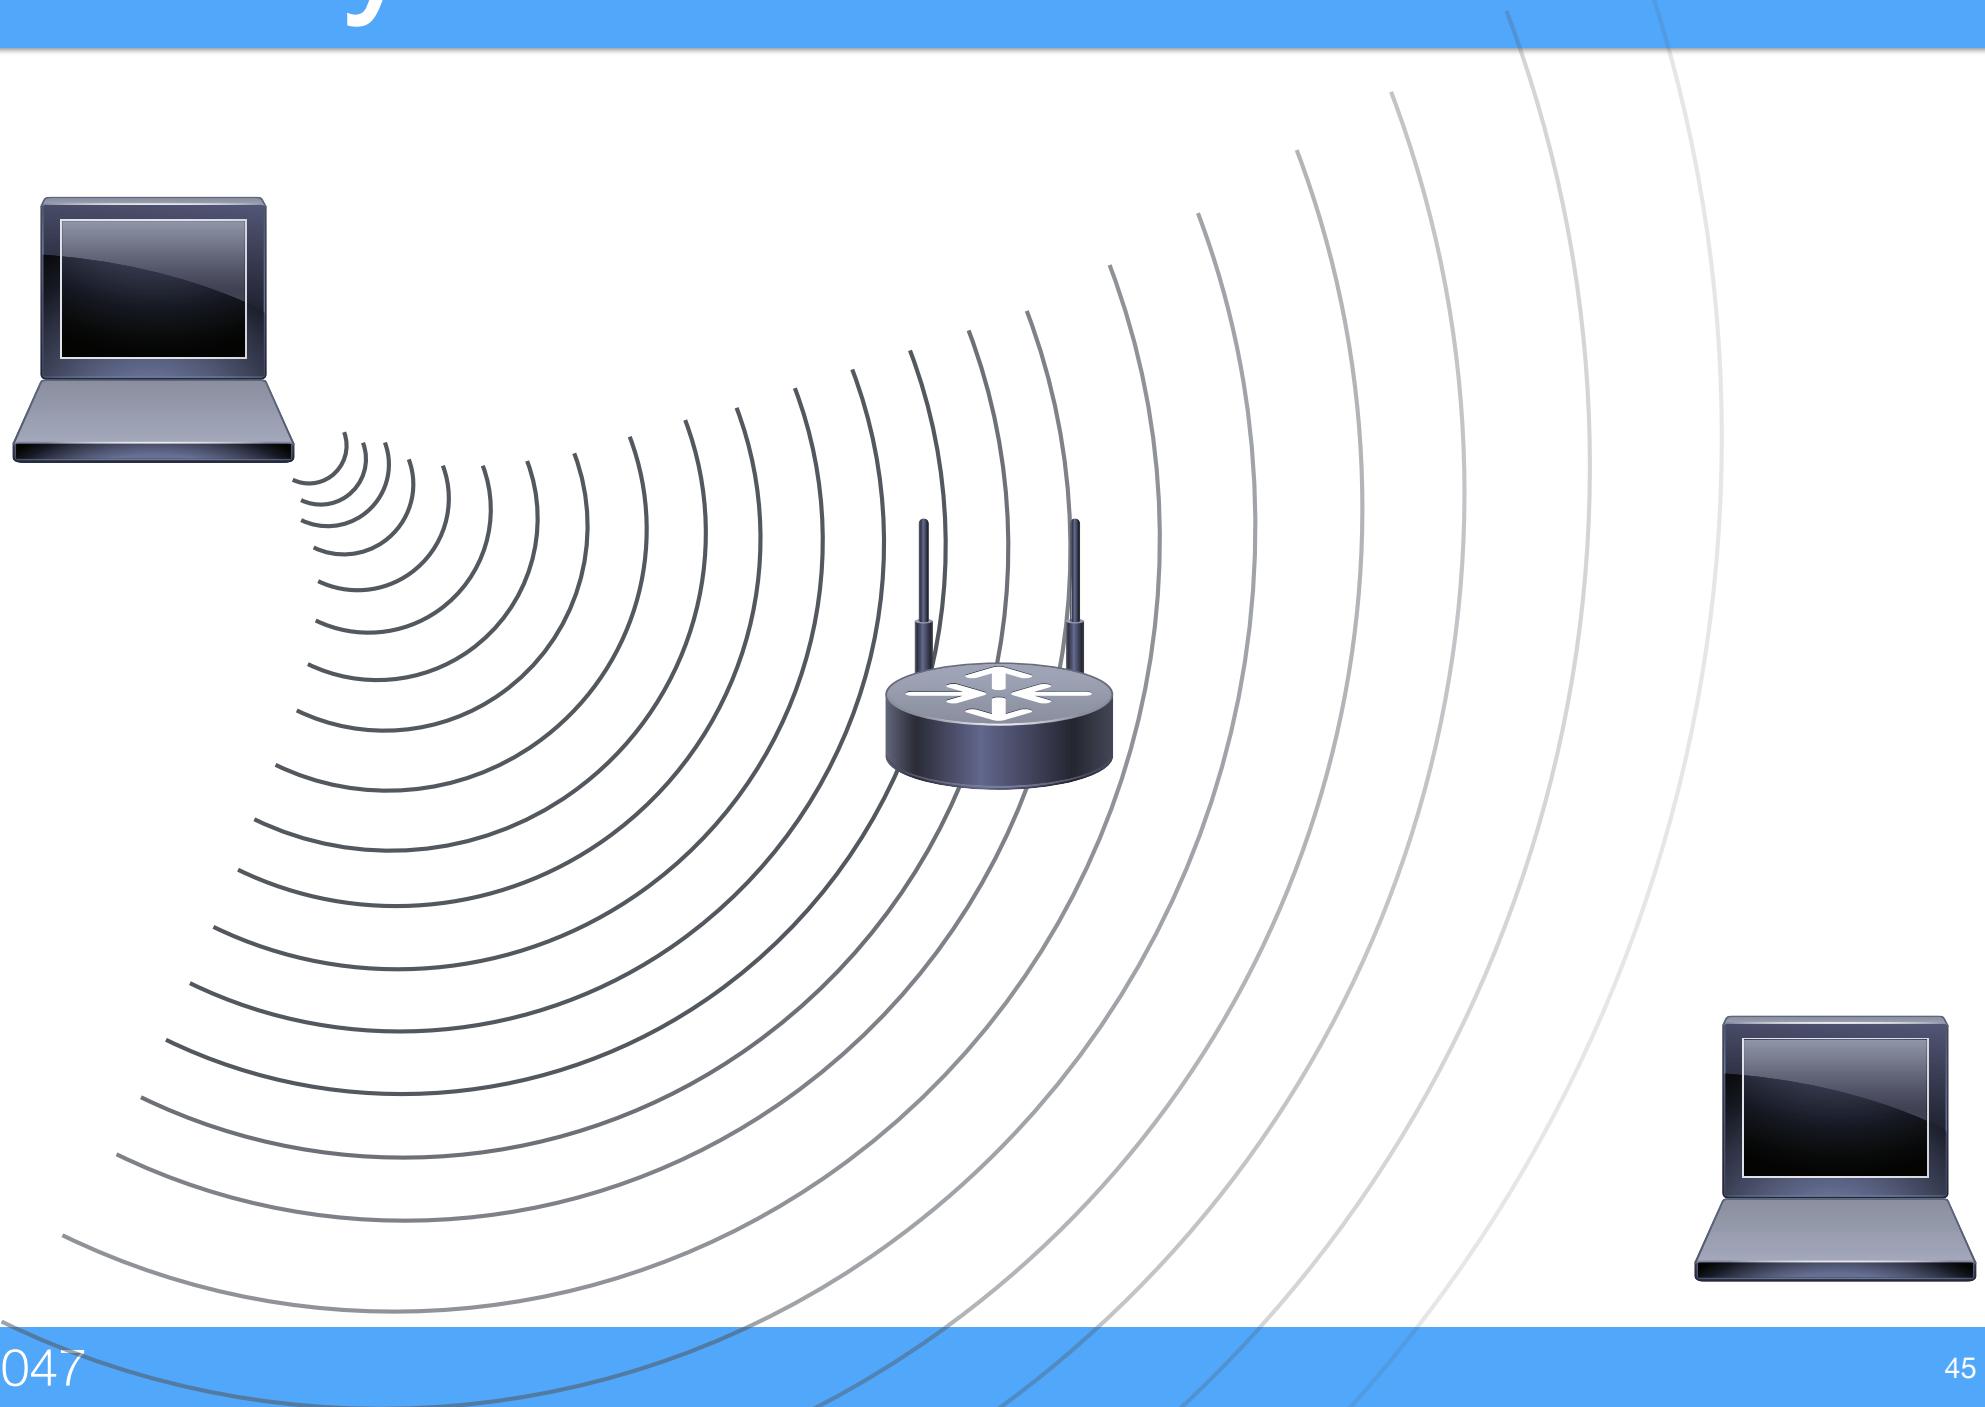


Why is WLAN different?

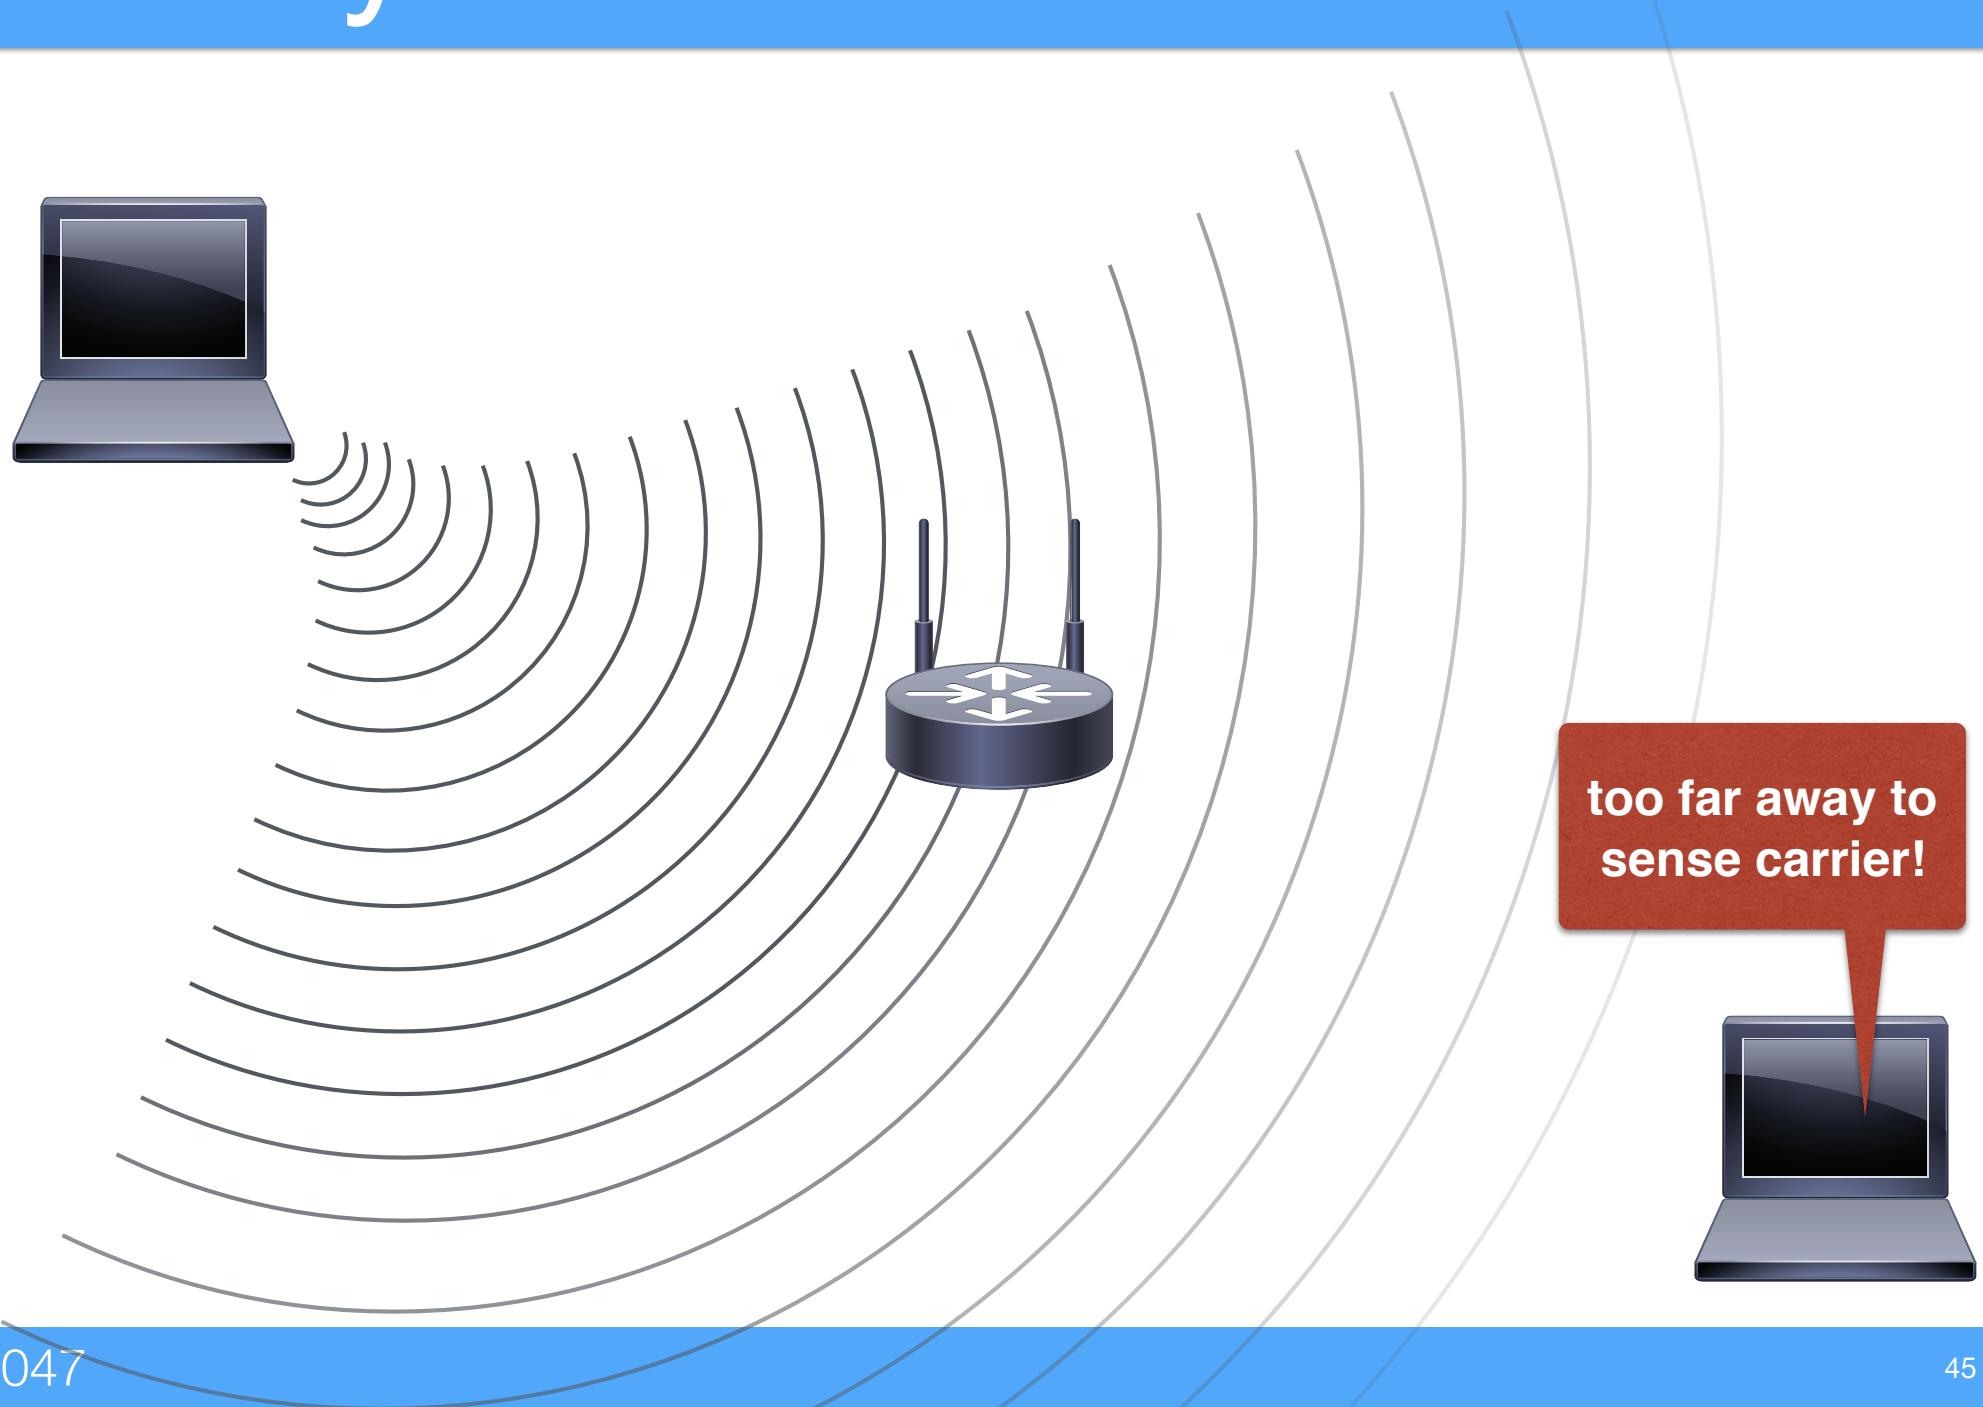


Why is WLAN different?




Why is WLAN different?

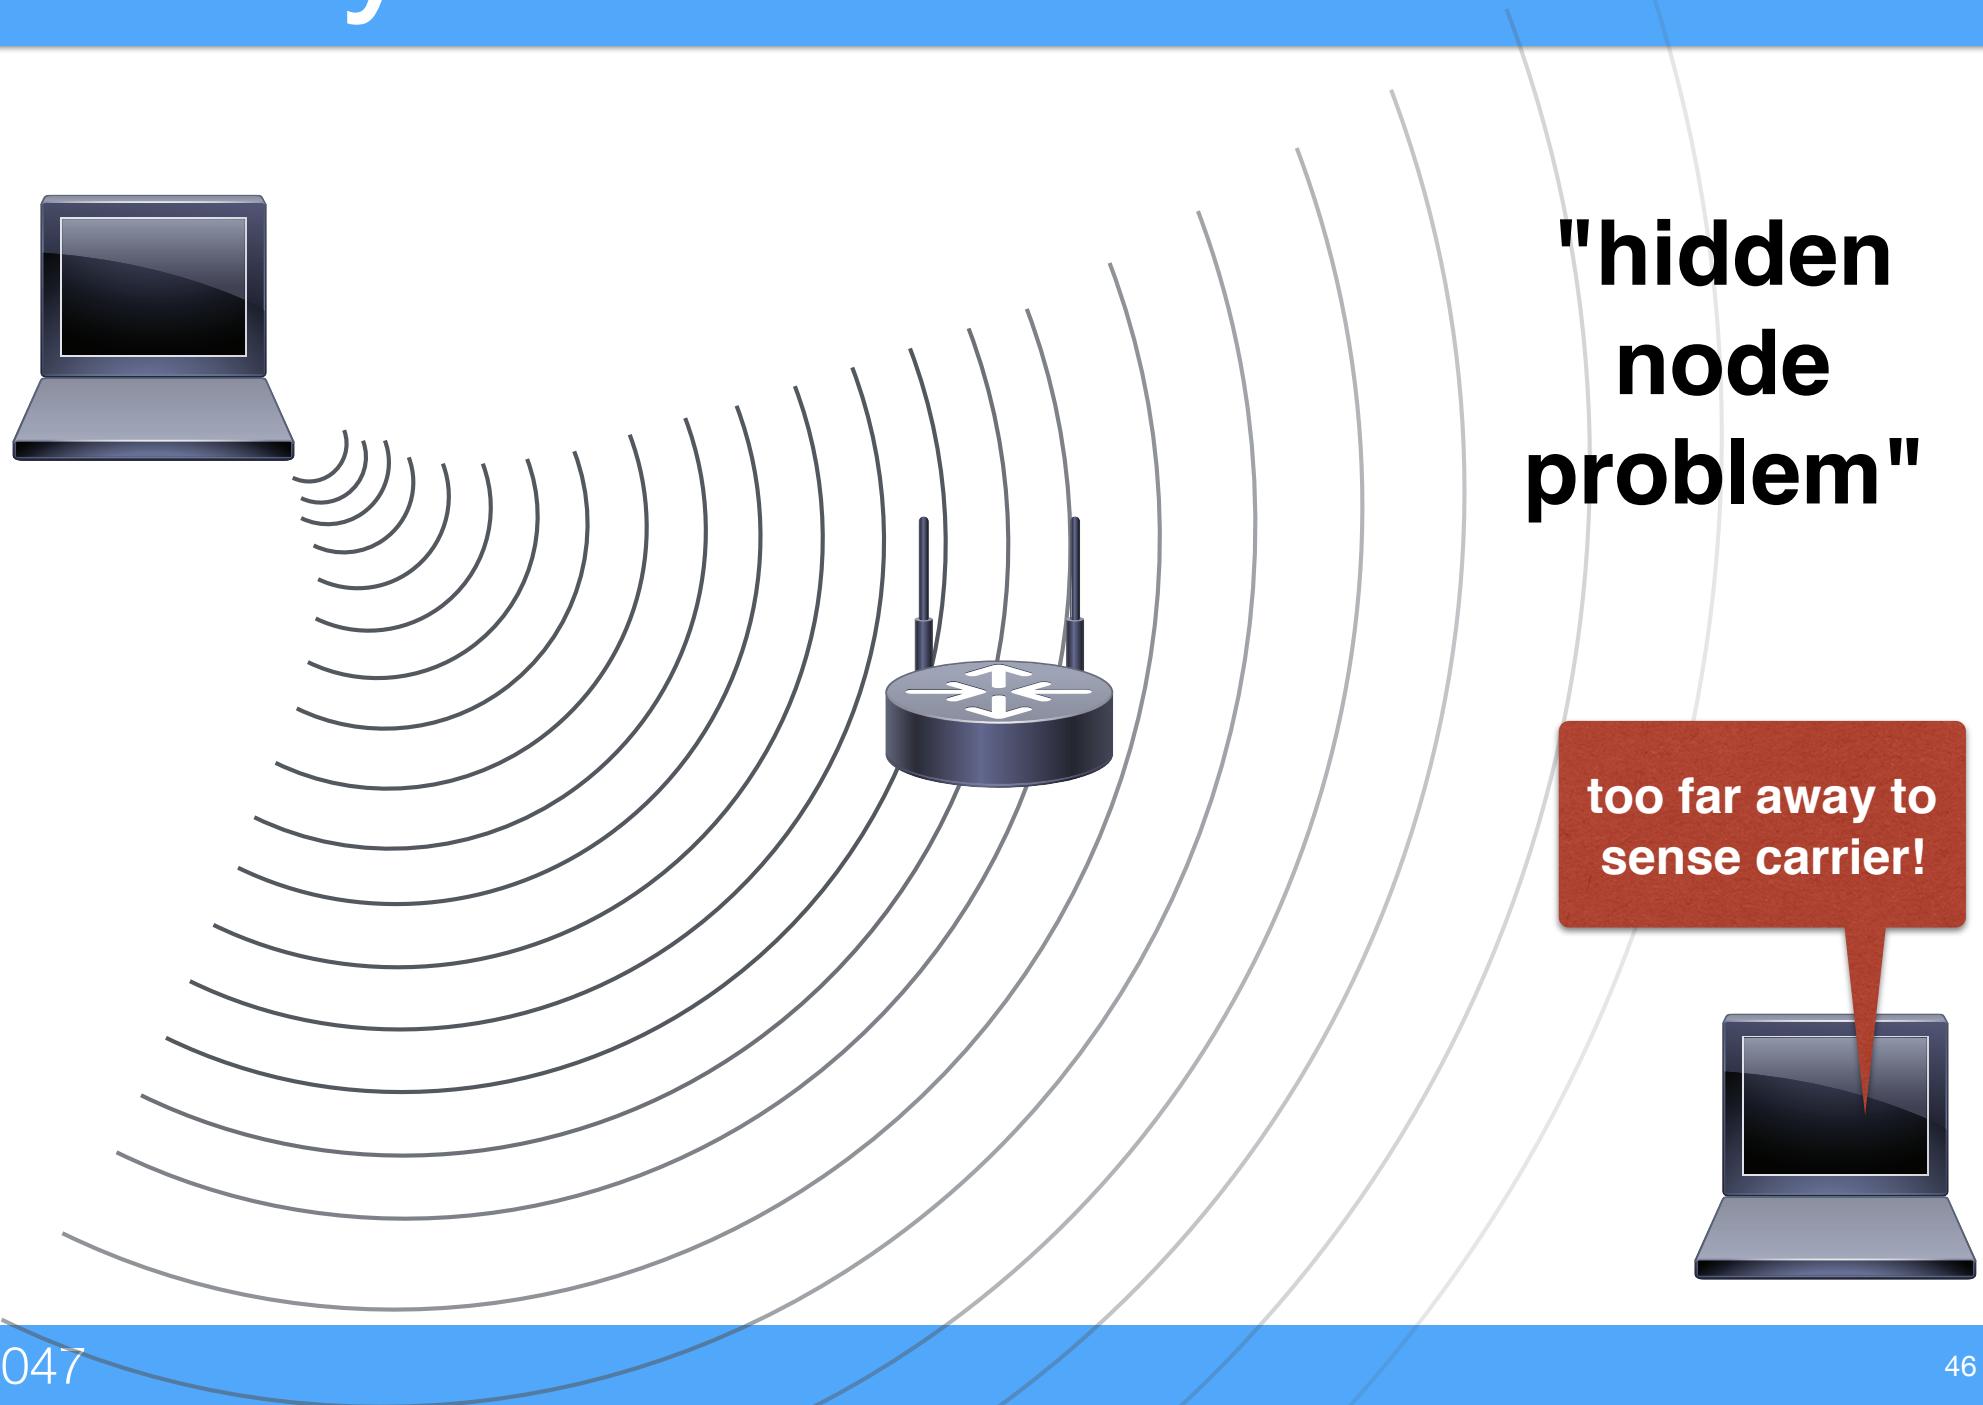

Why is WLAN different?

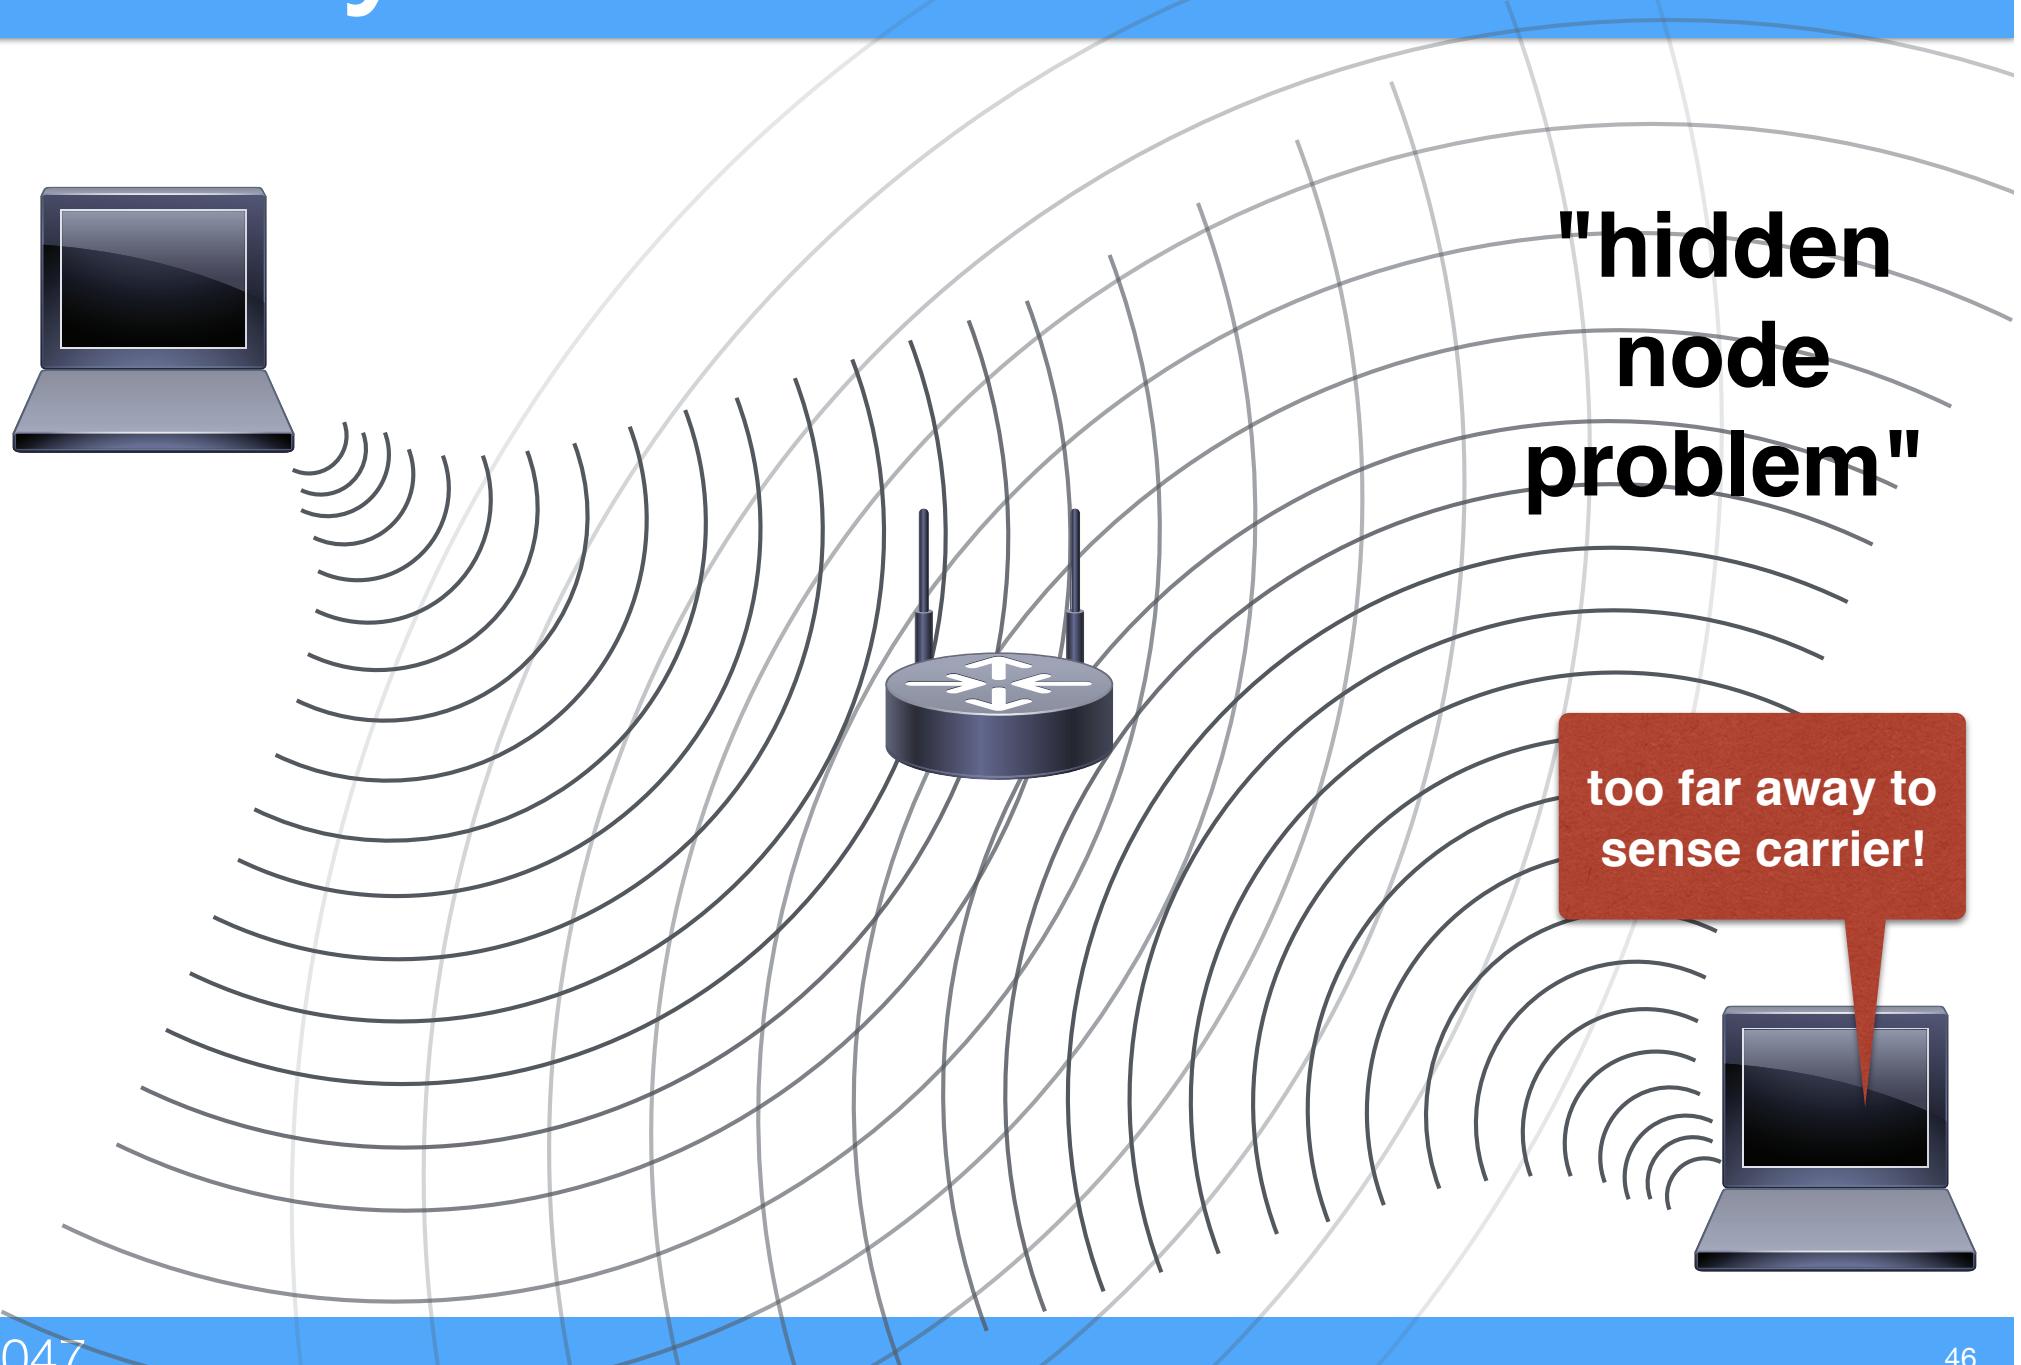

Why is WLAN different?

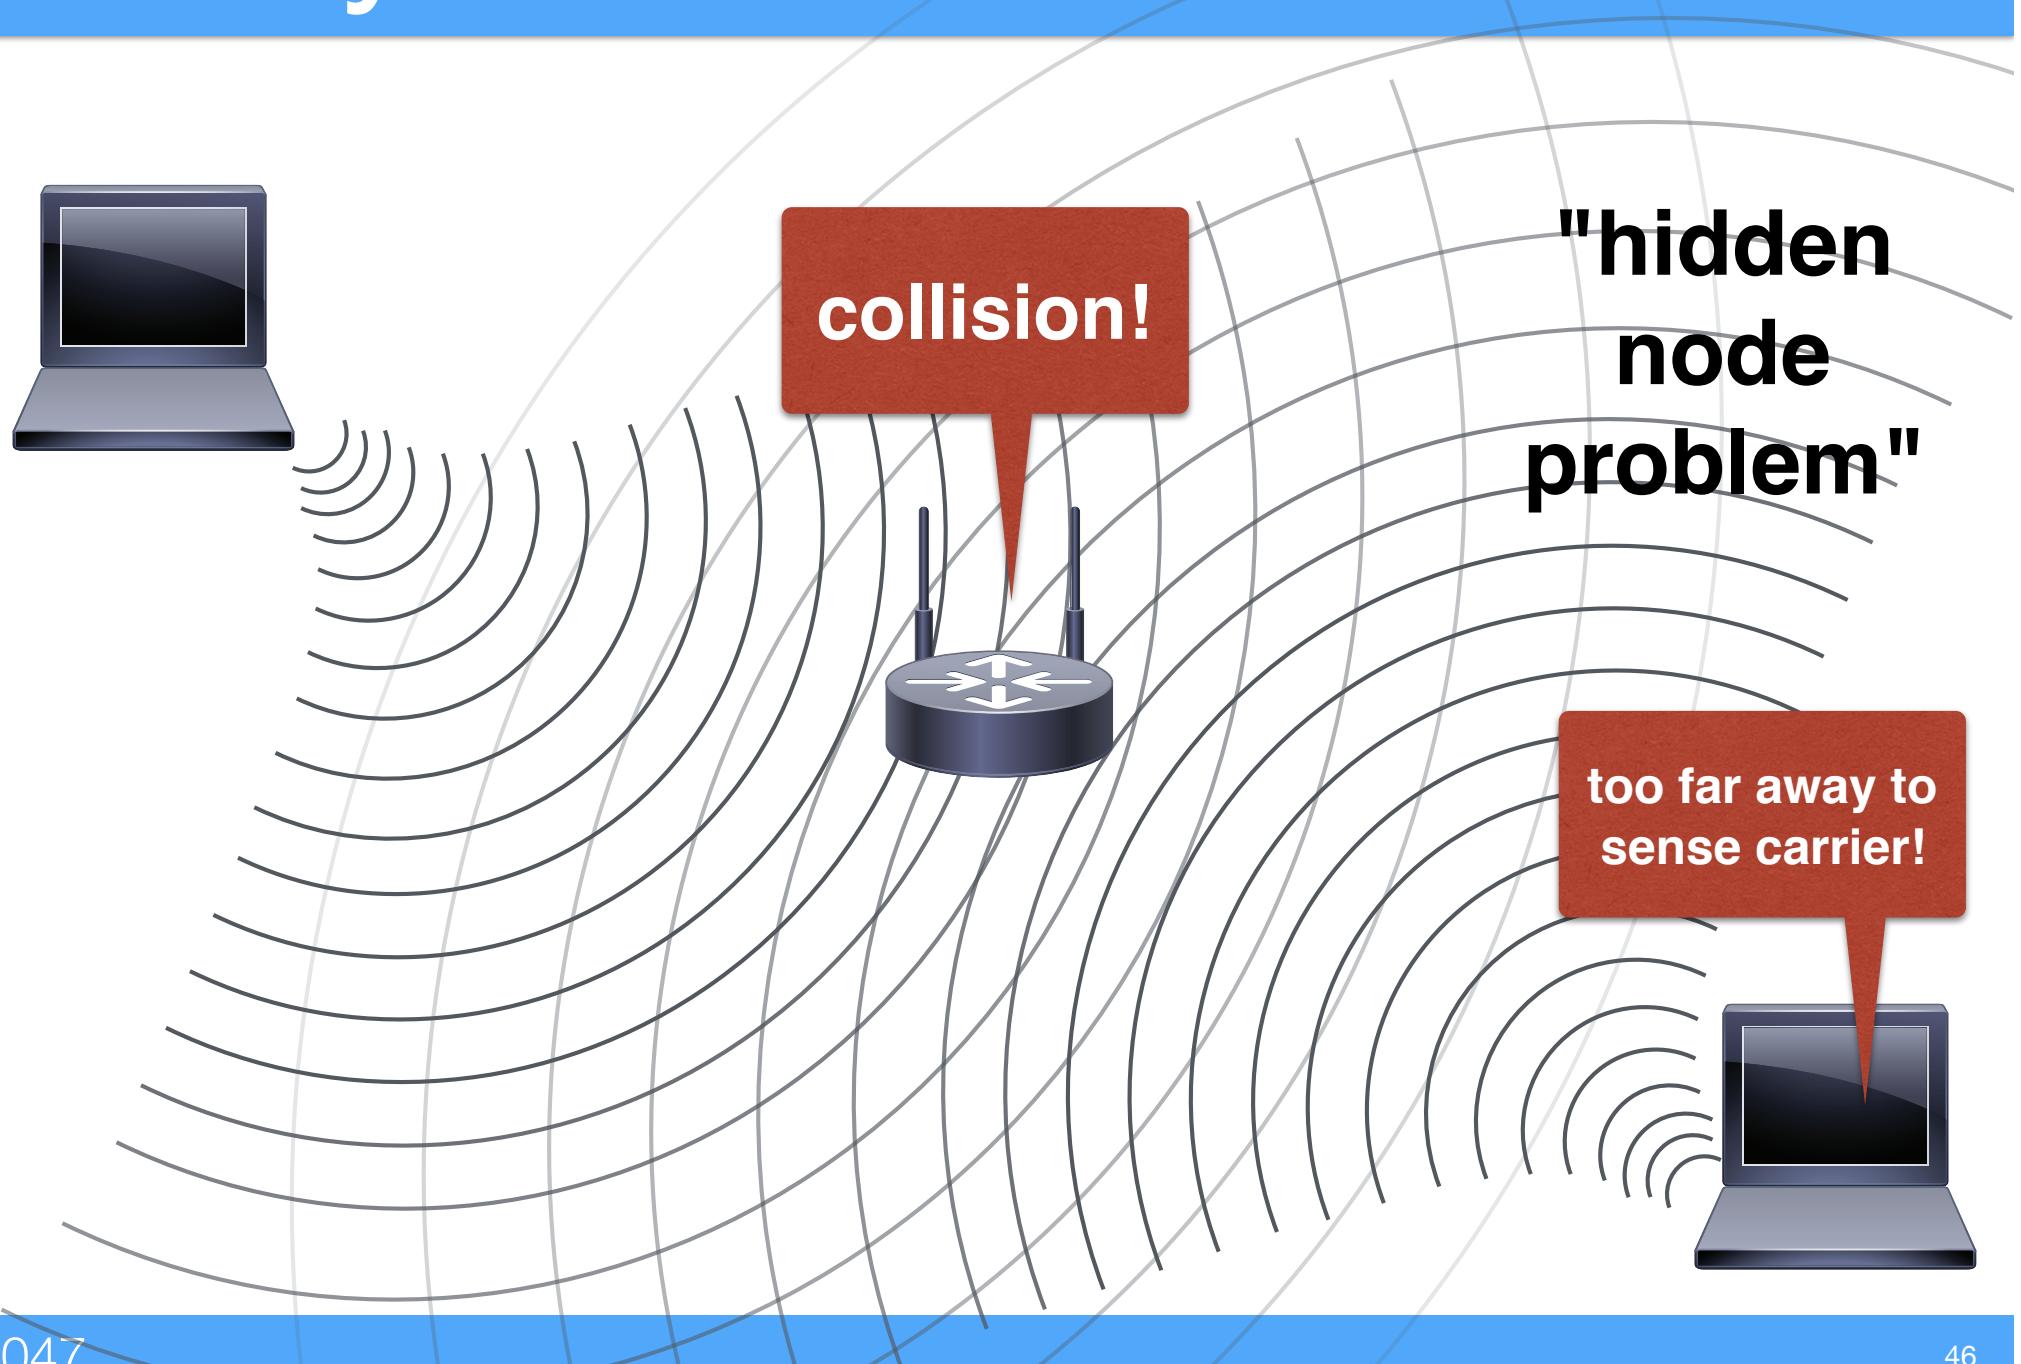

Two solutions: ARQ + Controlled Access

802.11 uses stop-and-wait ARQ

- ARQ = Automatic Repeat ReQuest
- AP sends ACK (acknowledgement) after receiving a frame
- devices only send next frame after receiving ACK for previous frame, otherwise re-send original

Two solutions: ARQ + Controlled Access

802.11 uses stop-and-wait ARQ

- ARQ = Automatic Repeat ReQuest
- AP sends ACK (acknowledgement) after receiving a frame
- devices only send next frame after receiving ACK for previous frame, otherwise re-send original

802.11 *may use controlled access*

- device can send "Request To Send" (RTS)
- only transmit frame if AP sends "Clear To Send" (CTS)

802.11 ARQ

Hidden node problem

- collision detection not reliable
- instead, receiver needs to ACK every frame

802.11 ARQ

Hidden node problem

- collision detection not reliable
- instead, receiver needs to ACK every frame

What if no ACK?

- we may not sense a carrier (too far away)
- re-sending immediately therefore might be bad idea

802.11 ARQ

Hidden node problem

- collision detection not reliable
- instead, receiver needs to ACK every frame

What if no ACK?


- we may not sense a carrier (too far away)
- re-sending immediately therefore might be bad idea

Solution: exponential back-off

- 1st collision: everybody waits 0 or 1 time unit
- 2nd: everybody waits between 0 and 3 time units
- 3rd: everybody waits between 0 and 7 time units...

WLAN Topology


Basic Service Set (BSS)

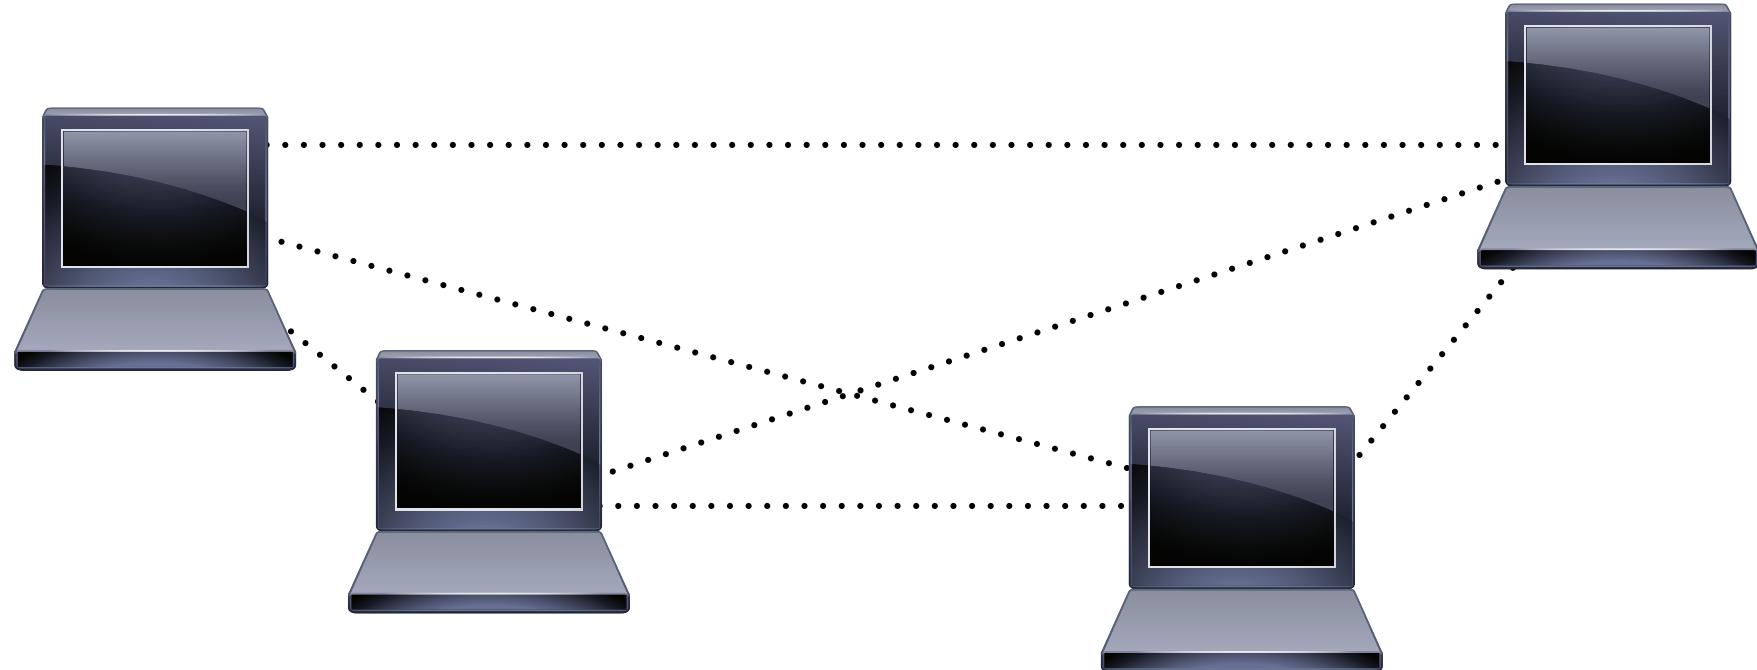

Independent BSS

- **ad-hoc** network
- devices communicate directly with each other


Basic Service Set (BSS)

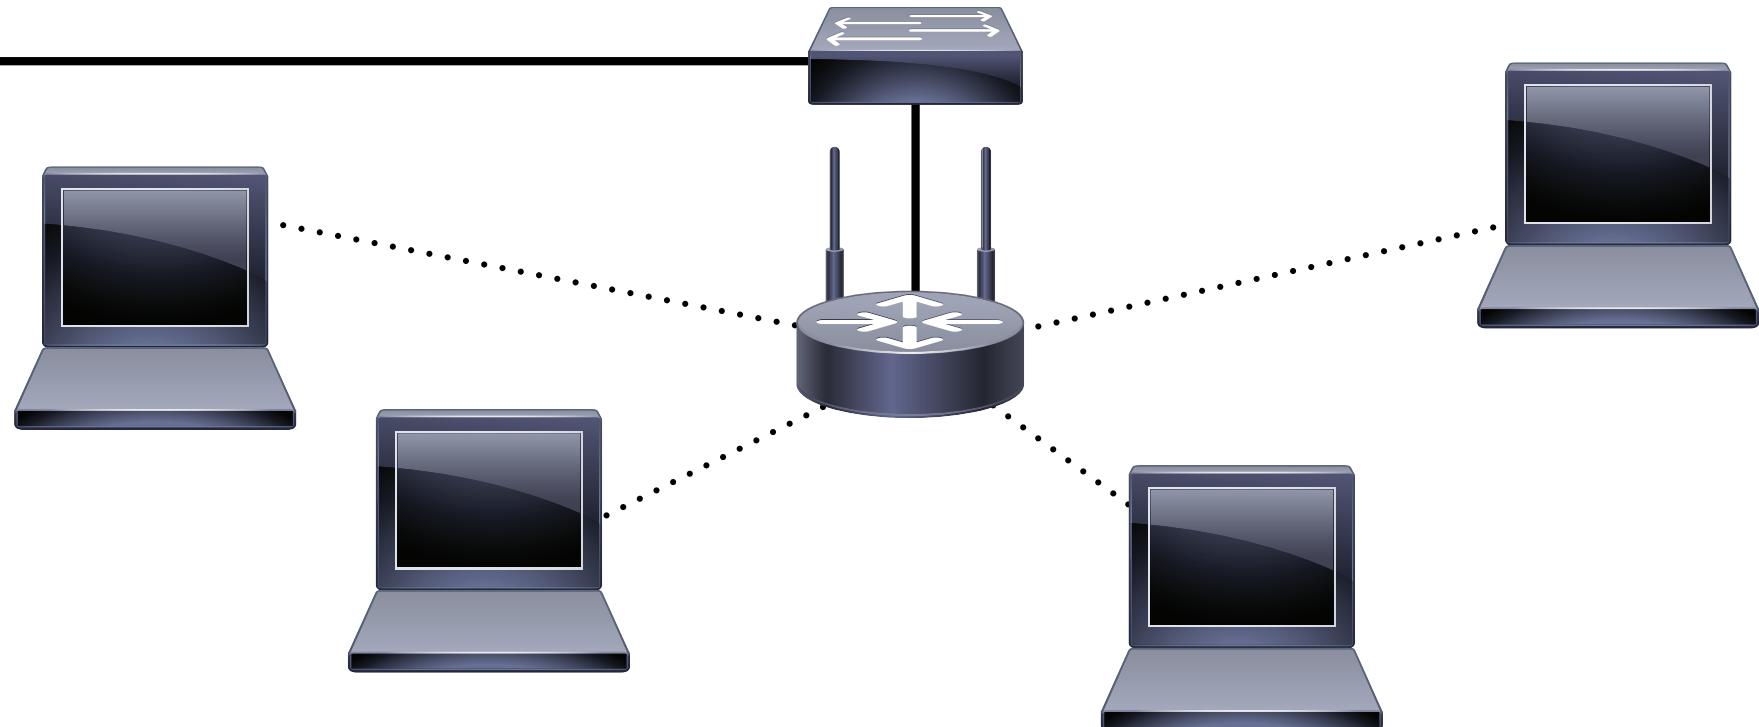


Infrastructure BSS

- all devices communicate with one Access Point (AP)
- AP connects to LAN
- all devices communicate **via** the AP


Extended Service Set (ESS)

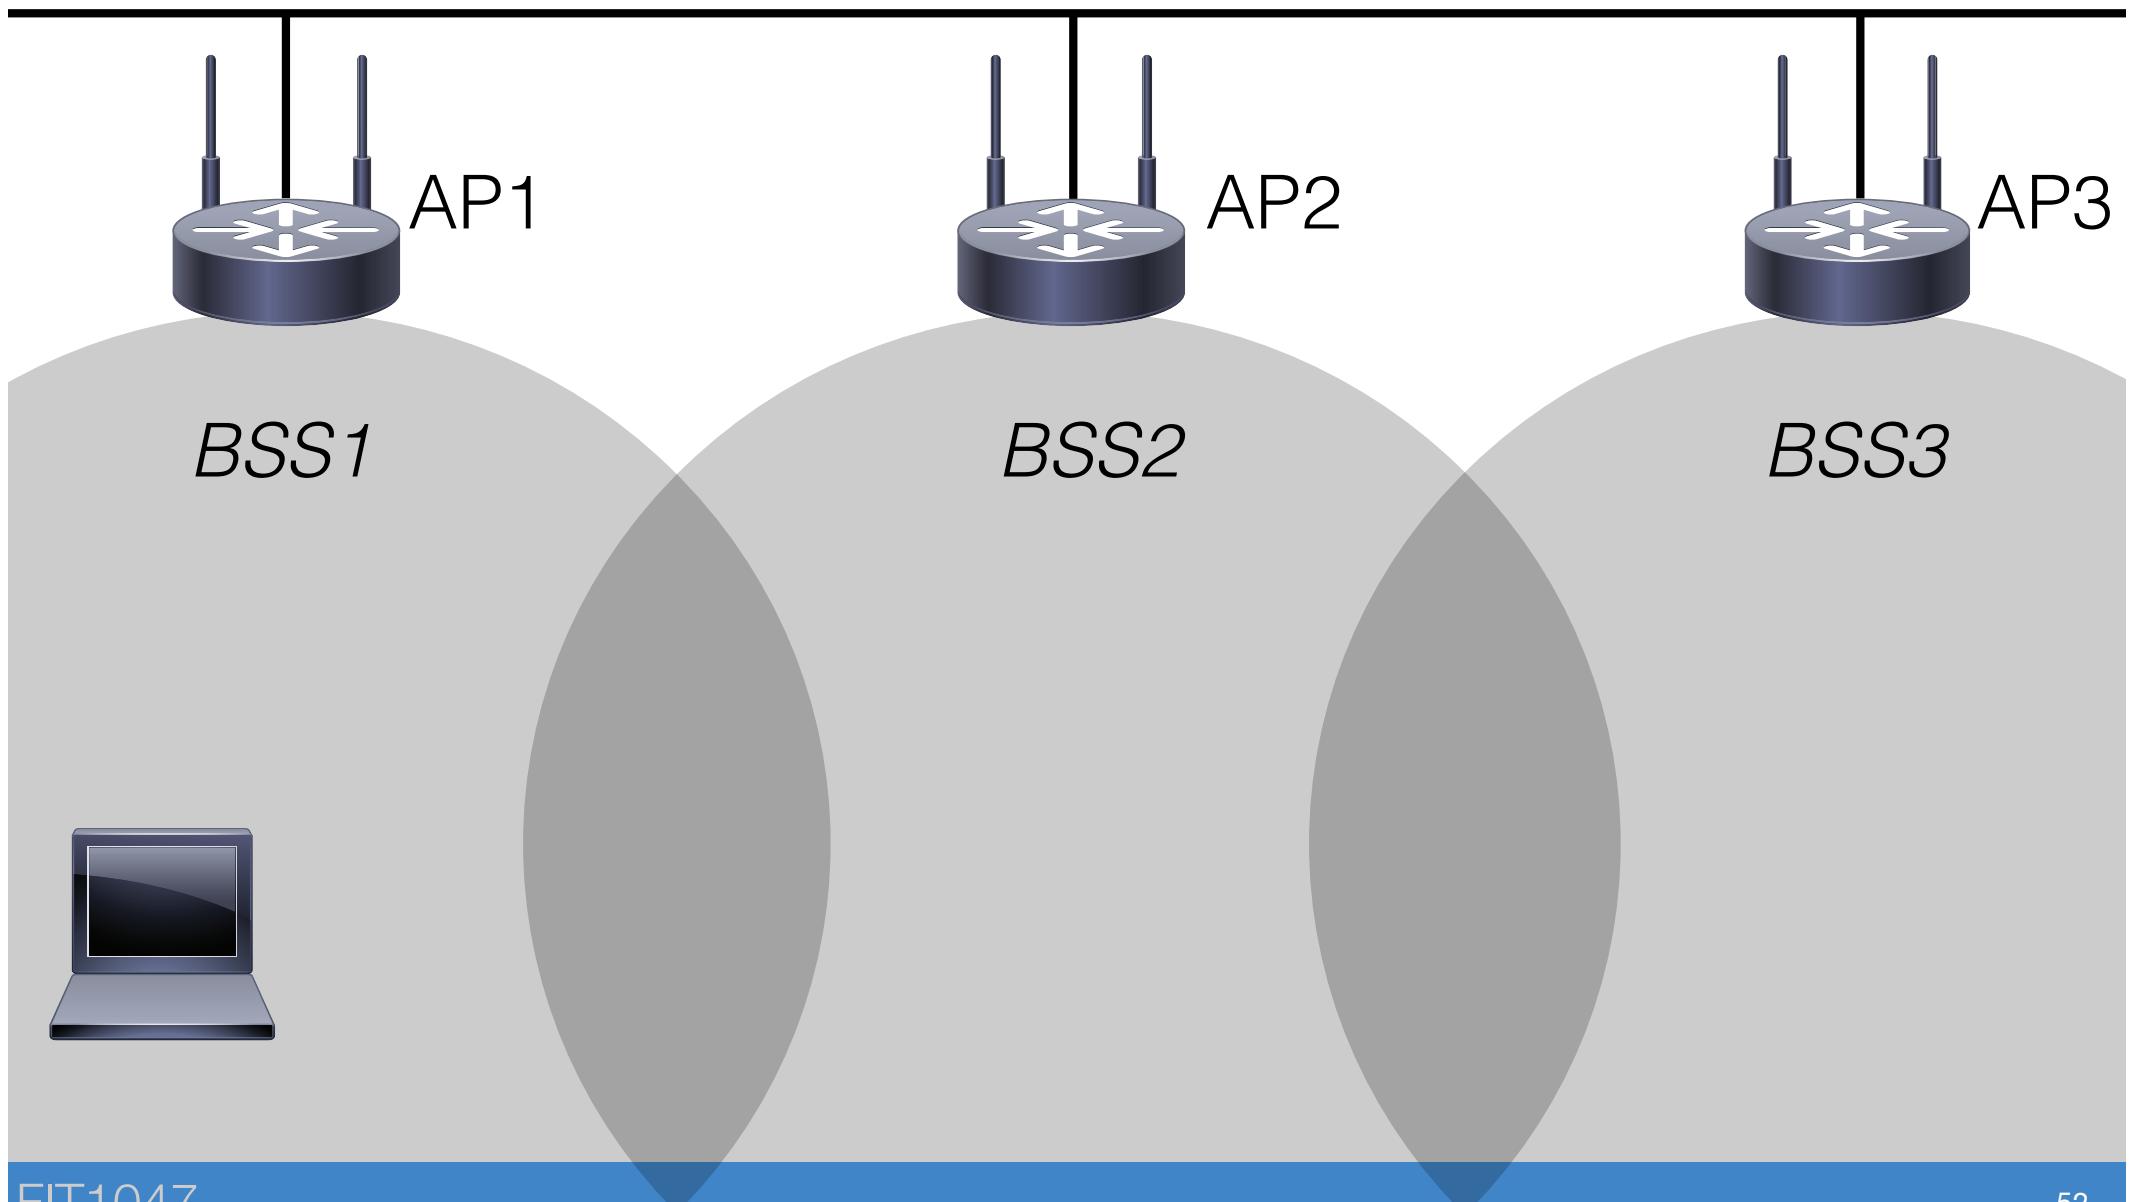


Extended Service Set (ESS)

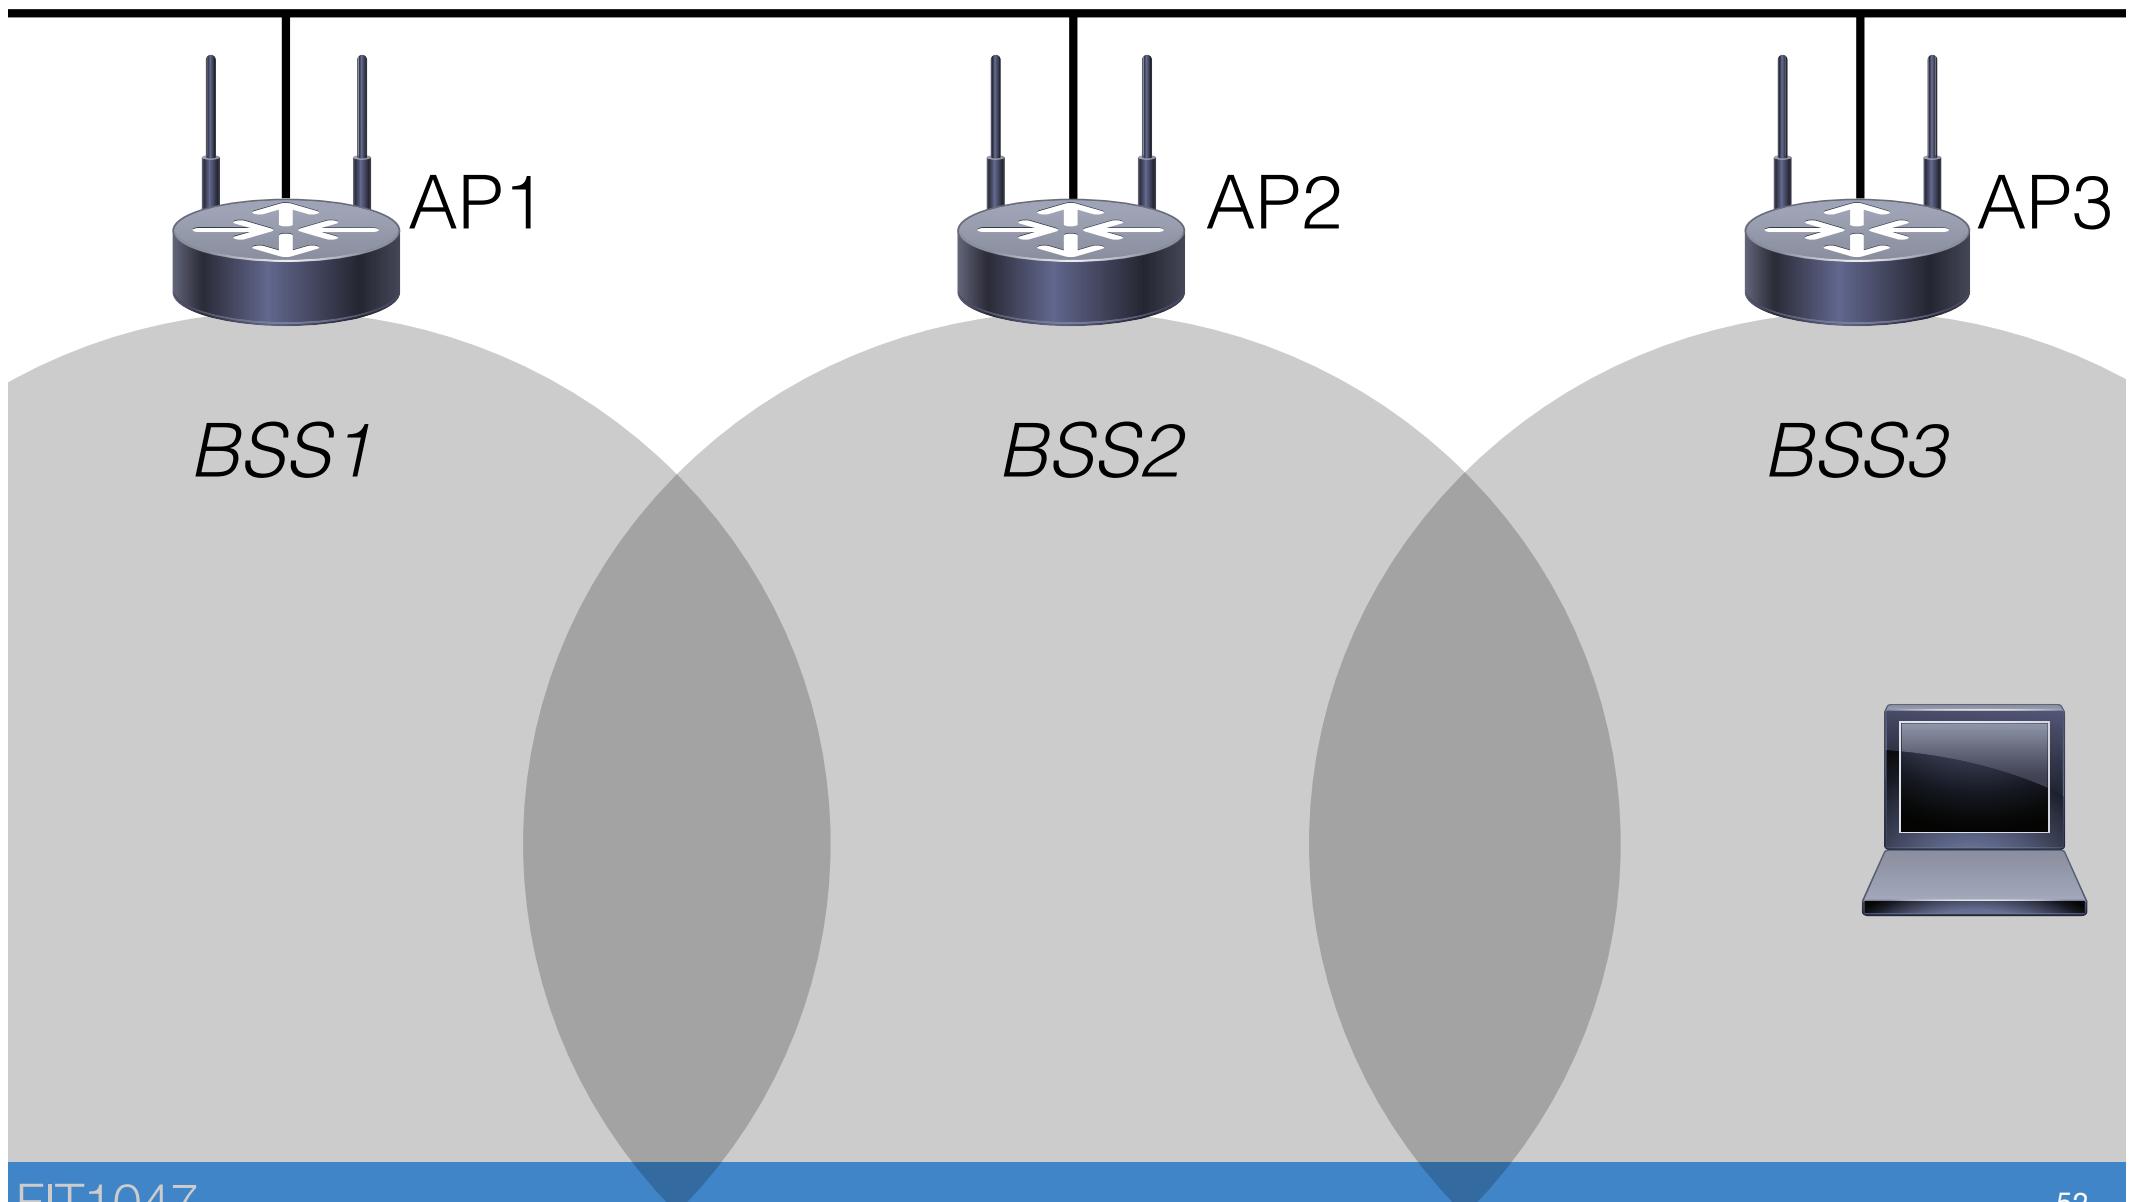

Extended Service Set (ESS)

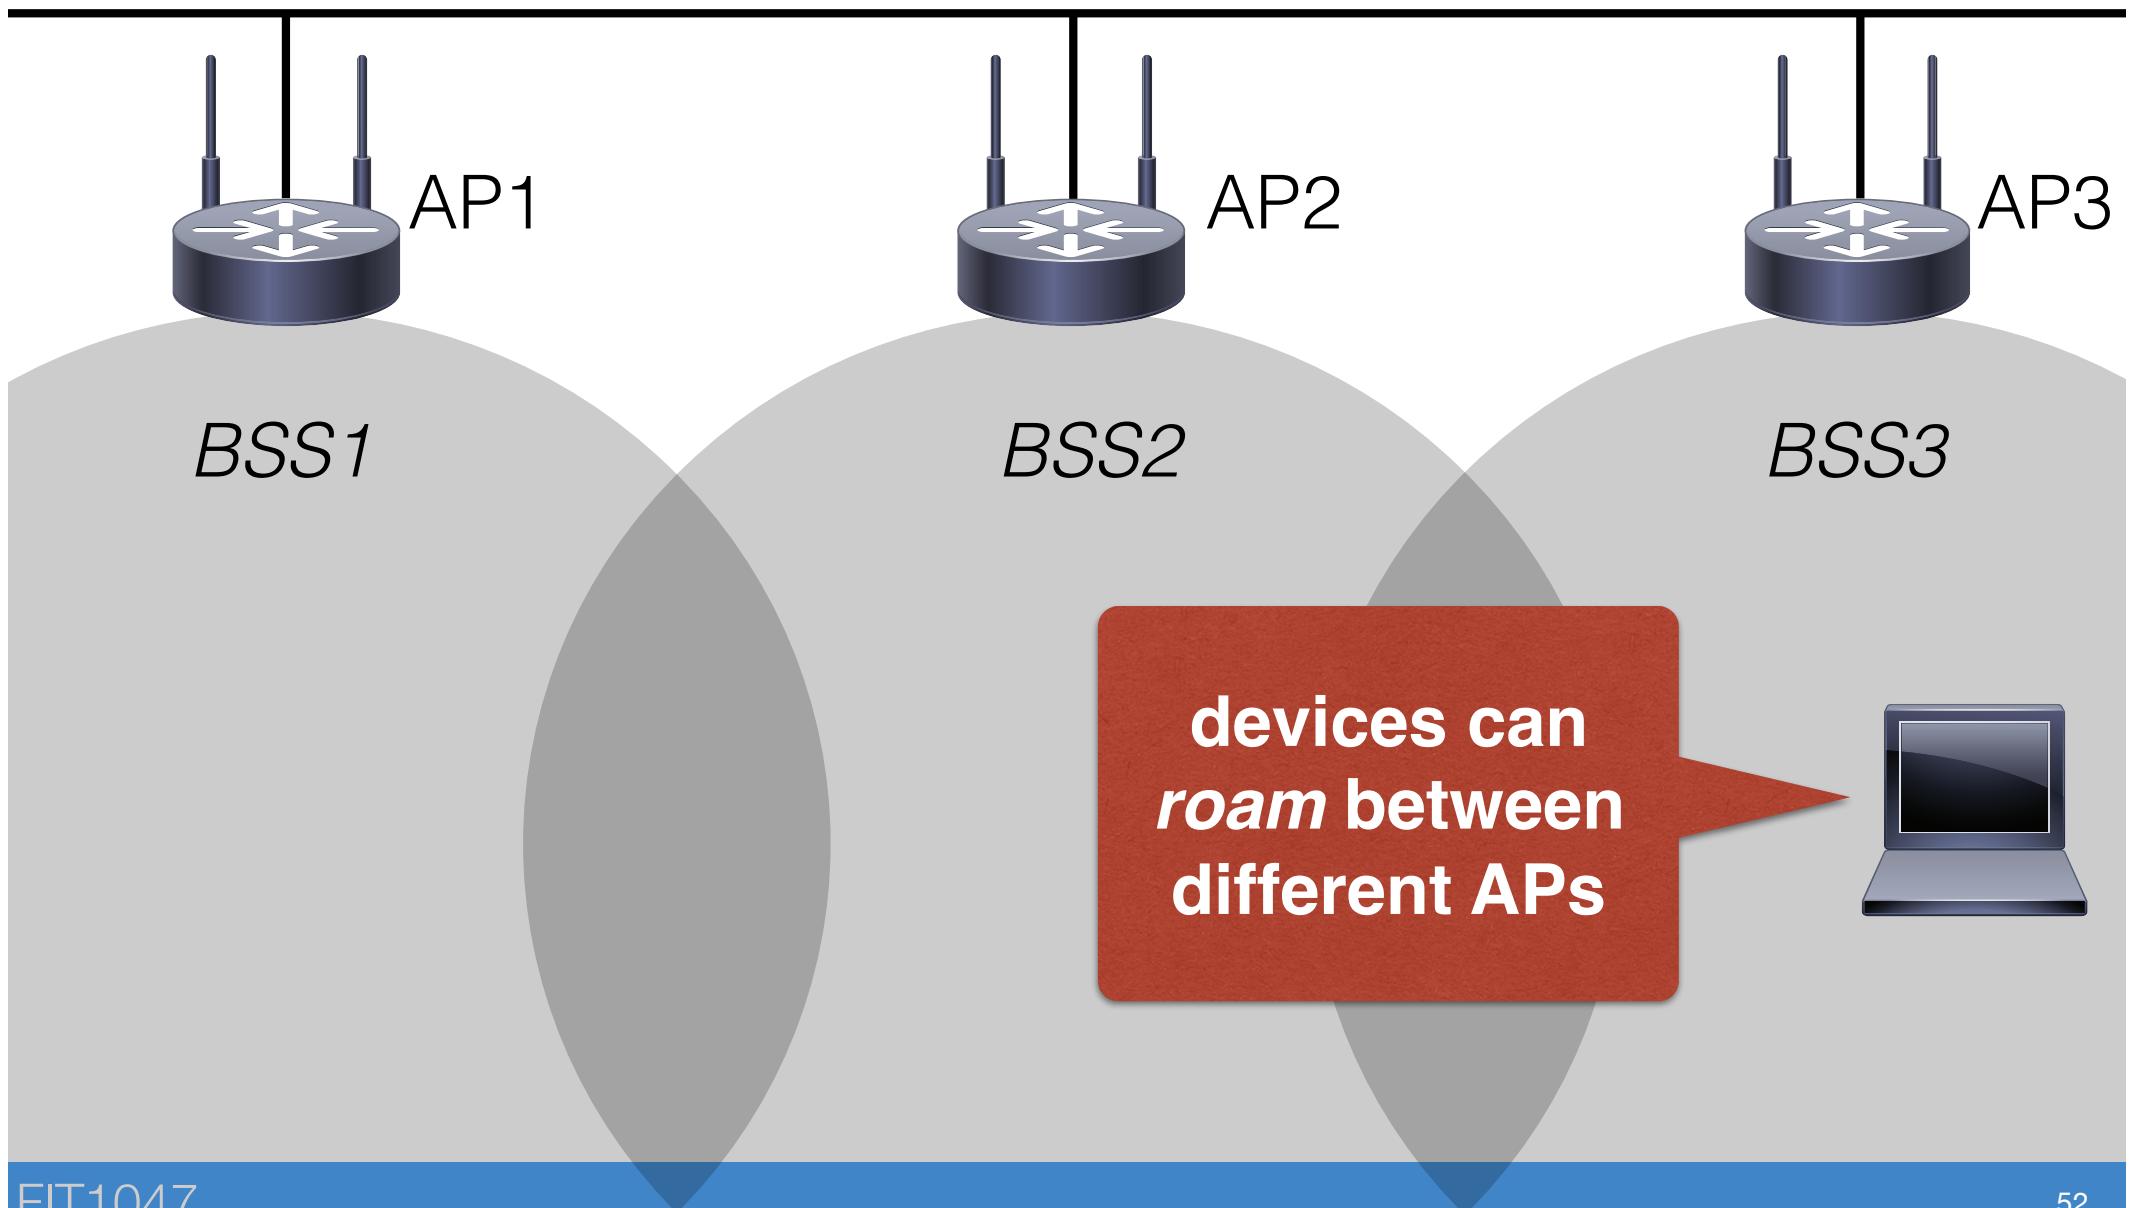

Extended Service Set (ESS)

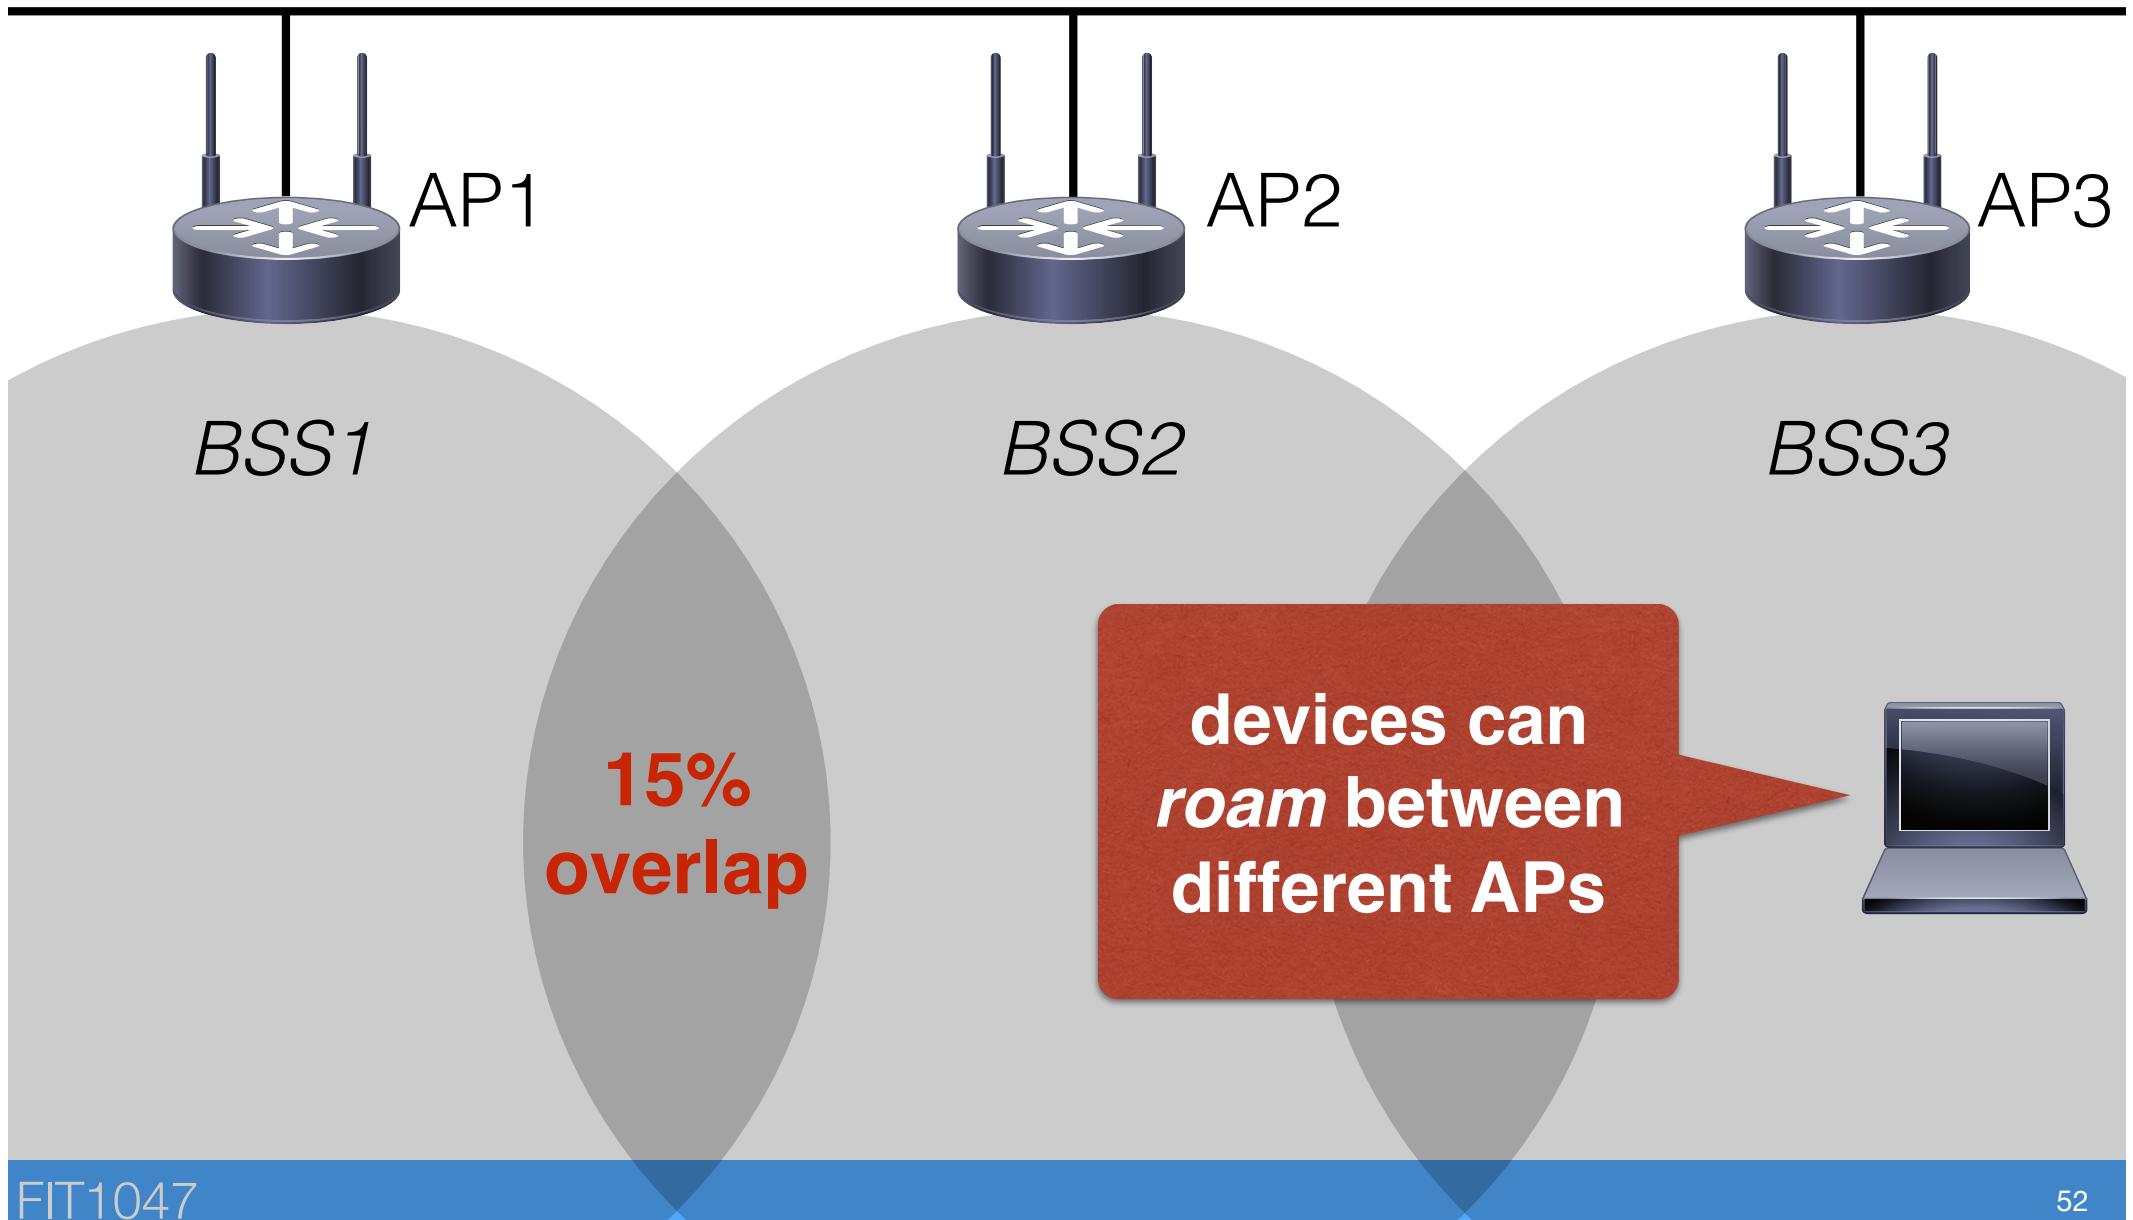

Extended Service Set (ESS)

Extends range of mobility

- set of infrastructure BSSs
- APs communicate to forward traffic between BSSs
- APs communicate via **distribution system (LAN)**
- devices see a **single layer 2** connection

Extended Service Set (ESS)


Extends range of mobility

- set of infrastructure BSSs
- APs communicate to forward traffic between BSSs
- APs communicate via **distribution system (LAN)**
- devices see a **single layer 2** connection


Roaming between different ESSs

- not possible in 802.11 protocol
- requires higher-level protocol, e.g. Mobile IP


Extended Service Set (ESS)

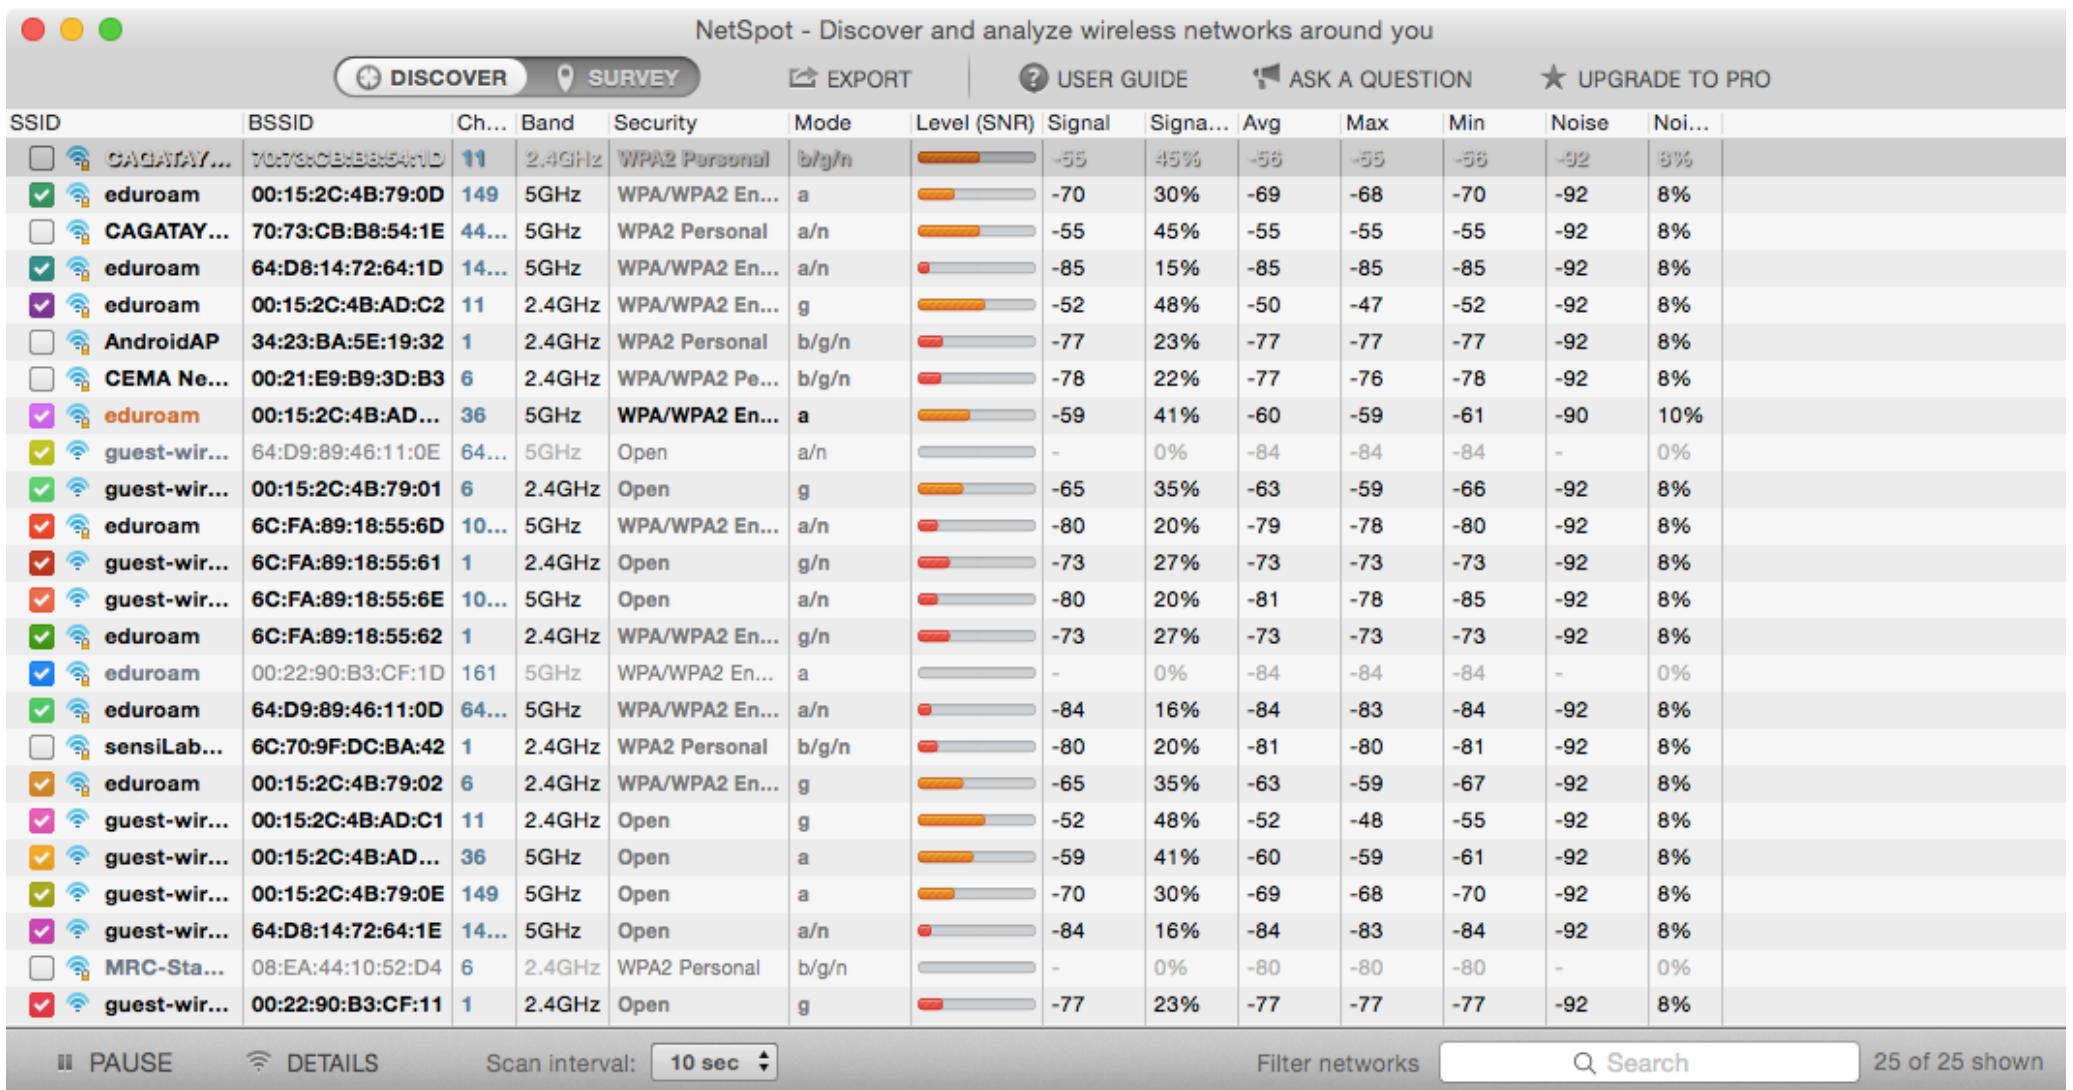


Extended Service Set (ESS)

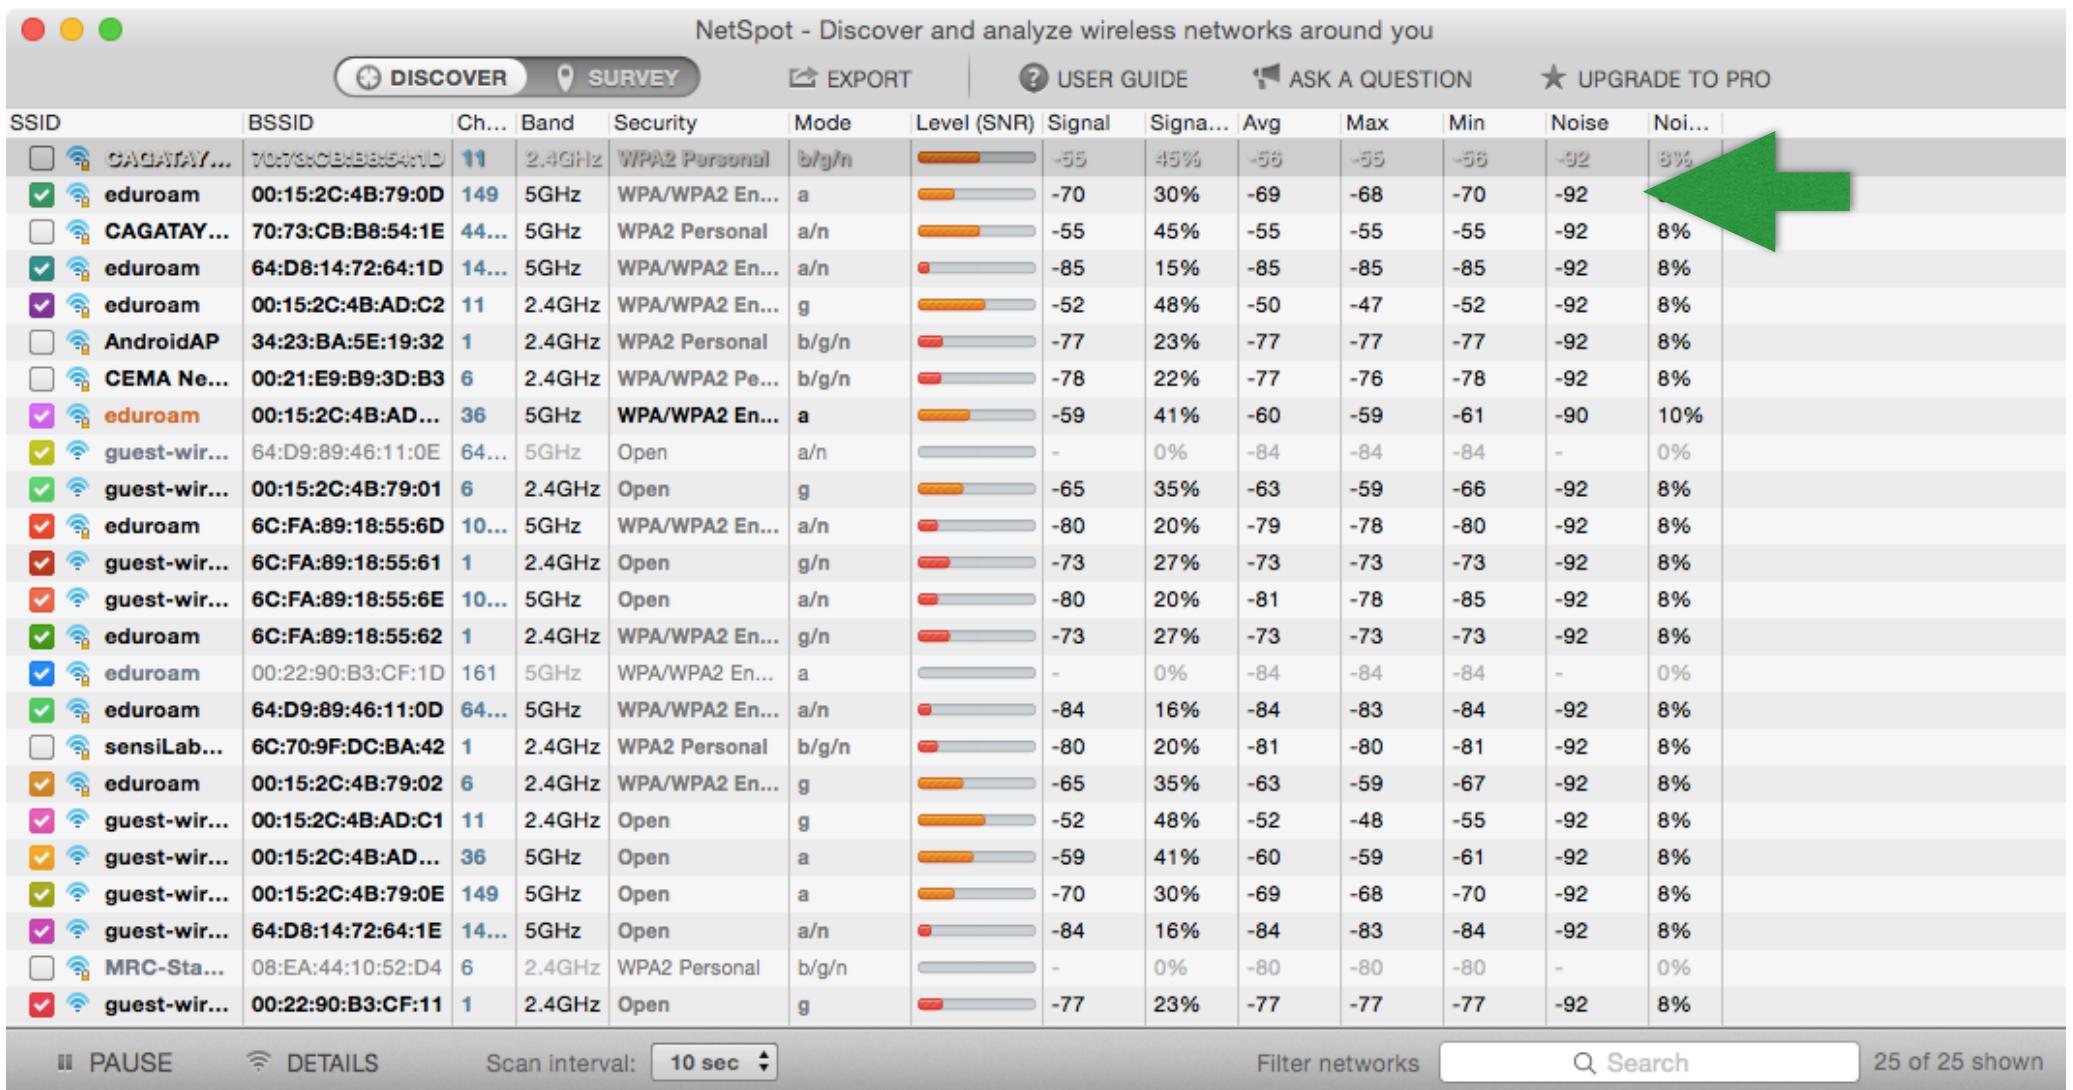


Extended Service Set (ESS)

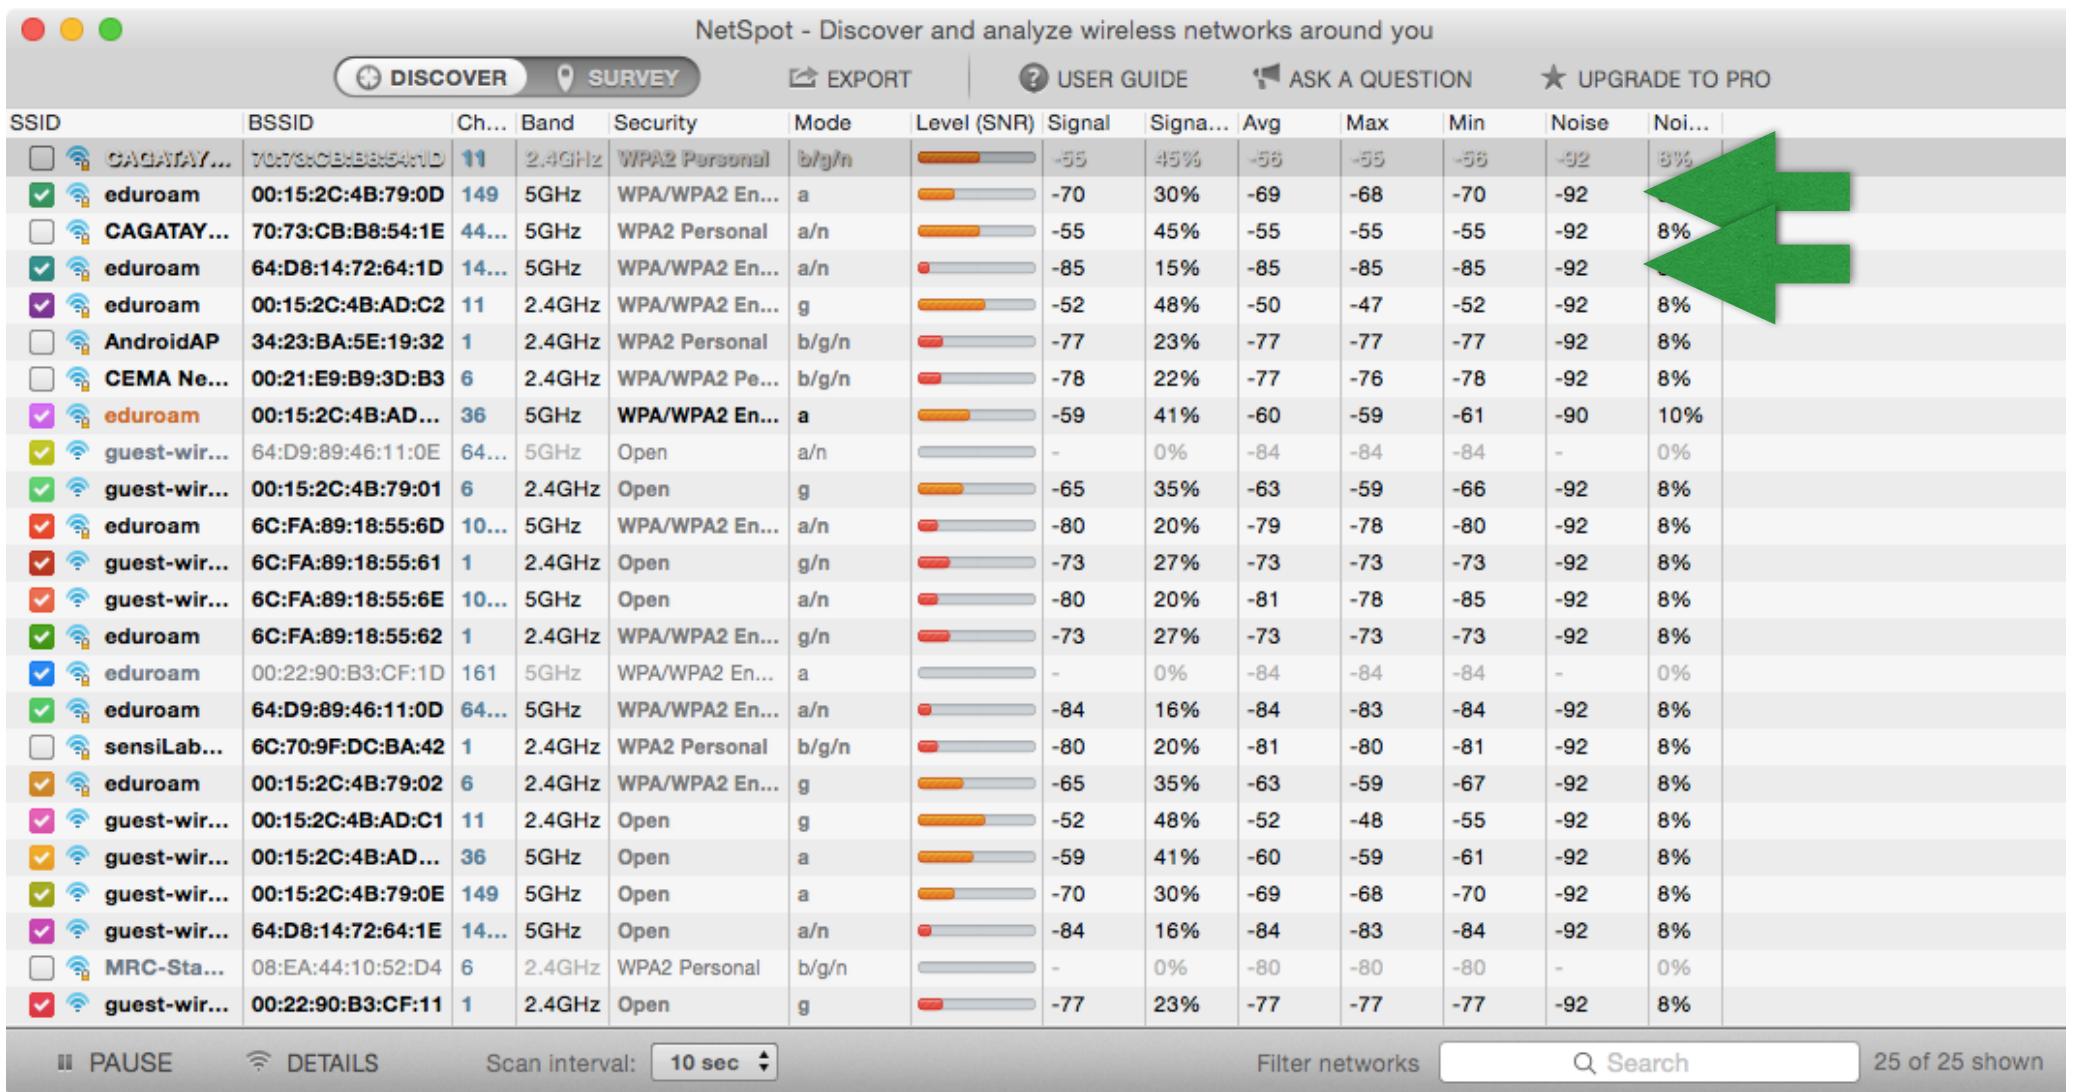


Extended Service Set (ESS)

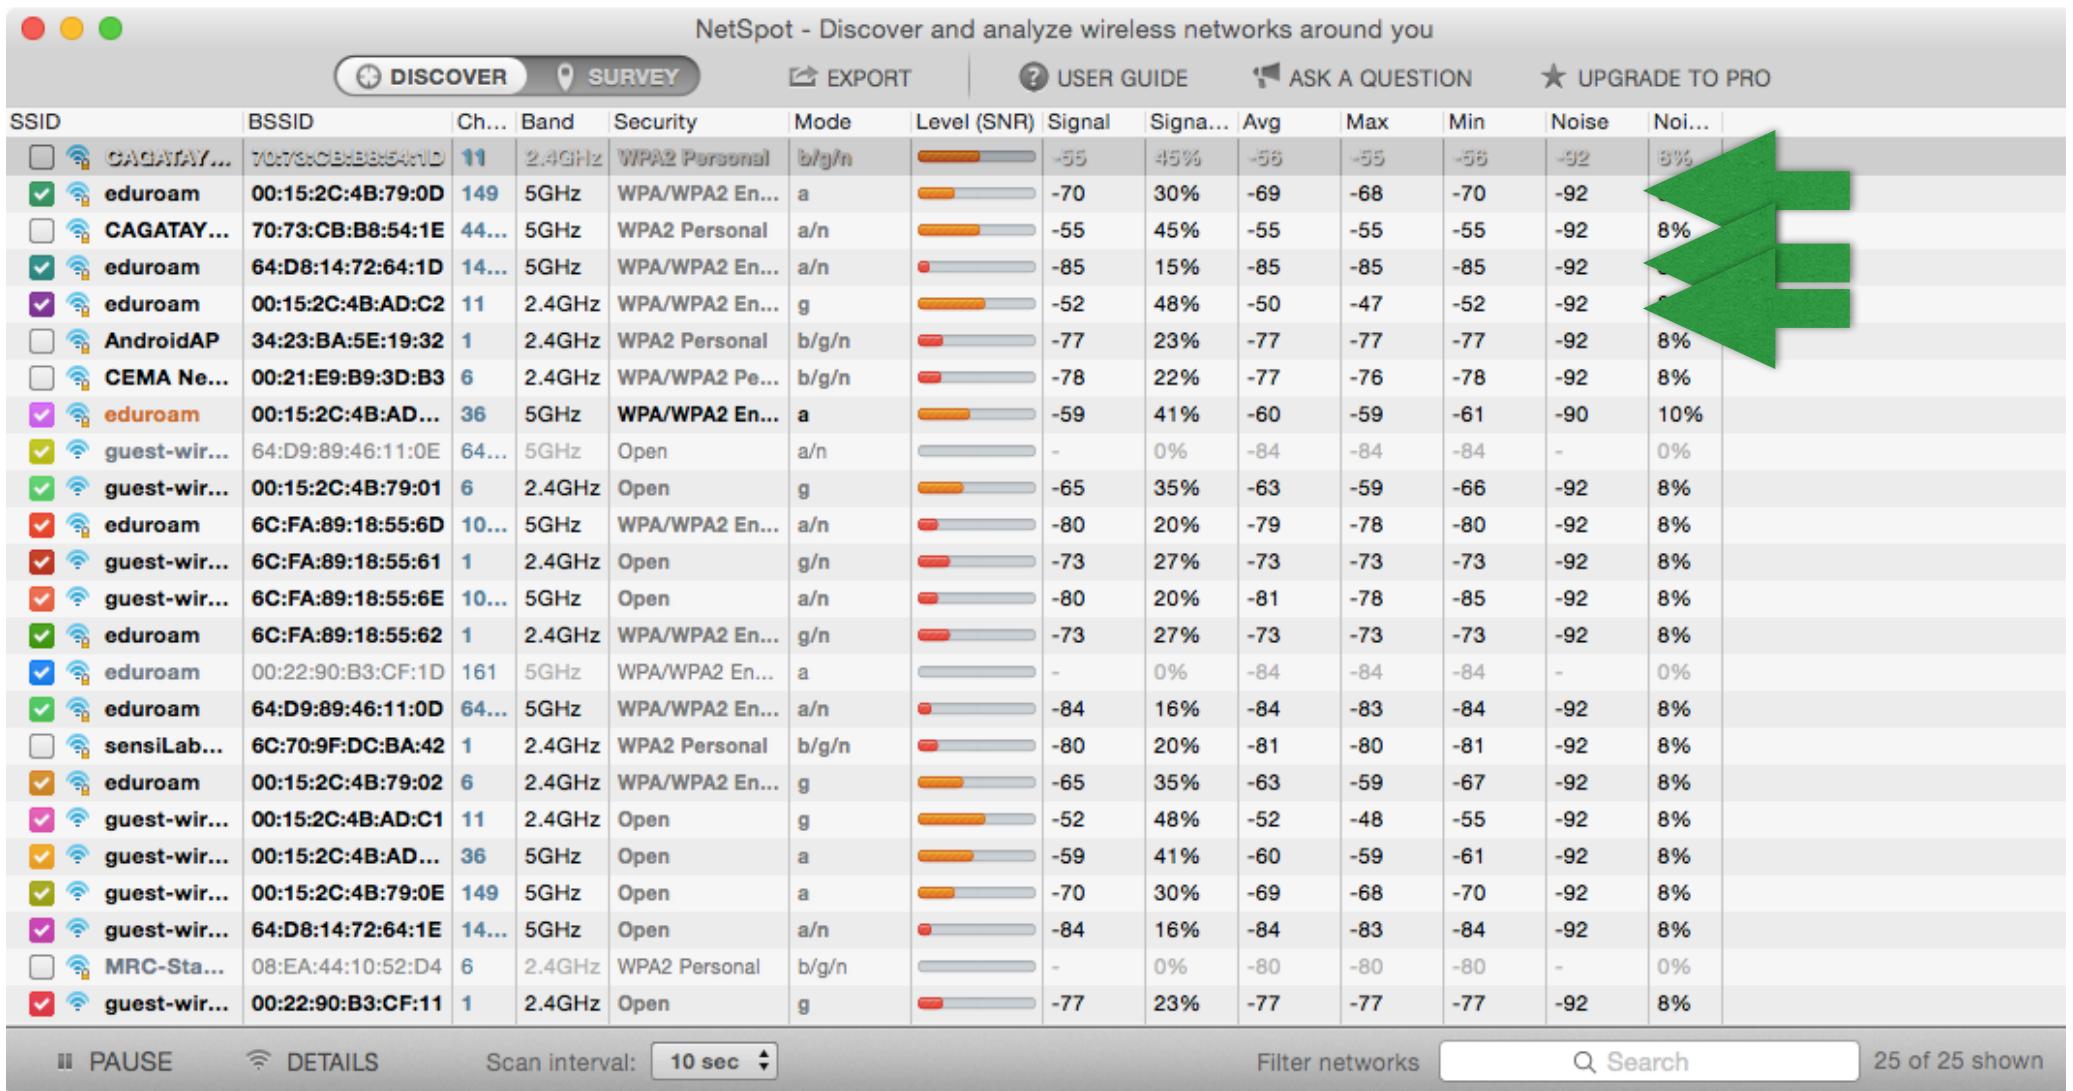


Extended Service Set (ESS)

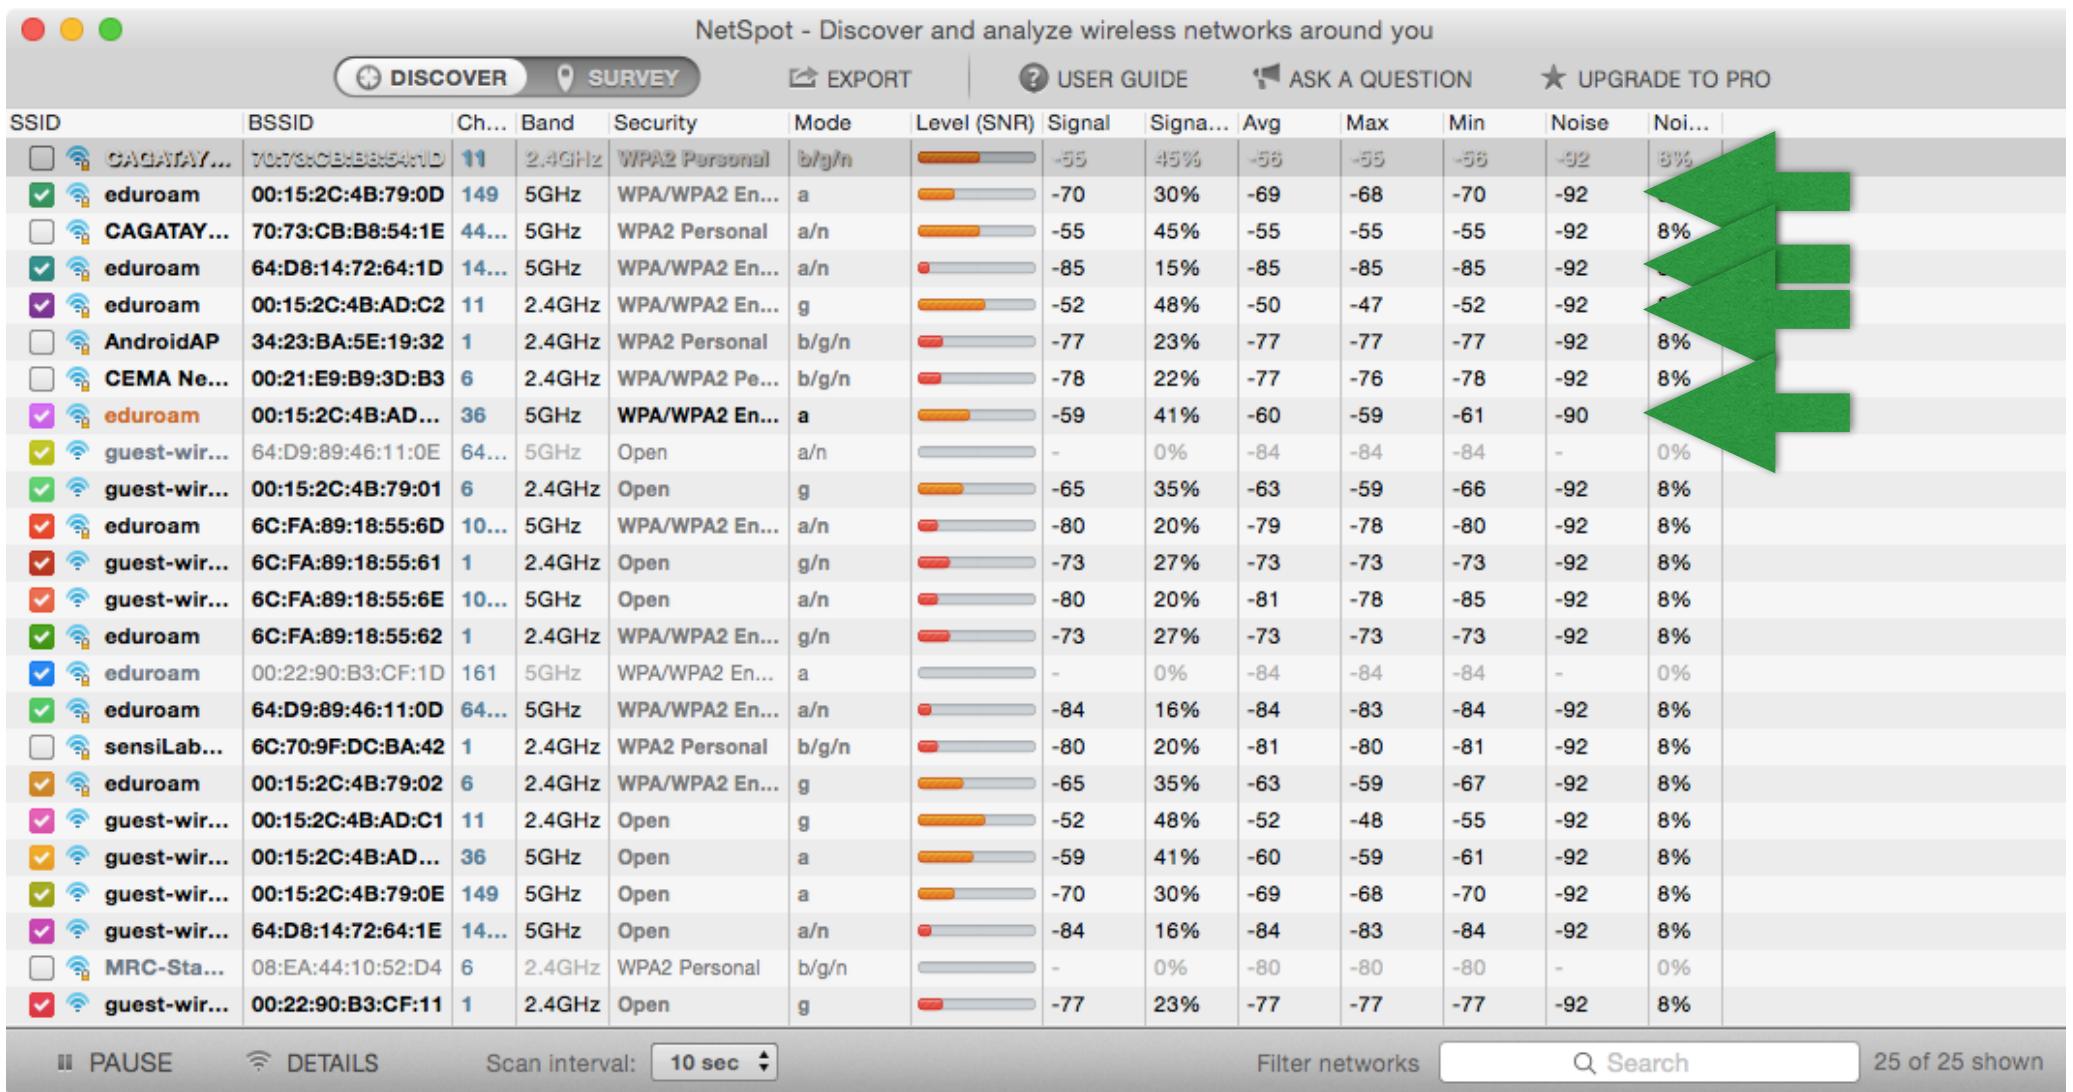


Extended Service Set (ESS)

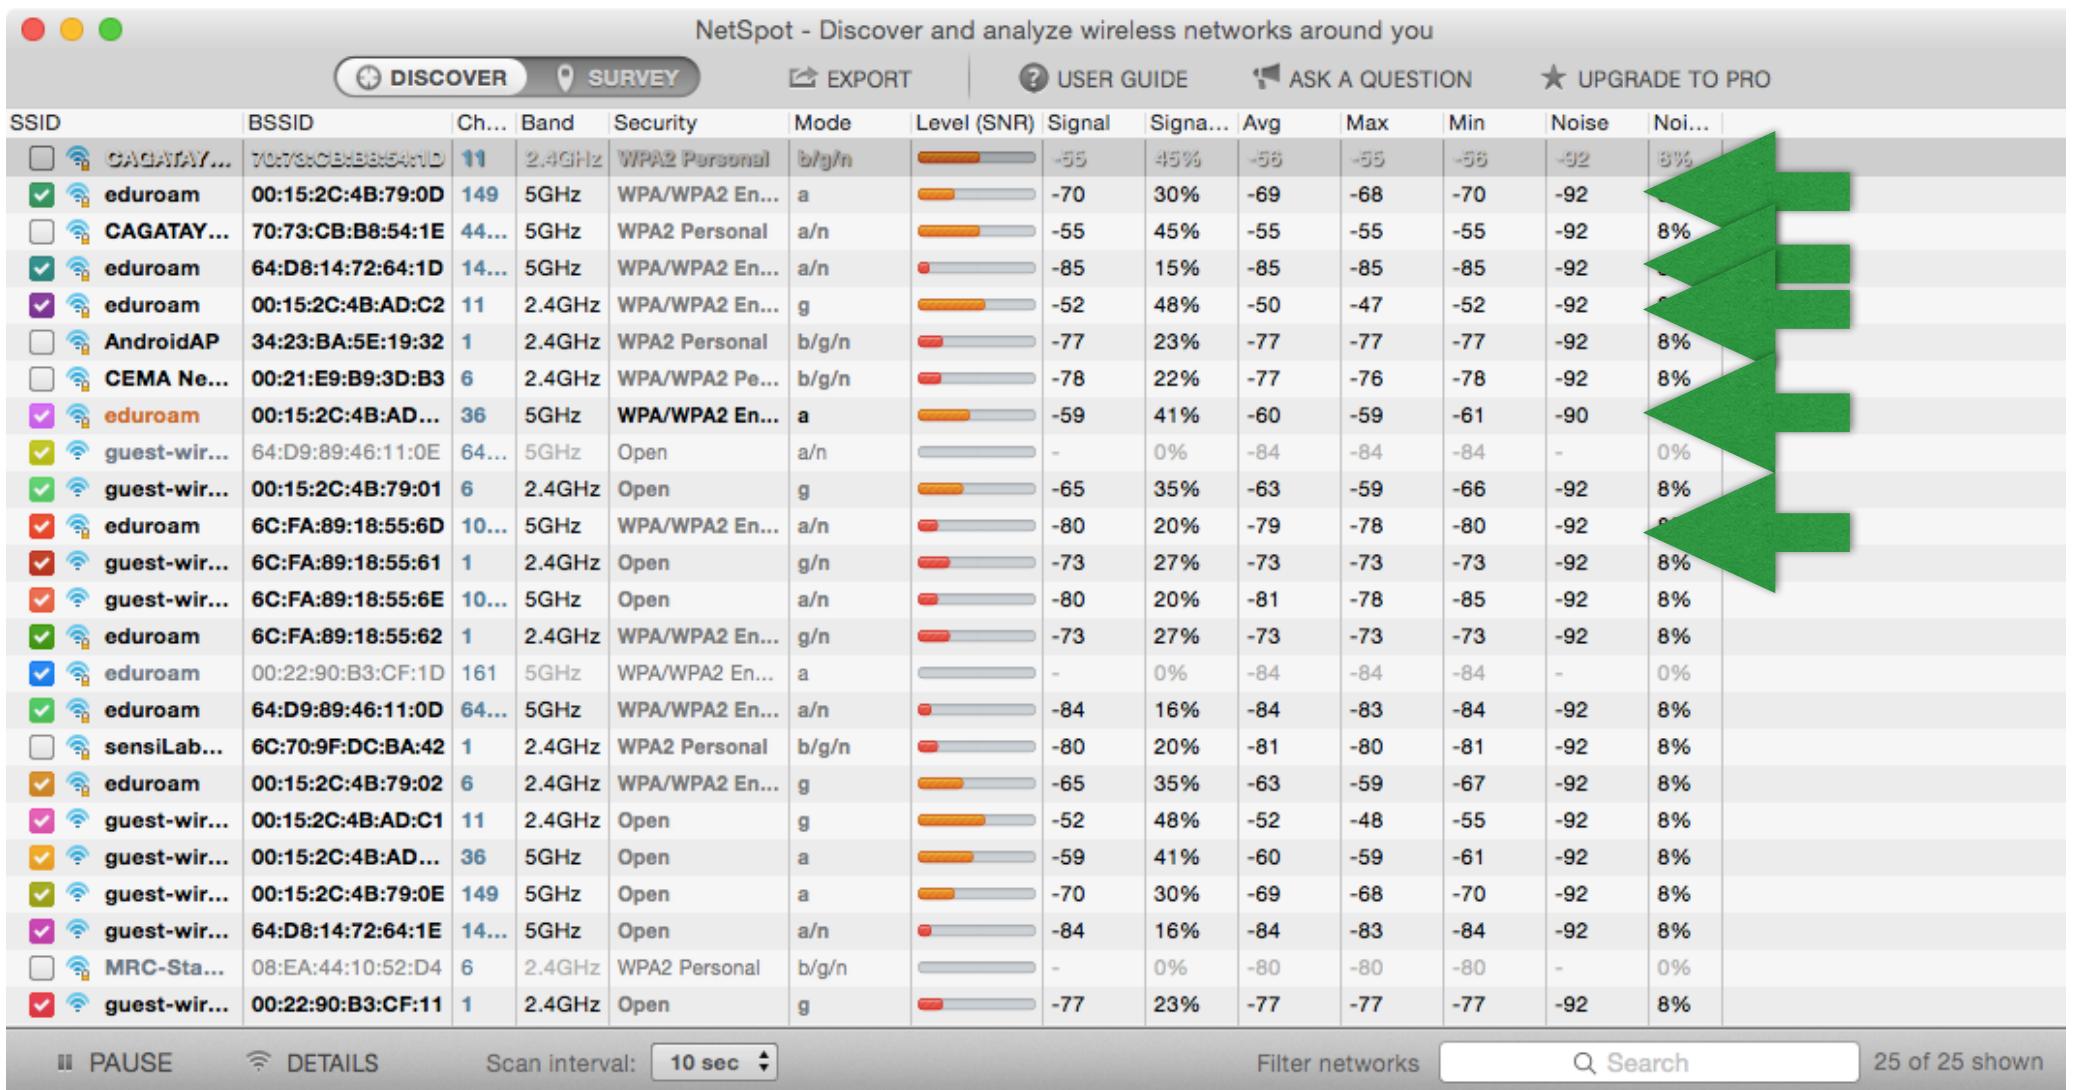


Extended Service Set (ESS)

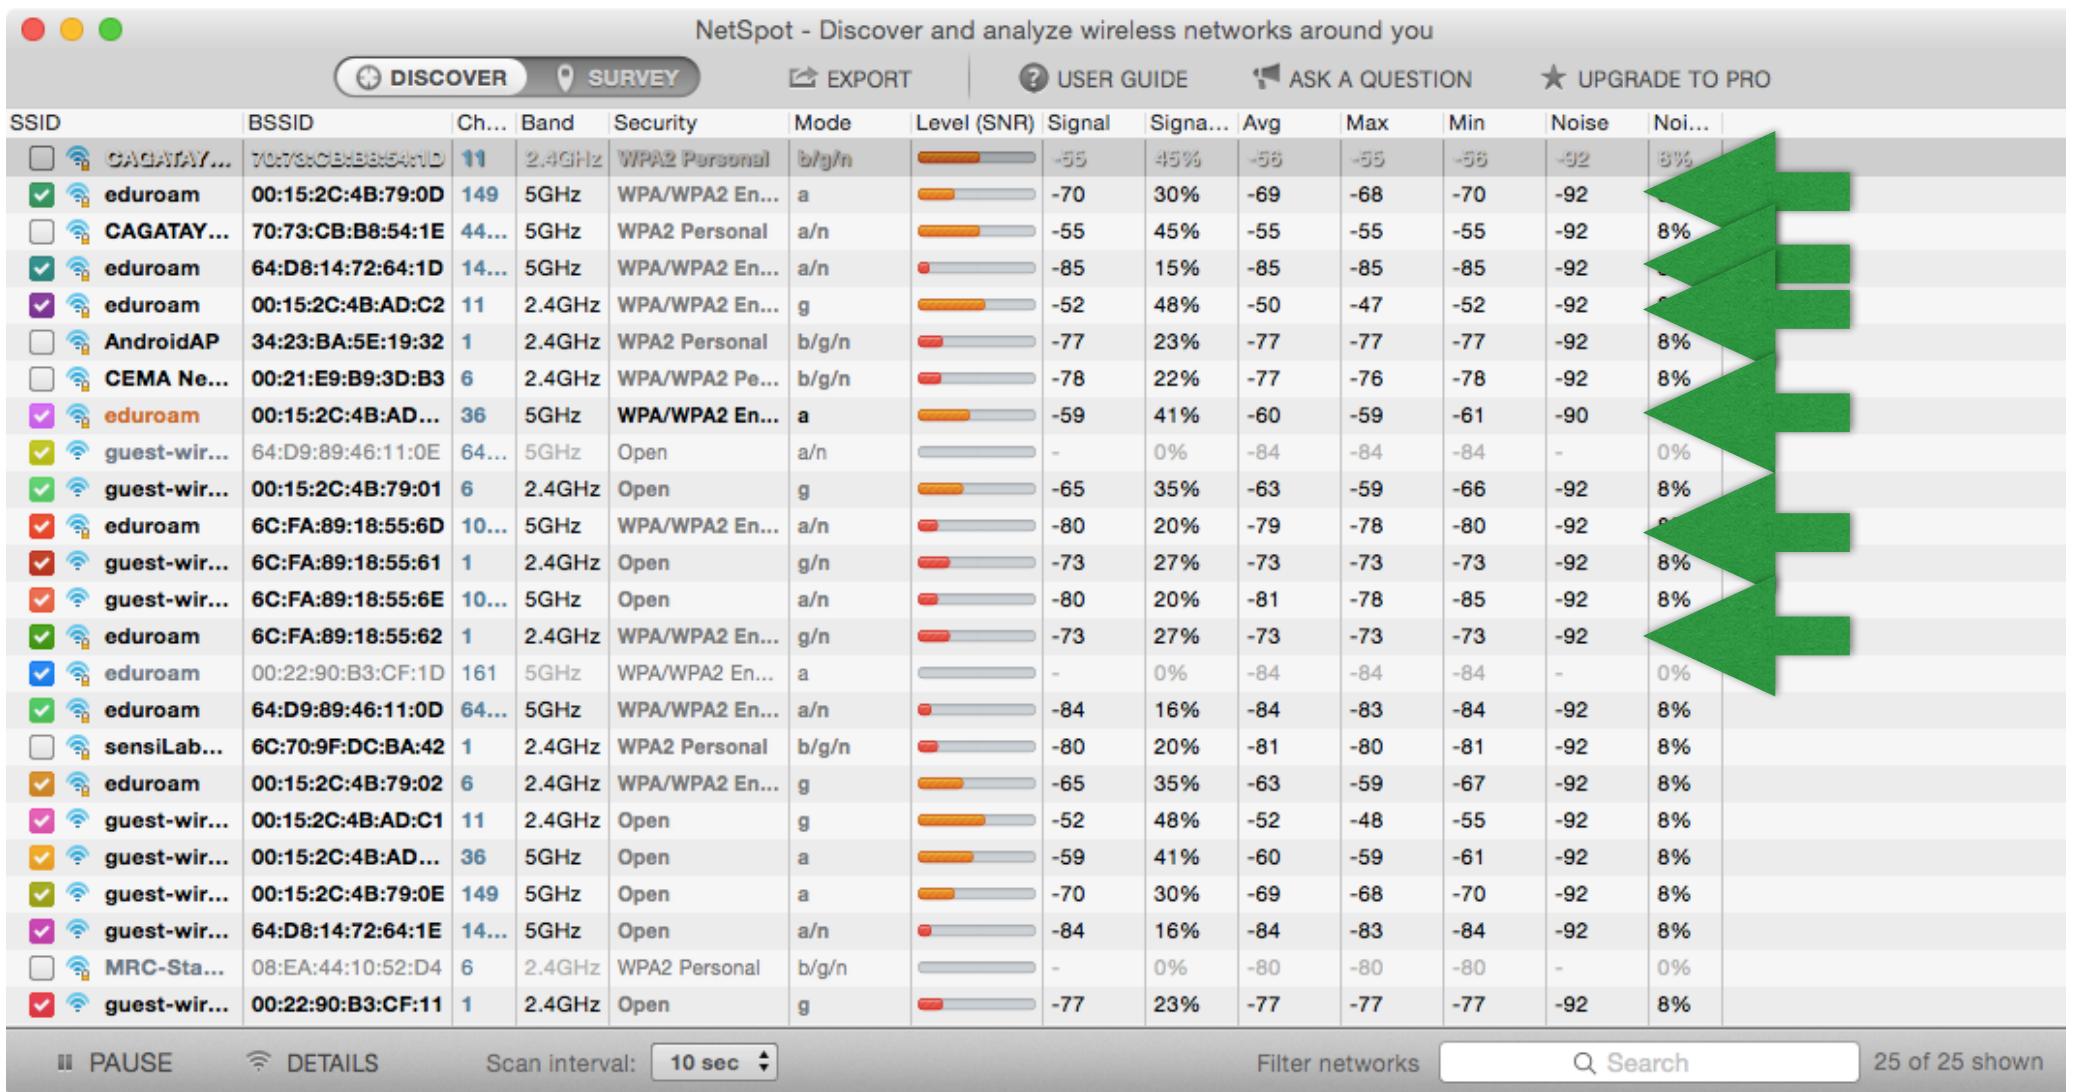


Extended Service Set (ESS)

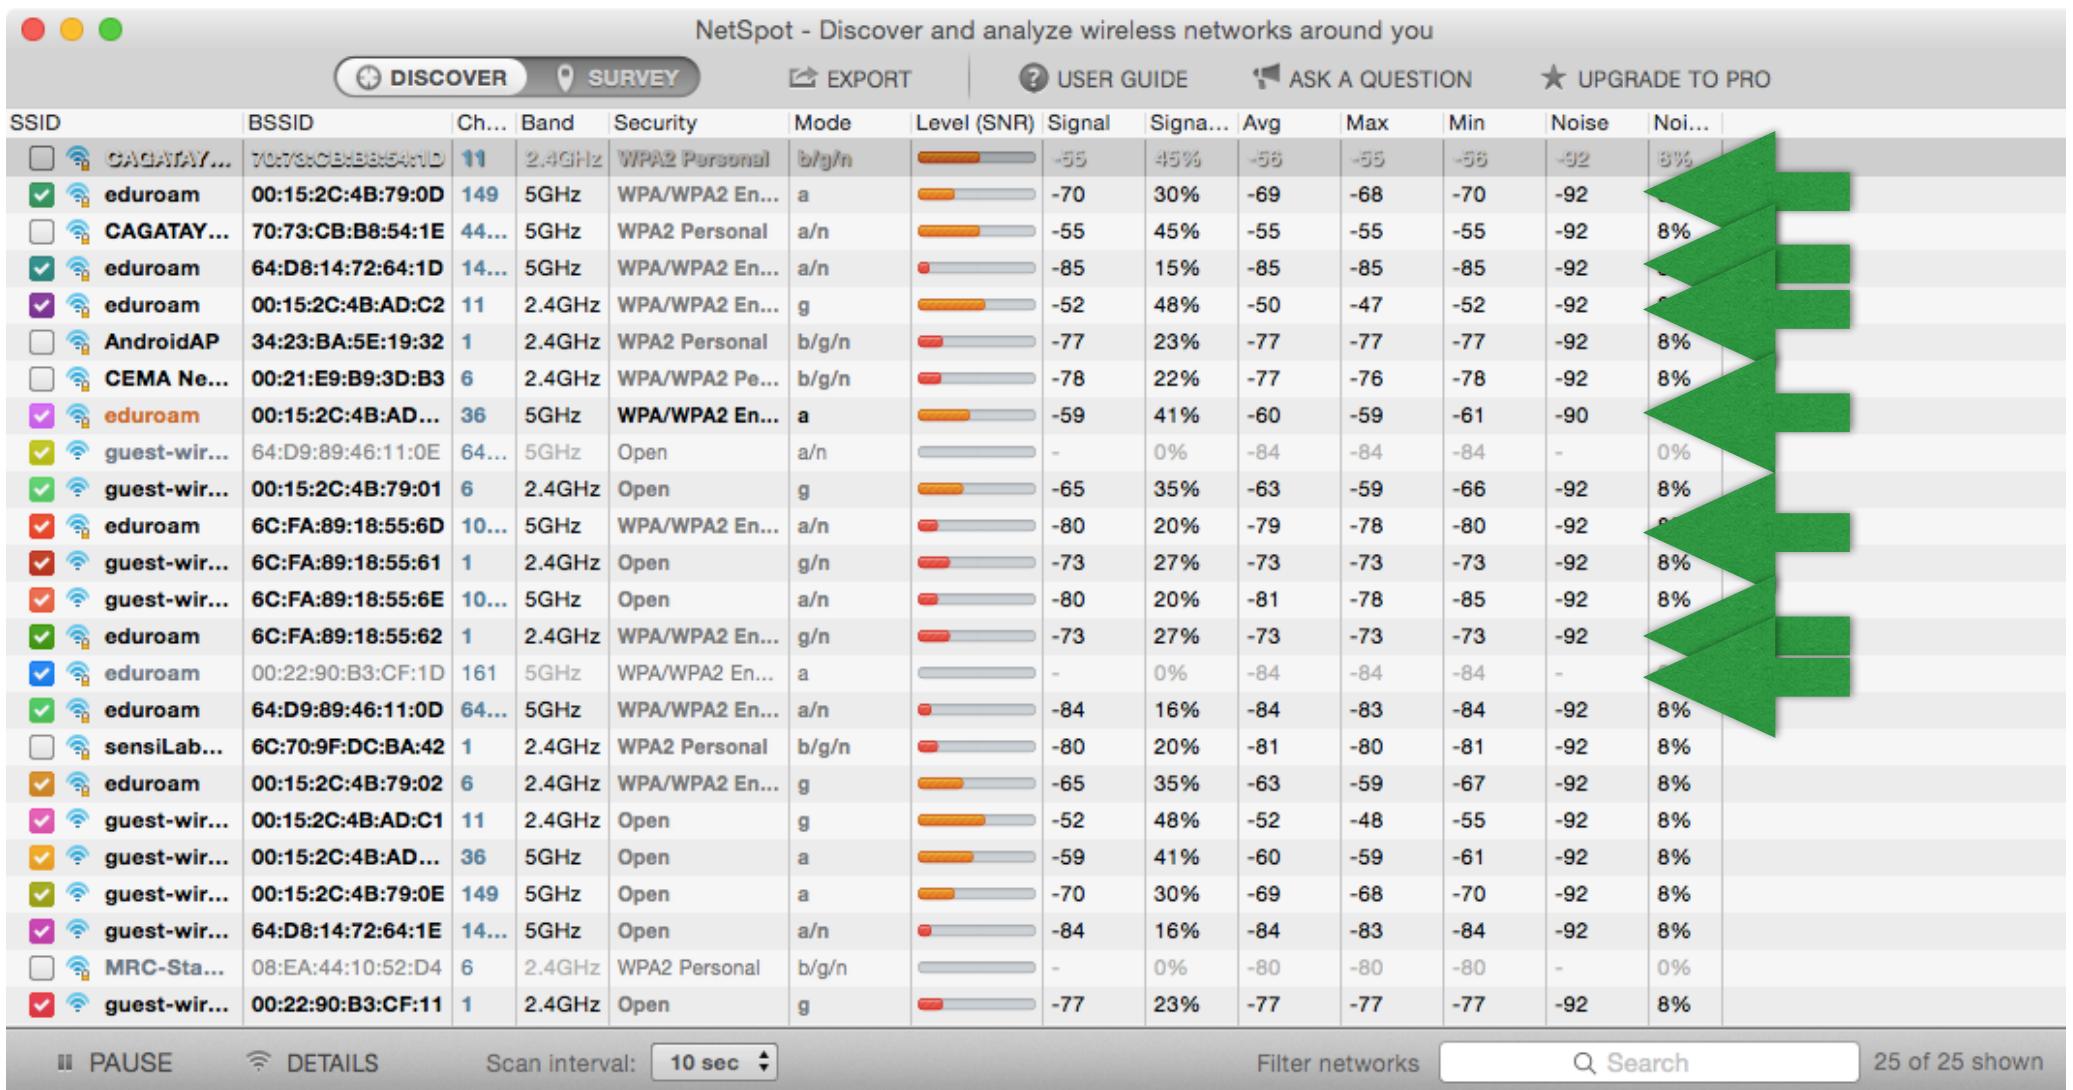


Extended Service Set (ESS)

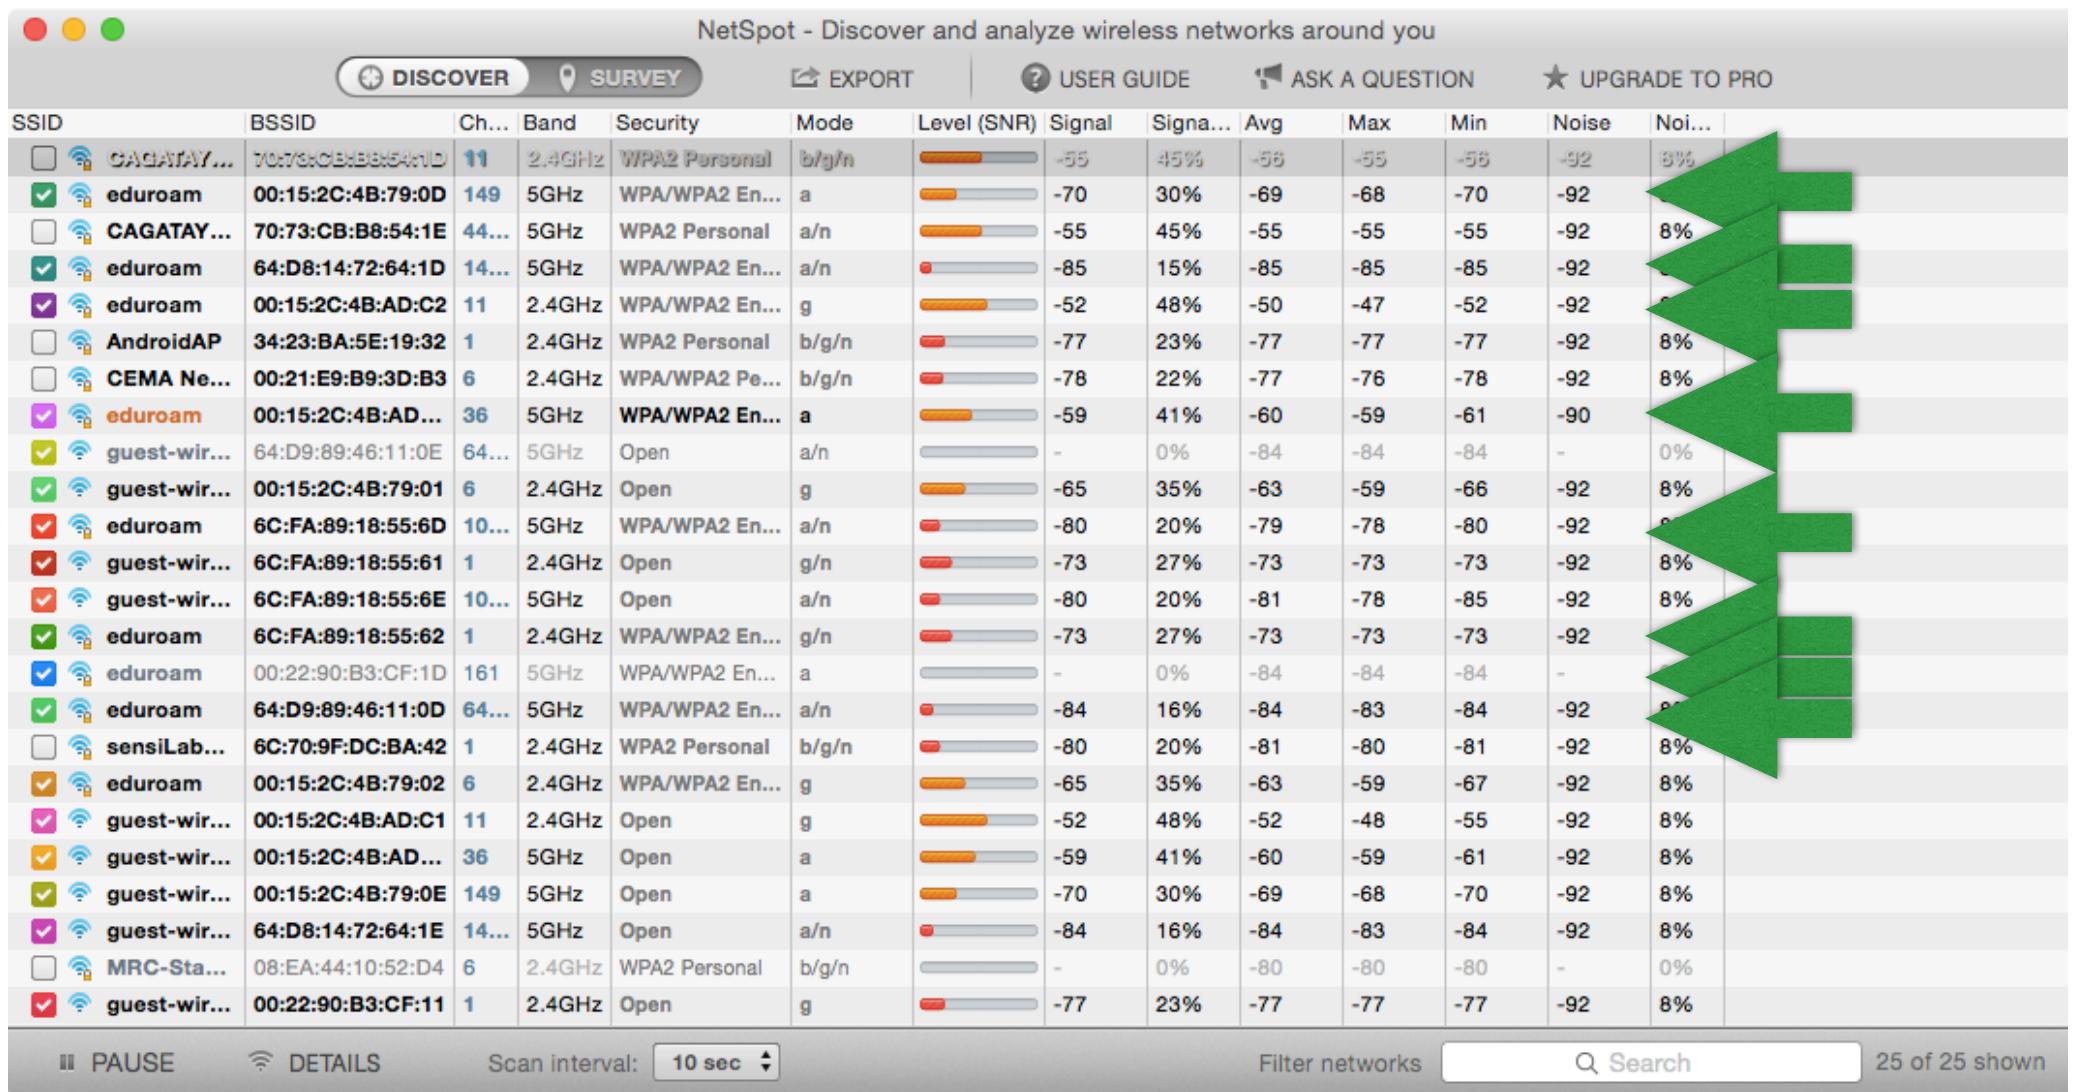


Extended Service Set (ESS)

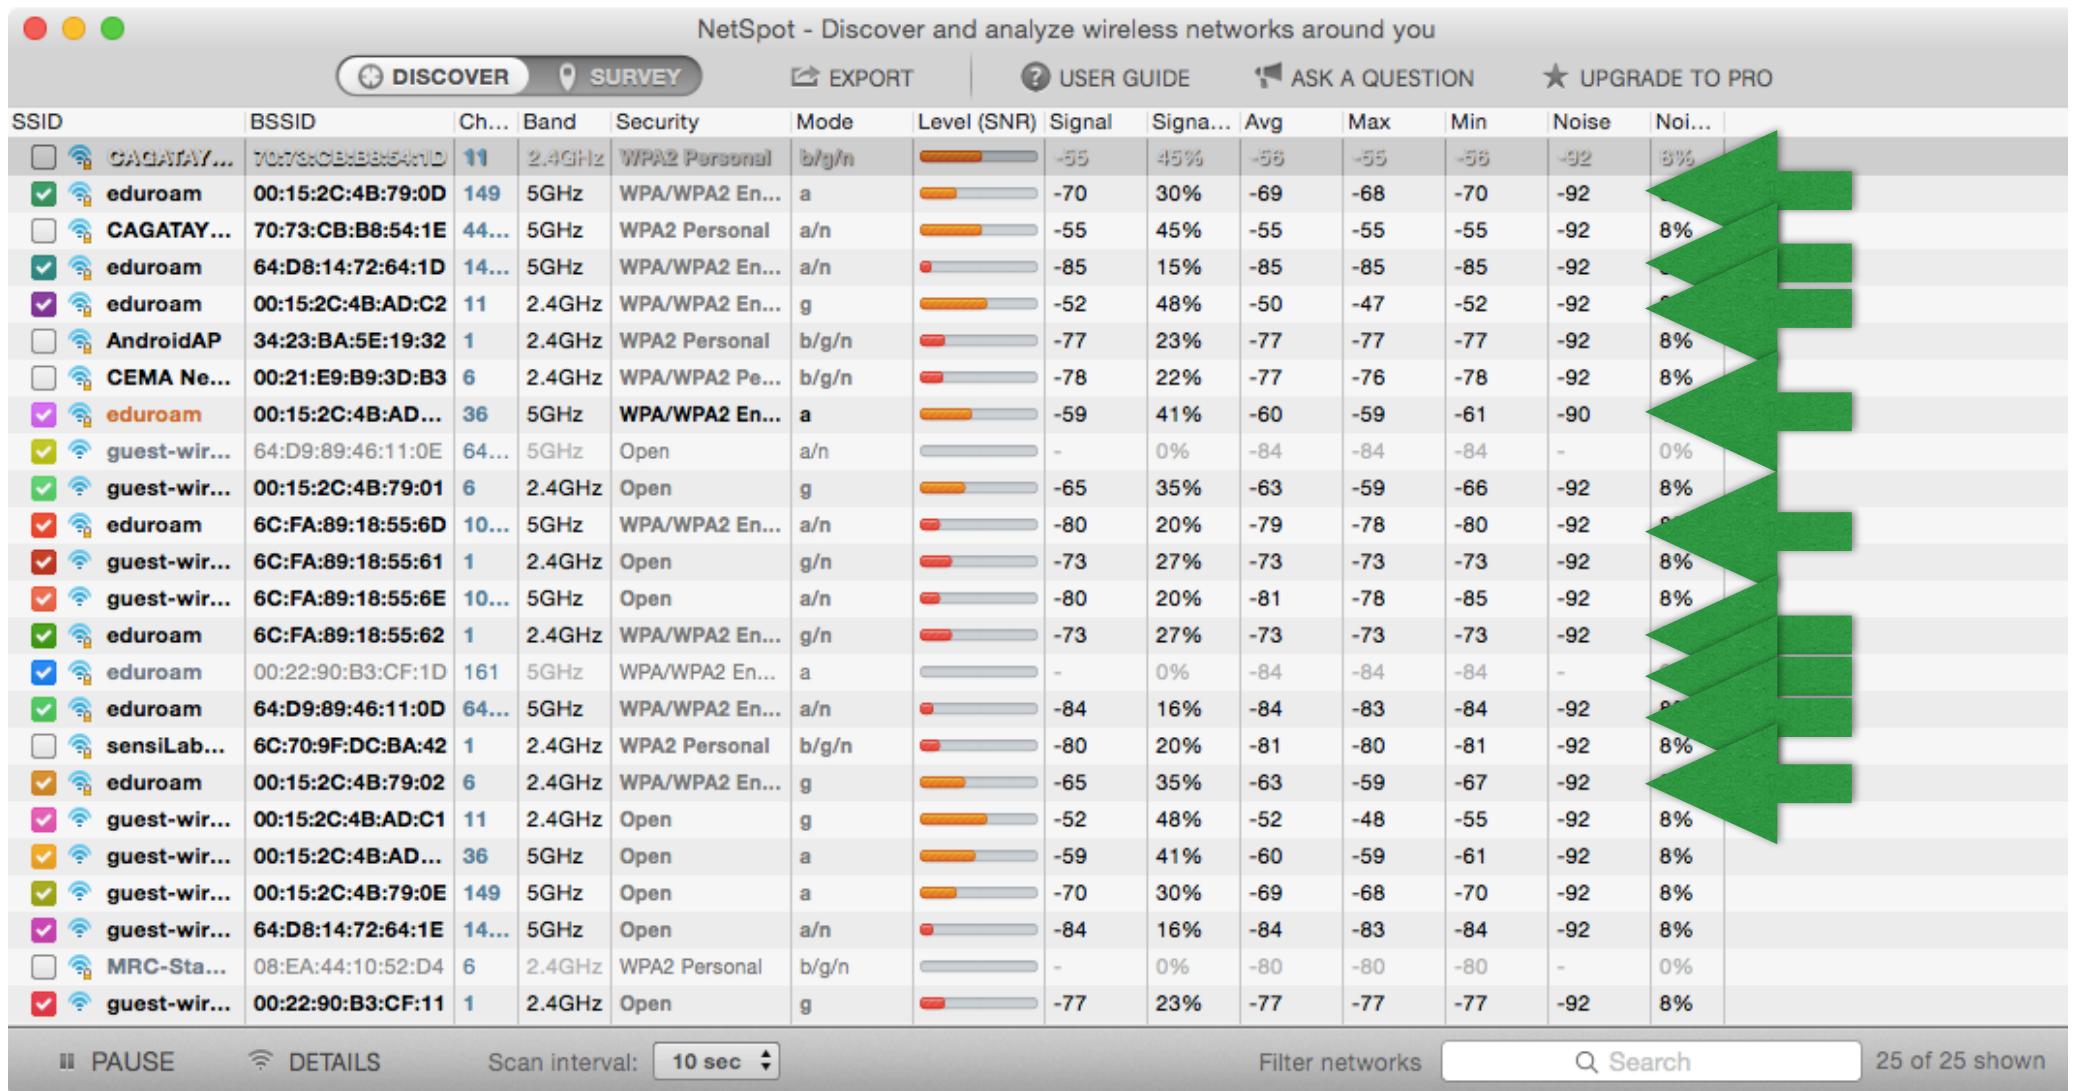


Planning Example

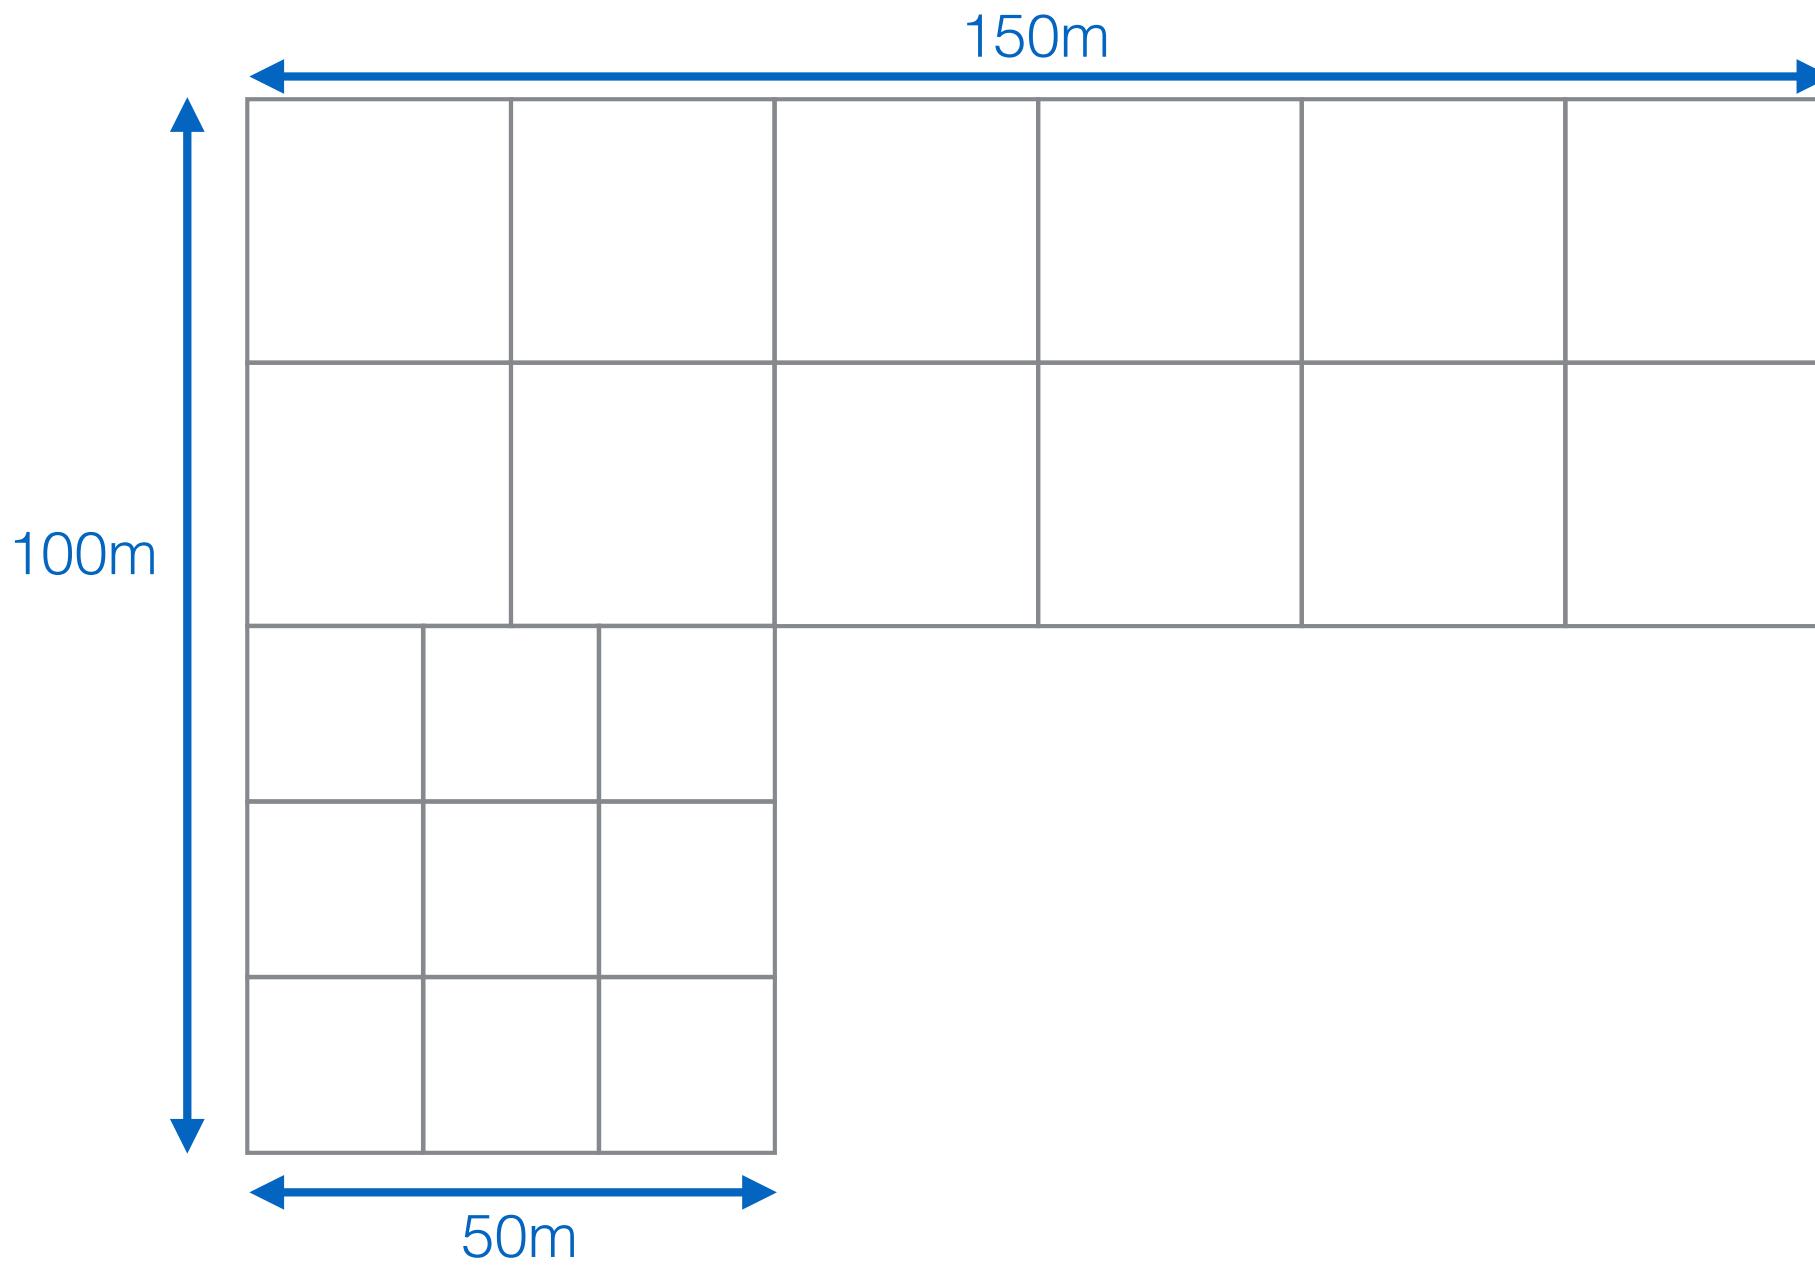


Planning Example

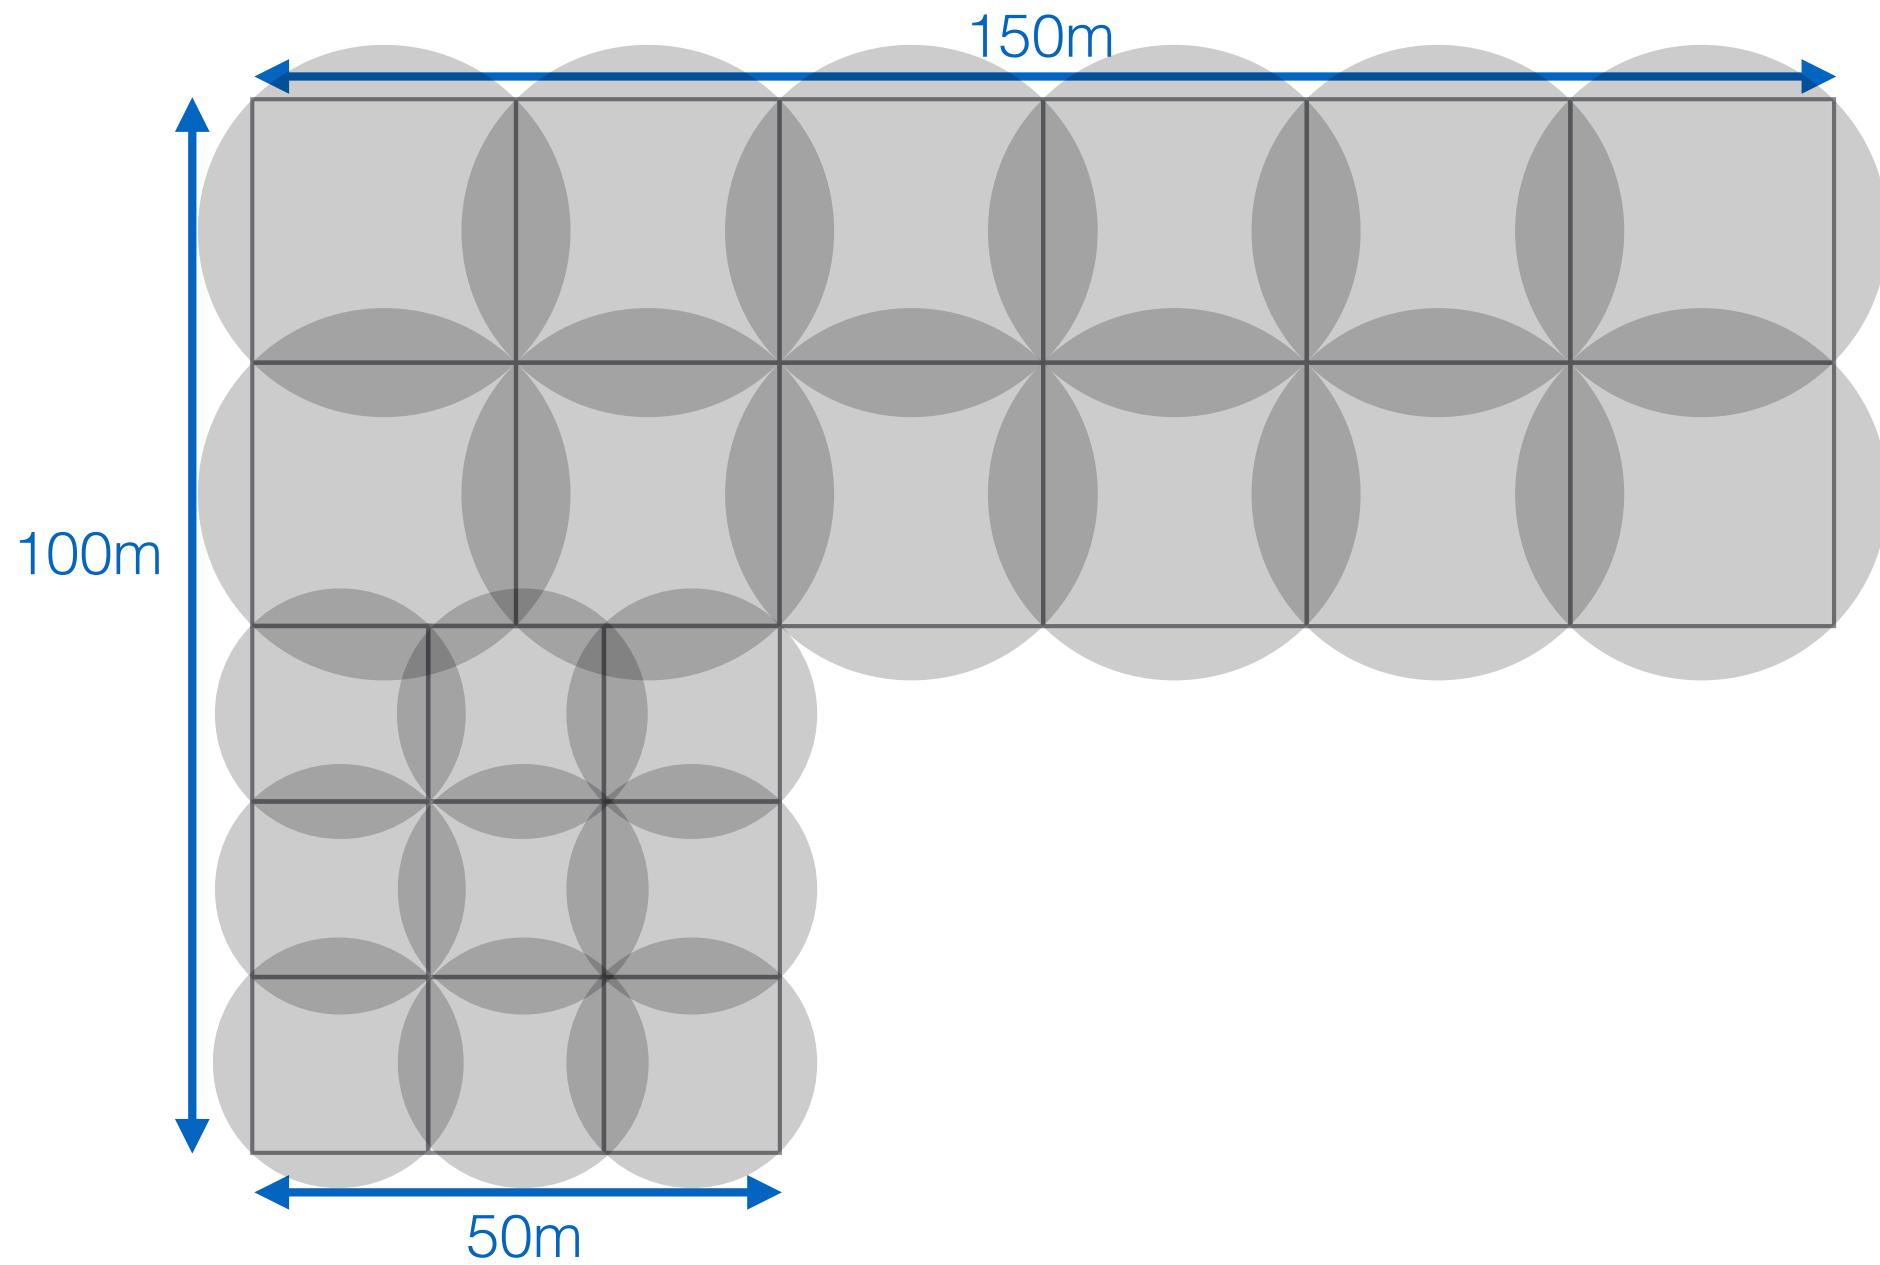


Planning Example

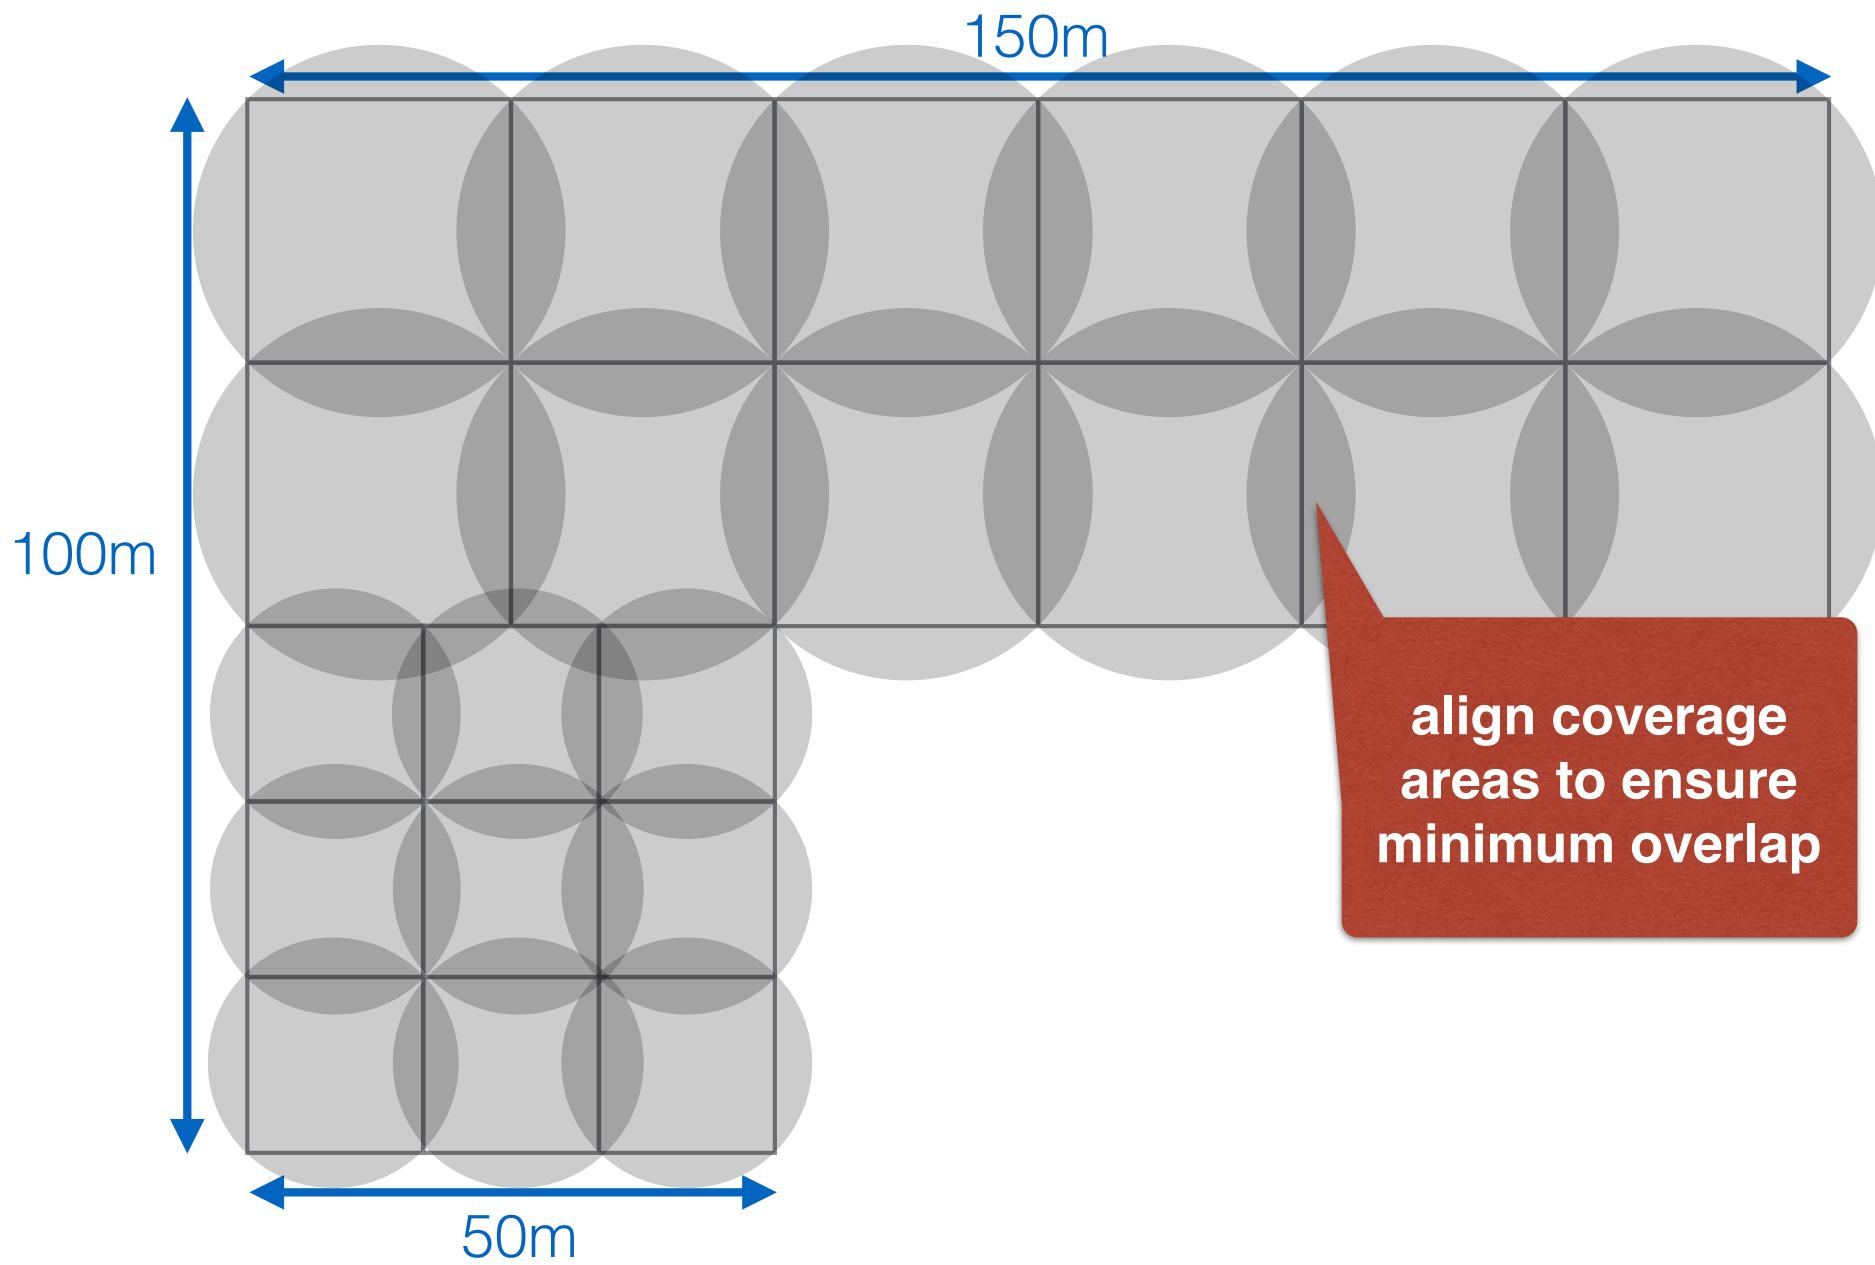


Planning Example

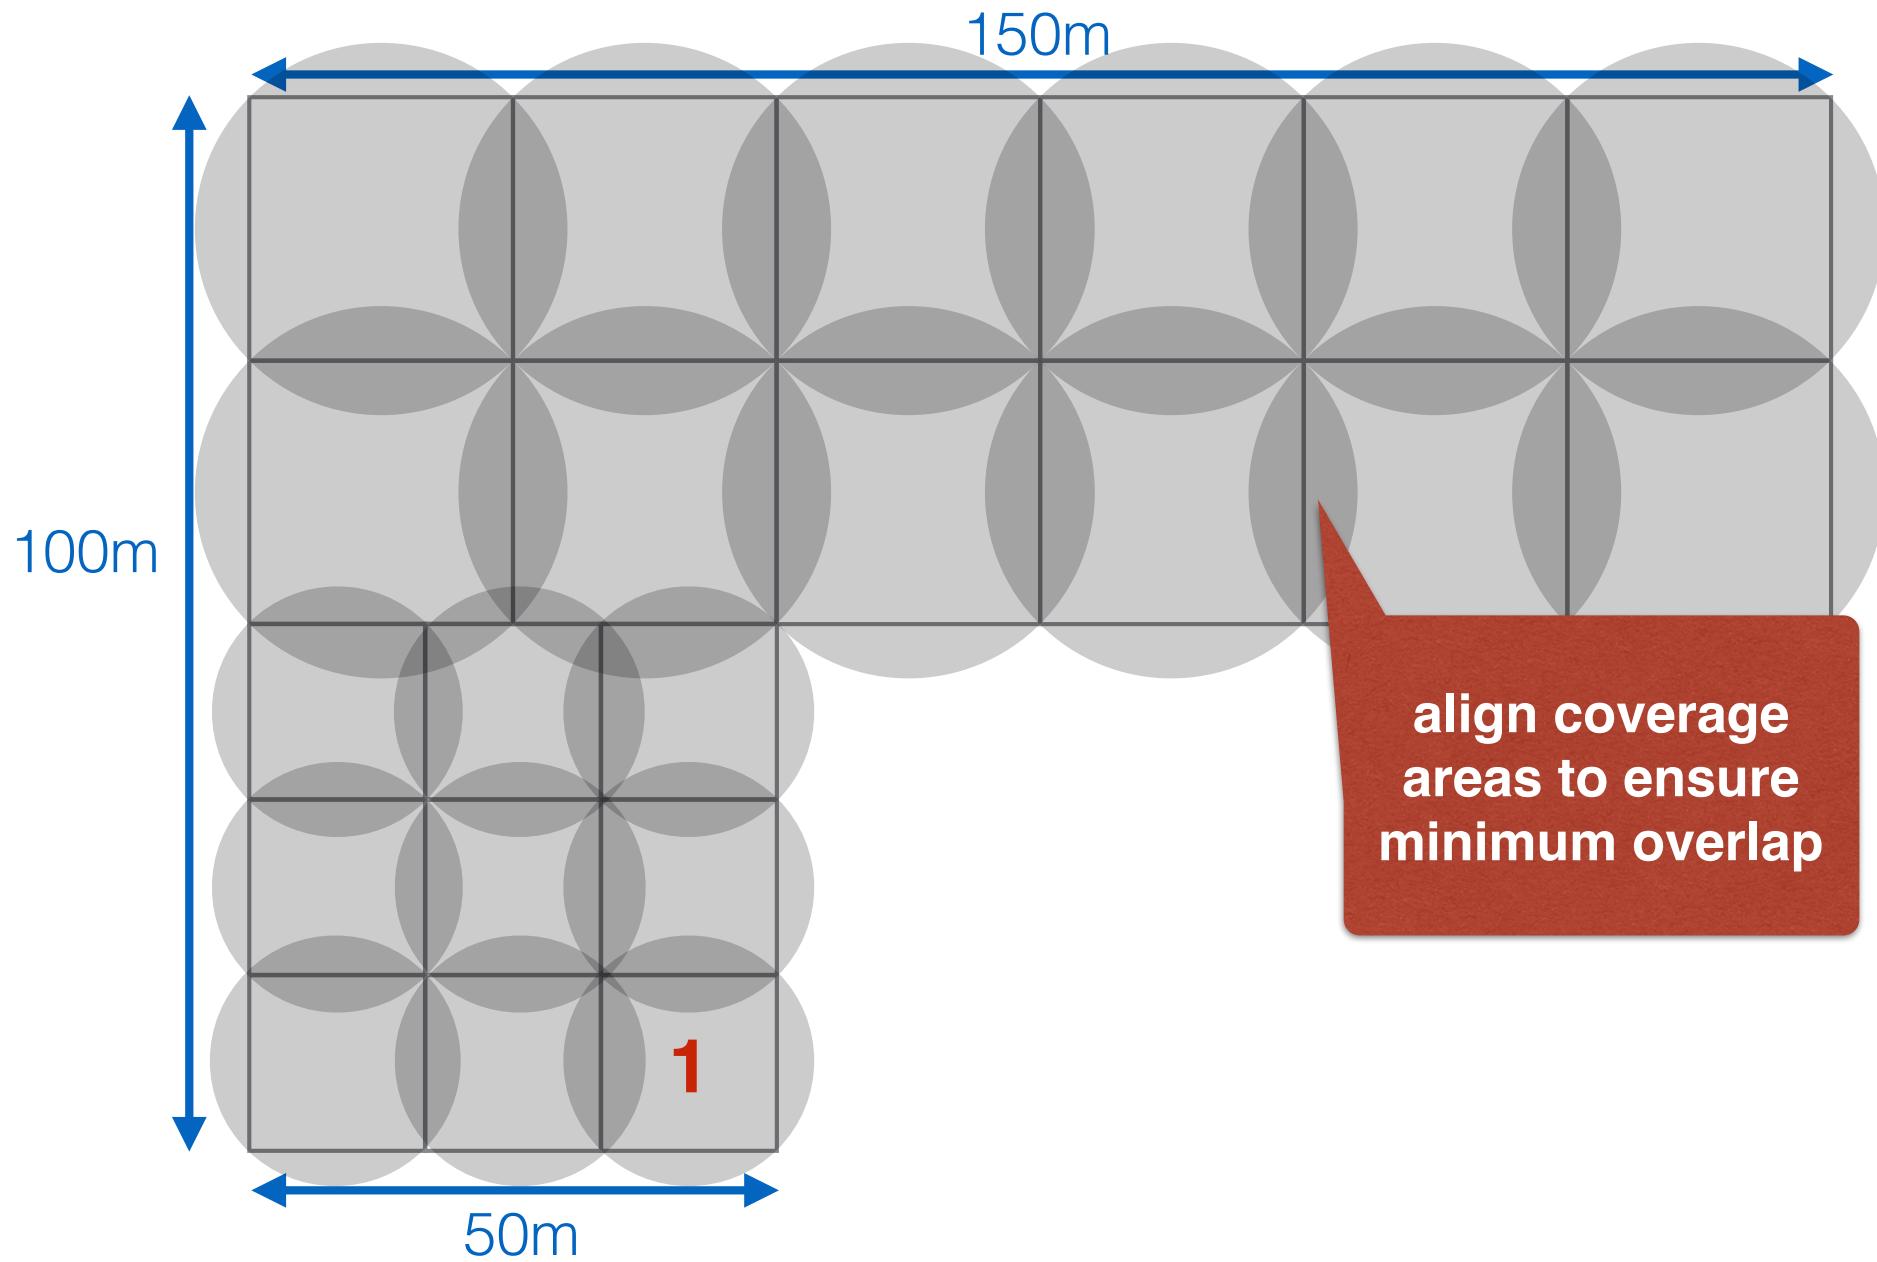


Planning Example

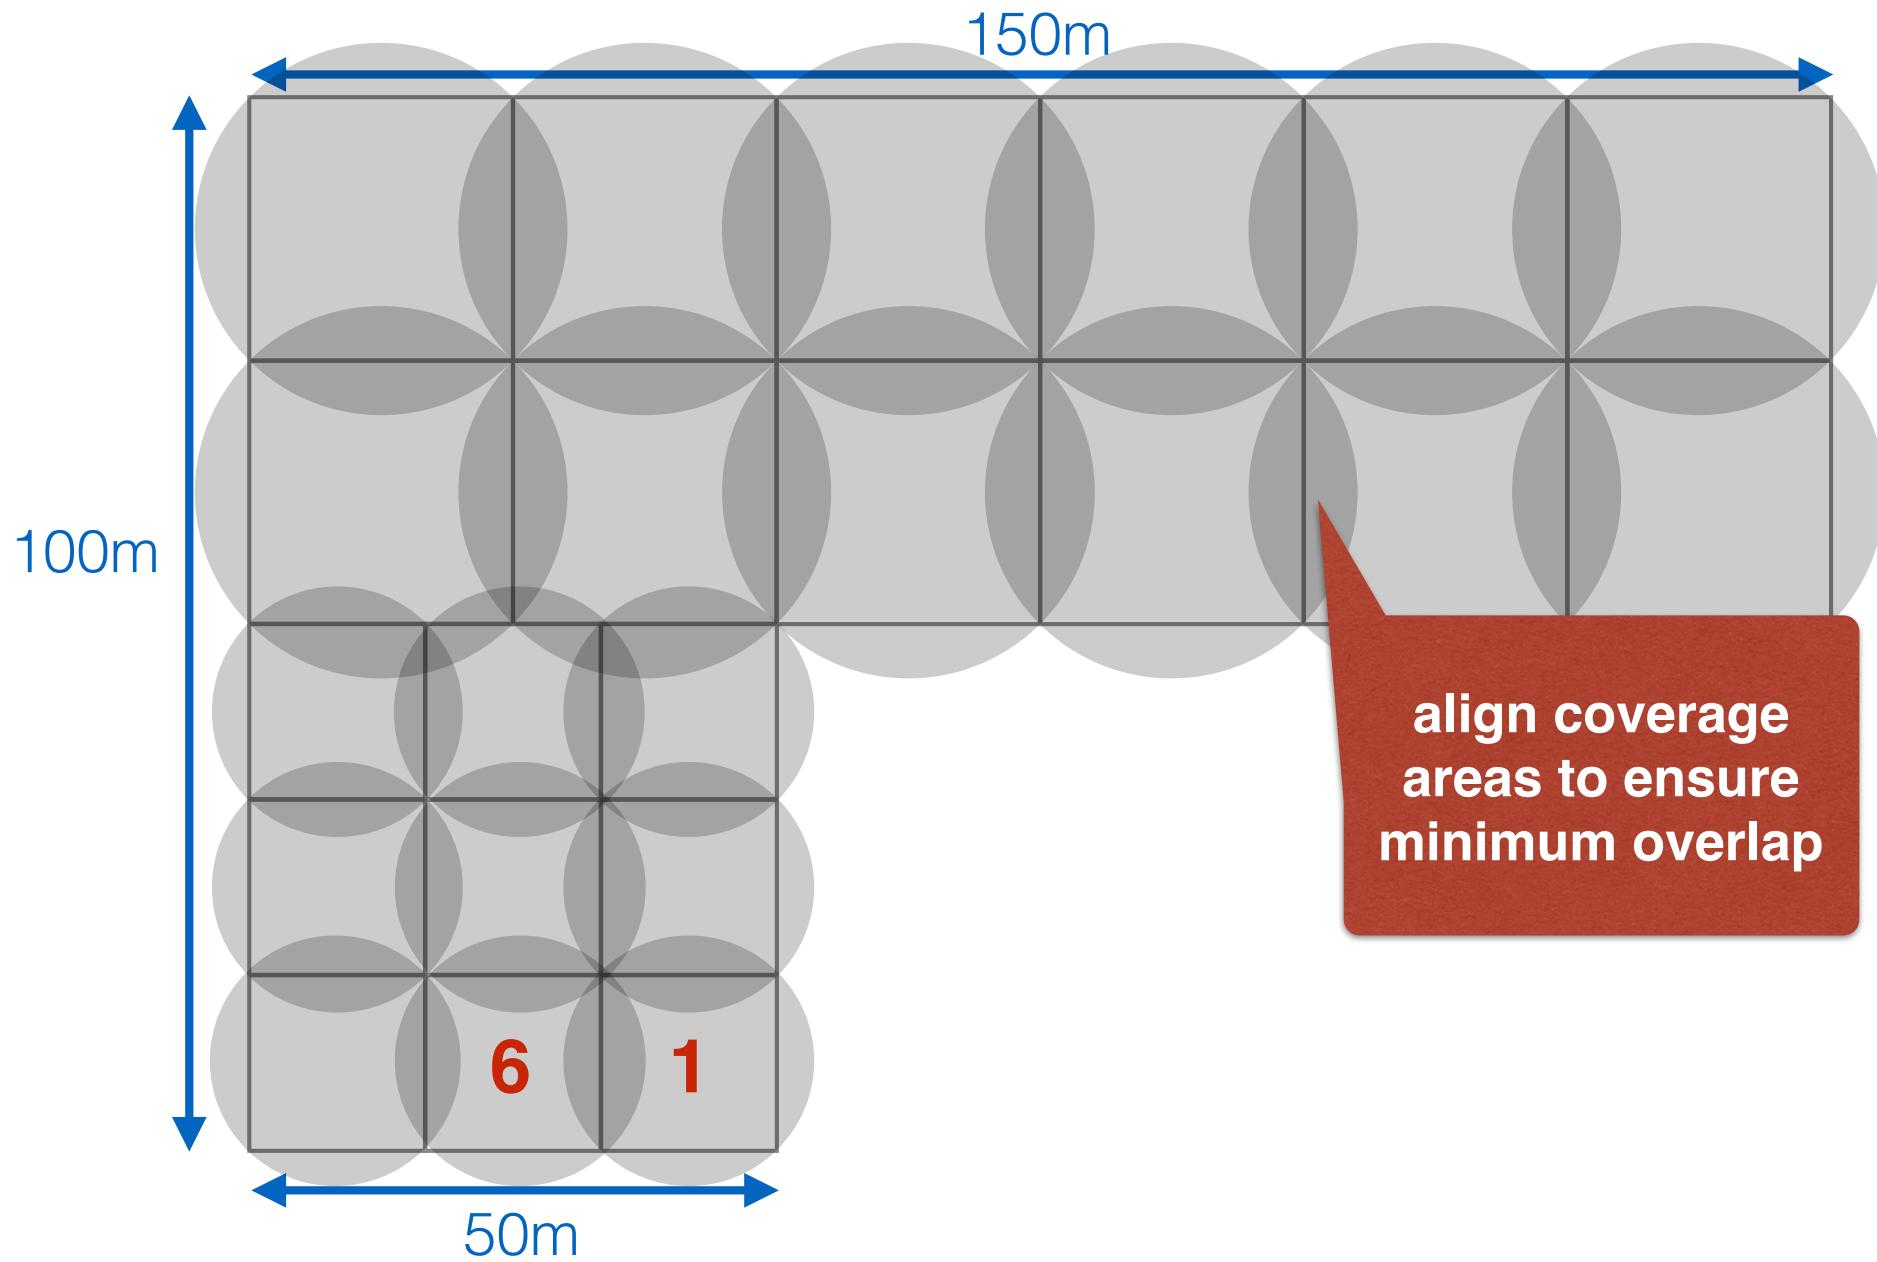


Planning Example

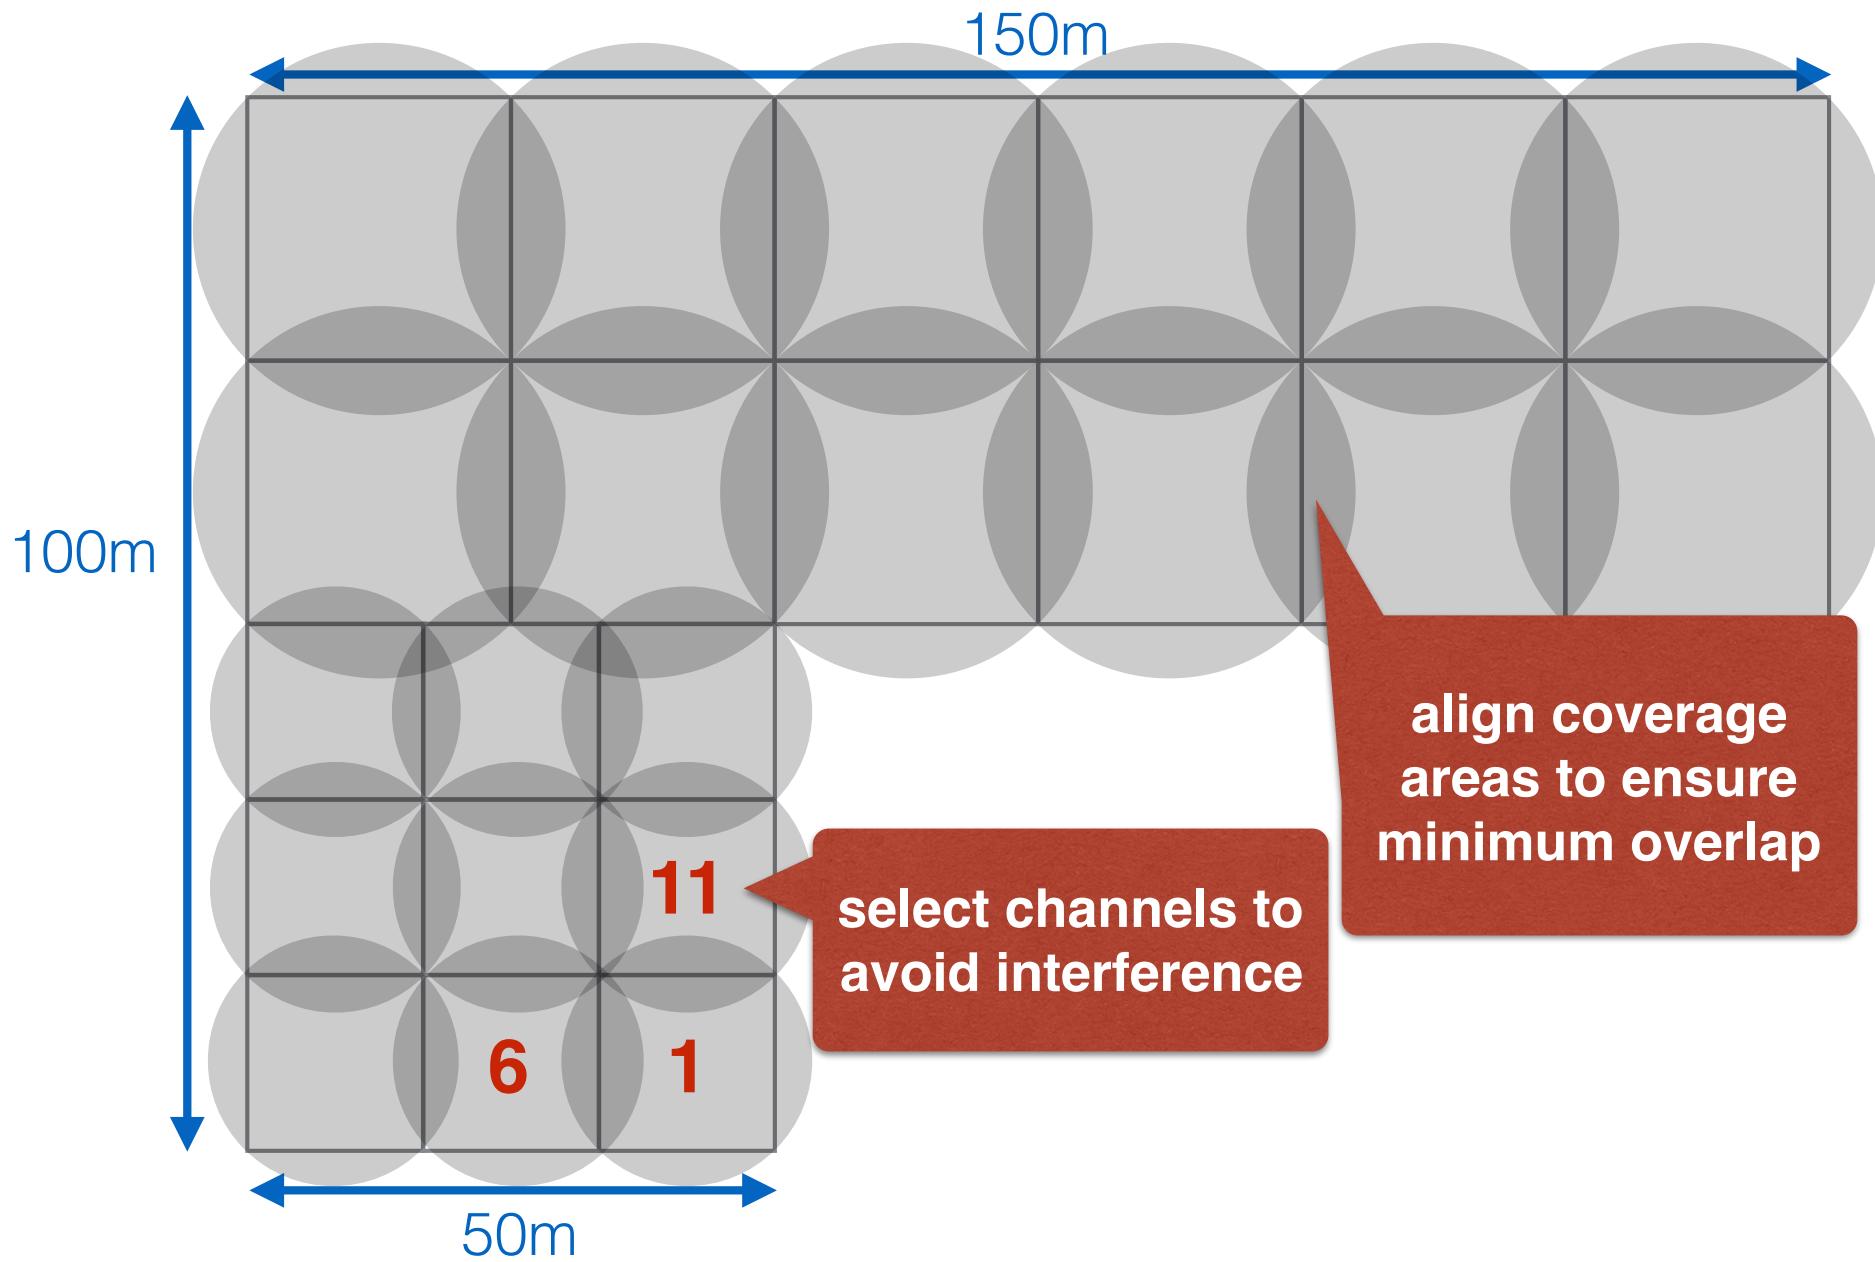


Planning Example

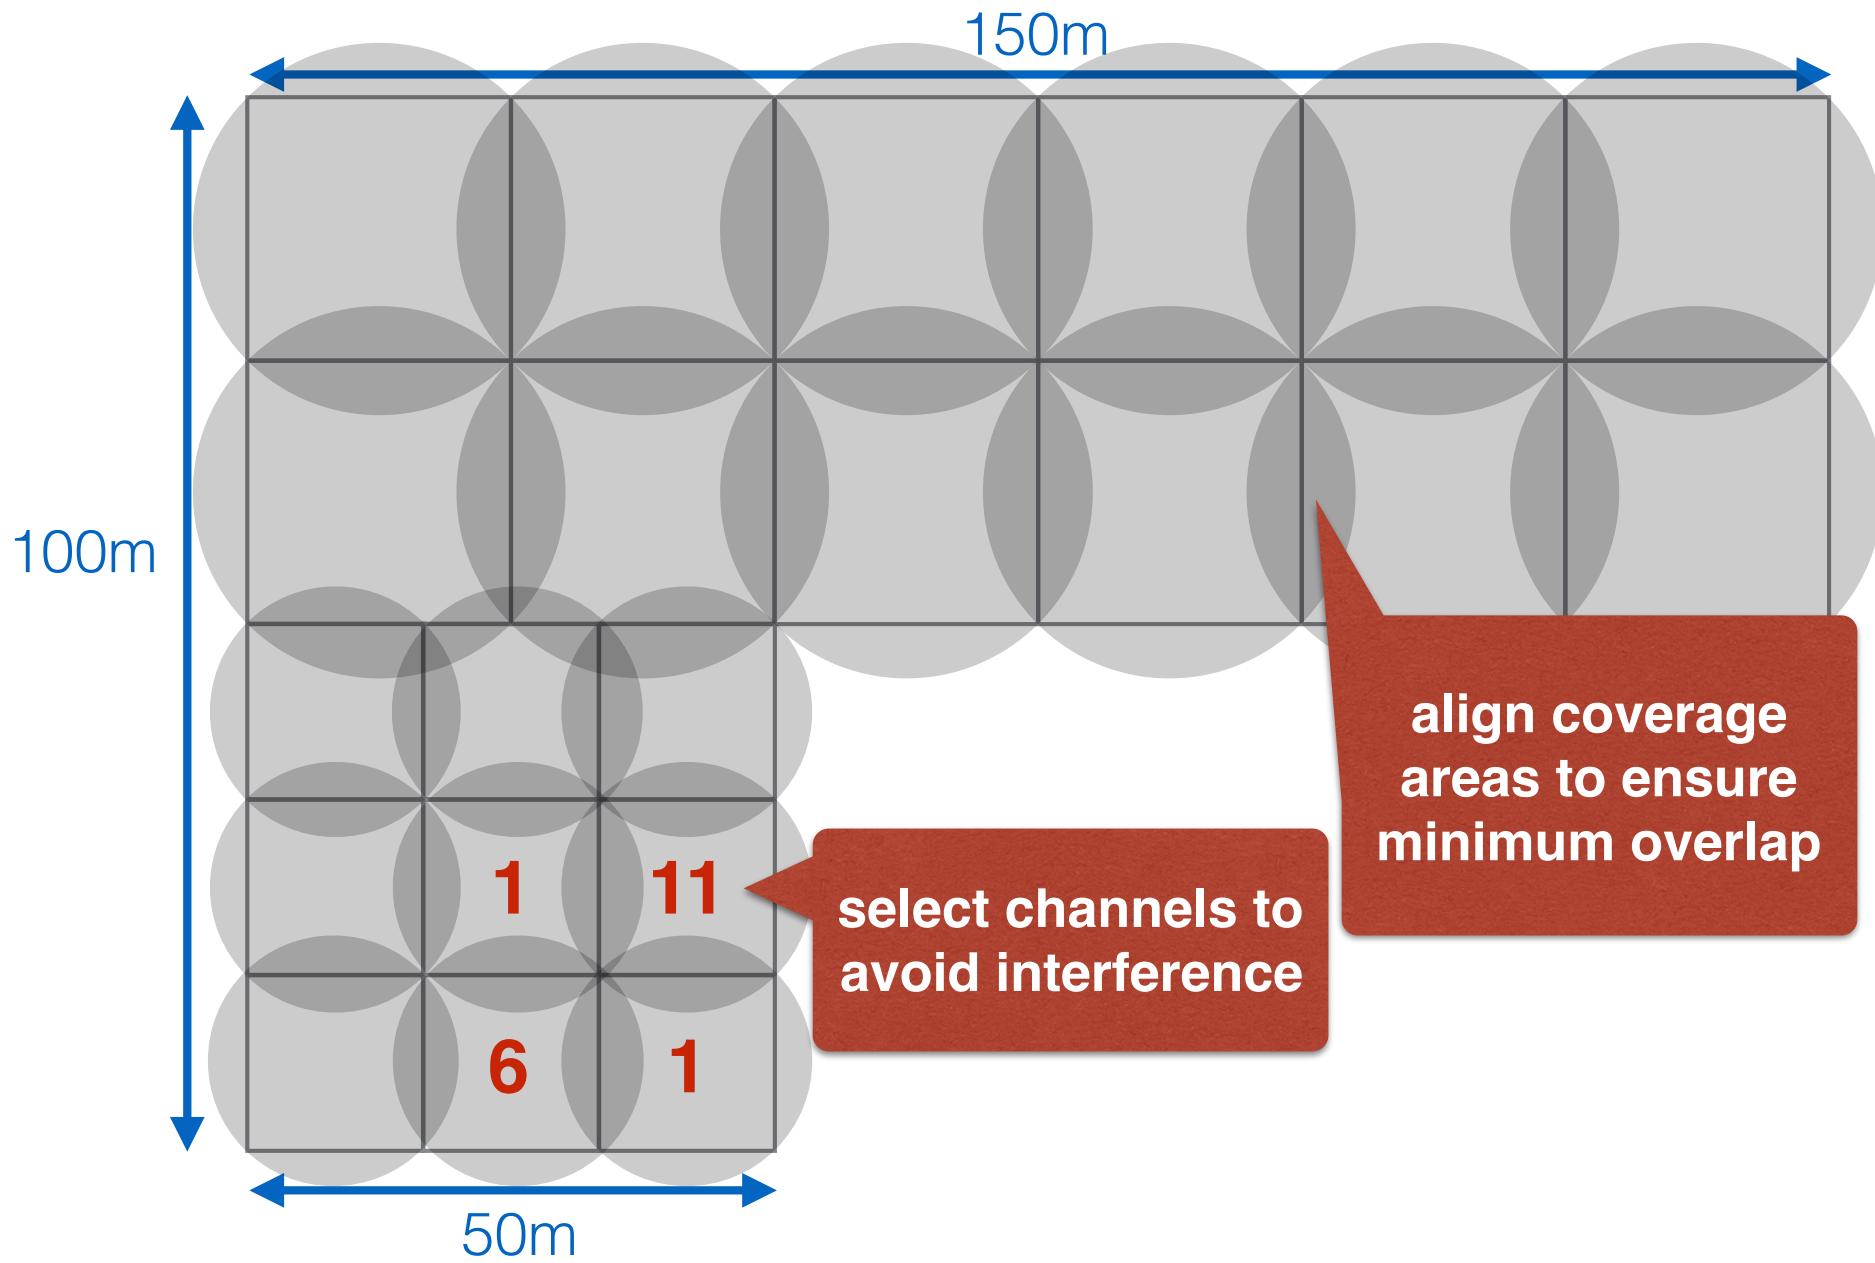


Planning Example

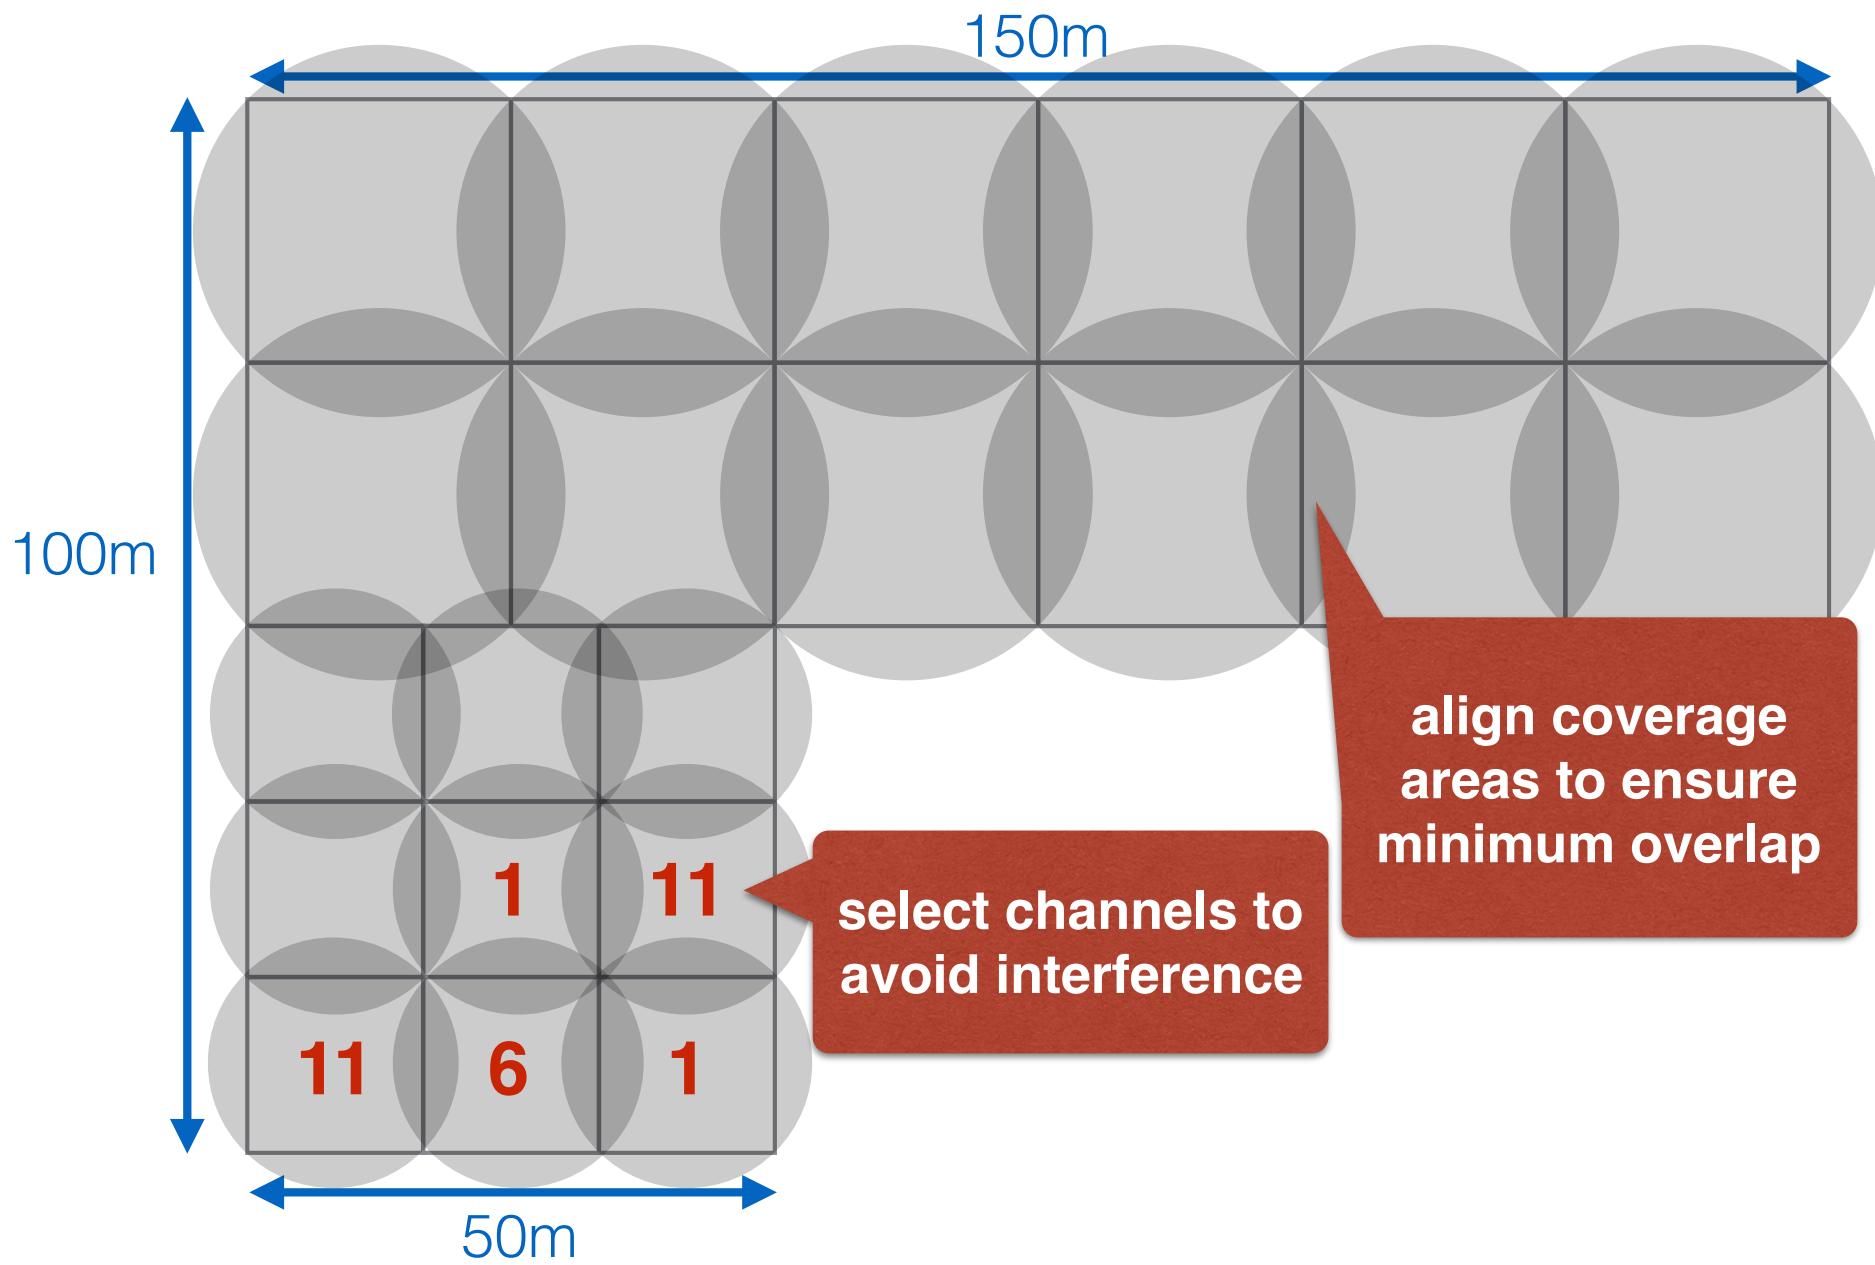

Planning Example

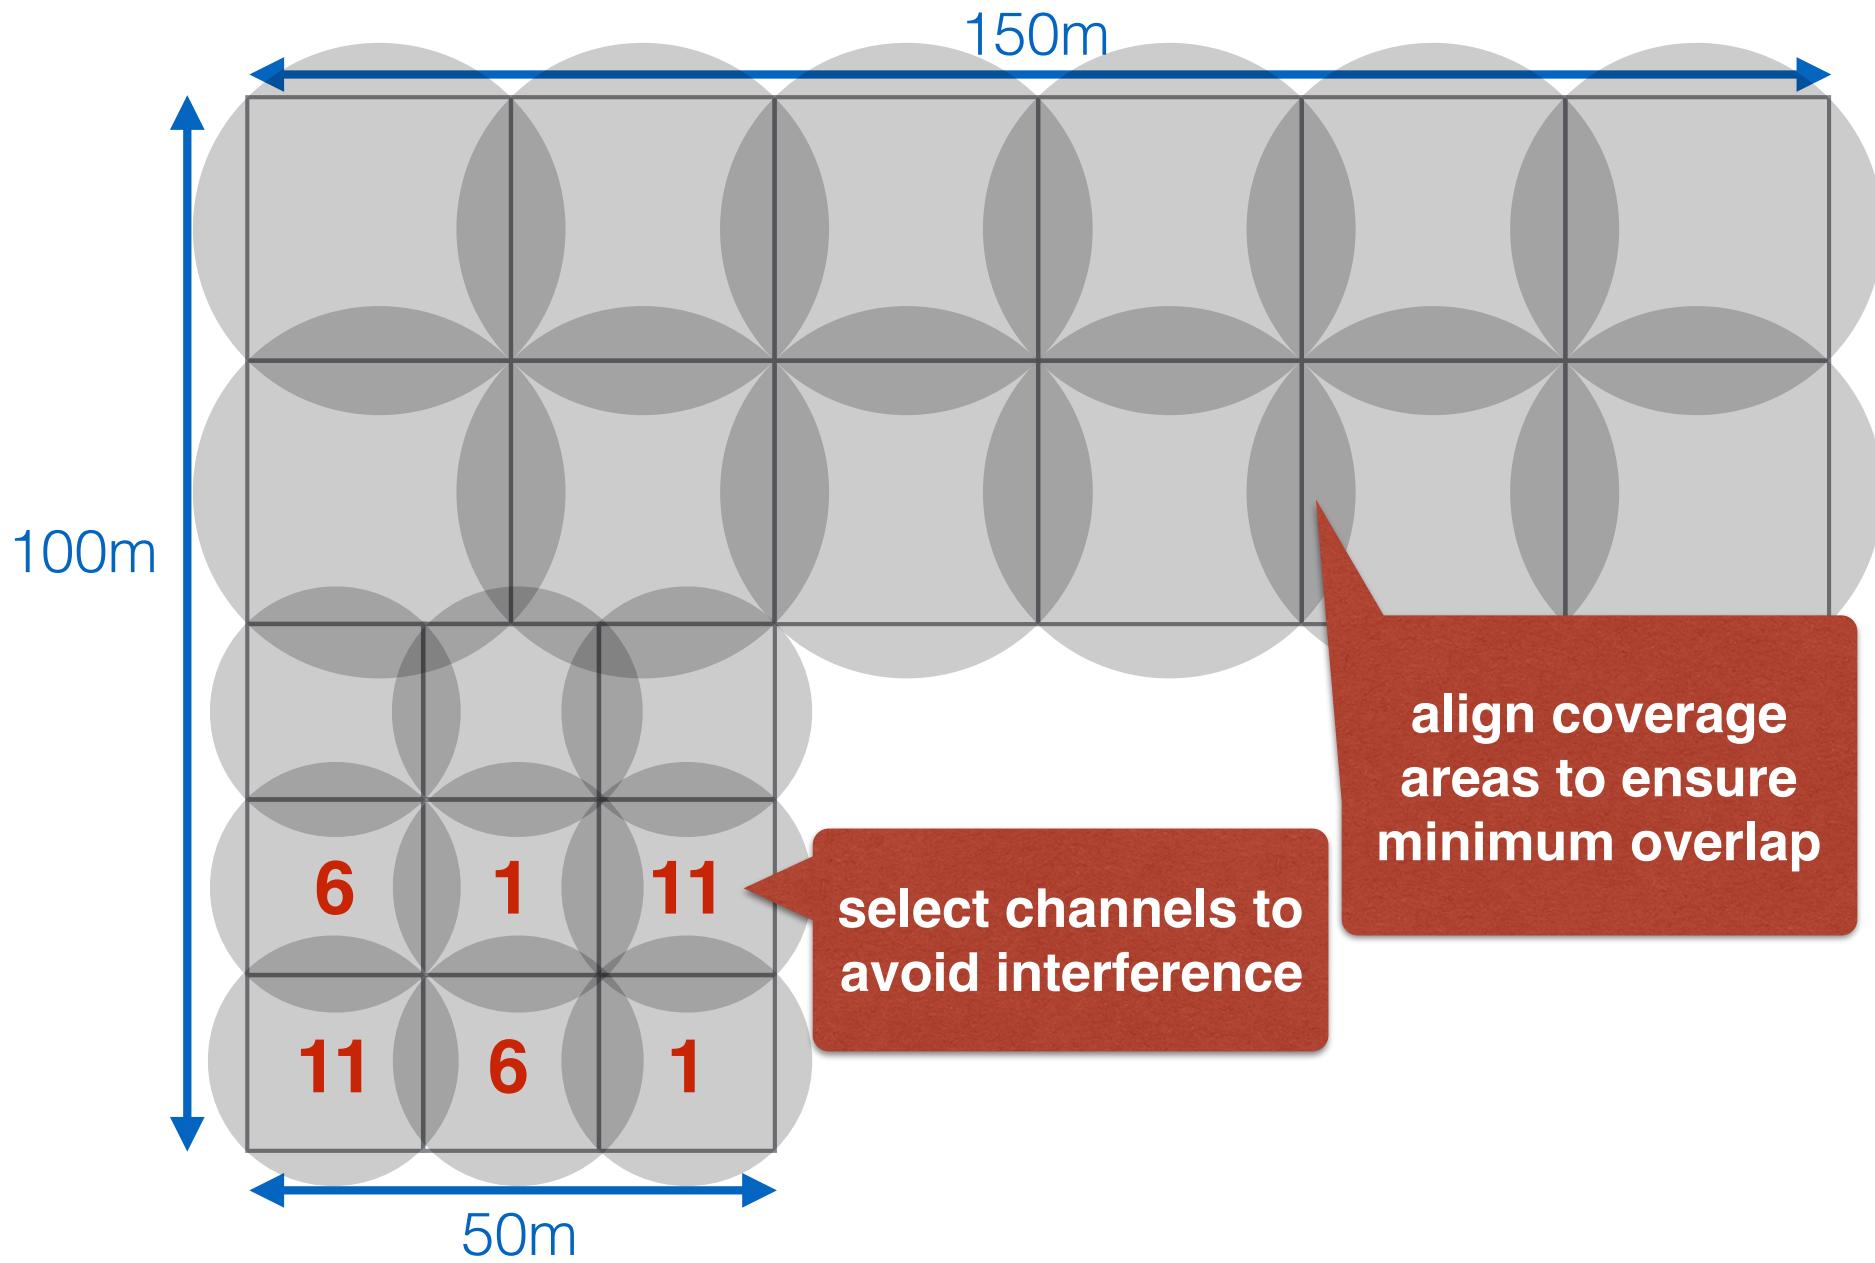


Planning Example

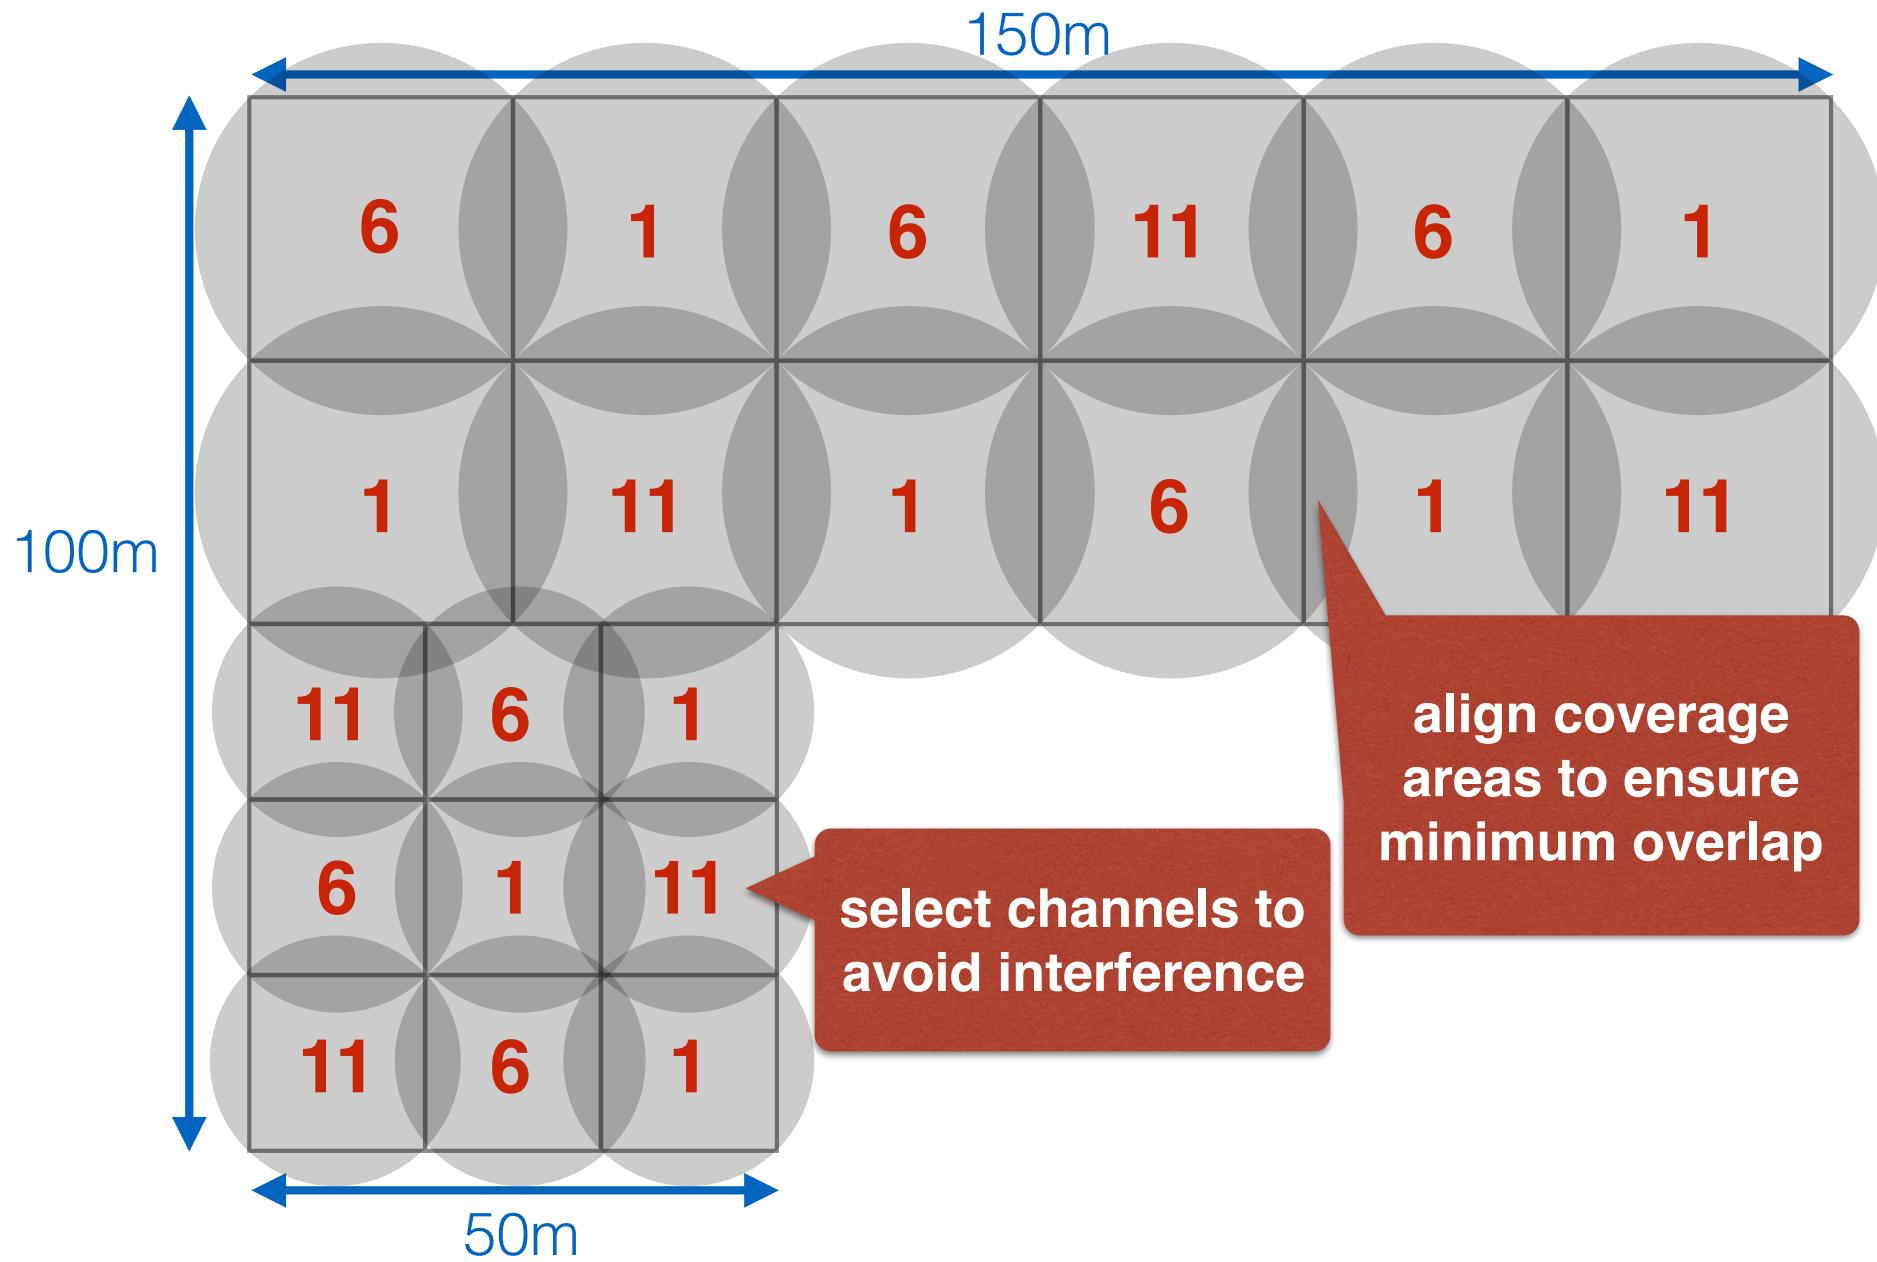

Attenuation

Walls can introduce significant attenuation.

- 3db means signal strength halves
- 6db means 1/4
- these values are for 2.4GHz, attenuation is even higher in 5GHz

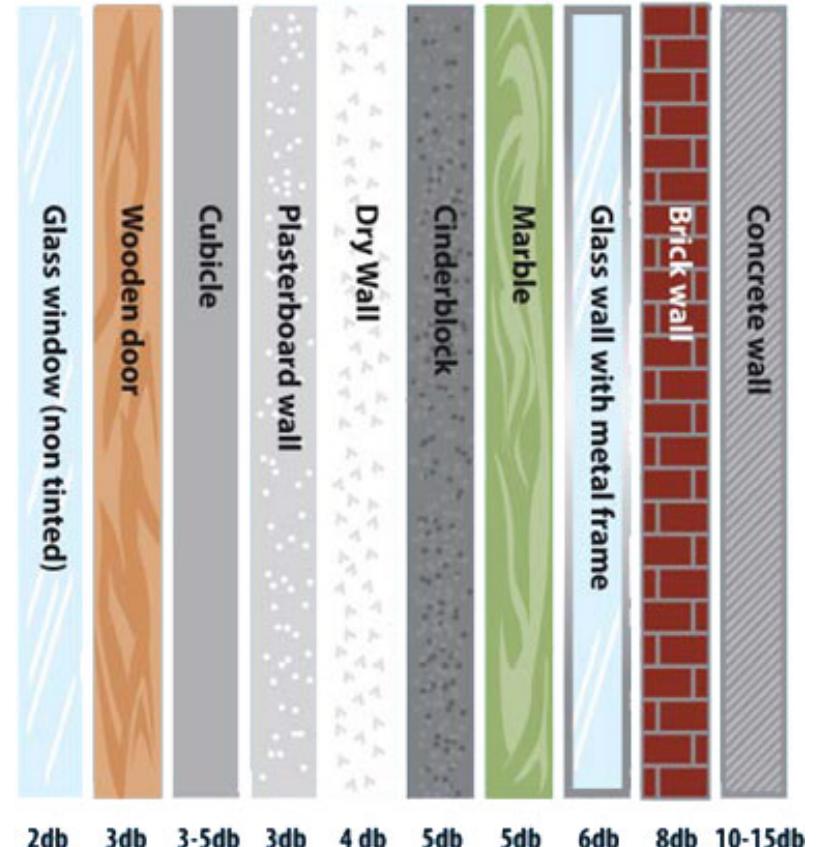

Source: <http://www.liveport.com/wifi-signal-attenuation>

Summary

Physical layer:

- Media: copper cables, optical fibres or radio waves
- modulate digital data onto digital or analog signals

Data link layer:

- Media access control (CSMA/CD and CSMA/CA)
- Ethernet as the dominant LAN technology
- Wireless LANs