


STEREO CLASS-D | PLACEMENT STUDY ONLY

100 x 100 mm existing outline | 4 layers | UNROUTED | NOT FOR FABRICATION

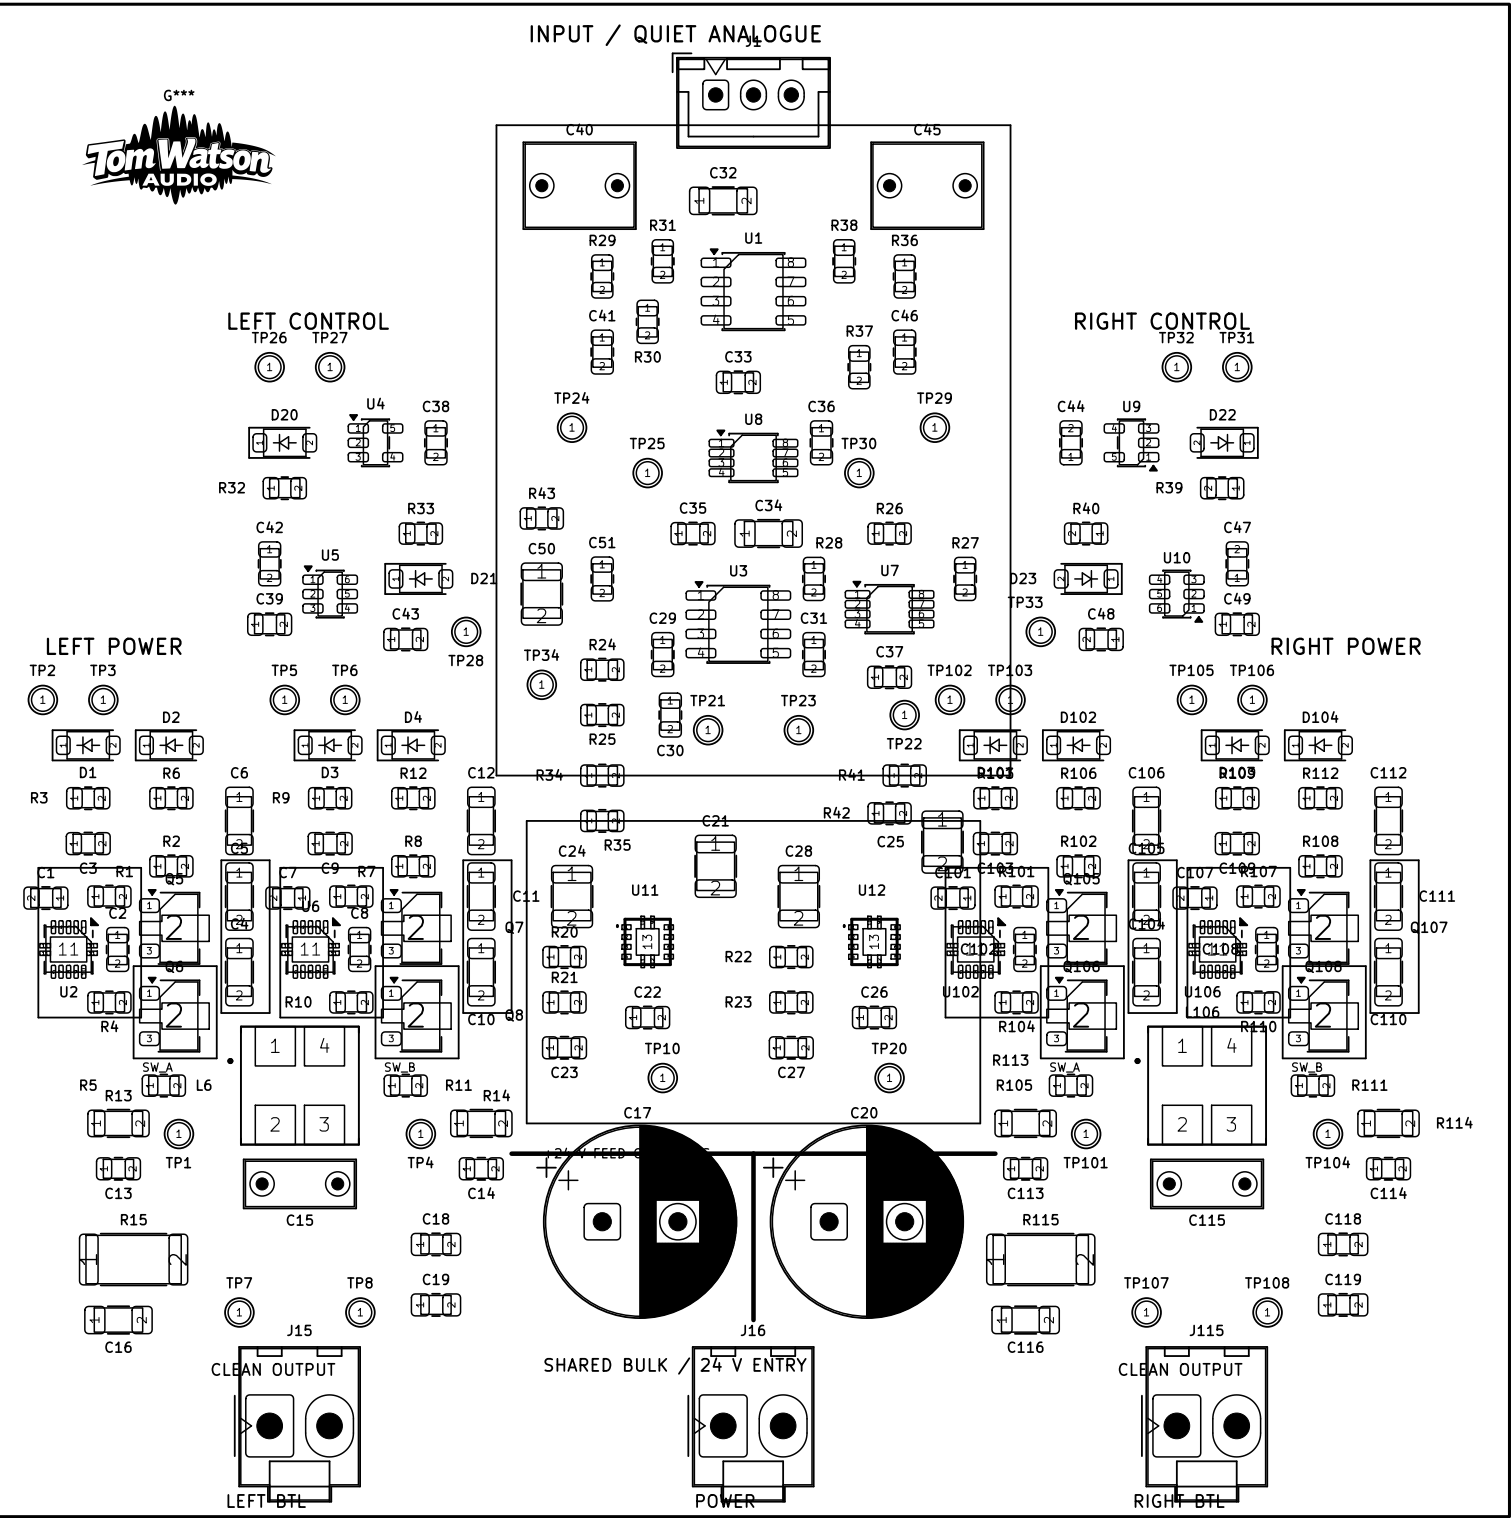

PLACEMENT NOTES (advisory outlines only; no copper or enforced keepouts)

- 1 SW_A / SW_B boxes: compact switching—node corridor; keep quiet traces out.
- 2 Suggested L2 void: only under final SW copper footprint. Do not cut return paths.
- 3 Tall boxes beside MOSFETs: local PVDD HF loop. C100n nearest, then C1u / C10u.
- 4 Driver boxes: HO/HS and LO/VSS gate loops. Reserve separate Kelvin source returns.
- 5 L2: continuous GND reference elsewhere; no analogue/digital plane split.
- 6 L3: symmetric +24 V feeds from central bulk, via lower band into local PVDD caps.
- 7 Keep both speaker terminals floating from GND. Zobel / C330n are after inductors.
- 8 Central box: U11 +12V_GD / U12 +5V_A thermal area; verify package and exposed pads.
- 9 Translated power cells preserve MOSFET/driver orientation; routing is not validated.
- 10 Existing tracks / vias / pours omitted in this COPY only. Production PCB unchanged.