


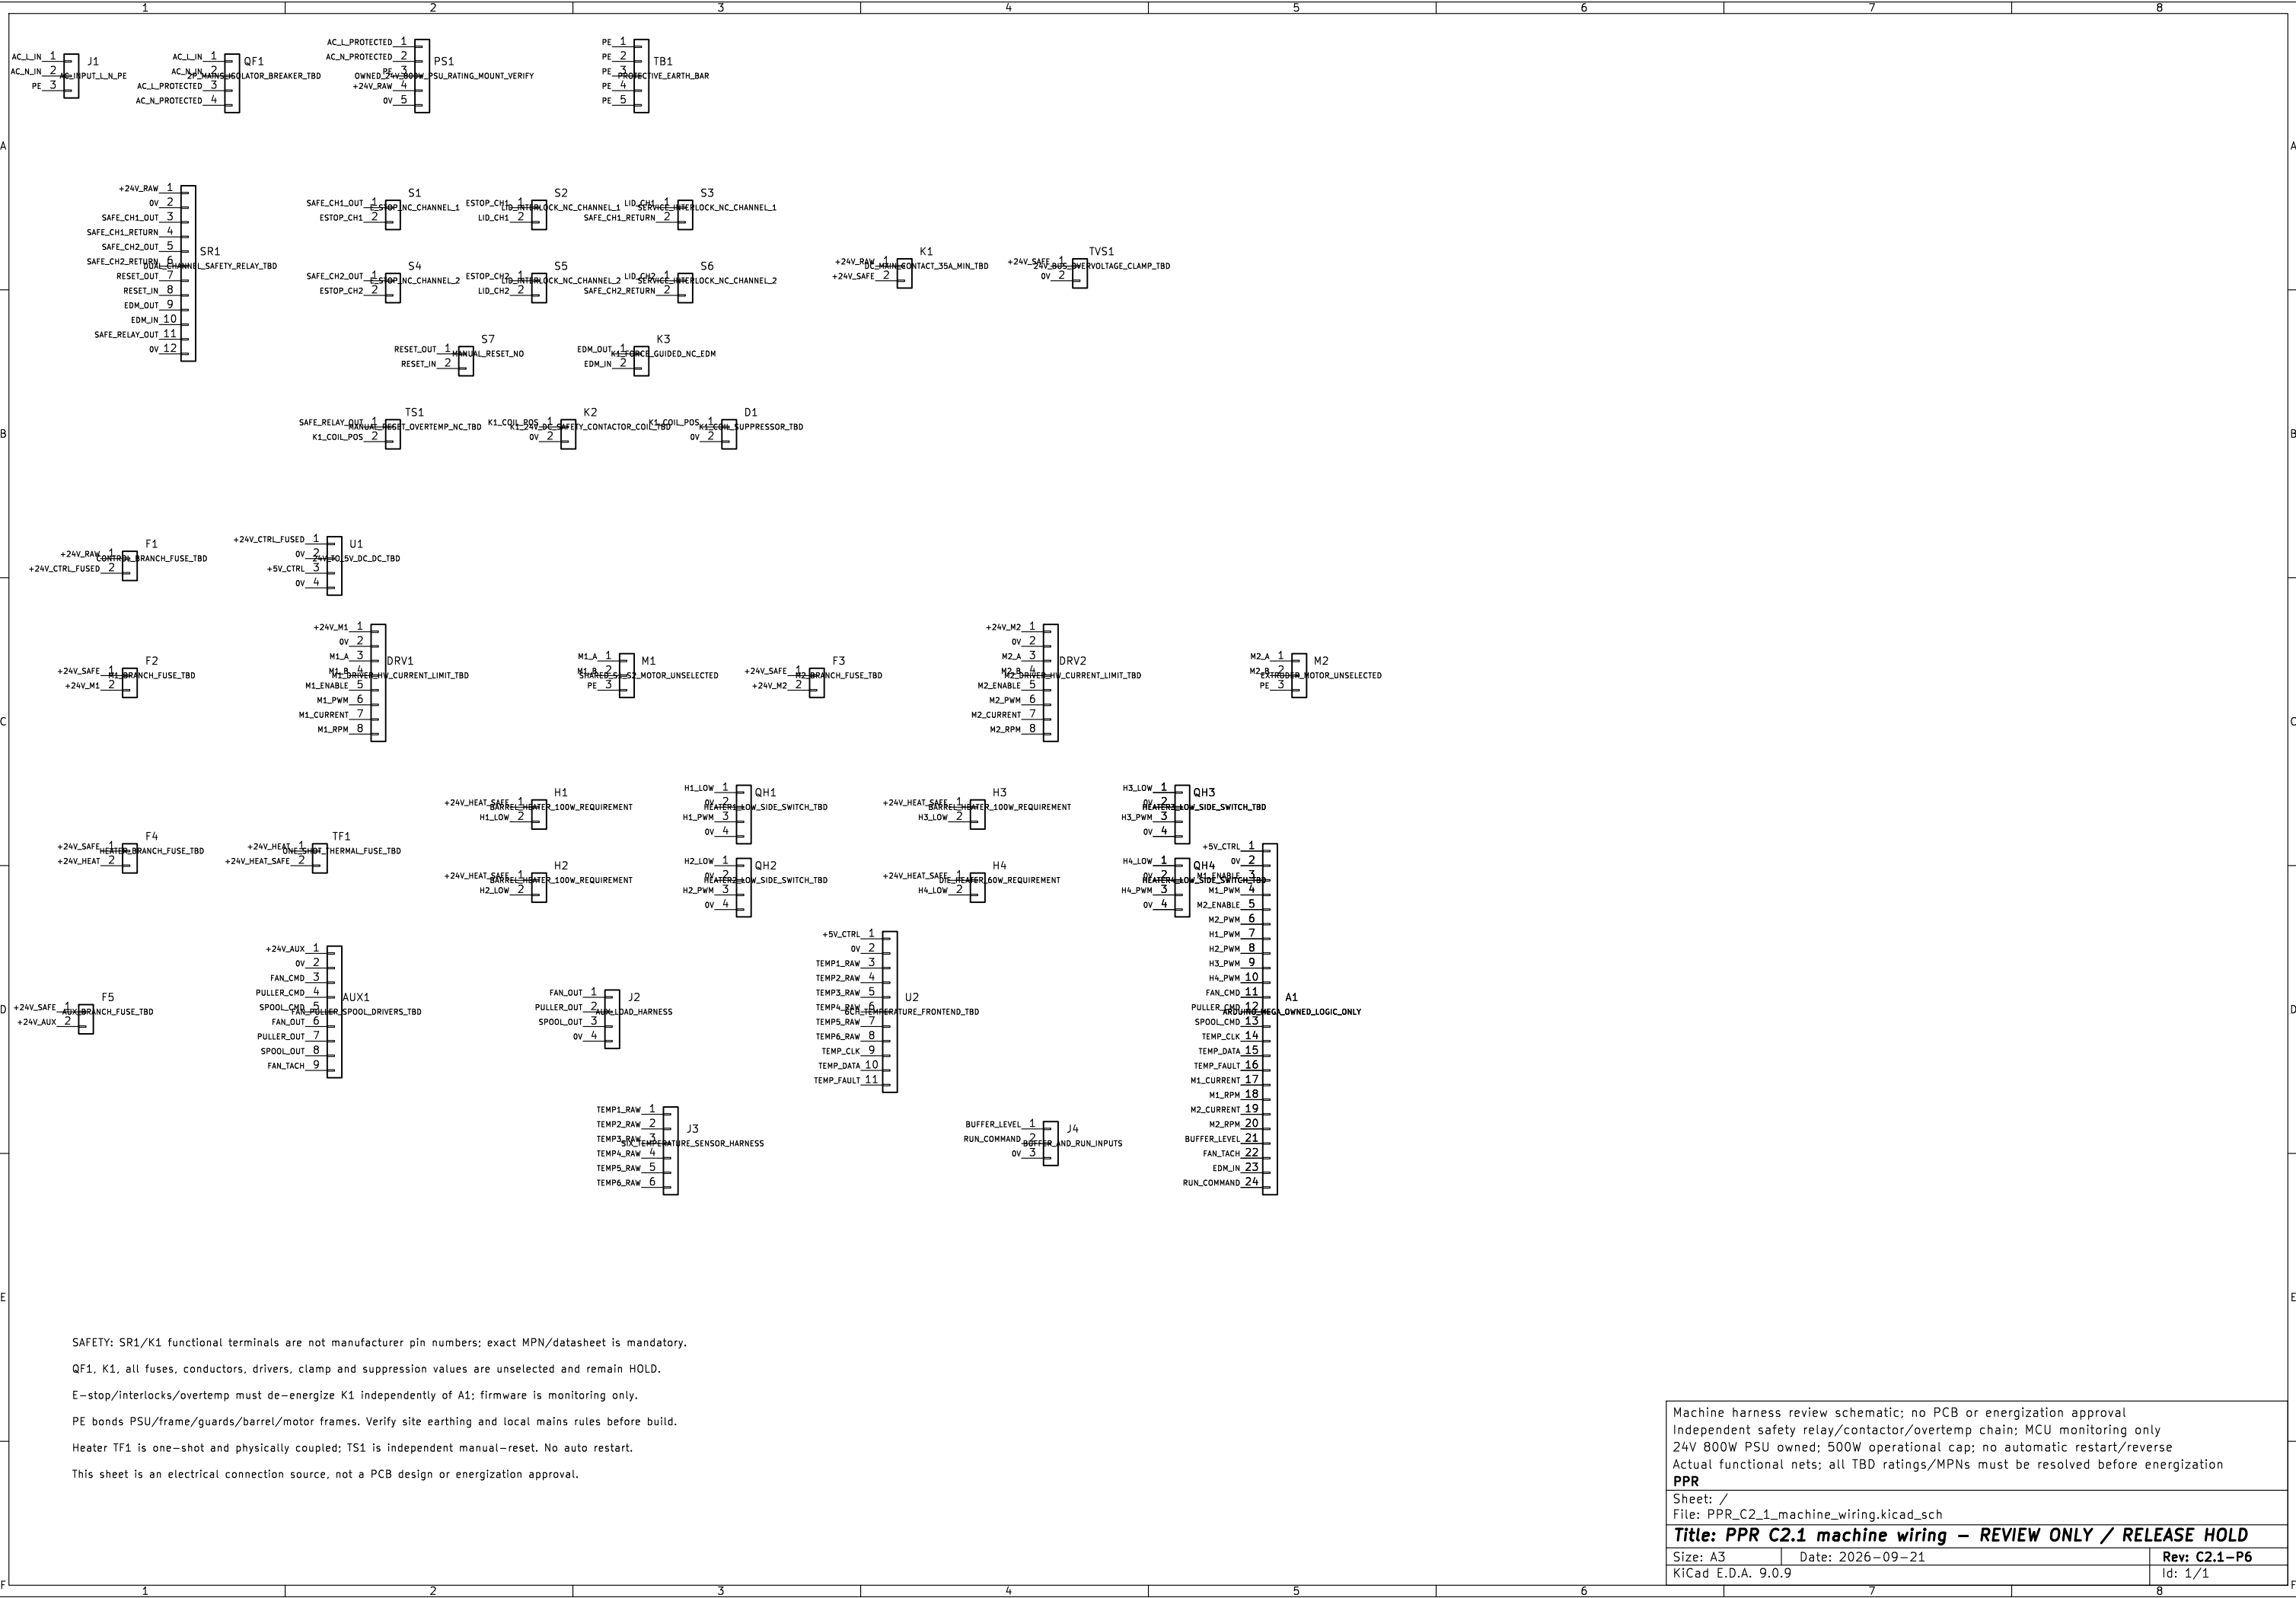

SAFETY: SR1/K1 functional terminals are not manufacturer pin numbers; exact MPN/datasheet is mandatory.

QF1, K1, all fuses, conductors, drivers, clamp and suppression values are unselected and remain HOLD.

E-stop/interlocks/overtemp must de-energize K1 independently of A1; firmware is monitoring only.

PE bonds PSU/frame/guards/barrel/motor frames. Verify site earthing and local mains rules before build.

Heater TF1 is one-shot and physically coupled; TS1 is independent manual-reset. No auto restart.

This sheet is an electrical connection source, not a PCB design or energization approval.

Machine harness review schematic; no PCB or energization approval		
Independent safety relay/contactator/overtemp chain; MCU monitoring only		
24V 800W PSU owned; 500W operational cap; no automatic restart/reverse		
Actual functional nets; all TBD ratings/MPNs must be resolved before energization		
PPR		
Sheet: /		
File: PPR_C2_1_machine_wiring.kicad_sch		
Title: PPR C2.1 machine wiring – REVIEW ONLY / RELEASE HOLD		
Size: A3	Date: 2026-09-21	Rev: C2.1-P6
KiCad E.D.A. 9.0.9		Id: 1/1