
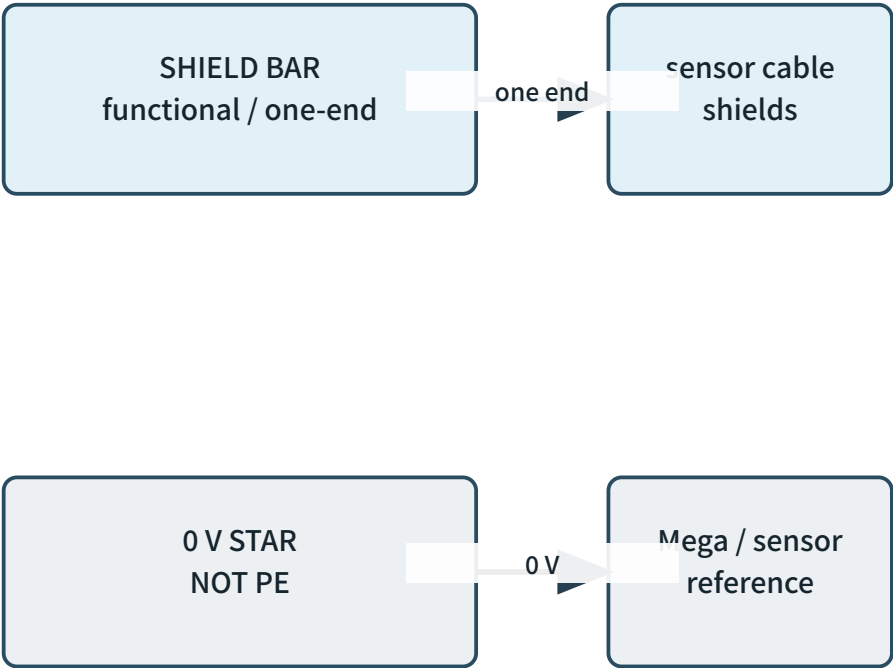


grounding bonding

protective earth and functional shield/reference are separate

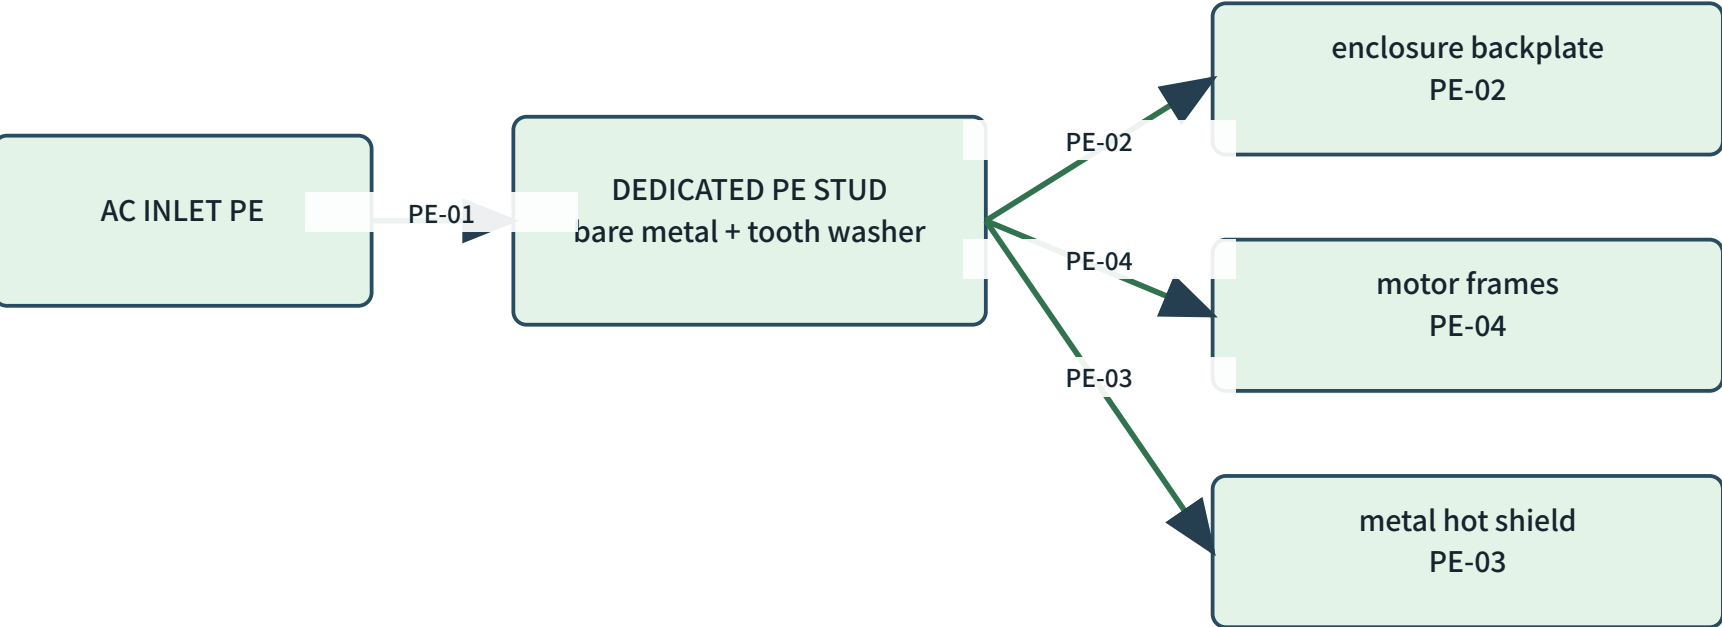

- Measure each PE bond; paint, anodizing and loose hardware are not valid bond paths.
- Never use a shield or logic 0 V as PE; size and test per local code.