

RETRO

Launcher

NEUTRINO
BY MAXIMUS32

 **RETROARCH**
Port by fjtruji

 **ENCELADUS**
by DanielSant0s

POPStarter
by krHACKen
wLaunchELF
ISR mod by israpps



Index

What is RETROLauncher?	3
What do I need to run RETROLauncher?	3
Requirements for correct execution of RETROLauncher	3
What games can I launch with RETROLauncher?	4
List of Emulators/Cores included in RETROLauncher	4
How do I use RETROLauncher?	5
How do I add Games?	8
Location of supported extensions and ROMs paths	8
How to configure RETROLauncher?.....	10
Menu settings in RETROLauncher	10
How do I add covers and screenshots?	15
Image Requirements	15
Image directories	15
How do I add text fonts?	16
Text Font Requirements	16
How do I add wallpapers?	17
Wallpaper Requirements.....	17
How do I add sound effects?	17
Sound Effects Requirements	17
How do I add VMC support to PS2 games?.....	18
Automatic mode	18
Manual mode.....	18
How do I add compatibility modes to PS2 games?.....	19
Automatic mode	19
Manual mode.....	19
How do I run PS2 games from MX4SIO? (Experimental)	20
How do I run PS2 games from HDD? (Experimental).....	21
How do I update RETROLauncher emulators and cores?.....	21
How do I run RETROLauncher from exFAT?	22
Known Issues for RETROLauncher.....	22
Credits.....	25

RETROLAUNCHER

What is RETROLauncher?

RETROLauncher is a graphical launcher for retro games, created entirely in Lua under the Enceladus development environment, in conjunction with Retroarch, POPStarter, Neutrino and wLaunchELF ISR for the execution of games/APPS.

The main objective of creating this program is to provide a friendly, attractive and customizable graphical environment to manage ROM libraries on the PS2. In addition to being able to have all these libraries in one place and with easy access.

RETROLauncher seeks to avoid complex configurations so the configurations are reduced to the minimum possible, just put the ROM and play, however, all the configurations are completely editable if any advanced user wants to modify them they are still there.

What do I need to run RETROLauncher?

RETROLauncher is able to run without any ROMs/ISOs, and will even run if Cores or “.ELF” files are missing. You will be warned if there is a problem finding these files before running games. However, certain guidelines are required for proper running of RETROLauncher.

Requirements for correct execution of RETROLauncher:

- * Place the “RETROLauncher” folder in the root of the USB, you can also place it in other directories, although in the latter case the first time you start RETROLauncher you will have to wait for the Retroarch configurations to be relocated. Once the process is finished you can use RETROLauncher in the placed directory.
 - * If you are going to run RETROLauncher on an “exFAT” formatted USB stick, make sure you have the appropriate drivers on the PS2 Memory Card.
 - * For POPStarter (PS1) you must have the POPS folder in the root of the USB, as well as the binaries necessary for it to run (“IOPRP252.IMG” and “POPS_IOX.PAK” respect name and capitalization), the binaries are not included with RETROLauncher for legal reasons. Only POPStarter is found in the RETROLauncher files.
 - * It is mandatory that when running RETROLauncher there are not two USB drives connected simultaneously to the PS2 USB ports. If RETROLauncher detects the existence of multiple drives in the USB ports the program will not start and will force a restart, as well as if the USB drive is in the second USB port. This is to avoid known problems in RETROLauncher when running and manipulating directories.
 - * To run DVD from the drive, the disc must be placed before running RETROLauncher or it can be placed afterwards. In the latter case, update the list so that the DVD is listed in the PS2/APPS section (once listed, it is necessary to reboot to be able to load another DVD).
 - * RETROLauncher can be run from several different launchers (some of which require some extra steps). The launchers tested were “Free MCBoot”, “wLaunchELF”, “OPL” (requires some extra steps) and “FunTuna”.
-

WARNING: RETROLauncher manipulates directories, reads, writes and deletes data (files) belonging to RETROLauncher, and despite the fact that tests have been carried out, it is recommended that it not be used with important data. It is also very important that you verify the source from which you download RETROLauncher, since it is open source, the code can be manipulated in a malicious way.

THE RESPONSIBILITY FOR THE USE OF RETROLauncher IS YOUR OWN ACCOUNT, TRY TO BACK UP THE DATA BEFORE USING RETROLauncher AND DOWNLOAD THE PROGRAM FROM TRUSTED SOURCES.

What games can I launch with RETROLauncher?

RETROLauncher uses different versions of Retroarch, POPStarter, Neutrino and wLaunchELF ISR. So the games and compatibility are limited to the different Cores, applications and emulators used. RETROLauncher is not an emulator, but a launcher, it does not improve compatibility with the games, it only launches them.

List of Emulators/Cores included in RETROLauncher:

+ Atari 2600

Core Retroarch: "stella2014_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.20.0

+ Neo Geo Pocket

Core Retroarch: "race_libretro_ps2.elf"

Version: Retroarch - Version 1.14.0

+ Nintendo Famicom (Hold circle while selecting game to run alternate core)

Core Retroarch: "fceumm_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

Alternative Core Retroarch: "quicknes_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.0

+ Nintendo Game Boy (Hold circle while selecting game to run alternate core)

Core Retroarch: "gambatte_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.20.0

Alternative Core Retroarch: "tgbdual_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

+ Nintendo Game Boy Color (Hold circle while selecting game to run alternate core)

Core Retroarch: "gambatte_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.20.0

Alternative Core Retroarch: "tgbdual_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

+ Nintendo Game Boy Advance (Hold circle while selecting game, for alternate execution)

Core Retroarch: "gpsp_libretro_ps2.elf" (Supports saving states / High loading times)

Version: Retroarch - Version 1.20.0

Alternative Emulator: "TempGBA.elf" (Supports saving states / High loading times)

Version: TempGBA - Version 1.45.5 - (Not compatible with "exFAT")

Important note: For better game compatibility, please place your GBA BIOS in the following directories, Retroarch and TempGBA will find it automatically.

Directory 1: "USB:/RETROLauncher/System/RetroarchPS2/Nintendo Game Boy Advance/retroarch/system/"

Directory 2: "USB:/RETROLauncher/System/RetroarchPS2/Nintendo Game Boy Advance/TempGBA/"

BIOS Name: "gba_bios.bin"

It should stay like this:

"USB:/RETROLauncher/System/RetroarchPS2/Nintendo Game Boy Advance/retroarch/system/gba_bios.bin"

"USB:/RETROLauncher/System/RetroarchPS2/Nintendo Game Boy Advance/TempGBA/gba_bios.bin"

+ Nintendo Super Famicom

Core Retroarch: "snes9x2002_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.20.0

+ PlayStation 1 (Requires BDMAssault drivers for exFAT)

POPStarter: "POPSTARTER.ELF"

Version: POPSTARTER - Version 13

+ PlayStation 2

Neutrino: "Neutrino.elf"

Version: Neutrino – Version 1.5.0

+ Sega Game Gear

Core Retroarch: "picodrive_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

+ Sega Master System

Core Retroarch: "picodrive_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

+ Sega Megadrive (Hold circle while selecting game to run alternate core)

Core Retroarch: "picodrive_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

Alternative Core Retroarch: "picodrive_libretro_ps2_alt.elf" (better performance / bug with state saving)

Version: Retroarch - Version 1.15.0

+ Sega SG-1000

Core Retroarch: "picodrive_libretro_ps2.elf" (Supports saving states)

Version: Retroarch - Version 1.19.1

+ Applications ELF (Hold circle when selecting APPS, for alternate execution)

wLaunchELF ISR: "wLaunchELF 4.43x_isr.elf"

Version: Commit 2166ca4 - Released 10/01/2025

Note: If "WLE.elf" is not found when running the APPS, it will be automatically launched through Enceladus.

Alternative execution Enceladus: "Enceladus.elf"

Version: Enceladus - Released 10/02/2024

How do I use RETROLauncher?

RETROLauncher will automatically list the games found in the "Roms" folders when starting, just select an item from the list and the game/APPS will run.


RETROLauncher Controls:

- + To move around the menu, use the D-Pad, "Up" and "Down" for slow movement, "Left" and "Right" for fast movement.
- + You can also use the left analog stick in the menu, "Up" and "Down" for fast movement, "Left" and "Right" to jump between letters.
- + Use the "L2" and "R2" buttons to jump through the list (jump 10 titles).
- + Use the "L2" + "Up" and "R2" + "Down" button combinations to jump between letters.
- + To see the number of games found press and hold "Circle".

-
- SEGA
GENESIS
VIDEO GAME SYSTEM
- L1 R1
- SONIC THE HEDGEHOG I
SONIC THE HEDGEHOG II
SONIC THE HEDGEHOG III
SORCERER'S KINGDOM
SPACE HARRIER II
SPACE INVADERS '91
SPARKSTER
SPEEDBALL II - BRUTAL D
SPEEDY GONZALES - CHEES
SPIDER-MAN & THE X-MEN
SPIDER-MAN & VENOM - MA
SPIDER-MAN & VENOM - SE
- SONIC
THE HEDGEHOG
- △ CHANGE ART
□ FULL SCREEN
X RUN GAME
- PRESS TO EXIT PRESS TO CONFIG

-

+ In the case of Retroarch, once the game has started, pressing the L2 + R2 combination will open the Retroarch menu (if you modify Core options, save the options and restart Retroarch, do not resume the game).

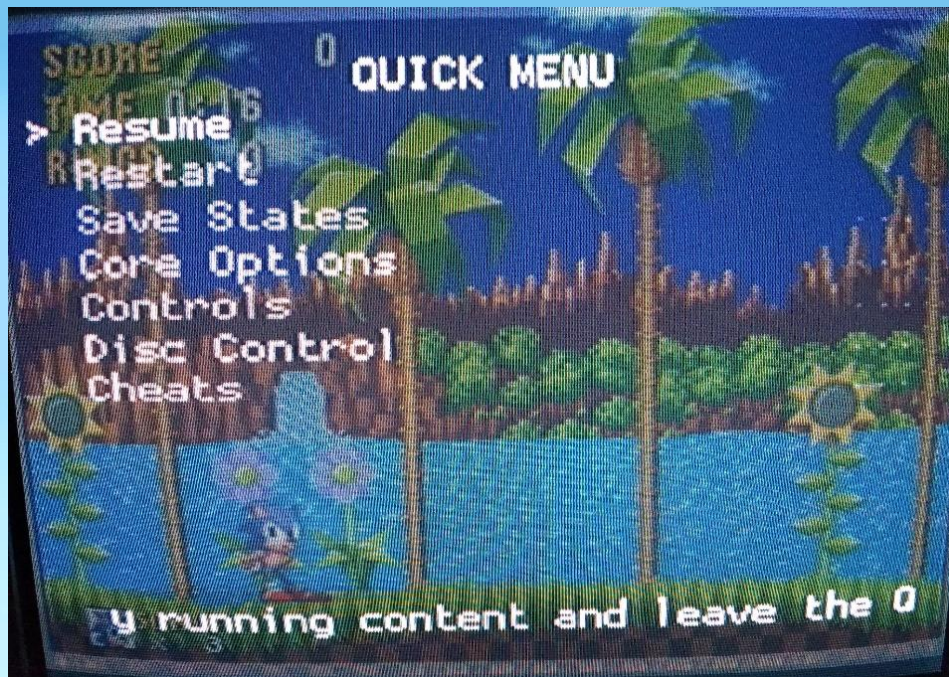

+ Once in the Retroarch menu by pressing "Circle" we will return to the main Retroarch menu where we can configure the video as well as restart Retroarch, by pressing "X" on "Restart RetroArch" we will return to the RETROLauncher menu, every time a game is run RETROLauncher will save that executed game so that when restarting you remain in the last game launched.



Note 1: In the case of games run with POPSarter, TempGBA and Neutrino will not return to the RETROLauncher menu unless indicated in external applications as "Free MCBoot".

Note 2: All systems save the last game executed with the exception of the "APPS" system, this does not save the last application executed for the reason that the APPS list is not sorted alphabetically, so their positions may vary with each restart of RETROLauncher generating conflicts.

How do I add Games?

To add games to RETROLauncher, simply copy the ROMs/ISOs into the directories corresponding to each Emulator/Core, respecting the extensions of each file.

Location of supported extensions and ROMs paths:

Roms Atari 2600:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Atari 2600/"

+ **Supported Extensions:** ".a26" ".bin" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Atari 2600/Game.a26"

Roms Neo Geo Pocket:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Neo Geo Pocket/"

+ **Supported Extensions:** ".ngc" ".ngp" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Neo Geo Pocket/Game.ngc"

Roms Nintendo Famicom:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Nintendo Famicom/"

+ **Supported Extensions:** ".nes" ".fds" ".unf" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Nintendo Famicom/Game.nes"

Roms Nintendo Game Boy:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy/"

+ **Supported Extensions:** ".gb" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy/Game.gb"

Roms Nintendo Game Boy Color:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy Color/"

+ **Supported Extensions:** ".gbc" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy Color/Game.gbc"

Roms Nintendo Game Boy Advance:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy Advance/"

+ **Supported Extensions:** ".gba" ".bin"

Example: "USB:/RETROLauncher/Roms/Roms Nintendo Game Boy Advance/Game.gba"

Roms Nintendo Super Famicom:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Nintendo Super Famicom/"

+ **Supported Extensions:** ".smc" ".sfc" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Nintendo Super Famicom/Game.smc"

VCDs Play Station 1:

+ **Directory:** "USB:/POPS/"

+ **Supported Extensions:** ".vcd"

Example: "USB:/POPS /Game.vcd"

ISOs Play Station 2:

+ **Directory 1:** "USB:/RETROLauncher/Roms/ISOs Play Station 2/"

+ **Directory 2:** "USB:/DVD/"

+ **Directory 3:** "USB:/CD/"

+ **Directory 4:** "CD:/" "DVD:/" PS2 games placed in the DVD/CD tray will be listed.

+ **Supported Extensions:** ".iso"

Example 1: "USB:/RETROLauncher/Roms/ISOs Play Station 2/Game.iso"

Example 2: "USB:/DVD/Game.iso"

Example 3: "USB:/CD/Game.iso"

Note: RETROLauncher will look in the root of the CD/DVD for a PS2 executable. This means that if I put a Play Station 2 CD/DVD in the tray, RETROLauncher will also find it and list it. (It will only list it once, if you change discs after a DVD has been listed, it will not update and you will need to reboot the console). In the case of PS2 games it will show the game ID, if the ID is found in the dictionary it will be translated (if you want to add games to the dictionary edit "USB:/RETROLauncher/System/Backup/PS2_IDs.cfg").

Roms Sega Game Gear:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Sega Game Gear/"

+ **Supported Extensions:** ".gg" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Sega Game Gear/Game.gg"

Roms Sega Master System:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Sega Master System/"

+ **Supported Extensions:** ".sms" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Sega Master System/Game.sms"

Roms Sega Megadrive:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Sega Megadrive/"

+ **Supported Extensions:** ".bin" ".gen" ".smd" ".md" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Sega Megadrive/Game.bin"

Roms Sega SG-1000:

+ **Directory:** "USB:/RETROLauncher/Roms/Roms Sega SG-1000/"

+ **Supported Extensions:** ".sg" ".zip"

Example: "USB:/RETROLauncher/Roms/Roms Sega SG-1000/Game.sg"

ELFs APPS:

+ **Directory 1:** "MC0:/APPS/"

+ **Directory 2:** "MC1:/APPS/"

+ **Directory 3:** "USB:/APPS/"

+ **Directory 4:** "USB:/RETROLauncher/Roms/APPS/"

+ **Directory 5:** "CD:/" "DVD:/" PS2 games and APPS placed in the DVD/CD tray will be listed.

+ **Directory 6:** Any application installed on the MC or USB root via SAS (Save APP System).

+ **Supported Extensions:** ".elf"

Example 1: "USB:/RETROLauncher/Roms/APPS/Apps.elf"

Example 2: "USB:/APPS/Aplicación.elf"

Note: RETROLauncher will search in the root of the directories listed above and also in a sublevel of them. This means that if I place the application inside a folder in those directories, RETROLauncher will also find it and list it.

Example 1: "USB:/RETROLauncher/Roms/APPS/Subfolder/Apps.elf"

Example 2: "USB:/APPS/New folder/Apps.elf"

Example 3: "MC0:/APPS/Subfolder/Apps.elf"

How to configure RETROLauncher?

To configure RETROLauncher on the home screen we must press "START" and we will access the menu. Some of the settings will take effect immediately but others require saving. If the changes are not saved they will be lost upon restart.

Note 1: Configurations that require a specific file to be loaded will be reset to their default settings if the files are not found after the reset.

Note 2: If you press the "R3" or "L3" buttons on the settings screen, you will see the RETROLauncher controls.


Menu settings in RETROLauncher:

Change page:



To switch between settings pages you must press the shoulder buttons (L1, R1) to jump between options press (L2, R2).


RGB Effect (PAGE 1):



This setting is responsible for enabling and disabling the backlight changing effect. If it is disabled, the colors will be fixed and will not vary in tones.

Note: Requires settings to be saved to take effect.

Color in Backgrounds (PAGE 1):



This setting is responsible for activating and deactivating the color layer that is applied to the background. If you deactivate the background it will be seen in its original color.

Note 1: If you disable this option, the "RGB Effect" option will automatically be disabled as well.

Note 2: Requires settings to be saved to take effect.

Fixed Color in Backgrounds (PAGE 1):



This setting is responsible for setting a default color for all menus. Both the background and text of all menus will be set to the configured color.

The RED, GREEN, and BLUE options correspond to the color you want to set, the image in the center shows the effects on the default images, and the text will automatically change to the color you are setting in order to know how the color will look when applied. The values are changed by hovering over the color and pressing the directional pad or the left analog stick to the "Right" or "Left".

Holding down "Square" can change the transparency level for the images in the menus.

Note 1: If this option is enabled and the "Color in Backgrounds" option is disabled, the configured color will not be applied to the background, leaving it in its original color.

Note 2: If the color transparency is set to "OFF" the color system will be applied directly to the images (this method presented erroneous colors because the color red has no intermediate tones).

Note 3: If this option is activated, the "RGB Effect" option will also be automatically deactivated.

Note 4: If there is no background with a mask, the color will be applied to the wallpaper.

Note 5: Requires settings to be saved to take effect.

List Style (PAGE 1):

LIST STYLE

SIMPLE

This setting is responsible for changing the different styles available to display the game lists, these styles are pre-configured but more can be added or existing ones modified by editing the code.

Note: Requires settings to be saved to take effect.

Activate Systems (PAGE 1):



This setting is responsible for enabling and disabling the different systems. If you disable a system it will not appear in the RETROLauncher menu and when you change the system it will automatically switch to the next enabled one. Retroarch systems can be restored individually from here, to do this you have to place yourself on the system you want to restore and press "SELECT", once done you will get a confirmation message, here you can also indicate if you want it to delete all the saved games from the system you want to restore, to do this just press "R1" before confirming the restoration.



Note 1: It is mandatory that at least one system is activated, in case all are automatically deactivated the first one will be activated.

Note 2: The "Super Famicom", "APPS" and "Play Station 2" systems come disabled by default, the reason is that these systems were added but their performance or functionality is limited, this means that they work but not as smoothly as they would in other specific applications (it is recommended to use other independent applications such as SNESticle/Snes Station/OPL/NHDDL/XEB+ Launcher).

Note 3: Systems that can be restored will have a "SELECT" button icon next to them.

Note 4: Requires settings to be saved to take effect.

Save Settings (PAGE 1):

- SAVE SETTINGS -


To save the settings, press "X" on this option (the settings made on both pages will be saved).

Change page:



To switch between settings pages you must press the shoulder buttons (L1, R1) to jump between options press (L2, R2).

Font Type (PAGE 2):




This setting is responsible for switching between the different text fonts available.

Note 1: The text sources found will not be represented by their name, they will only receive a number in the order in which they were found.

Note 2: Requires settings to be saved to take effect.

Change the background (PAGE 2):




This setting is responsible for switching between the different available wallpapers.

Note 1: Found wallpapers will not be represented by their name, they will only receive a number in the order they were found.

Note 2: Requires settings to be saved to take effect.

Clean GUI (PAGE 2):



This setting is responsible for showing or hiding the on-screen navigation buttons as well as the text that accompanies them.

Note: Requires settings to be saved to take effect.

Force Garbage Collection (PAGE 2):



This setting allows you to force garbage collection in the program code. It is enabled by default to make the program more stable in performance. If it is disabled, performance can improve but with a lot of instability.

By pressing "SELECT" on this option, you can activate the loading of a single list (more performance when moving through the lists but at the cost of small pauses when changing systems).

Note: Requires settings to be saved to take effect (a restart of the program is also recommended).

Custom APP/ELF Output (PAGE 2):



This setting changes the default output of RETROLauncher to a custom ".ELF" application. Clicking on the "Custom APP/ELF Output" option changes the device where the ".ELF" will be searched.

The search options are:

- + "Default" for default output to PS2 system.
- + "mc0:/" for the first memory card.
- + "mc1:/" for the second memory card.
- + "mass:/" for USB flash drive.

Clicking on the option below will open a browser to search for the ".ELF" application on the selected device. Once in the browser, use "X" to open the directories and select the application, use "circle" to return to the previous directory, and use "Triangle" to cancel the search.

The browser will only show folders and applications with the ".ELF" extension. If no folder or application is found, a message will appear indicating that there are no compatible files. If everything is correct, you will see the selected application in the configuration menu.

Note 1: If the selected application is not found when loading the configuration, the default output will be returned.

Note 2: Requires settings to be saved to take effect (a restart of the program is also recommended).

See full route In the APPS menu (PAGE 2):

SEE FULL ROUTE IN THE APPS MENU STATE: OFF

This setting allows you to display the full path in the applications menu, it is very useful when you have several applications with the same name in subfolders or on different devices.

Note: Requires settings to be saved to take effect.

Sound in the menu (PAGE 2):

SOUND IN THE MENU STATE: ON
SOUND VOLUME 65

This setting enables and disables the sound effects in the RETROlauncher menu. When enabled, the “Sound Volume” option below controls the volume of the sound effects.

If you press “SELECT” on the “Sound in the menu” option, a window will appear where you can enable or disable the music loop that plays in the background (It is disabled by default).

-BACKGROUND MUSIC LOOP ?-

☒ CHANGE ☐ CANCEL

ONCE THE CHANGE IS MADE, WAIT A MOMENT FOR
THE LOOP TO FINISH PLAYING.

STATUS: ON

Note 1: To change the volume, place the cursor on the “Sound Volume” option and press the Pad arrow keys (“Left” or “Right”).

Note 2: If the sounds are not found and the option is active, the playback of that sound will be skipped.

Note 3: When disabling the background loop, if the audio was already playing you will have to wait for it to finish before it stops playing, regardless of this the change has already been applied and when it finishes the audio will no longer play again.

Note 4: Requires settings to be saved to take effect.

Screenshot as background (PAGE 2):

SCREENSHOT AS BACKGROUND STATE: OFF

This setting allows you to display screenshots from each game as wallpaper in each system menu, when the game is selected.

Note: Requires settings to be saved to take effect.

Video Mode (PAGE 2):

VIDEO MODE NTSC

This option allows you to change the video mode of RETROlauncher, as well as the settings for Retroarch systems. When you change this option, a window will appear asking you if you want to confirm the change. Please note that making this change causes all Retroarch systems to reset their default settings to adapt to each type of format (“NTSC/PAL 60Hz” or “PAL 50Hz”).

-CHANGE VIDEO MODE TO PAL ?-

☒ CHANGE ☐ CANCEL

WARNING:

ALL RETROARCH OPTIONS WILL RESET

Note 1: Changing and setting this option is not affected by RETROlauncher restores.

Note 2: Retroarch systems will be restored according to the selected video mode.

Vibration in menu (PAGE 2):

VIBRATION IN MENU

STATE: OFF

This setting enables a vibration effect in the RETROLauncher menu.

Note 1: Sometimes the vibration effect gets stuck, just perform another movement to correct it.

Note 2: Requires settings to be saved to take effect.

Extra directories (PAGE 2):

EXTRA DIRECTORIES

STATE: ON

This setting enables or disables searching in the extra system directories. These directories are where you usually add Applications or PS2 ISOs. It is very useful when you do not want to move the applications or ISOs to the internal RETROLauncher directory (by default it is enabled).

Directories that are added to the search when this option is enabled:

- + "MC0:/APPS/" - For the system APPS.
- + "MC1:/APPS/" - For the system APPS.
- + "USB:/APPS/" - For the system APPS.
- + "DVD:/" - For the system APPS.
- + Applications installed by SAS (Save APP System). For the system APPS.
- + "USB:/DVD/" - For the system Play Station 2.
- + "USB:/CD/" - For the system Play Station 2.

Note 1: If disabled, it only lists applications or ISOs that are within the RETROLauncher "Roms" directory.

Note 2: Requires settings to be saved to take effect.

Reset all settings (PAGE 2):

RESET ALL SETTINGS

This option restores all RETROLauncher settings to default, as well as restoring Retroarch settings.

Note 1: There is an option to clear the saved games from Retroarch when running games with internal memory. This option is activated by pressing "R1" when it asks if we want to reset the options. Be careful because this option will delete the saved games from all systems (it is recommended that you delete the saved games manually).



Note 2: Once the restoration has started, do not turn off or restart the console, wait for it to finish.

Credits (PAGE 2):

CREDITS

This option shows the credits of all the applications and media behind RETROLauncher.

Note 2: If you press "Triangle" you will skip the credits.

Save Settings (PAGE 2):

- SAVE SETTINGS -

To save the settings, press "X" on this option (the settings made on both pages will be saved).

Note: Do not unplug the USB stick before or during the save because you will get an error. When the game list is visible the save is complete (should be immediate).

How do I add covers and screenshots?

To add images to the games listed in RETROLauncher, simply copy the images into the directories corresponding to each Emulator/Core, respecting the names of each file and the necessary requirements.

Image Requirements:

- + It must be an image in “.png” format
- + The image must have a transparency mask, otherwise it will not be displayed.
- + The name of the image must be the same as the ROM/APPS, respecting upper and lower case.
Example: If the ROM is called "GaMe.nes" the image must be called "GaMe.png".
- + It is recommended to use resolutions lower than 420x320 (they can be higher, although this affects performance).
- + It is recommended to use “.png” images in 8-bit format with 256 colors (It greatly improves performance).
- + The smaller the image, the smoother the system will run (recommended below 40 KB).
- + The image must be in the directory corresponding to the ROM emulator.

Example:

Game: "USB:/RETROLauncher/Roms/Roms Sega Megadrive/Example.bin"

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Sega Megadrive/Example.png"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Sega Megadrive/Example.png"

Image directories:

Atari 2600:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Atari 2600/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Atari 2600/"

Neo Geo Pocket:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Neo Geo Pocket/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Neo Geo Pocket/"

Nintendo Famicom:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Nintendo Famicom/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Nintendo Famicom/"

Nintendo Game Boy:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Nintendo Game Boy/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Nintendo Game Boy/"

Nintendo Game Boy Color:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Nintendo Game Boy Color/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Nintendo Game Boy Color/"

Nintendo Game Boy Advance:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Nintendo Game Boy Advance/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Nintendo Game Boy Advance/"

Nintendo Super Famicom:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Nintendo Super Famicom/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Nintendo Super Famicom/"

PlayStation:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers PlayStation/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots PlayStation/"

Note 1: If no Covers are found in the directories, RETROLauncher will try to find them in the “ART” folder at the root of the USB stick. This search is only valid for those VCDs that have the nomenclature “XXXX_XXX.XXX” in their names, since it uses this part of the name to find the Covers in the “ART” folder.

Note 2: Images in the “ART” folder must be in “.png” format.

PlayStation 2:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers PlayStation 2/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots PlayStation 2/"

Note 1: If no Covers are found in the directories, RETROLauncher will try to find them in the "ART" folder at the root of the USB stick. This search is only valid for those ISOs that have the nomenclature "XXXX_XXX.XXX" in their names, since it uses this part of the name to find the Covers in the "ART" folder.

Note 2: Images in the "ART" folder must be in ".png" format.

Sega Game Gear:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Sega Game Gear/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Sega Game Gear/"

Sega Master System:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Sega Master System/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Sega Master System/"

Sega Megadrive:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Sega Megadrive/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Sega Megadrive/"

Sega SG-1000:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers Sega SG-1000/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots Sega SG-1000/"

APPS:

Cover: "USB:/RETROLauncher/Multimedia/Covers/Covers APPS/"

Screenshots: "USB:/RETROLauncher/Multimedia/Screenshots/Screenshots APPS/"

Note 1: If no Covers are found in the directories, RETROLauncher will try to find them in the "ART" folder at the root of the USB stick.

Note 2: Images in the "ART" folder must be in ".png" format.

How do I add text fonts?

To add text fonts to RETROLauncher, simply copy the fonts into the corresponding directory, respecting the necessary requirements.

Text Font Requirements:

- + It must be a font with the extension ".ttf" or ".otf".
- + It can have any name as long as the extension is ".ttf" or ".otf" (short names are recommended).
- + The name of the font will not be reflected in the settings, it will only be assigned a number.

Directory of text sources: "USB:/RETROLauncher/Multimedia/Others/Font/"

Note 1: To change the fonts you must enter the RETROLauncher settings, change the Fonts and save the settings.

Note 2: Text fonts may not fit well in RETROLauncher, if you want to adjust the font you must edit the font with a specific program, you can also edit the code (not recommended).

Note 3: If I accidentally set a font that is too small or unreadable, I will simply delete the fonts from the directory and the default font will be loaded automatically.

How do I add wallpapers?

To add wallpapers to RETROLauncher, simply copy the images into the corresponding directory, respecting the necessary requirements.

Wallpaper Requirements:

- + It must be an image in “.png” format.
- + The image must have a transparency mask, otherwise it will not be displayed.
- + The resolution must be 640x480 maximum, although it can be lower.
- + It is recommended to use “.png” images in 8-bit format with 256 colors.
- + It can have any name as long as the extension is “.png” (short names are recommended).
- + The name of the backgrounds will not be reflected in the settings, they will only be assigned a number.

Directory of wallpapers: “USB:/RETROLauncher/Multimedia/Others/Background/”

Note 1: If the background is not visible, it is possible that you do not have a transparency mask.

Note 2: If the resolution is lower or higher than indicated, the image will automatically adapt to 640x480.

Note 3: To change the background you must enter the RETROLauncher settings, change the background and save the settings.

How do I add sound effects?

To add sound effects to RETROLauncher, simply replace the sound effects in the corresponding directory, respecting the necessary requirements.

Sound Effects Requirements:

- + Must be sounds in ADPCM format.
- + They must have the extension “.adp”
- + If you have an audio with the extension “.adpcm” you will only need to rename it to “.adp”.
- + The names of the sounds must be the following:
 - + “back.adp” / Audio to go back and change image.
 - + “error.adp” / Audio to mark execution errors or cancellation of actions.
 - + “move.adp” / Audio for movement through menu items.
 - + “next.adp” / Audio for emulator switching.
 - + “run.adp” / Audio for the execution and activation of elements.

Directory of sound effects: “USB:/RETROLauncher/System/Medios/Sound/Menu/”

Note 1: There may be playback issues if the audio is poorly encoded or is too large in size.

Note 2: There is an extra audio that serves as background music. If you do not wish to listen to this extra audio, it can be easily deleted (or replaced).

- + music.adp / Audio with background music.

Directorio de audio adicional: “USB:/RETROLauncher/System/Medios/Sound/Background/”

Note 3: To create sound effects you can use the OPL tool “WAV to ADP converter for OPL”, this tool will allow you to convert “.wav” files to “.adp” as long as the “.wav” format required by the application is respected.

How do I add VMC support to PS2 games?

Automatic mode:

RETROLauncher has a menu to automatically configure the VMCs, to open this menu press “circle” on any game in the list and the game options will open on the screen, all the VMCs that are in the “USB:/VMC/” directory will be automatically listed with the “.bin” extension, activate the VMC and then select one of the VMCs found, finally save the configuration and all the files will be automatically created by RETROLauncher.

Note: RETROLauncher does not create VMC, use other applications to create them, it will only be searched with the corresponding extension (“.bin”) and in the indicated directory (“USB:/VMC/”).

Manual mode:

To add virtual memory to PS2 games, you must create a text file containing the command line to load the virtual memory, then finally rename it with the same name as the game you want to use the virtual memory and change the extension to “.vmcd” so that it is recognized by RETROLauncher.

You can save the file in the following directory “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/”

Steps to create “.vmcd”:

+ Create a “.txt” file.

+ Edit the file and add the virtual memory loading command inside:

Command: -mc0=mass:/"virtual memory directory"

Example: -mc0=mass:/VMC/generic_0.bin

+ Save the file and change the extension from “.txt” to “.vmcd”.

+ Move the file to the same directory where the game is located or to the folder “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/” and rename it with the same name as the game you want to add the virtual memory to.

Example:

Game: “USB:/RETROLauncher/Roms/ISOs Play Station 2/Game.iso”

vmcd: “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/Game.vmcd”

Note 1: Now RETROLauncher will create the “.vmcd” files inside the “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/” folder to have cleaner game folders.

It is not necessary to move your current files because RETROLauncher will still read them, but the next time you configure them it will move them to the “Configs” folder.

Note 2: If the command is misspelled the game will not start (respect upper and lower case).

Note 3: If the virtual memory file does not exist, the virtual memory will not be loaded but the game will be run with the physical virtual memory.

Note 4: A file must be created for each game in which you want to run the virtual memory (it can be the same virtual memory but each game must have its command line to load the VMC).

Note 5: if there is a “.mode” file and a “.vmcd” file, both will be loaded, they can coexist.

Note 6: Auto mode will delete and create the settings as well as read them, if you configure VMC manually, auto mode will also take them when entering the game settings.

How do I add compatibility modes to PS2 games?

Automatic mode:

RETROLauncher has a menu to automatically configure the compatibility modes, to open this menu press “circle” on any game in the list and the game options will open on the screen, activate the modes you want to apply to the game, then save the configuration and all the files will be automatically created by RETROLauncher.

Manual mode:

To add compatibility modes to PS2 games you must create a text file containing the command line that loads the compatibility modes, then finally rename it with the same name as the game you want to use the compatibility modes and change the extension to “.mode” so that they are recognized by RETROLauncher.

You can save the file in the following directory “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/”

Steps to create “.mode”:

+ Create a “.txt” file.

+ Edit the file and add the compatibility modes command inside:

Command: -gc=”modes you want to activate”

Example: -gc=12357

modes:

0 - IOP: Fast reads (sceCdRead)

1 - Dummy

2 - IOP: Sync reads (sceCdRead)

3 - EE : Unhook syscalls

5 - IOP: Emulate DVD-DL

7 - IOP: Fix game buffer overrun

Note: you can add several modes by chaining the numbers.

+ Save the file and change the extension from “.txt” to “.mode”.

+ Move the file to the same directory where the game is located or to the folder “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/” and rename it with the same name as the game to which you want to add the compatibility modes.

Example:

Game: “USB:/RETROLauncher/Roms/ISOs Play Station 2/Game.iso”

mode: “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/Game.mode”

Note 1: Now RETROLauncher will create the “.mode” files inside the “USB:/RETROLauncher/Roms/ISOs Play Station 2/Configs/” folder to have cleaner game folders.

It is not necessary to move your current files because RETROLauncher will still read them, but the next time you configure them it will move them to the “Configs” folder.

Note 2: If the command is misspelled the game will not start (respect upper and lower case, do not leave spaces).

Note 3: If there is a “.mode” file and a “.vmcd” file, both will be loaded, they can coexist.

Note 4: A file must be created for each game in which you want to run the compatibility modes (each game must have its command line if you want to load compatibility modes).

Note 5: Check if the game is compatible with the modes in case the game does not start when configuring them.

Note 6: Auto mode will delete and create the settings as well as read them, if you set compatibility modes manually, auto mode will also take them when entering the game settings.

How do I run PS2 games from MX4SIO? (Experimental)

To add games that are on the MX4SIO, you must create an empty text file on the USB and in the same directory where the game ".ISO" is on the MX4SIO, give it the same name as the game in MX4SIO and change the extension from ".txt" to ".mx4". This empty file with the ".mx4" extension will be responsible for telling RETROLauncher that this game is running from the MX4SIO.

Example 1:

Game on MX4SIO: "MX4SIO:/DVD/Game.iso"

Shortcut to game on USB: "USB:/DVD/Game.mx4"

Example 2:

Game on: "MX4SIO:/CD/Game 2.iso"

Shortcut to game on USB: "USB:/CD/Game 2.mx4"

Note 1: It is important to respect the shortcut directory, if you place a shortcut in the "USB:/DVD/" folder and the game inside MX4SIO is in the "MX4SIO:/CD/" directory the game will not run. **Place shortcuts on USB in the same directory as your games on MX4SIO.**

Note 2: The only two directories where shortcuts will be searched are "USB:/DVD/" and "USB:/CD/".

Note 3: If the name is misspelled and does not match the game in MX4SIO, or if it does not exist, Neutrino will not run it.

Note 4: Compatibility modes are fully functional and configurable from RETROLauncher.

VMC for gaming on MX4SIO

In order to load a VMC when running a game from MX4SIO, it is mandatory that the VMC is located in the MX4SIO directory itself ("MX4SIO:/VMC/"). Although RETROLauncher can assign a VMC to it, these memories are located on the USB, so if we assign a VMC from the RETROLauncher menu, the game will not run because it will not find that VMC in MX4SIO.

To solve this you can do some "tricks":

+ have a copy of the VMC on the USB and another on the MX4SIO with the same name **(it takes up space and can confuse saved games by having duplicate memories)**.

+ Create a text file in the "USB:/VMC/" directory with the same name as the VMC that is in MX4SIO and change the extension from ".txt" to ".bin" **(not recommended because it can confuse when assigning that memory to games that are on the USB causing them not to start)**.

+ The best option is to manually create the VMC file ".vmcd" in the same directory as the shortcut on the USB, give it the same name as the shortcut, and indicate in the command the name of the VMC that is in the MX4SIO directory ("MX4SIO:/VMC/").

Example:

Direct access to the game on USB: "USB:/CD/Game 2.mx4"

Virtual memory for the game in MX4SIO: "USB:/CD/Game 2.vmcd"

Command: -mc0=mass:/VMC/generic_0.bin

Note that the VMC directory is still "mass", this is correct, the important thing is the name of the VMC, it has to be the same as the one in MX4SIO.

Note 1: If the VMC name is misspelled and does not match the VMC in MX4SIO, or if it does not exist, Neutrino will not run the game.

Note 2: The VMC system and modes are the same for MX4SIO and USB. The only thing that changes is that the VMC must exist in MX4SIO otherwise it fails to run.

How do I run PS2 games from HDD? (Experimental)

Exactly the same as with MX4SIO, only change the extension of the shortcut to ".hdd", you must create an empty text file on the USB and in the same directory where the game is ".ISO" on the HDD, give it the same name as the game on the HDD and change the extension from ".txt" to ".hdd". This empty file with the extension ".hdd" will be in charge of telling RETROLauncher that the game is running from the HDD.

Example 1:

Game on HDD: "HDD:/DVD/Game.iso"

Shortcut to game on USB: "USB:/DVD/Game.hdd"

Example 2:

Game on HDD: "HDD:/CD/Game 2.iso"

Shortcut to game on USB: "USB:/CD/Game 2.hdd"

Note 1: If the VMC name is misspelled and does not match the VMC on the HDD, or if it does not exist, Neutrino will not run the game.

Note 2: The VMC system and modes are the same for HDD and USB. The only thing that changes is that the VMC must exist on the HDD otherwise it will fail to run.

DO NOT ASSIGN A USB VMC TO THE MX4SIO AND HDD SHORTCUTS BECAUSE THE EXECUTION WILL FAIL.

How do I update RETROLauncher emulators and cores?

To update the applications used by RETROLauncher, simply replace all the corresponding files for each application with a new version of the application or with a previous version.

Enceladus: Download "Enceladus.elf" rename it to "RETROLauncher.elf" and replace the "RETROLauncher.elf" file located in the "USB:/RETROLauncher/" folder.

Neutrino: Download Neutrino and replace all files located in the "USB:/RETROLauncher/System/RetroarchPS2/Sony PlayStation 2/" directory.

wLaunchELF ISR: Download some version or variant of "wLaunchELF ISR.elf" and copy it to the following directory "USB:/RETROLauncher/System/RetroarchPS2/APPS/", finally rename it to "WLE.elf".

It should look like this:

"USB:/RETROLauncher/System/RetroarchPS2/APPS/WLE.elf"

Retroarch Cores: Download Retroarch, copy the core you want to update and replace the core in the folder corresponding to the system inside the directory "USB:/RETROLauncher/System/RetroarchPS2/". If you want to add another system you can add it by editing the code. As of version 1.14.0, exFAT is supported in Retroarch for ps2.

Note: There are certain conflicts with the execution of Retroarch by command in certain versions of Cores, I have only tested on my console, I do not know if it exists in other models, if the update or replacement of the core does not work and the screen remains black, try with another version of Retroarch. If the version of your console has problems with a core, replace the core with other versions to see if the problem is corrected (publish the solution somewhere indicating the version of the console and version of the core/retroarch to be aware).

How do I run RETROLauncher from exFAT?

To run RETROLauncher from an exFAT formatted memory card, simply download the file “EXFAT USB support - BDMAssault by israpps (Matías Israelson).rar”, unzip the folders and copy them to the root of your Memory Card. These files are necessary for some applications used by RETROLauncher to work with the exFAT format.

Files needed on the Memory Card:

“mc0:/POPSTARTER/usbd.irx”

“mc0:/POPSTARTER/usbhdfsd.irx”

“mc0:/SYS-CONF/USBD.IRX”

“mc0:/SYS-CONF/USBHDFSD.IRX”

Note: Some Cores are not compatible with exFAT as they are older versions, you can download newer Cores and replace them although many of those Cores will not work with RETROLauncher.

Known Issues for RETROLauncher.

“Error when starting RETROLauncher”: Accompanied by a red message, it is an execution error in the program code, it is recommended to reinstall all of RETROLauncher.

“Error when starting RETROLauncher from OPL”: Accompanied by a red message, it is an execution error in the program code, download the file “Problems when running from OPL.rar” and unzip the “RETROLauncher” folder in the same directory where “RETROLauncher” is, combining both folders. Then copy the line from the “conf_apps.cfg” file and paste it into your “conf_apps.cfg” file and it should start from OPL.

“RETROLauncher freezes on the LOADING screen”: This error occurs when a file related to multimedia media, such as images or text fonts, cannot be found; if the game images are in an incompatible format, it will also freeze. Delete recently added images, if it persists reinstall all RETROLauncher.

“Error starting RETROLauncher with two USBs”: Accompanied by a white message, this is an error with the presence of several USB devices connected to the PS2, follow the instructions in the message and restart RETROLauncher.

“External disk does not start RETROLauncher”: Some external disks pause when running Enceladus which causes an error when loading the program, use another medium such as a USB memory or try different versions of Enceladus.

“Black screen when running game”: Check that the game is compatible with the emulator/core you are running. If you replaced the core, it means that it is not compatible with RETROLauncher, try with another core or reinstall all RETROLauncher.

“The sound of the Cores is choppy”: This happens on consoles configured in PAL 50 Hz, and is due to Retroarch automatically configuring the games to the game region. To fix this simply open Retroarch options once inside a game, look for the Core settings and try to force the system to the same as your console or configuration, if your console is set to PAL 50 Hz force the games to PAL 50 Hz and the audio speed will be corrected (the configuration is saved for all games when you exit, although you can assign an individual configuration to the games). So with all the Cores or games that have this problem. The ideal is to have everything in NTSC or PAL 60 Hz, if you do not have a chip to change the console to NTSC or PAL 60 Hz you will have to change the video mode from RETROLauncher to PAL in the settings menu, with that the choppy audio will be corrected but at the cost of having some screen breaks.

“Error starting game”: Accompanied by a red message, it is an execution error in the program code. It is recommended to restart RETROLauncher and verify that the USB device is correctly connected. If it persists, reinstall all of RETROLauncher.

“Freezes on GBA”: Not all games are compatible with the GBA Core, but compatibility is greatly improved by placing the GBA BIOS in the corresponding directory. Some games correct the freeze and others remain the same. It is a matter of testing.

BIOS: “gba_bios.bin”

Directory: “USB:/RETROLauncher/System/RetroarchPS2/Nintendo Game Boy Advance/retroarch/system/”

“Error saving configuration”: Accompanied by a red message, it is an execution error in the program code. It is recommended to restart RETROLauncher and verify that the USB device is correctly connected. If it persists, reinstall all of RETROLauncher.

“Images are not displayed in the menu”: Check that the name of the image is correct. RETROLauncher is case sensitive. Check that the image you placed has a transparency mask, otherwise the image will be found and displayed but will be completely transparent.

“Pauses and freezes when loading images”: If the images used are very large in size or have a high quality encoding, it will cause long pauses while loading them. Make sure you meet the image requirements explained in this document.

“When restarting Retroarch, RETROLauncher does not open again”: If the Retroarch settings were manipulated, the return to RETROLauncher is corrupted. To solve this, restore the system configuration that presents the problem in the RETROLauncher settings menu, that should solve the problem, if it persists, reinstall all of RETROLauncher.

“The control remains vibrating”: This sometimes occurs when a vibration movement is performed and an image is loading. It should be fixed by performing another move, otherwise just restart RETROLauncher.

“Menu sound is bad or has flaws”: This sometimes happens when audio is not loading properly. It should be fixed by simply restarting RETROLauncher. If it persists reinstall the whole RETROLauncher.

“PS1 games won’t run”: There could be many reasons, but the main ones are:

- + Defective VCDs, if you want to run a VCD make sure you do a correct conversion.
- + Make sure your game is compatible with POPStarter.
- + If you need patches, check if they were installed correctly.
- + If you run PS1 games from an exFAT memory, make sure you have the drivers on the Memory Card.
- + Check that the binary names are correct, respecting the capitalization.

“PS2 games won’t run”: There could be many reasons, but the main ones are:

- + Defective ISOs, if you want to run an ISO of a title whose original format was CD, make sure you do a correct conversion.
- + Make sure your game is not fragmented.
- + Neutrino will run the game on the same system that your console is configured on, if it doesn’t have a chip it will fail with games that don’t belong to the region of your console, you can use patches on the ISOs or GSM to try to run those games.
- + If I set the compatibility modes manually, check that the command is written correctly and without spaces because it will fail if it is.

“Game names are not displayed correctly or are altered”: this happens when the game name has a special character (for example “Ñ”) and RETROLauncher fails to display the name. To solve this, simply change the game name to one that does not contain special characters.

“Overscan in Retroarch games”: some Cores present “overscan” due to the nature of the different systems, to fix this once you open a game go to the Retroarch video options and enter “Scaling”, there you can try between the different scaling modes, once you select the one that best suits your screen, restart Retroarch and the configuration will be saved, this change must be made individually for each Core since they do not share configuration.

“RETROLauncher slows down”: If the game lists are very large and the game names are very long, performance is affected. Make sure that the number of Roms per system is not too large, be more selective with the Roms (lists with less than 1000 games are recommended).

The same happens with images, if they are large, there will be pauses when moving between game lists (There may be memory fragmentation which causes RETROLauncher to slow down, try a clean installation).

Try disabling **“Force Garbage Collection”** and enabling **“Release Rest of Lists”** in RETROLauncher settings menu, the improvement should be noticeable.

“Blue screen when running APPS”: If when running an application you get a blue screen, it means that the application could not be run, the blue screen is the wLaunchELF ISR menu, select one of the menu options to return to RETROLauncher or exit to the PS2 system.

“Freeze on startup with DVD/CD in tray”: This error occurs when running RETROLauncher from a launcher that has the ability to read the DVD/CD drive, a clear example of this is wLaunchELF with DVD/CD support, to fix this place the DVD/CD in the tray once RETROLauncher is started, then refresh the game list in PS2 or APPS.

“RETROLauncher not working on my PS2”: RETROLauncher was only tested on one console model **“SCPH-77006 - NTSC - Japanese”**, if you have a problem with a certain model or variables please edit this document or post by some means the model of your console, if you have a chip add the model / version, and the medium in which you run RETROLauncher. I also strongly request that you post if RETROLauncher works correctly on your console.

Credits

Enceladus: Enceladus is an enhanced Lua environment for creating homebrew software for the PS2.

Created by Daniel Santos.

DanielSant0s X: <https://x.com/danadsees>

Youtube: <https://www.youtube.com/channel/UCIDx5TuDp-1IRTRr5l5JSdw>

Project Link: <https://github.com/DanielSant0s/Enceladus>

License: Distributed under GNU GPL-3.0 License.

Retroarch PS2 Port: RetroArch is a frontend for emulators, game engines and media players.

Created by RetroArch contributor fjtrujy (Francisco J. Trujillo).

fjtrujy X: <https://x.com/fjtrujy>

Retroarch Link: <https://www.retroarch.com>

Licenses: There is software behind RetroArch that is protected by Non-Commercial licenses. It is important to respect the wishes of the developers and people behind the respective projects.

<https://docs.libretro.com/development/licenses/>

POPStarter: POPStarter is a launcher which lets you play your PS1 games in combination with PS1 emulator for PS2.

Created by developer krHACKen.

POPStarter Link: <https://www.psx-place.com/threads/popstarter.19139/>

Neutrino: Neutrino is a small, fast and modular PS2 device emulator that maximizes compatibility and performance.

Created by developer Maximus32 (Rick Gaiser).

Neutrino Link: <https://github.com/rickgaiser/neutrino>

License: Academic Free License "AFL" v. 3.0

TempGBA: TempGBA (GpSP) is a Game Boy Advance emulator ported to PS2.

Created by developer belek666.

belek666 GitHub: <https://github.com/belek666>

TempGBA(GpSP) - PS2 link: <https://www.psx-place.com/resources/gpsp-by-belek666.687/>

wLaunchELF ISR: wLaunchELF ISR is an open source file manager and executable launcher for the PS2 console.

wLaunchELF 4.43x_ISR was created by developer israpps (Matías Israelson) and is a wLaunchELF mod.

israpps (Matías Israelson): <https://israpps.github.io/>

Youtube: https://www.youtube.com/@El_IsraPS2

wLaunchELF 4.43x_ISR Project Link: https://github.com/israpps/wLaunchELF_ISR

wLaunchELF Project Link: <https://github.com/ps2homebrew/wLaunchELF>

License: Academic Free License "AFL" v. 2.0

wLaunchELF / project by AKuHAK and SP193.

uLaunchELF / project by E P and dlanor.

LaunchELF / project by Mirakichi.

And to all the developers who contributed to uLaunchELF.

Original background: <https://www.artapixel.com/escp-art-midnight-sun-city-night-retrowave-cyberpunk.html>

Created by < e s c p > Art

Youtube: <https://www.youtube.com/@escp>

License: This Image is licensed under the Creative Commons Zero v1.0 Universal.

Free images by <https://www.artapixel.com>

Public Pixel: Retro video game style text font.

Designed by GGBotNet.

GGBotNet X: <https://twitter.com/ggbotnet>

Youtube: <https://www.youtube.com/channel/UCndkEE767CI7wTINJYKrTg>

Public Pixel Link: <https://www.ggbot.net/fonts/>

License: This Font Software is licensed under the Creative Commons Zero v1.0 Universal.

Special thanks to the entire "PSX-PLACE" community for providing support and visibility to the program. We also thank all the YouTube channels along with their communities for spreading and improving RETROLauncher with their messages of support and constructive feedback.

Spaghetticode: I created RETROLauncher with the sole purpose of having a simple and editable graphical environment to have collections of retro games on PS2, I did it for myself and I didn't think it would grow so much, much less publish it, I thought it would be good to share it in case someone somewhere was looking for the same thing as me and couldn't find anything focused on retro on our beloved PS2. At no time did I want to offend or disrespect the developers behind the different applications used in this program, if I did I apologize. I tried to compile all the information possible to give credits correctly, I hope I haven't made a mistake, or that I have overlooked something, if so, I apologize. RETROLauncher is made by all.

Thank you for using RETROLauncher.

Boon Tobias 
