


WS300T60L

QUICK START GUIDE

System Overview

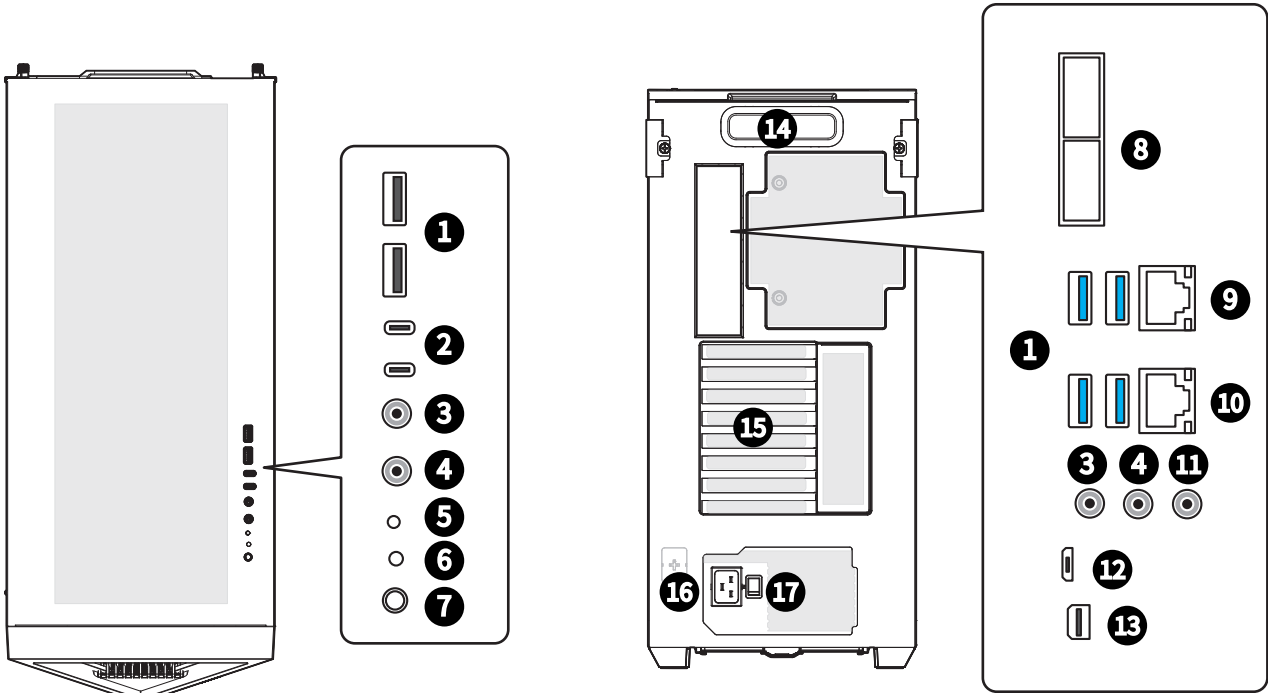

- | | | |
|-----------------------------|---|----------------------------|
| 1 USB 3.2 Gen 2 Type-A port | 8 400G QSFP112 port | 15 PCIe 5.0 expansion slot |
| 2 USB 3.2 Gen 2 Type-C port | 9 1000Base-T RJ45 Ethernet port (mgmt.) | 16 Power connector |
| 3 Mic-in jack | 10 10GBase-T RJ45 Ethernet port | 17 Power switch |
| 4 Line-out jack | 11 Line-in jack | |
| 5 HDD activity LED | 12 Micro-USB COM port | |
| 6 System reset button | 13 Mini DisplayPort | |
| 7 System power LED button* | 14 Chassis handle | |
- *Note for system power LED button:**
BMC Initialization: After connecting power, wait **5 minutes** for BMC initialization to complete. During this time, there may be no display output or chassis LED activity.
Power On: Short press once to power on.

Safety & Service Cautions

- This system is heavy. We recommend that two people work together to lift and move the system to prevent injury or equipment damage.
- The system requires a **20-amp circuit** for connection. Please ensure your electrical environment meets this requirement before plugging in the system.
- **DO NOT** attempt to service the following components:
 - **Liquid Cooling Module:** Self-assembly or disassembly of the liquid cooling module voids the warranty and may result in coolant leakage and system damage.
 - **System Memory:** The GB300 uses integrated architecture. System memory is not user-serviceable and cannot be upgraded or replaced. Any unauthorized access will result in hardware damage and void the warranty.




Install M.2 SSD and Heatsink (Key M, 2280)

Important

Ensure the system is powered off and the AC cords are disconnected.


Locate the M.2 Slots

1. Identify the M.2 slots on the motherboard.

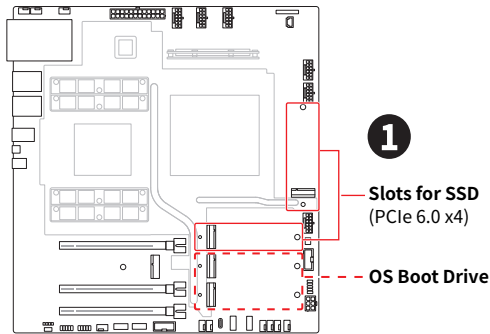


Remove the Pre-installed Heatsink

2. Unscrew and lift the pre-installed heatsink (2.5 mm & 1.5 mm hex).

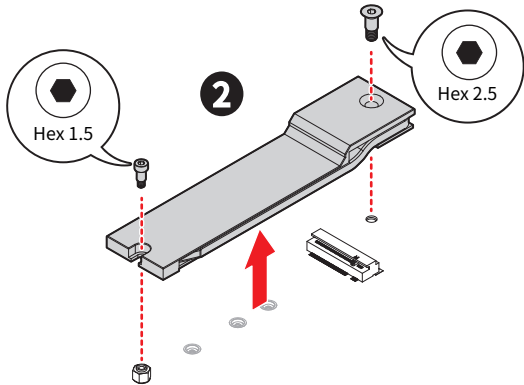

Insert the M.2 SSD

3. Insert the M.2 SSD at an angle until seated, then press it flat against the standoff.

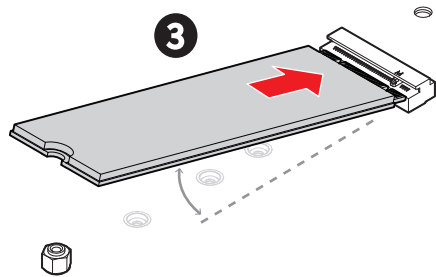


Reinstall the Heatsink (Securing the SSD)

4. Peel the protective films off the heatsink thermal pads.
5. Align and secure the assembly using the 2.5 mm and 1.5 mm screws.

Tightening Sequence:

2.5 mm (Half) ➔ 1.5 mm (Full) ➔ 2.5 mm (Full)

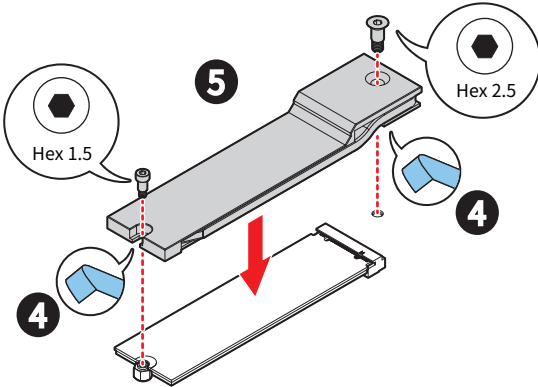

System OS Setup

The system comes with the operating system (OS) pre-installed. Upon first boot, follow the on-screen instructions to configure the network, create a user account, and complete system initialization.

Important

- After connecting power, wait **5 minutes** for BMC initialization to complete; there may be no display output or chassis LED activity during this time. Once BMC initialization is complete, **short press** the power button once to turn on the system.
- Do not power off the system during the setup process.
- If any issues occur, contact your local representative for assistance.

Need more help?

For detailed specifications, troubleshooting, and advanced configuration, please refer to the **User Guide** available on our official website.