


Spaghetti Clamp

material: delrin plastic

quantity: 2 clamps (4 halves)

designed to clamp
teflon spaghetti tubing
TWTT-18 (Small Parts Inc.)
over stainless hypodermic
tubing HTX-17R

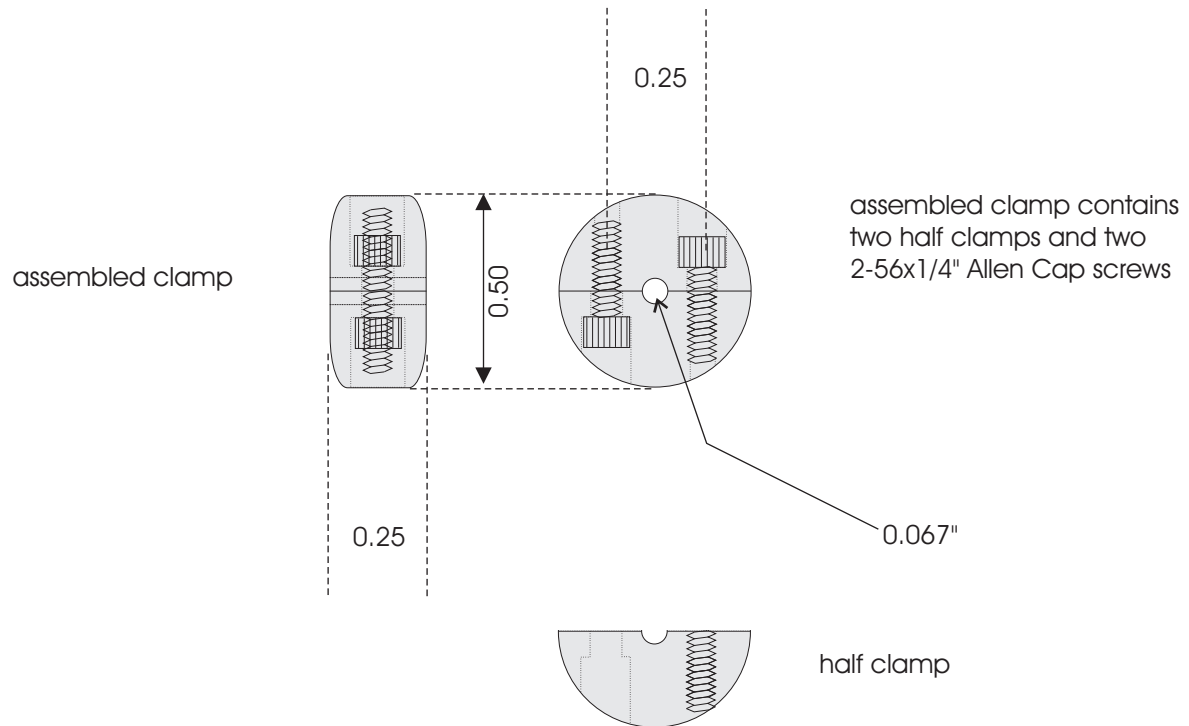

machining suggestion:

Drill, tap and counterbore two rectangular pieces.

Bolt them together with 2-56x1/4" screws.

Drill clamp hole at junction of blocks, half way between screws.

Screw (#0-80) blocks to lathe thru clamp hole and turn outer diameter.

Steve Smith
Bustamante Group
phone 666-2761
steve@alice.berkeley.edu