


CONNECTIONS (to a UF1 v1.2 board) + POWER

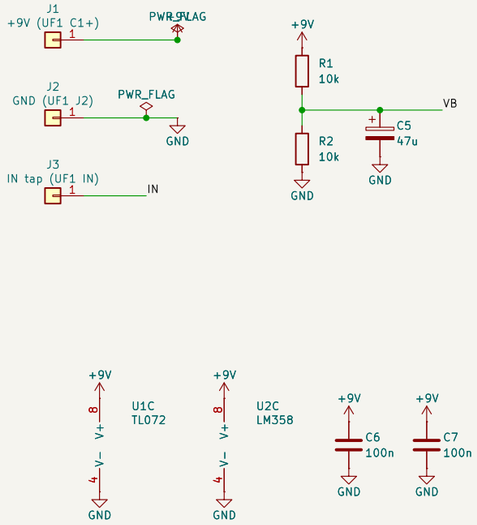


SIDECHAIN U1A: clean guitar x3 to x49 (SENS), optional soft compression; TILT high-pass ~220 Hz

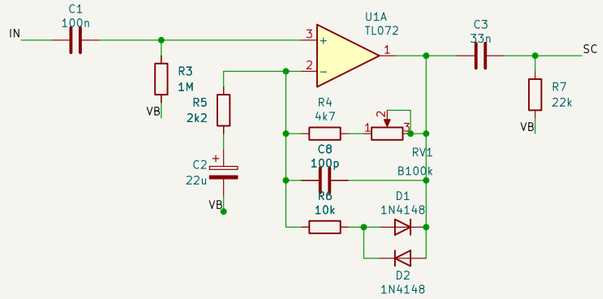


DETECTOR U1B: peak detector, attack ~1 ms, DECAY 10–500 ms

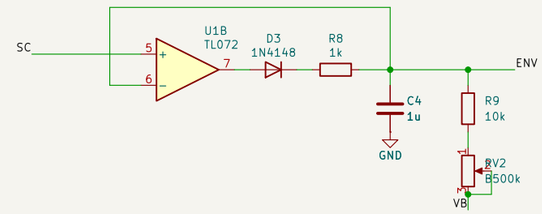

U2A (LM358): ENVD = 2 x (ENV − VB), referenced to GND; ENV unloaded

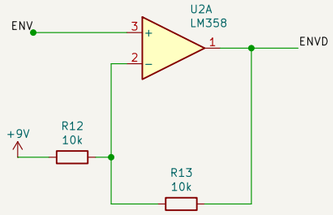

DRIVER U2B + Q1: current sink, I_LED = ENVD / 330 (0–18 mA)

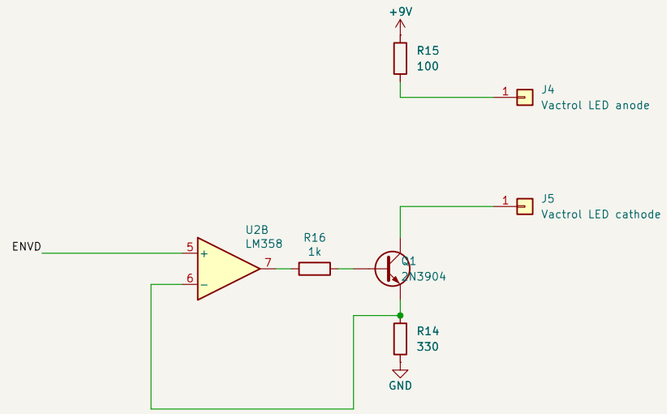

Hook-up to a UF1 v1.2 board:

1. +9V from C1 + (or the D1 cathode), GND from J2, IN tapped from the IN pad (J3 pin 1).

2. Unsolder the vactrol LED leads from U3 pads 1/2 and run them to J4 (anode) / J5 (cathode). Leave the LDR on pads 3/4.

3. ENV on the board then does nothing (its wiper is open). Use SENS here instead.

Start: SENS mid, DECAY mid, COMP parts out, TILT 33n. Compare low E vs high E, then try COMP and TILT 47n / 22n.

Breadboard add-on for a UF1 v1.2 board
Clean sidechain + tilt + peak detector + current-sink vactrol driver
Super-Freq
Sheet: /
File: EnvelopeA.kicad_sch

Title: Ugly Face 1: envelope idea A (breadboard)

Size: A3	Date:	**Rev: 0.1**
KiCad E.D.A. 10.0.4		Id: 1/1