CHRYSLER RWD '90-'03


PART NUMBER 12802-01

Chrysler RWD Primary Governor Valve

12802-01

1 Governor Valve

Note: If used to replace OEM steel valves, early upshifts may occur.

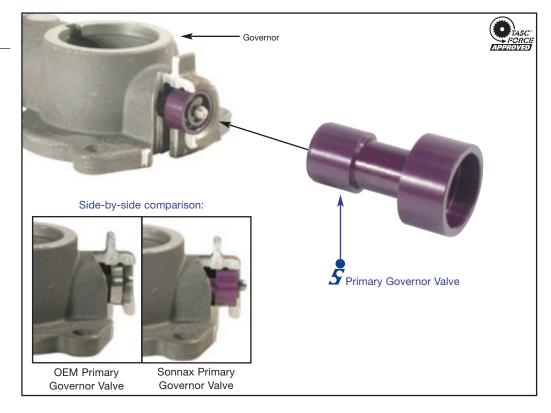

Instructions:

- 1. Disassemble governor assembly.
- 2. Inspect primary valve and bore.
- 3. Install the shaft with the e-clip on one end through the Sonnax primary governor valve into the governor body.
- 4. Install the OE weights on opposite side of the governor body.
- 5. Install e-clip.

