
PART NUMBER K77898A

"Factory Style" Large Reverse Boost Valve & Sleeve

K77898A

- 1 Boost Valve
- 1 Boost Sleeve

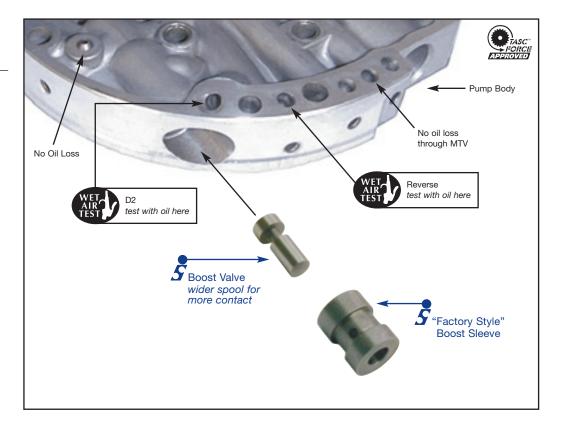

installation Instructions

Note: It is very common to find the pump bore worn, allowing cross-leakage past the sleeve. Use Sonnax **K77898** o-ring style boost valve kit to restore the hydraulic integrity of these pump bores and salvage the pump.

- 1. Remove the worn reverse boost valve assembly and discard.
- 2. Lubricate all replacement parts.
- 3. Install the replacement reverse boost valve assembly into the pump bore. To be sure of the proper sequence, refer to the illustration. Incorrect installation can result in soft 2-3 shifts, low line pressure, erratic shifts, and slipping in reverse.

