Aisin AW TR-60

PART NUMBERS 25741-01K, F-25741-TL

Oversized Pressure Regulator Valve & End Plug Kit

25741-01K



- Oversized Pressure Regulator Valve
- Pressure Regulator Spring
- Oversized End Plug


NOTE: Also fits VW/Audi 09D.

Tool Kit F-25741-TL



- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions are available at www.sonnax.com.

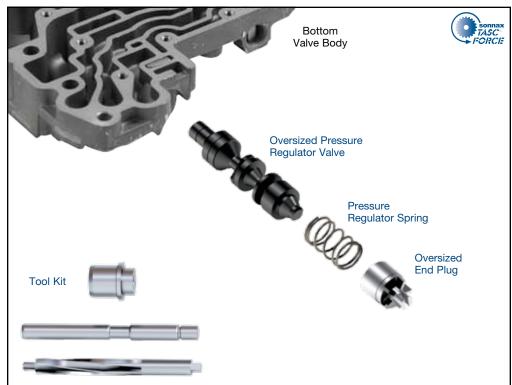

1. Disassembly

NOTE: Record the step location of the retainer on OE end plug prior to removal.

- a. Remove OE retainer and save for reuse.
- b. Remove and discard OE end plug, pressure regulator spring and valve.

2. Bore Preparation

- a. Clean the bore thoroughly in a solvent tank.
- b. Generously lubricate the bore and reamer with cutting fluid (i.e. Mobilmet S-122, Lubegard Bio-Tap, Tap Magic™, etc.). For best results, provide a continuous flow of water-soluble cutting fluid (i.e. Mobilment S-122) during the reaming process.
- c. The reamers should be turned using a low RPM, high-torque air drill regulated to a maximum of 200 RPM.
- d. Examine the bore after cleaning for surface finish, debris and burrs. Flashing and burrs on the exit side of land and bores must be carefully removed. A small piece of Scotch-Brite™ material attached to a wire and powered with a drill motor is ideal for the task. Scotch-Brite™ is a very abrasive material and all residual must be cleaned to insure particles do not migrate or remain imbedded into the surface. Post cleaning involves several progressive steps with solvent on a lint-free rag.

CAUTIONS AND SUGGESTIONS:

- · Turning the reamer backward will dull it prematurely.
- Pushing on the reamer will result in poor surface finish and inadequate and sporadic material removal.
- Never use a crescent wrench, ratchet or pliers to turn the reamer.
- A dull reamer will cut a smaller hole. Reamers can be sharpened, but should only be done by a professional tool sharpener. Actual life of a Sonnax reamer before resharpening or replacing averages 50-70 bores.




PART NUMBERS 25741-01K, F-25741-TL

INSTRUCTION DATA SHEET

3. Bore Reaming

Use the associated "F-Tool" kit F-25741-TL and VB-FIX reaming fixture as illustrated below to ream the bore.

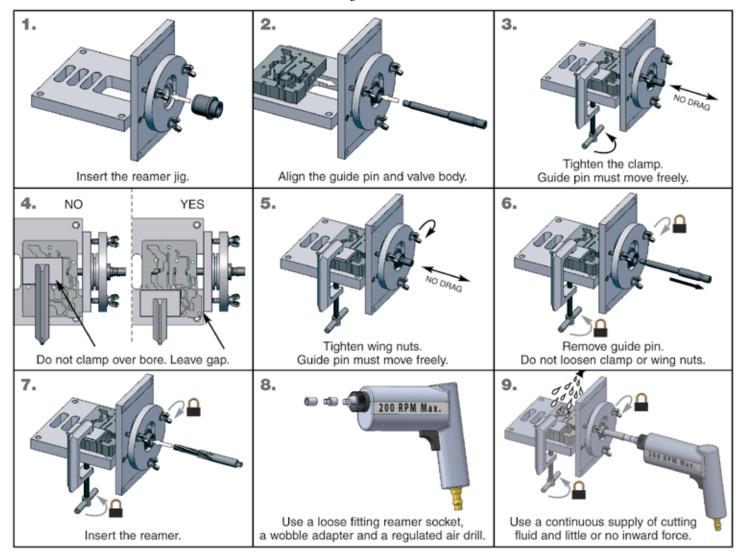

4. Installation & Assembly

- a. Install the Sonnax pressure regulator valve.
- b. Install the Sonnax pressure regulator spring.
- c. Install the Sonnax end plug.
- d. Install the OE retainer, ensuring it is set at the same step location on the replacement end plug.

5. Final Testing

A vacuum test at indicated ports should yield 18 in-hg or greater of vacuum.

