




C4 HIGH PERFORMANCE BOOST VALVE KIT

HIGH PERFORMANCE TRANSMISSION PARTS

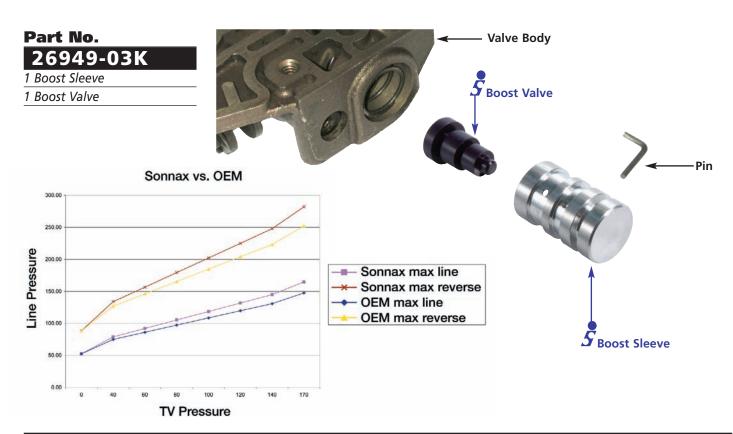

INSTALLATION INSTRUCTIONS

- 1. Remove and discard the OEM boost valve and sleeve.
- 2. Reassemble using the new Sonnax valve and sleeve.

Note: The valve spool ratios have been altered to provide increased line pressures at heavier throttle (see chart) for performance applications.

WET AIR TEST:

To check for a worn boost sleeve, perform the Wet Air Test. With the boost valve assembly still in the valve body, place a small amount of oil into the cutback circuit and follow with low air pressure. There should be little/no air or oil leakage out the reverse or TV ports.



©2005 Sonnax[®] 26949-03K(in) 06-23-05