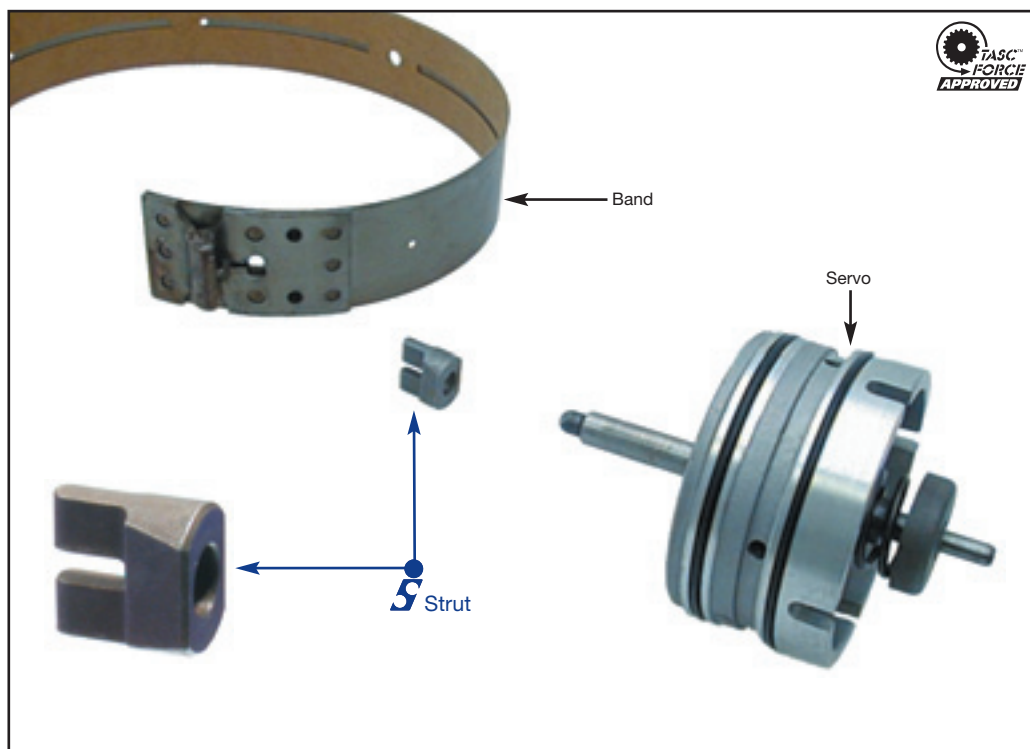## Servo Band Strut

69700-01
1 Servo Band Strut

Installation Instructions

1. Back off the adjustment screw.
2. Remove OEM band strut.
3. Install the Sonnax strut **69700-01**.
4. Reset the band adjustment to factory specifications by tightening the adjuster to 40-50 inch lbs. (2.5 or 2.5 turns) and backing off the adjuster 2.5 turns. Tighten the adjuster jamb nut, without altering the adjustment.

Note: Always Wet Air Test the 2nd, 3rd, and 4th servo circuits. There should not be any cross leakage. It is common for the pistons to crack, particularly the 4th piston.

sonnax
TIME TESTED • INDUSTRY TRUSTED