
PART NUMBER 36940-14K

Line Pressure Relief Capsule

36940-14K

1 Line Pressure Relief Capsule

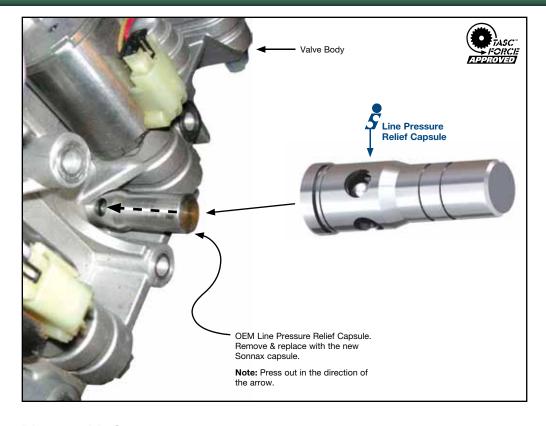

Disassembly Steps

Press the OEM capsule back out through the worm-track side of the casting (see dotted arrow above).

Installation/Assembly Steps

- 1. Carefully place a small amount of Loctite® into the noted OD groove on Sonnax capsule.
- 2. Press capsule into casting from the worm-track side, until flange is seated.

