PART NUMBER 39741-14K

Solenoid Modulator Accumulator Piston Kit


39741-14K

Two Locations

1 Accumulator Piston

1 O-Ring

Note: Fits Ford (AF21) and Mazda (AW6A-EL).

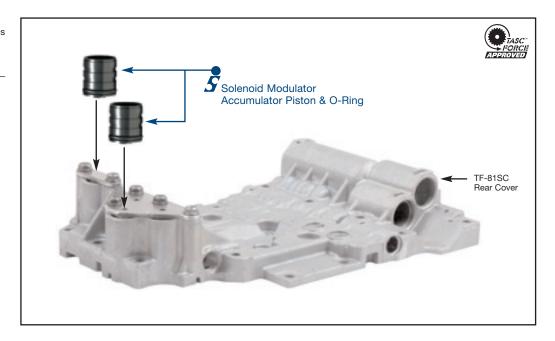

Installation Steps

- 1. Remove OEM piston and springs.
- 2. Discard piston.
- 3. Place o-ring in replacement piston groove, and roll on bench to size.
- 4. Install piston, o-ringed end first into bore.
- 5. Re-install OEM springs and retainer plates.

