46RH/RE A727 & 47


Part Numbers 22900-10, 22900-15

Oversized Band Strut

22900-10 1 Oversized Band Strut (.100")

22900-15

1 Oversized Band Strut (.150")

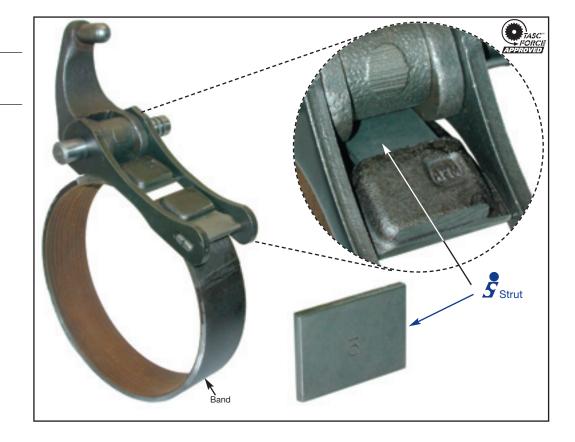

Installation Instructions

Guidelines to go by for a resurfaced drum, and new or relined band:

After the drum has been resurfaced, measure the outside diameter of the drum.

If the drum OD measures between 6.185" and 6.200", use the OEM strut.

If the drum OD measures between 6.170" and 6.185", use Sonnax 22900-10 strut (.100" longer).

If the drum OD measures less than 6.170" use the Sonnax 22900-15 strut (.150" longer). If the band will not apply with this strut, the drum must be replaced.

