
PART NUMBER 73949-01

Wiring Harness Connector Bracket

73949-01 1 Wiring Harness Connector Bracket

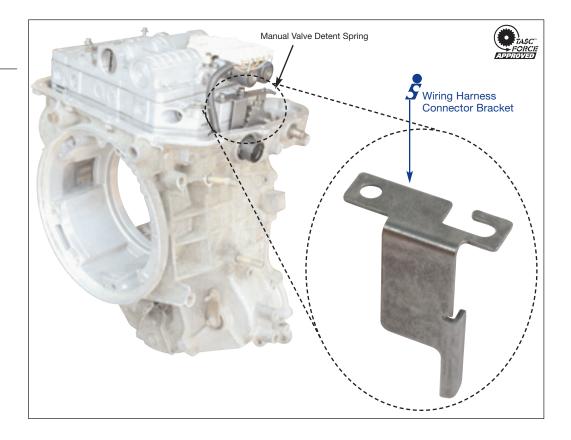

Installation Instructions

- 1. Install the bracket as shown in the picture above. The existing hardware can be used to install the bracket.
- 2. Bracket is secured in place using the manual valve detent spring bolt.
- 3. Remove the manual valve detent spring bolt to the left of the solenoids.
- 4. Loosen the manual valve detent spring bolt under the solenoids.
- 5. Hold connector in position and slide bracket down behind connector.
- 6. Reinstall removed bolt and retighten both bolts.

