## TV Cable Corrector<sup>TM</sup>

## Part No. AS1-01K


5 TV Cable Correctors

O

0

S

**Note:** Sonnax Part No. AS1-01K has U.S. Patent Numbers 5,638,721 and 5,727,425. Patent infringement will not be tolerated.

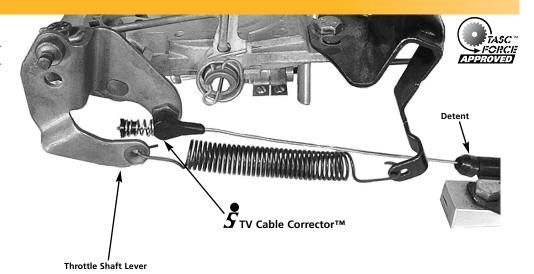

## **INSTALLATION INSTRUCTIONS**

- 1. Disconnect TV cable attachment element from throttle shaft lever.
- 2. Slide TV cable attachment element down TV cable slightly.
- 3. Slide spring over end of TV cable until it butts with the TV cable attachment element.
- 4. Slide TV cable above spring into slot of retainer, flanged end away from spring.
- 5. Slide spring over retainer until it snaps into place and butts with the retainer flange.
- 6. Reconnect the TV attachment element onto the throttle shaft lever.
- 7. When the throttle shaft lever is stroked by hand, the spring collapses fully. This is not a problem because the amount of pull is less when the engine is running. Thus the spring will not fully compress unless the throttle is stroked to full throttle position.



©2000 Sonnax Industries, Inc. AS1-01K(in)11-14-00