PART NUMBERS 84573-01K, -02K

Oversized Accumulator Pin & Reamer


84573-01K

4 Accumulator Pins

84573-02K

10 Accumulator Pins

1 Reamer

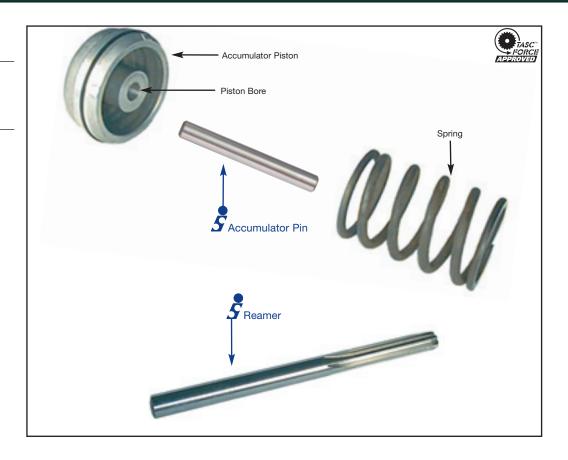

Installation Instructions

- 1. Remove piston and pin.
- 2. Ream piston bore using cutting oil (kerosene gives the best finish, and a drill press or ridged process gives best results).
- 3. Replace with Sonnax oversized pin.

