A43DE-46DE (03-71LE, 03-72LE)

PART NUMBERS 67754F-01K, -03K, -05K

AW Boost Valve & Sleeve Kits

67754F-01K


67754F-03K

67754F-05K

Each kit includes the following

- 1 Sleeve
- 1 Boost Valve

Note: Three different OEM boost ratios have been duplicated to best match the vehicle application. The adjustable steps at the ends of the boost sleeves have also been replicated for fine-tuning main line pressure. Refer to the chart for assembly configuration details.

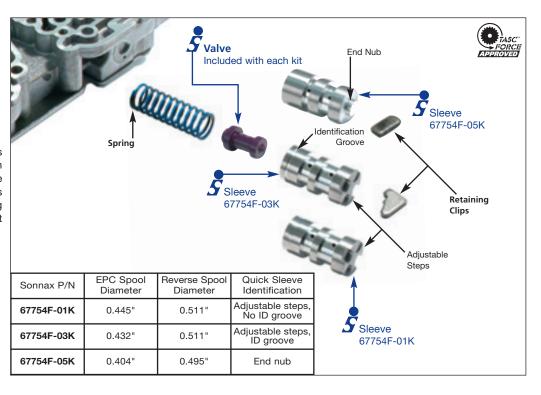



Wet Air Test

To Wet Air Test the boost valve assembly, place a small amount of oil into either the EPC or reverse casting port with valve assembly still in the valve body. Follow with low air pressure. There should be little or no cross leakage past the valve spools or leakage to exhaust.

Installation Instructions:

- 1. Take note of the position of the adjustable step (if applicable) on the original boost sleeve.
- 2. Remove the worn boost sleeve assembly and check spool diameters, then discard.
- 3. Choose a boost sleeve assembly from the chart that best matches the OEM diameter.
- 4. Insert the replacement boost sleeve assembly into the valve body.
- 5. If applicable, ensure that the adjustable step on the replacement sleeve is in the same location as the original sleeve.

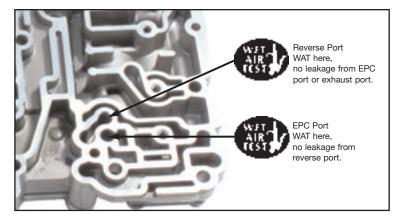

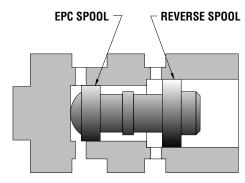

Boost Assembly Cross Section Example Details may vary per application

