RWD CHRYSLER (With 1/4" Pipe Fittings Only)

PART NUMBERS 22000-01, 22000-01K

Cooler Line Adapter Kit

22000-01K

Start-up Kit

5 Cooler Line Adapters 1 Tap


Note: For models with $\frac{1}{2}$ " pipe fittings only

22000-01

Replacement

1 Cooler Line Adapter



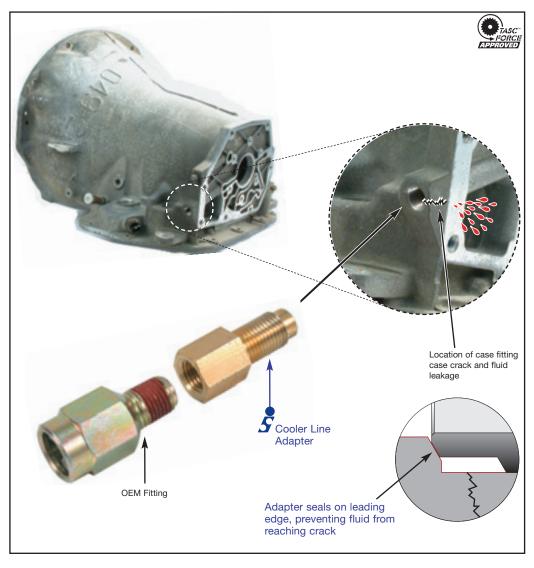



RWD CHRYSLER (With 1/4" Pipe Fittings Only)

PART NUMBERS 22000-01, 22000-01K

Instructions

- 1. Remove old fitting
- 2. Retap existing hole with tap provided until tap bottoms out. (See Figure 1.)
- 3. Clean hole of any remaining chips
- 4. Install Sonnax adapter and tighten lightly. Leading edge of Sonnax cooler line adapter will seal where tap bottomed. (See Figure 2.)
- 5. Remove and inspect end of adapter. Look for contact witness mark on adapter's leading edge. This edge contact is required to attain the seal and prevent leakage at crack.
- 6. Coat the threads with Loctite® Threadlocker (or equivalent) and reinstall and tighten Sonnax adapter securely.
- 7. Apply sealant to OEM fitting and thread into Sonnax cooler line adapter as shown in Figure 3.

