
PART NUMBER 15741-14K

Accumulator Piston Kit

15741-14K

- Accumulator Piston
- O-Ring

NOTE: Fits Volvo (AM6), Opel (AF40), Peugeot (TF80), Saab (AF40/6), Land Rover (TF80), Ford (AF21), Mazda (AW6A-EL), BMW (6F21WA) & VW/Audi (09G, 09K, 09M, 09D).

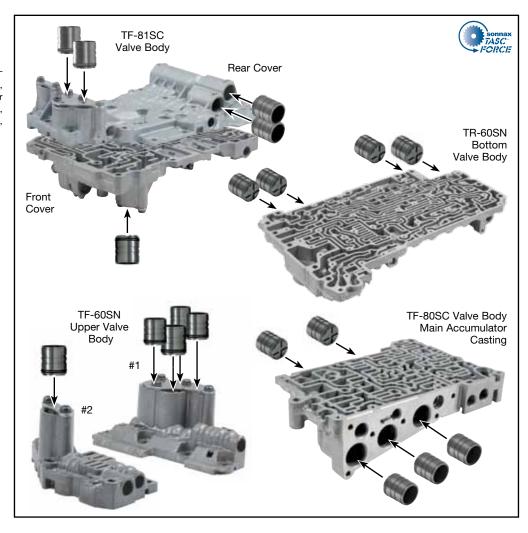

1. Disassemby

- a. Remove OE piston and discard.
- b. Remove OE spring and retain for future use.

2. Installation & Assembly

- a. Place the Sonnax O-ring in the Sonnax piston groove and roll on bench to size.
- b. Install piston, O-ringed end first into bore.
- c. Reinstall OE spring.

3. Final Testing

A vacuum test at the port locations shown should hold 18" of vacuum or more.

