PART NUMBER 35012S


## **Oversized Rear Case Bushing**

**35012S** 

5 Rear Case Bushings



Note: Requires advanced machining skills.

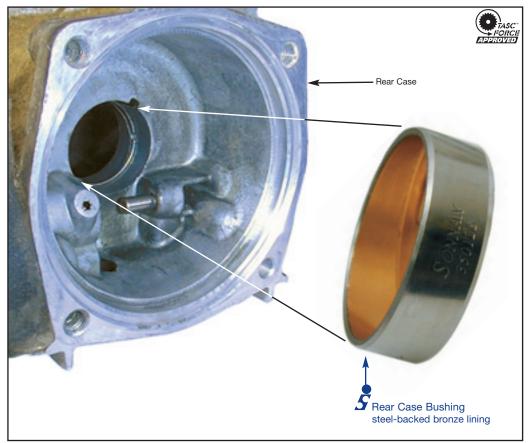

## **Instructions**

- 1. Remove spun OEM bushing from transmission case.
- 2. Bore bushing bore diameter to 1.8221"/1.8231".
- 3. Clean any chips from the bore.
- 4. Install oversized bushing.
- 5. After installing the bushing, confirm that the correct clearance has been maintained between the bushing and output shaft.

