
PART NUMBER 34016-W

Wide Front Stator Support Bushing

34016-W

4 Bushings

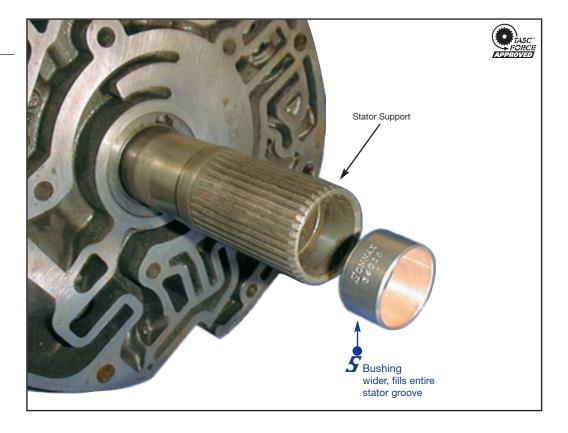

Installation Instructions

- 1. Remove worn bushing from the front of the stator support.
- 2. Press in Sonnax replacement bushing.
- 3. Check fit between bushing I.D. and input shaft. In some cases, it may be necessary to hone the bushing I.D. slightly for proper fit, due to stator shaft window.

