## 2-46-47RH


**PART NUMBER 12783-01K** 

## **Overdrive Set-Up Shim Kit**

## 12783-01K

1 Primary Washer

3 Shims

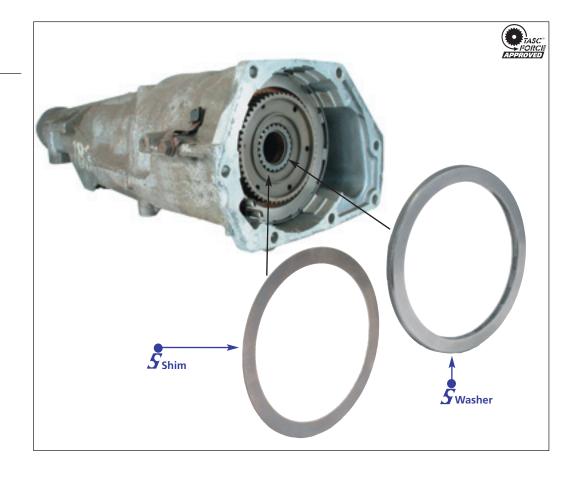

## **Instructions:**

Combine .175" thick primary washer with the necessary number of .010" shims to equal the thickness needed for desired overdrive end clearance. Place .010" thick shims onto the piston first, and then the .175" thick washer. Hold shims in place with assembly lube.

