
PART NUMBER 77010-01

Wide Reaction Sun Gear Bushing

77010-01

1 Wide Reaction Sun Gear Bushing

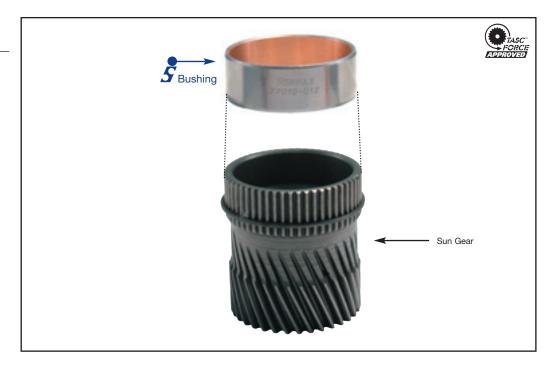

Instructions

1. Install bushing per normal shop practices.

Note: The Sonnax bushing is designed to maintain minimal clearance between the bore and the mating shaft to greatly enhance the life of the bushing. As a result, there may be situations where the mating shaft and bushing don't fit due to some small interference. In this instance, carefully polish the bushing bore with fine emery cloth or a fine abrasive hand pad until the shaft fits in the bushing.

