
VARIOUS FORD (1356 MANUAL SHIFTS ONLY)

PART NUMBER 36605-01

Transfer Case Saver Spacer

36605-01 5 Case Saver Spacers

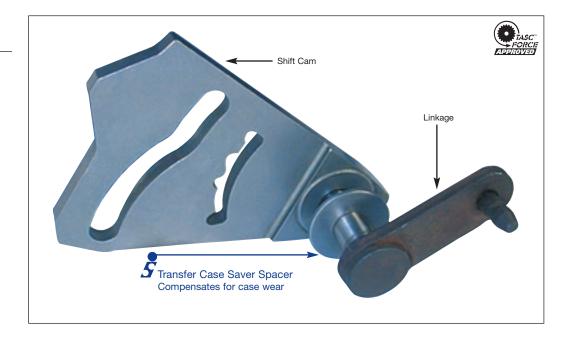

Installation Instructions:

- 1. Remove linkage from the case.
- 2. Grind roughly .050" (half the thinkness of the case saver spacer) from the end of the linkage that protrudes through the cam. Do this for the additional clearance needed to install the case save spacer.
- 3. Reassemble the linkage with the addition of the case save spacer.

