
PART NUMBER 34918-01K

Case Cooler Line Conversion Kit

34918-01K

- 1 Case Cooler Line
- 1 Adapter
- 1 O-Ring
- 1 Elbow Fitting

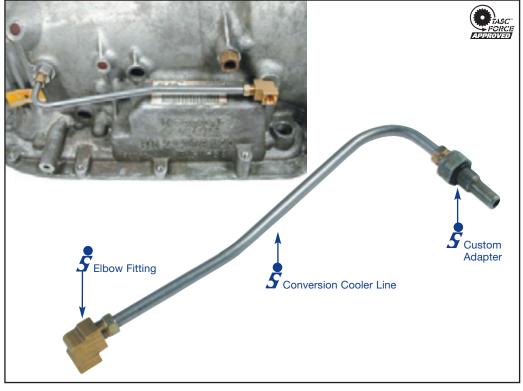

Instructions:

- 1. Remove the original quick-connect style rear cooler line case fitting.
- 2. Assemble 90° fitting to tube as shown in photo below.



- 3. Install case fitting with o-ring into case.
- 4. Install Sonnax line and 90° fitting as shown in photo below.



