

45RFE **545RFE/68RFE**

Remanufactured Solenoid Blocks

Part No.

45RFE/545RFE '99-'03, Early Style

44836


1 Solenoid Block

Part No.

45RFE/545RFE/68RFE '04-Up, Late Style

44836

1 Solenoid Block

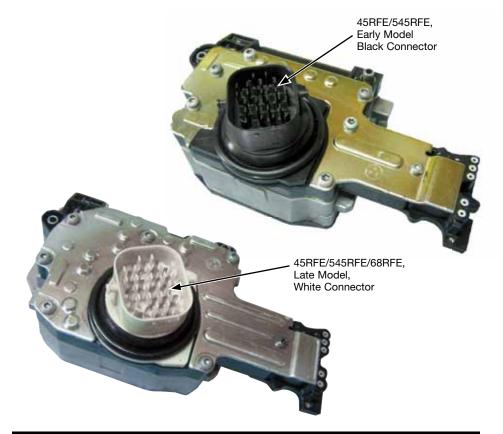

INSTRUCTION

- 1. Install the bolts to hold the Solenoid and pressure switch assembly onto the valve body.
- 2. Tighten the bolts adjacent to the arrows cast into the bottom of the transfer plate first. Tighten the bolts to 5.7 N-m (50 in-lbs.).

Did You Know?

We will buy your old 5R55N/W/S and 45RFE/545RFE, 68RFE Solenoid cores!

Visit www.sonnax.com or call (800) 843-2600, Ext. 379, for more information.



©2010 Sonnax Industries, Inc.

44836 Rev.-; 44836A Rev.-; 44836-IN

03-31-10