

## **POWERGLIDE**

## **OIL FILTER EXTENSION KITS**

HIGH PERFORMANCE TRANSMISSION PARTS

#### Part No. 28801-509K

For mounting a Powerglide oil filter to the Powerglide valve body

# Part No. 28801-S10K

For mounting a Chrysler TorqueFlite oil filter to the Powerglide valve body

# Part No. 28801-S11K

For mounting a Chrysler TorqueFlite oil filter to an aluminum Hipster valve body

Also available:


### Part No.

**28801-S**Powerglide Oil Pan

## Part No.

#### 28711-01K

Powerglide Oil Pan Stud Kit

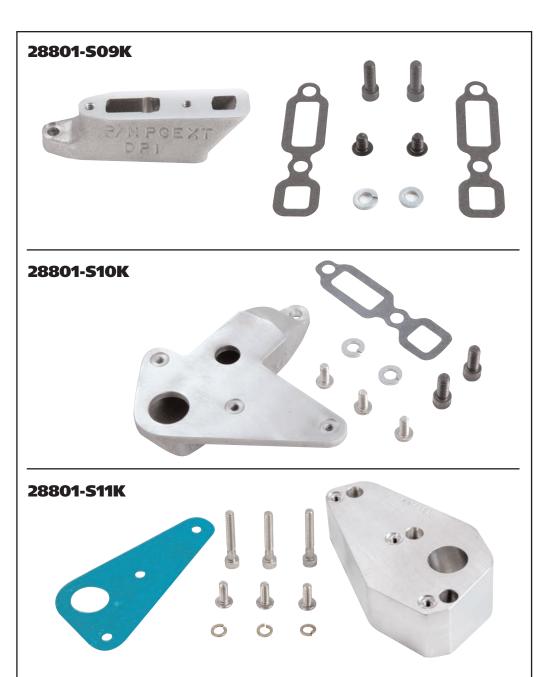



## **POWERGLIDE**

### **INTALLATION INSTRUCTIONS**


#### **OIL FILTER EXTENSION KITS**

#### 28801-S09K

#### Powerglide oil filter to Powerglide valve body (see Figure 1)

- 1. Remove and discard the existing filter, filter gasket and filter mounting hardware.
- 2. Thoroughly clean the filter mounting surface on the valve body by removing any dirt, sludge or remaining gasket material.
- 3. Mount the oil filter extension (Item 1). Place a filter gasket (Item 2) between the extension and the filter mounting surface of the valve body. Fasten the extension using the 1/4"-20 x 3/4" socket head cap screws (Item 3) and lock washers (Item 4).
- 4. Mount a new oil filter (Item 6) to the extension placing a filter gasket between the filter and the extension. Fasten the filter using the 1/4"-20 x 3/8" button head cap screws (Item 5).

Note: The new filter is not included in the kit.

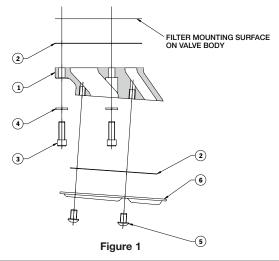


#### 28801-S10K

# Chrysler TorqueFlite oil filter to Powerglide valve body (see Figure 2)

- Remove and discard the existing filter, filter gasket and filter mounting hardware.
- Thoroughly clean the filter mounting surface on the valve body by removing any dirt, sludge or remaining gasket material.
- 3. Mount the oil filter extension (Item 1). Place the gasket (Item 2) between the extension and the filter mounting surface of the valve body. Fasten the extension using the 1/4"-20 x 5/8" socket head cap screws (Item 3) and lock washers (Item 4).
- 4. Mount a Chrysler oil filter (Item 6) to the extension using the  $10-24 \times 1/2$ " button head cap screws (Item 5).

Note: The new filter is not included in the kit.

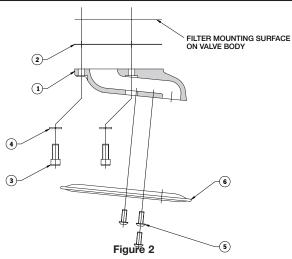


#### 28801-S11K

# Chrysler TorqueFlite oil filter to aluminum Hipster valve body (see Figure 3)

- 1. Remove and discard the existing filter, filter gasket and filter mounting hardware.
- Thoroughly clean the filter mounting surface on the valve body by removing any dirt, sludge or remaining gasket material.
- 3. Mount the oil filter extension (Item 1). Place the gasket (Item 2) between the extension and the filter mounting surface of the valve body. Fasten the extension using the 10-24 x 1-1/4" socket head cap screws (Item 3) and lock washers (Item 4).
- 4. Mount a Chrysler oil filter (Item 6) to the extension using the  $10-24 \times 1/2$ " button head cap screws (Item 5).

Note: The new filter is not included in the kit.

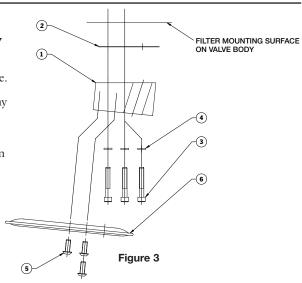

©2006 Sonnax®

28801-S09K, -S10K, -S11K (in) 09-05-07