


Part Number 56521-K

Rear Band Anchor Pin Kit

56521-K 10 Oversized Pins 1 Reamer

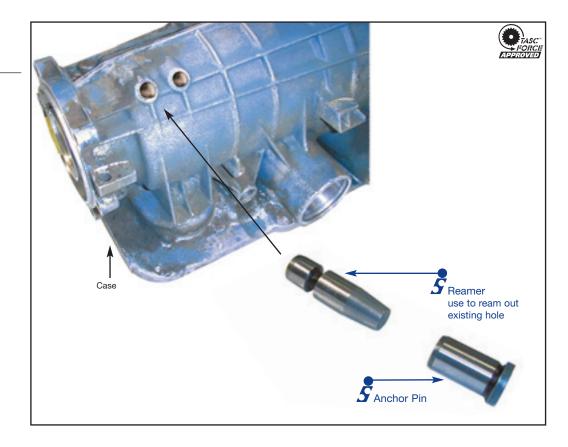

Installation Instructions

- 1. Remove the loosened original pins from the case.
- 2. Insert the chamfered end of the reamer into the worn bore. With short strokes to avoid cracking the case and ensure a clean pilot hole, hammer it through the hole. Once through, the tapered end of the reamer allows it to fall out into the case.
- 3. Install the oversized pins into the newly enlarged holes.

