Parts list, left to right, top to bottom:

4x 16mm M2.5 screws

4x 5mm M2.5 standoffs female/female

4x 12mm M2.5 standoffs female/female

4x 10mm M2.5 standoffs male/female


4x 6mm M2.5 screws

bottom acrylic plate


top acrylic plate



Peel the protective paper off of the acrylic plates.

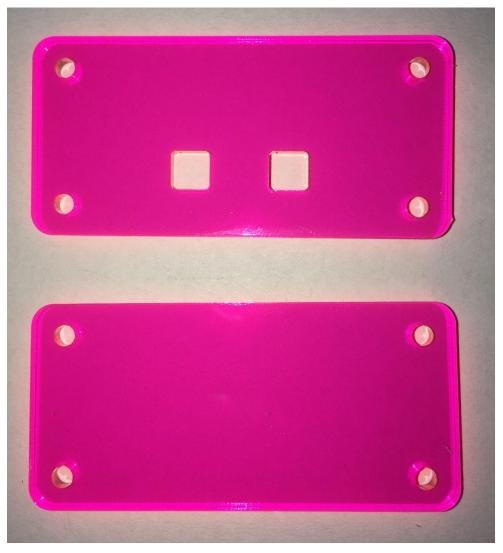


Thread the four 16mm screws through the holes on the bottom plate and into the 5mm standoffs.

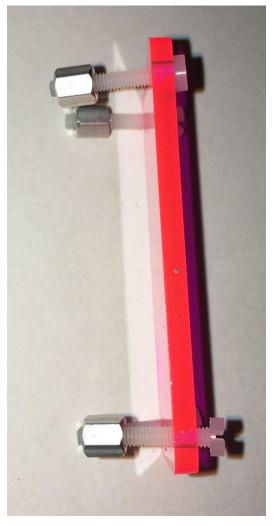




Place the four 12mm standoffs in the featherwing assembly, and screw the assembly from above into them.

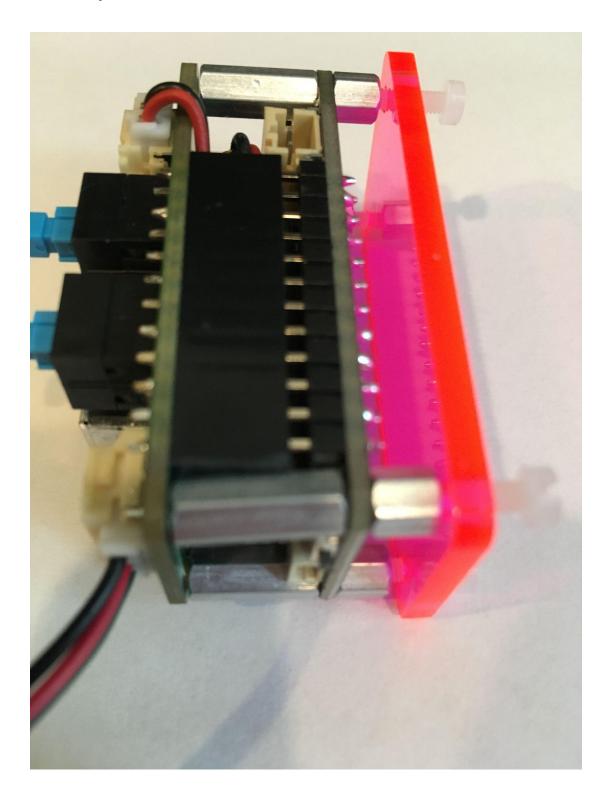

Screw the 10mm standoffs through the board and into the 12mm standoffs.

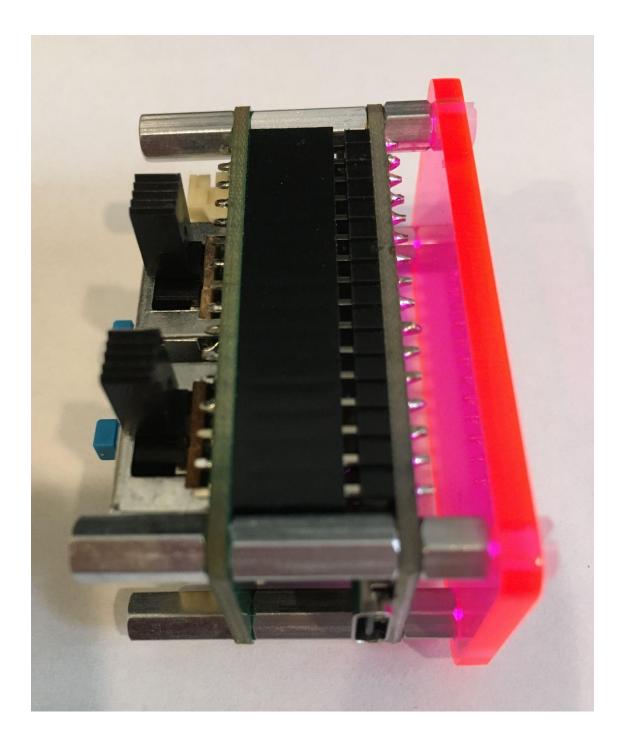

Finally, screw the top plate with the four 6mm screws onto the assembly.

