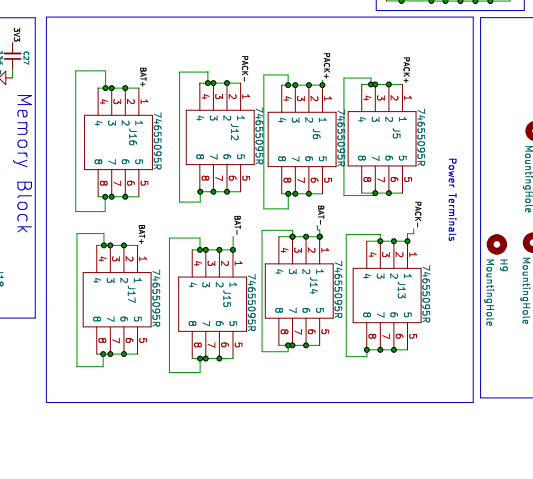
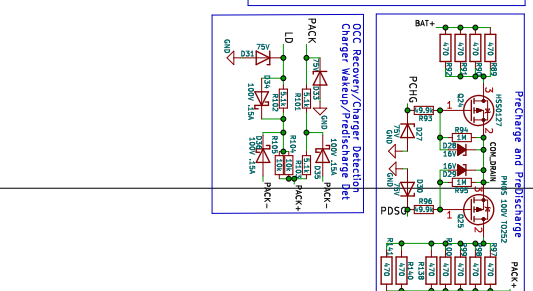
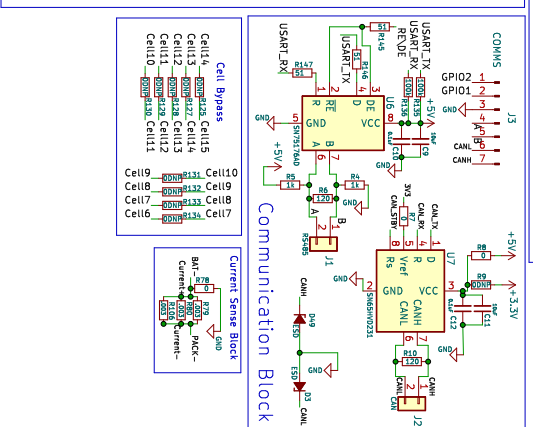
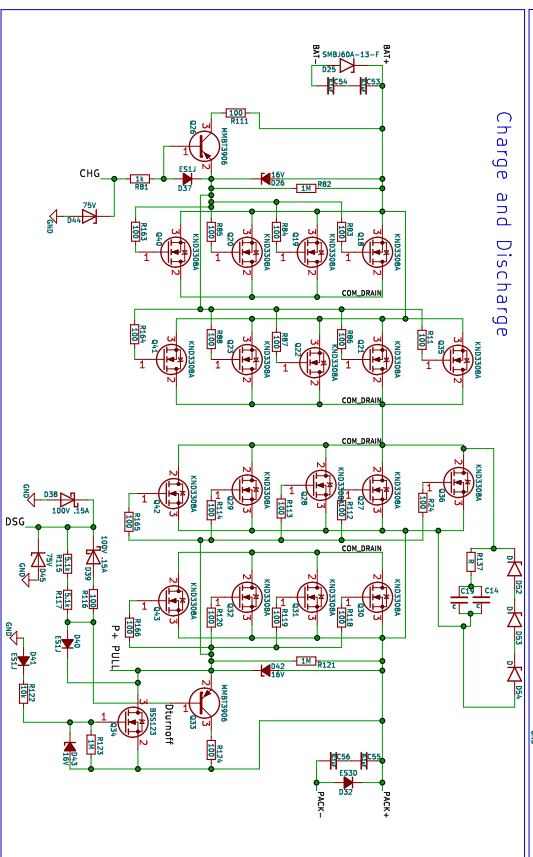
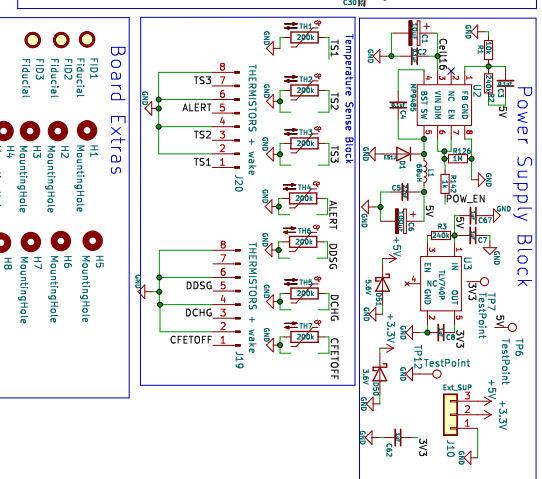
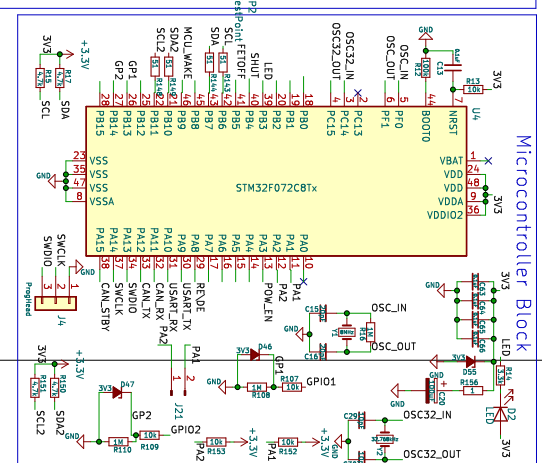
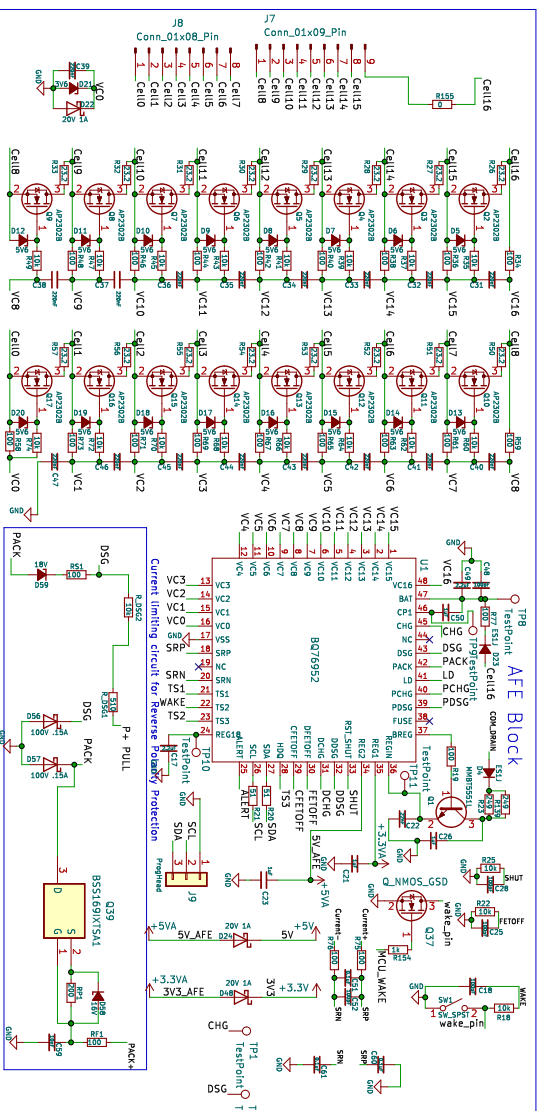


1. Place 0.1uF capacitors from SRP to GND and SRN to GND to suppress transients
2. Noise on FETOFF and SHUT causing random AFE reset during SCD test.
3. Connect 0 ohm to R25,R22,C25,C28 to directly ground FETOFF and SHUT pins to avoid noise.
4. R103,R104,R105,R115,R117 were heating during reverse polarity