


Dikey BYD central control flowing light smart button installation instructions

Accessories




Installation steps

Note: No need to remove the screen when loading, no original car parts removed, install without damage!

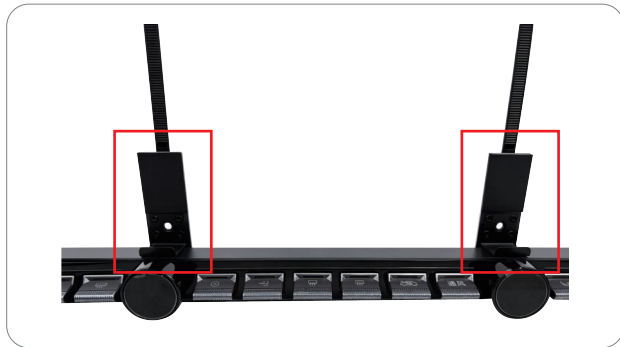

01

Attach the bracket to the front physical button, making sure the bracket hook faces upwards and the bracket screw hole aligns with the screw hole on the back of the button knob

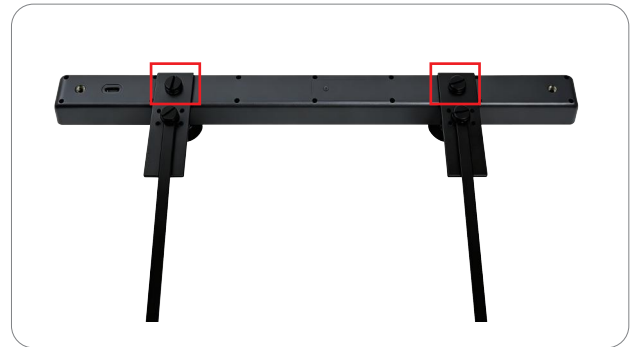


02

Take the screw to tighten the bracket on the physical button



03

Install the physical buttons with the bracket properly attached, centred under the screen, and route the zip ties upwards towards the back of the screen

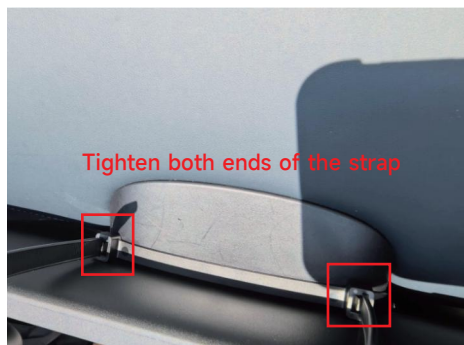

04

Take the shorter cable tie, place it flat side down, loop it through the ties on both sides and tighten it

Note: Make sure the cable tie teeth face inward and cut off any excess tail



05

Plug the power cable into the TYPE-C port on the back (or side) of the button, and plug the other USB end into the car's USB port. Hide the cable properly and the installation is done.

Dikey BYD central control flowing light smart button installation instructions

