


BATT- and VSS must be as near together as possible!
Between each of these pins a max. voltage drop of 10mV is allowed.

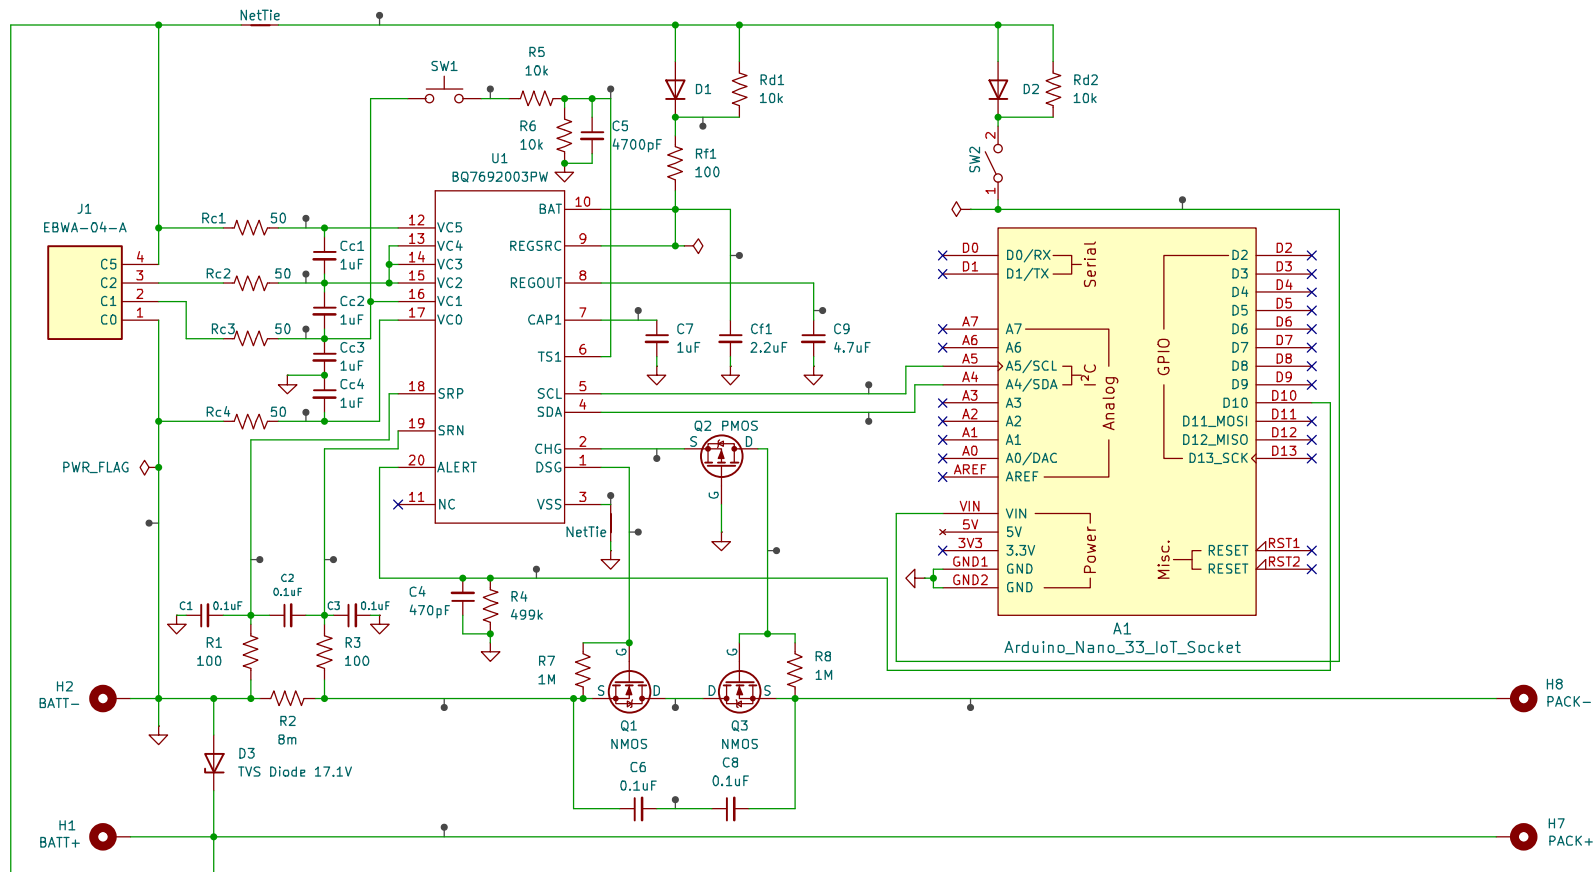

BQ76920 Power Bank Schematic

Sheet: /
File: Powerbank.kicad_sch

Created by: Léon Becker

Size: A4 Date: 2024-02-26
KiCad E.D.A. 8.0.0

Rev: 1.0
Page: 1/1

Measurement: single cell voltages, pack voltage, coulomb counter, die thermistor, receive ALERT signal
Protection: over-voltage (OV), under-voltage (UV), over-current in discharge (OCD), short-circuit in discharge (SCD)
Control: CHG, DSG, cell balancing, sent ALERT signal