




Cut PWR trace to disable power LED.

Connectors





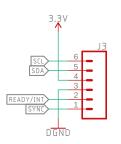







Released under the Creative Commons Attribution Share-Alike 4.0 License https://creativecommons.org/licenses/by-sa/4.0/



TITLE: SparkFun_Qwiic_Mini_UV_Sensor_AS7331

Design by: Alex Brudner

REV: v10

Date: 10/24/2023 10:59 AM

Sheet: 1/1