# SCR1 External Architecture Specification

Syntacore, info@syntacore.com

Version 1.1.4, 2017-10-10

# **Table of Contents**

Revision history	1
1. Overview	2
1.1. MIMPID (core implementation ID)	2
1.2. Features	2
1.3. Core configuration	3
1.4. Block Diagram	5
2. Privilege Levels	7
3. Registers	8
3.1. General-purpose Integer Registers	8
3.2. Control and Status Registers	9
3.2.1. Overview and definitions	9
3.2.2. CSR Map	10
3.2.3. User Mode CSRs	12
3.2.4. Machine Mode Standard CSRs	13
3.2.4.1. MVENDORID [0xF11]	13
3.2.4.2. MARCHID [0xF12]	13
3.2.4.3. MIMPID [0xF13]	13
3.2.4.4. MHARTID [0xF14]	13
3.2.4.5. MSTATUS [0x300]	13
3.2.4.6. MISA [0x301]	13
3.2.4.7. MIE [0x304]	14
3.2.4.8. MTVEC [0x305]	14
3.2.4.9. MSCRATCH [0x340]	15
3.2.4.10. MEPC [0x341]	15
3.2.4.11. MCAUSE [0x342]	15
3.2.4.12. MTVAL [0x343]	16
3.2.4.13. MIP [0x344]	16
3.2.4.14. MCYCLE/MCYCLEH [0xB00/0xB80]	17
3.2.4.15. MINSTRET/MINSTRETH [0xB02/0xB82]	17
3.2.5. Machine Mode Non-standard CSRs	18
3.2.5.1. MCOUNTEN [0x7E0]	18
3.2.5.2. DBG_SCRATCH [0x7C8]	18
3.2.5.3. IPIC registers [0xBF00xBF7]	18
3.2.5.4. BRKM registers [0x7C00x7C7]	18
3.2.6. Memory-mapped CSRs	19
3.2.6.1. TIMER_CTRL [TIMER_BASE]	19
3.2.6.2. TIMER_DIV [TIMER_BASE + 0x4]	19
3.2.6.3. MTIME/MTIMEH [TIMER BASE + 0x8/TIMER BASE + 0xC]	19

3.2.6.4. MTIMECMP/MTIMECMPH [TIMER_BASE + 0x10/TIMER_BASE + 0x14]	. 19
4. Memory Model	. 20
4.1. Bit and byte order	. 20
4.2. Data access width and alignment	. 20
4.3. Stack behavior	. 21
4.4. Memory access ordering	. 21
4.5. System memory map	. 21
4.6. Tightly-Coupled Memory	. 23
5. Exceptions	. 24
6. Integrated Programmable Interrupt Controller	. 25
6.1. Introduction	. 25
6.2. IPIC Block Diagram and description	. 26
6.3. IPIC Programming Model	. 26
6.3.1. Register Map	. 26
6.4. Detailed IPIC Registers Description	. 27
6.4.1. IPIC_CISV: Current Interrupt Vector in Service	. 27
6.4.2. IPIC_CICSR: Current Interrupt Control Status Register	. 28
6.4.3. IPIC_IPR: Interrupt Pending Register	. 28
6.4.4. IPIC_ISVR: Interrupt Serviced Register	. 29
6.4.5. IPIC_EOI: End Of Interrupt	. 29
6.4.6. IPIC_SOI: Start Of Interrupt	. 29
6.4.7. IPIC_IDX: Index Register	. 29
6.4.8. IPIC_ICSR: Interrupt Control Status register.	. 30
6.5. IPIC timing diagrams	. 31
7. Breakpoint Module	. 32
7.1. BRKM registers description	. 32
7.1.1. BPSELECT [0x7C0]	. 32
7.1.2. BPCONTROL [0x7C1]	. 32
7.1.3. BPLOADDR [0x7C2]	. 34
7.1.4. BPHIADDR [0x7C3]	. 34
7.1.5. BPLODATA [0x7C4]	. 34
7.1.6. BPHIDATA [0x7C5]	. 34
7.1.7. BPCTRLEXT [0x7C6]	. 34
7.1.8. BRKMCTRL [0x7C7]	. 35
8. Debug	. 36
8.1. TAPC Block Diagram	. 36
8.2. TAP Controller (TAPC)	. 36
8.2.1. TAPC Intoduction	. 36
8.2.2. TAP Controller Instructions	. 37
8.2.2.1. TAP Controller Instructions Overview	. 37
8.2.2.2. Public Instructions	. 38

8.2.2.3. Private Instructions	38
8.2.3. TAP Controller Data Registers	41
8.2.3.1. Overview	41
8.2.3.2. DBG_ID_DR	42
8.2.3.3. BLD_ID_DR	42
8.2.3.4. TARGET_ID_DR	42
8.2.3.5. DBG_STATUS_DR	44
8.2.3.6. DAP_CTRL_DR	45
8.2.3.7. DAP_CTRL_RD_DR	45
8.2.3.8. DAP_CMD_DR	45
8.2.3.9. SYS_CTRL_DR	46
8.2.3.10. MTAP_SWITCH_DR	
8.2.3.11. IDCODE_DR	
8.2.3.12. BYPASS_DR	
8.2.3.13. DAP_CONTEXT	
8.2.3.14. DAP_OPCODE	
8.2.3.15. DAP_OPSTATUS	50
8.2.3.16. DAP_DATA	50
8.3. Debug Controller	
8.3.1. Register Reference	
8.3.1.1. Overview	
8.3.1.2. HART Debug Registers	
8.3.1.3. HART Capability CSR	
8.3.1.4. Core Debug Registers	
9. External Interfaces	59
9.1. AHB-Lite Interface	59
9.2. AHB-Lite Timing diagrams	60
9.3. AXI4 Interface	61
9.4. AXI4 Timing diagrams	68
9.5. Control Interface	
9.6. JTAG Interface	
9.7. IRQ Interface	
10. Clocks and Resets	72
10.1. Clock Distribution	72
10.2. Power saving features	73
10.3. Core Reset Circuit	74
11. Initialization	
11.1. Reset.	75
11.2. C-runtime code example	
12. Instruction set summary	
Referenced documents	84

# **Revision history**

Revision	Date	Description	
1.0.0	2017-05-08	Initial version	
1.0.1	2017-05-09	The reference links fixed, Instruction List tables updated	
1.1.0	2017-07-12	Updated to comply with privileged ISA specification v1.10 and user ISA specification v2.2	
1.1.1	2017-08-18	Changed debug scratch CSR address; updated core configuration chapter; TAPC Target_ID register added.	
1.1.2	2017-09-07	Changes to timer registers	
1.1.3	2017-09-14	Partially writable MTVEC CSR	
1.1.4	2017-10-10	Added AXI4 interface	

# 1. Overview

## 1.1. MIMPID (core implementation ID)

This specification is relevant for SCR1 core with MIMPID value of 0x17101000.

## 1.2. Features

Summary of key features:

- Harvard architecture (separate instruction and data buses)
- Machine privilege level
- 32 or 16 32-bit general purpose integer registers
- Instruction set is RV32I/RV32E with optional M and C extensions
  - 47 Integer (32-bit) instructions
  - 27 Compact (16-bit) instructions
  - 8 Multiply/Divide instructions
- Configurable high-performance or area-optimized multiply/divide unit
- Configurable 2 to 4 stage pipeline implementation
- 32-bit AXI4/AHB-Lite external memory interface
- · Tightly coupled memory support
- Optional Integrated Programmable Interrupt Controller
  - Low interrupt latency
  - up to 16 IRQ lines
- · Optional Debug Controller with JTAG interface
- Optional Hardware Breakpoint Module
- 3 embedded 64bit performance counters
  - Real time clock
  - Cycle counter
  - Instructions-retired counter
- · Optimized for area and power consumption

# 1.3. Core configuration

The core features a number of configurable parameters described in Table 1. These parameters can be changed in  $scr1\_arch\_description.svh$  include file.

- for on/off parameters, comment/uncomment the `define directive
- for numeric parameters, change the SystemVerilog parameter value

Table 1: Core configurable parameters

Name	Default value	Description
	Core	parameters
SCR1_RVE_EXT	off	off - RV32I base integer instruction set on - RV32E base integer instruction set
SCR1_RVM_EXT	on	Enables integer mul/div extension
SCR1_RVC_EXT	on	Enables compressed instruction set extension
SCR1_IFU_QUEUE_BYPASS	on	Enables pipeline bypass on instruction fetch unit queue
SCR1_EXU_STAGE_BYPASS	on	Enables pipeline bypass on execution unit stage
SCR1_FAST_MUL	on	off - multi-cycle multiplication on - single-cycle multiplication
SCR1_CLKCTRL_EN	off	Enables global clock gating mechanism (to use this option for synthesis, clock gate model in <code>src/core/primitives/scr1_cg.sv</code> should be replaced by implementation-specific clock gate code)
SCR1_DBGC_EN	on	Enables debug controller (see Debug)
SCR1_BRKM_EN	on	Enables breakpoint module (see Breakpoint Module)
SCR1_IPIC_EN	on	Enables IPIC (see Integrated Programmable Interrupt Controller)
SCR1_IPIC_SYNC_EN	on	Enables IPIC input synchronizer
SCR1_VECT_IRQ_EN	off	Enables vectored interrupt mode (see MTVEC [0x305])
SCR1_CSR_MCOUNTEN_EN	on	Enables custom MCOUNTEN CSR (see MCOUNTEN [0x7E0])
SCR1_ARCH_RST_VECTOR	0x200	Reset vector
SCR1_ARCH_CSR_MTVEC_BASE _RST_VAL	0x1C0	Base trap vector reset value (see MTVEC [0x305])
SCR1_CSR_MTVEC_BASE_RW_BI TS	26	Number of writable high-order bits in MTVEC BASE field (legal values 0 to 26)
	Uncore	e parameters
SCR1_TCM_EN	on	Enables TCM (see Tightly-Coupled Memory)

Name	Default value	Description
SCR1_IMEM_AHB_IN_BP	on	Bypass instruction memory AHB bridge input register
SCR1_IMEM_AHB_OUT_BP	on	Bypass instruction memory AHB bridge output register
SCR1_DMEM_AHB_IN_BP	on	Bypass data memory AHB bridge input register
SCR1_DMEM_AHB_OUT_BP	on	Bypass data memory AHB bridge output register
SCR1_IMEM_AXI_REQ_BP	on	Bypass instruction memory AXI bridge request register
SCR1_IMEM_AXI_RESP_BP	on	Bypass instruction memory AXI bridge response register
SCR1_DMEM_AXI_REQ_BP	on	Bypass data memory AXI bridge request register
SCR1_DMEM_AXI_RESP_BP	on	Bypass data memory AXI bridge response register
SCR1_TCM_ADDR_MASK *	0xFFFF0000	TCM address mask for instruction/data memory
SCR1_TCM_ADDR_PATTERN *	0x00480000	TCM address pattern for instruction/data memory, also TCM base address
SCR1_TIMER_ADDR_MASK *	0xFFFFFE0	Timer address mask for data memory
SCR1_TIMER_ADDR_PATTERN *	0x00490000	Timer address pattern for data memory, also timer base address

<sup>\*</sup> select = ((address & mask) == pattern)

NOTE

Currently BRKM requires DBGC and vice versa, so both options should be either enabled or disabled.

# 1.4. Block Diagram

The core is load-store architecture, where only load and store instructions access memory and arithmetic instructions only operate on integer registers. The core provides a 32-bit user address space that is byte-addressed and little-endian. The execution environment will define what portions of the address space are legal to access.

Block diagram of the core is shown in Figure 1.

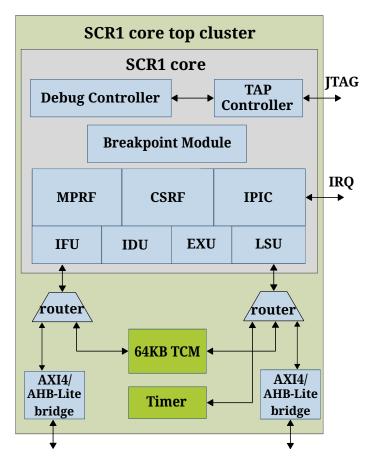


Figure 1: SCR1 Block Diagram

#### SCR1 core contains:

- Instruction Fetch Unit (IFU)
- Instruction Decode Unit (IDU)
- Execution Unit (incl. integer ALU) (EXU, IALU)
- Load-Store Unit (LSU)
- Multi-port register file (MPRF)
- Control/Status register file (CSRF)
- Integrated programmable interrupt controller (IPIC)
- Hardware Breakpoint Module (BRKM)
- Tightly-coupled memory (TCM)
- External AXI4/AHB-Lite instruction memory interface

- External AXI4/AHB-Lite data memory interface
- Debug Subsystem:
  - Test access point controller (TAPC)
  - Debug Controller (DBGC)

# 2. Privilege Levels

The core implements only one of four RISC-V privilege levels defined in [2] as shown in Table 2.

Table 2: Implemented privilege levels

Numeric level	2-bit encoding	Level name / Mode	Implementation
0	00	User level / U-mode	No
1	01	Supervisor level / S-mode	No
2	10	<b>H</b> ypervisor level / H-mode	No
3	11	<b>M</b> achine level / M-mode	Yes

The machine level has the highest privileges. Code running in machine-mode (M-mode) is inherently trusted, as it has low-level access to all implemented functions of the core.

The core runs any application code in M-mode. Some trap, such as exception or asynchronous external interrupt, forces a switch to a trap handler, which runs in the same privilege mode. The core will then execute the trap handler, which will eventually resume execution at or after the original trapped instruction.

# 3. Registers

# 3.1. General-purpose Integer Registers

Figure 2 shows the user-visible general-purpose integer registers of the core. There are 31 (or 15 for RV32E) general-purpose registers x1-x31 (or x1-x15), which are designed to hold integer values. Register x0 is hardwired to the constant 0 and can be used as a source of constant zero or as a don't care destination register.

Don't care destination x0 is used to ignore the result of instruction execution provided that destination register is mandatory for instruction structure.

All general-purpose registers in the core are 32-bits wide.

The core implements 32-bit pc register, which is used as program counter, meaning that it holds the address of the current instruction.

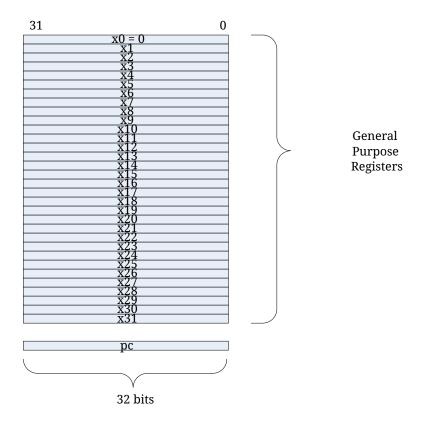


Figure 2: General-purpose integer registers

## 3.2. Control and Status Registers

#### 3.2.1. Overview and definitions

Control/status registers (CSR) of the core are accessed atomically using instructions specifically designed for CSR access. CSR access instructions are listed in Instruction set summary section of this specification.

According to RISC-V specification [2], the core uses 12-bit encoding space to address up to 4096 control/status registers (CSR) in the instructions which atomically read and modify CSRs. The core implements subset of CSRs according to the mapping shown in the next paragraphs. The core follows RISC-V convention, where the upper 4 bits of the CSR address [11:8] are used to encode the read and write accessibility of the CSRs according to privilege level. The top two bits [11:10] indicate whether the register is read/write (00, 01, or 10) or read-only (11). The next two bits [9:8] indicate the lowest privilege level that can access the CSR.

Following definitions are used to designate bit or bit field properties throughout the individual CSR descriptions:

- RO read only (write attempt results in illegal instruction exception)
- QRO quiet read only (write attempt is ignored)
- · RZ read as zero
- RW read/write
- W1S write one to set

The core implements following rules for CSR access:

- 1. Attempts to access a non-existent CSR raise an illegal instruction exception;
- 2. Attempts to write a read-only CSR also raise illegal instruction exception;
- 3. If a read/write register contains some bits that are read-only, then writes to the read-only bits are ignored.

## 3.2.2. CSR Map

Map of control/status registers is shown in Table 3.
All of the standard CSRs do comply with [2], unless explicitly stated otherwise.

Table 3: CSR map

Address	Name				
Standard CSRs					
User Counters/Timers (read-only)					
0xC00	CYCLE				
0xC01	TIME				
0xC02	INSTRET				
0xC80	CYCLEH				
0xC81	TIMEH				
0xC82	INSTRETH				
	Machine Information Registers (read-only)				
0xF11	MVENDORID				
0xF12	MARCHID				
0xF13	MIMPID				
0xF14	MHARTID				
	Machine Trap Setup (read-write)				
0x300	MSTATUS				
0x301	MISA				
0x304	MIE				
0x305	MTVEC				
Machine Trap Handling (read-write)					
0x340	MSCRATCH				
0x341	MEPC				
0x342	MCAUSE				
0x343	MTVAL				
0x344	MIP				
	Machine Counters/Timers (read-write)				
0xB00	MCYCLE				
0xB02	MINSTRET				
0xB80	MCYCLEH				
0xB82	MINSTRETH				
	Non-standard CSRs (read-write)				
0x7C00x7C7	BRKM registers				

Address	Name			
0x7C8	DBG_SCRATCH			
0x7E0	MCOUNTEN			
0xBF00xBF7	IPIC registers			
Memory-mapped CSRs (read-write)				
0x00490000 (default)	TIMER_CTRL			
0x00490004 (default)	TIMER_DIV			
0x00490008 (default)	MTIME			
0x0049000C (default)	MTIMEH			
0x00490010 (default)	MTIMECMP			
0x00490014 (default)	MTIMECMPH			

#### 3.2.3. User Mode CSRs

All user-mode CSR registers are implemented in full compliance with the RISC-V specification [2]. Please note that the term "user-mode CSRs" here does not imply support for user mode in the core, but is rather used for coherence with the RISC-V specification.

- CYCLE [0xC00] (read-only mirror of MCYCLE)
- TIME [0xC01] (read-only mirror of MTIME)
- INSTRET [0xC02] (read-only mirror of MINSTRET)
- CYCLEH [0xC80] (read-only mirror of MCYCLEH)
- TIMEH [0xC81] (read-only mirror of MTIMEH)
- INSTRETH [0xC82] (read-only mirror of MINSTRETH)

NOTE

CYCLE[H], INSTRET[H] CSRs are optional when RV32E base integer instruction set is used.

INSTRET value reflects the number of instructions successfully executed by the

core, which means instructions that cause exceptions are not counted.

#### 3.2.4. Machine Mode Standard CSRs

#### 3.2.4.1. MVENDORID [0xF11]

MVENDORID is hardwired to 0x0.

#### 3.2.4.2. MARCHID [0xF12]

MARCHID is hardwired to 0x0.

#### 3.2.4.3. MIMPID [0xF13]

MIMPID is hardwired to 0x17101000.

Structure of MIMPID register is shown in Table 4.

Table 4: Structure of MIMPID register

Bits	Name	Attributes	Description
3124	Year	RO	BCD-coded value of the year
2316	Mon	RO	BCD-coded value of the month
158	Day	RO	BCD-coded value of the day
70	REL	RO	8-bit value of an intra-day release number

#### 3.2.4.4. MHARTID [0xF14]

MHARTID is defined by external fuses.

#### 3.2.4.5. MSTATUS [0x300]

Structure of MSTATUS register is shown in Table 5.

Table 5: Structure of MSTATUS register

Bits	Name	Attributes	Description
20	RSV	RZ	Reserved
3	MIE	RW	Global interrupt enable
64	RSV	RZ	Reserved
7	MPIE	RW	Previous global interrupt enable
108	RSV	RZ	Reserved
1211	MPP	QRO	Previous privilege mode (hardwired to 11)
3113	RSV	RZ	Reserved

Default value after reset is 0x1880.

#### 3.2.4.6. MISA [0x301]

Structure of MISA register is shown in Table 6.

Table 6: Structure of MISA register

Bits	Name	Attributes	Description
10	RSV	RZ	Reserved
2	RVC	QRO	Compressed instruction extension implemented
3	RSV	RZ	Reserved
4	RVE	QRO	RV32E base integer instruction set
75	RSV	RZ	Reserved
8	RVI	QRO	RV32I base integer instruction set
119	RSV	RZ	Reserved
12	RVM	QRO	Integer Multiply/Divide extension implemented
2213	RSV	RZ	Reserved
23	RVX	QRO	Non-standard extensions
2924	RSV	RZ	Reserved
3130	MXL	QRO	Machine XLEN (hardwired to 01)

#### 3.2.4.7. MIE [0x304]

Structure of MIE register is shown in Table 7.

Table 7: Structure of MIE register

Bits	Name	Attributes	Description	
20	RSV	RZ	Reserved.	
3	MSIE	RW	Machine Software Interrupt Enable.	
64	RSV	RZ	Reserved.	
7	MTIE	RW	Machine Timer Interrupt Enable.	
108	RSV	RZ	Reserved	
11	MEIE	RW	Machine External Interrupt Enable.	
3112	RSV	RZ	Reserved	

#### 3.2.4.8. MTVEC [0x305]

Structure of MTVEC register is shown in Table 8.

Table 8: Structure of MTVEC register

Bits	Name	Attributes	Description	
10	MODE	RW/RZ	Vector mode (0-direct mode, 1-vectored mode)	
52		RZ	Read as zero	
316	BASE	RW/QRO	Vector base address (upper 26 bits)	

MODE field can be either RW or RZ depending on the SCR1\_VECT\_IRQ\_EN parameter value. BASE field can be QRO, RW, or partially RW depending on SCR1\_CSR\_MTVEC\_BASE\_RW\_BITS parameter

value. SCR1\_ARCH\_CSR\_MTVEC\_BASE\_RST\_VAL parameter is used to set constant values for QRO bits and reset values for RW bits. See Core configurable parameters for details.

NOTE

In direct mode, all exceptions set PC to BASE. In vectored mode, asynchronous interrupts set PC to BASE+4×cause.

#### 3.2.4.9. MSCRATCH [0x340]

Structure of MSCRATCH register is shown in Table 9.

Table 9: Structure of MSCRATCH register

Bits	Name	Attributes	Description
310		RW	As defined by the RISC-V specification [2]

#### 3.2.4.10. MEPC [0x341]

Structure of MEPC register is shown in Table 10.

Table 10: Structure of MEPC register

Bits	Name	Attributes	Description	
0	RSV	RZ	Reserved	
311		RW	As defined by the RISC-V specification [2]	

#### 3.2.4.11. MCAUSE [0x342]

Structure of MCAUSE register is shown in Table 11.

Table 11: Structure of MCAUSE register

Bits	Name	Attributes	Description
30	EC	RW	Exception Code
304	RSV	RZ	Reserved
31	INT	RW	Interrupt

List of MCAUSE Exception Codes is shown in Table 12.

Table 12: List of MCAUSE Exception Codes

INT	EC	Description	
0	0	Instruction address misaligned	
0	1	Instruction access fault	
0	2	Illegal instruction	
0	3	Breakpoint	
0	4	Load address misaligned	
0	5	Load access fault	
0	6	Store/AMO address misaligned	

INT	EC	Description	
0	7	Store/AMO access fault	
0	108	Not supported	
0	11	Ecall from M-mode	
0	>=12	Reserved	
1	20	Reserved	
1	3	Machine Software Interrupt	
1	64	Reserved	
1	7	Machine Timer Interrupt	
1	108	Reserved	
1	11	Machine External Interrupt	
1	>=12	Reserved	

Interrupts have priority over exceptions, as defined by the specification. The priority is determined when the instruction that causes exception is at the decode stage.

#### 3.2.4.12. MTVAL [0x343]

Structure of MTVAL register is shown in Table 13.

Table 13: Structure of MTVAL register

Bits	Attributes	Description	
310	0 RW As defined by the RISC-V specification [2]		

NOTE MTVAL is written with the faulting instruction bits on an illegal instruction exception.

#### 3.2.4.13. MIP [0x344]

Structure of MIP register is shown in Table 14.

Table 14: Structure of MIP register

Bits	Name	Attributes	Description	
20	RSV	RZ	Reserved.	
3	MSIP	QRO	Machine Software Interrupt Pending.	
64	RSV	RZ	Reserved.	
7	MTIP	QRO	Machine Timer Interrupt Pending.	
108	RSV	RZ	Reserved	
11	MEIP	QRO	Machine External Interrupt Pending.	
3112	RSV	RZ	Reserved	

#### 3.2.4.14. MCYCLE/MCYCLEH [0xB00/0xB80]

MCYCLE/MCYCLEH CSRs represent the number of clock cycles from some arbitrary time in the past. These CSRs are optional when RV32E base integer instruction set is used.

Structure of MCYCLE/MCYCLEH registers is shown in Table 15.

Table 15: Structure of MCYCLE/MCYCLEH registers

Bits	Attributes	Description	
310	RW	As defined by the RISC-V specification [2]	

#### 3.2.4.15. MINSTRET/MINSTRETH [0xB02/0xB82]

MINSTRET/MINSTRETH CSRs represent the number of instructions executed by the core from some arbitrary time in the past. These CSRs are optional when RV32E base integer instruction set is used.

Structure of MINSTRET/MINSTRETH registers is shown in Table 16.

Table 16: Structure of MINSTRET/MINSTRETH registers

Bits	Attributes	Description	
310	RW	As defined by the RISC-V specification [2]	

#### 3.2.5. Machine Mode Non-standard CSRs

#### 3.2.5.1. MCOUNTEN [0x7E0]

MCOUNTEN CSR allows to disable counters via software if they are not needed by the application. This CSR does not exist if CYCLE[H] and INSTRET[H] CSRs are disabled. Structure of MCOUNTEN register is shown in Table 17.

Table 17: Structure of MCOUNTEN register

Bits	Name	Attributes	Description
0	CY	RW	Enable cycle counter
1	RSV	RZ	Reserved
2	IR	RW	Enable instructions-retired counter
313	RSV	RZ	Reserved

#### 3.2.5.2. DBG\_SCRATCH [0x7C8]

DBG\_SCRATCH CSR is used to exchange data between the core and the debug controller (see Hart Debug Data Register). Structure of DBG\_SCRATCH register is shown in Table 18.

Table 18: Structure of DBG\_SCRATCH register

Bits	Attributes	Description	
310	RW	As defined by the RISC-V specification [2]	

#### 3.2.5.3. IPIC registers [0xBF0..0xBF7]

For more information, refer to the Map of IPIC registers section.

#### 3.2.5.4. BRKM registers [0x7C0..0x7C7]

For more information, refer to the Breakpoint Module section.

#### 3.2.6. Memory-mapped CSRs

**IMPORTANT** 

Memory-mapped CSRs do not support byte and halfword access, an attempt will cause a load/store access fault exception.

**IMPORTANT** 

Timer memory-mapped CSRs addresses are given relative to TIMER\_BASE = SCR1\_TIMER\_ADDR\_PATTERN (see Core configurable parameters).

#### 3.2.6.1. TIMER\_CTRL [TIMER\_BASE]

Structure of TIMER\_CTRL register is shown in Table 19.

Table 19: Structure of TIMER\_CTRL register

Bits	Name	Attributes	Description
0	ENABLE	RW	Timer enable
1	CLKSRC	RW	Timer clock source: 0 - internal core clock (default) 1 - external real-time clock
312		RZ	Reserved, read as zero

#### $3.2.6.2. TIMER_DIV [TIMER_BASE + 0x4]$

Structure of TIMER\_DIV register is shown in Table 20.

Table 20: Structure of TIMER\_DIV register

Bits	Name	Attributes	Description	
90	DIV	RW	Timer divider: timer tick occures every DIV+1 clock ticks	
3110		RZ	Reserved, read as zero	

#### 3.2.6.3. MTIME/MTIMEH [TIMER\_BASE + 0x8/TIMER\_BASE + 0xC]

Structure of MTIME/MTIMEH registers is shown in Table 21.

Table 21: Structure of MTIME/MTIMEH registers

Bits	Name	Attributes	Description	
310		RW	As defined by the RISC-V specification [2]	

#### 3.2.6.4. MTIMECMP/MTIMECMPH [TIMER BASE + 0x10/TIMER BASE + 0x14]

Structure of MTIMECMP/MTIMECMPH registers is shown in Table 22.

Table 22: Structure of MTIMECMP/MTIMECMPH registers

Bits	Name	Attributes	Description	
310		RW	As defined by the RISC-V specification [2]	

# 4. Memory Model

## 4.1. Bit and byte order

The core does access instruction and data words in memory assuming generic little endian organization as illustrated in Figure 3. With little-endian format, the byte with the lowest address in a word is the least-significant byte of the word. The byte with the highest address in a word is the most significant. For instance, the byte at address 0 of the data memory bus connects to least significant data lines 7-0.

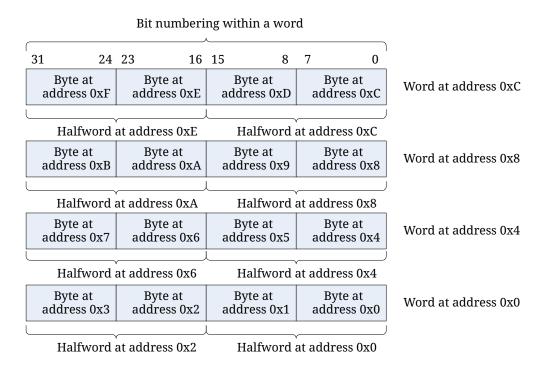


Figure 3: Generic little endian memory organization

Regardless of memory access width the numbering of bits always assumes that bit 0 is least significant bit and it is also rightmost bit in all illustrative diagrams within the specification.

# 4.2. Data access width and alignment

The core supports following memory access widths:

- 32-bit words for instruction and data memory;
- 16-bit halfwords for data memory only;
- 8-bit bytes for data memory only.

The core considers data memory as a contiguous collection of bytes numbered in ascending order in the range 0x00000000-0xFFFFFFFF (32-bit address).

The core considers instruction memory as a contiguous collection of 32-bit words for base 32-bit instruction set (RV32I) or as a contiguous collection of 16-bit halfwords for compact instruction set

(RV32C). Instructions in memory must be aligned to 4-byte boundary or 2-byte boundary correspondingly. Byte numbering in memory starts from 0. In case of compact instruction set the last instruction address is 0xFFFFFFFE. In case of non-compact instruction set the last instruction address is 0xFFFFFFFC. Instruction fetch from memory is physically done as 32-bit words aligned to 4-byte boundary ignoring any unnecessary portion of the word during instruction decode.

## 4.3. Stack behavior

The core supports stack handling with implemented base and compact instruction sets. No special register is used to implement return address link register or stack pointer during subroutine call. However, any subset of general purpose registers x1..x31 can be used for these purposes.

As soon as the register is chosen to be a stack pointer, after appropriate register initialization the implementation of context save/restore or access to local variables during subroutine call becomes straightforward. Standard software calling convention uses register x2 as a stack pointer.

As soon as the register is chosen to be a link register, implemented instruction sets (both base and compact) provide adequate means to memorize the return address during subroutine call and to use this address on return from subroutine. Standard software calling convention uses register x1 to hold the return address during subroutine calls.

# 4.4. Memory access ordering

The core uses strong memory access ordering, meaning that the sequence and the number of memory accesses are guaranteed to correspond one-to-one to underlying sequence of instructions executed. Given that, FENCE instruction is executed as NOP, FENCE.I instruction flushes the instruction fetch queue.

## 4.5. System memory map

The core implements Harward architecture characterized by independent access to instruction memory and data memory through dedicated external memory interfaces.

Figure 4 shows the illustrative view of the system memory map for the core.

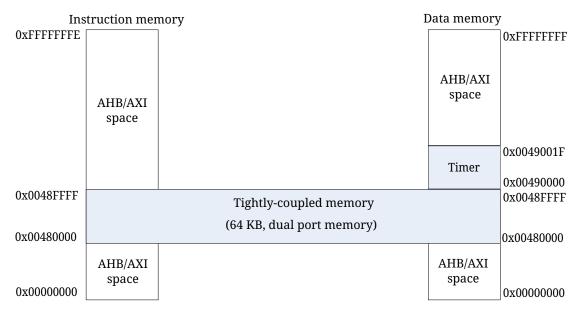


Figure 4: System memory map

The core provides dual-port tightly-coupled memory (TCM) which can be used for both instructions and data. TCM is charactrized by short memory response to support time critical code and/or data of the application. TCM is mapped to system memory map with fixed base address 0x00480000. Detailed description of TCM is given in Tightly-Coupled Memory section of this specification.

# 4.6. Tightly-Coupled Memory

Tightly-Coupled Memory (TCM) is random access memory (RAM) with guaranteed single-cycle response time. TCM is desinged for both instruction and data sections of the code which require maximum throughput.

TCM is implemented as dual-port memory with independent access from Instruction and Data memory interfaces (I/F).

Instruction memory I/F does always read TCM as 32-bit words (read only access). Data memory I/F supports 8/16/32 bits wide access to TCM (read/write access).

TCM size is up to 64 kBytes. TCM base address is 0x00480000.

# 5. Exceptions

The term exception is used to refer to an unusual condition occurring in the core at run time.

The term trap is used to refer to the synchronous transfer of control to a supervising environment when it is caused by an exceptional condition occurring within a core.

The term interrupt is used to refer to the asynchronous transfer of control to a supervising environment caused by an event outside of the core.

Some instructions under certain conditions (as described in [2]) raise an exception during execution. Whether and how these are converted into traps is dependent on the execution environment, though the expectation is that most environments will take a precise trap when an exception is signaled.

Exception codes supported by the core are listed in Table 23.

Table 23: List of supported exception codes

Exception code	Exception cause/description		
0	Misaligned instruction fetch address		
1	Instruction fetch access fault		
2	Illegal instruction		
3	Breakpoint		
4	Misaligned load address		
5	Load access fault		
6	Misaligned store address		
7	Store access fault		
8	Reserved		
9	Reserved		
10	Reserved		
11	Ecall from M-mode		
>=12	Reserved		

# 6. Integrated Programmable Interrupt Controller

## 6.1. Introduction

SCR1 core can optionally include Integrated Programmable Interrupt Controller (IPIC) with low latency IRQ response. IPIC can be configured using IPIC Control Status Registers.

The term Interrupt Line has the meaning of corresponding IPIC external pin where suitable source of external interrupt may be connected to.

The term Interrupt Vector has the meaning of external interrupt number which will be generated by IPIC in response to external interrupt.

IPIC supports maximum 16 Interrupt vectors [0..15] and 16 Interrupt lines [0..15], each line is statically mapped to the corresponding vector.

Interrupt Vectors are given fixed priorities. The lowest Interrupt Vector number has the highest priority.

IPIC supports nested interrupts. Only one interrupt can be serviced at a time.

"Void interrupt vector" is defined as a non-existent vector number 0x10. This value is used to indicate absence of a valid interrupt vector.

**IMPORTANT** 

Write access to the IPIC control status registers is implemented only through the use of the CSRRW(I) instructions, the CSRRS(I) and CSRRC(I) instructions are not supported.

# 6.2. IPIC Block Diagram and description

Figure 5 shows block diagram of the IPIC.

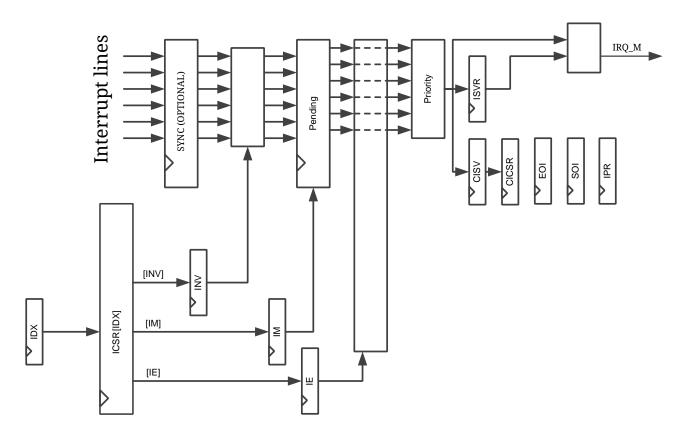


Figure 5: IPIC Block Diagram

IMPORTANT

IPIC can be configured with (default) or without IRQ lines 2-stage synchronizer.

- Without synchronizer, all IRQ lines must be synchronous to the internal core clock
- With a 2-stage synchronizer, there is a requirement that for IRQ line edge detection, input pulse must be at least 2 clock cycles wide

Depending on the IM (interrupt mode), INV (line inversion) values for each vector, one of four conditions for IP (interrupt pending) bit activation is selected: high level, low level, rising edge, falling edge. Of all vectors with IP and IE (interrupt enable) bits active, the lowest numbered vector has the highest priority. Software is responsible for writing the SOI and EOI registers, thus notifying IPIC of the start and end of interrupt processing, respectively.

# 6.3. IPIC Programming Model

#### 6.3.1. Register Map

Following notation is used to specify properties of bit fields within IPIC registers:

• RO - Read Only

- WO Write Only
- RW Read/Write
- R/W1S Read/Write 1 to Set
- R/W1C Read/Write 1 to Clear

IPIC control status registers file access rights are defined by the current privelege mode. All registers are accessible only from the Machine Mode (M-mode).

IPIC registers in M-mode are mapped relative to the given IPIC base address offset 0xBF0 in the CSR space as shown in Table 24.

Table 24: Map of IPIC registers

Offset	Mnemonic	Name
0x00	IPIC_CISV	Current Interrupt Vector in Service
0x01	IPIC_CICSR	Current Interrupt Control Status Register
0x02	IPIC_IPR	Interrupt Pending Register
0x03	IPIC_ISVR	Interrupts in Service Register
0x04	IPIC_EOI	End Of Interrupt
0x05	IPIC_SOI	Start of Interrupt
0x06	IPIC_IDX	Index Register
0x07	IPIC_ICSR	Interrupt Control Status Register

# 6.4. Detailed IPIC Registers Description

#### 6.4.1. IPIC\_CISV: Current Interrupt Vector in Service

Structure of IPIC\_CISV register is shown in Table 25.

Table 25: Structure of IPIC\_CISV register

Bit number	Attributes	Description
40	QRO	number of the interrupt vector currently in service
315	reserved	

IPIC\_CISV Register contains number of the interrupt vector currently in service (also, it is the number of the lowest assigned bit in the IPIC\_ISVR). When no interrupts are in service, this register contains number of the void interrupt vector.

#### 6.4.2. IPIC\_CICSR: Current Interrupt Control Status Register

Structure of IPIC\_CICSR register is shown in Table 26.

Table 26: Structure of IPIC\_CICSR register

Bit number	Mnemonic	Attributes	Description
0	IP	R/W1C	Interrupt pending:
			0 - no interrupt
			1 - Interrupt pending
1	IE	RW	Interrupt Enable Bit:
			0 - Interrupt disabled
			1 - Interrupt enabled

Control Status register for the interrupt vector currently in service.

This register is RW for IE bits and W1C for IP bit. Register read returns 0 when there are no interrupts currently in service.

#### 6.4.3. IPIC\_IPR: Interrupt Pending Register

Structure of IPIC\_IPR register is shown in Table 27.

Table 27: Structure of IPIC\_IPR register

Bit number	Attributes	Description
0	RW1C	Interrupt vector 0 pending status (1- pending)
1	RW1C	Interrupt vector 1 pending status (1- pending)
15	RW1C	Interrupt vector 15 pending status (1- pending)
1631	RZ	reserved

Contains aggregated status for all the pending interrupts. Corresponding bits are set to 1 for the pending interrupts.

#### 6.4.4. IPIC\_ISVR: Interrupt Serviced Register

Structure of IPIC\_ISVR register is shown in Table 28.

Table 28: Structure of IPIC\_ISVR register

Bit number	Attributes	Description
0	QRO	Interrupt vector 0 processing status (1- in service)
1	QRO	Interrupt vector 1 processing status (1- in service)
15	QRO	Interrupt vector 15 processing status (1- in service)
1631	RZ	reserved

Contains aggregated status of the interrupts vectors, which are currently in service.

In other words, all those vectors, for which processing has started, but is not finished yet, including nested interrupts.

When corresponding bit is set (1) - this interrupt vector is in service. When corresponding bit is in 0 - the interrupt vector is not in service.

#### 6.4.5. IPIC\_EOI: End Of Interrupt

Structure of IPIC\_EOI register is shown in Table 29.

Table 29: Structure of IPIC\_EOI register

Bit number	Attributes	Description
310	RZW	End-of-interrupt (any value can be written)

Writing to EOI register clears interrupt, which is currently in service.

#### 6.4.6. IPIC\_SOI: Start Of Interrupt

Structure of IPIC\_SOI register is shown in Table 30.

Table 30: Structure of IPIC\_SOI register

Bit number	Attributes	Description
310	RZW	start-of-interrupt (any value can be written)

Writing to SOI loads CISV and updates ISVR. These updates happen only if one of the following conditions is true:

- 1. There is at least one pending interrupt with IE and ISR is zero (no interrupts in service).
- 2. There is at least one pending interrupt with IE and this interrupt has higher priority than the interrupts currently in service.

#### 6.4.7. IPIC\_IDX: Index Register

Structure of IPIC\_IDX register is shown in Table 31.

Table 31: Structure of IPIC\_IDX register

Bit number	Attributes	Description
30	RW	interrupt vector index to access through IPIC_ICSR
314	RZ	reserved

Used for relative access to the ICSR fields for the specified interrupt vector.

#### 6.4.8. IPIC\_ICSR: Interrupt Control Status register

Structure of IPIC\_ICSR register is shown in Table 32.

Table 32: Structure of IPIC\_ICSR register

Bit number	Mnemonic	Attributes	Description
0	IP	RW1C	Interrupt pending:
			0 - no interrupt
			1 - Interrupt pending
1	IE	RW	Interrupt Enable Bit:
			0 - Interrupt disabled
			1 - Interrupt enabled
2	IM	RW	Interrupt Mode:
			0 - Level interrupt
			1 - Edge interrupt
3	INV	RW	Line Inversion:
			0 - no inversion
			1 - line inversion
4	IS	RW	In Service
75	Reserved	RZ	
98	PRV	QRO	Privilege mode: hardwired to 11 (machine mode)
1011	Reserved	RZ	
1215	LN	QRO	External IRQ Line Number assigned to this interrupt vector. This value is always equal to IPIC_IDX, because of the static line to vector mapping.
1631	Reserved	RZ	

This is control status register for the interrupt vector, defined by the Index register (IPIC\_IDX).

# 6.5. IPIC timing diagrams

Figure 6, Figure 7 show IPIC and core signals timing to illustrate IRQ latency. See Table 33 for signals description.

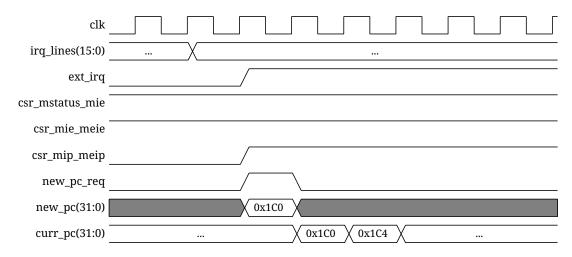


Figure 6: IRQ timing for level IRQs (IPIC synchronizer disabled)

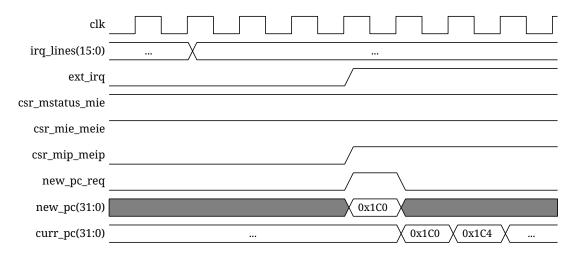


Figure 7: IRQ timing for level IRQs (IPIC synchronizer enabled)

**NOTE** For edge IRQs, latency is increased by one clock cycle.

Table 33: Signals description

Name	Description	
clk	Core clock	
irq_lines[15:0]	External IPIC IRQ lines	
ext_irq	IPIC to core IRQ request	
csr_mstatus_mie	Global interrupt enable	
csr_mie_meie	External interrupt enable	
csr_mip_meip	External interrupt pending	
new_pc_req	New program counter request	
new_pc[31:0]	New program counter	
curr_pc[31:0]	Current program counter	

# 7. Breakpoint Module

## 7.1. BRKM registers description

#### 7.1.1. BPSELECT [0x7C0]

BRKM's Breakpoint Select register is shown in Table 34. This register determines index of a breakpoint which parameters are mapped for access through registers 0x7C1..0x7C6.

Table 34: Structure of BPSELECT register

Bits	Name	Attribu tes	Description
110	BP	RW	Breakpoint Index. The number determines breakpoint being selected for modification through registers 0x7810x786. Actual bit width of the field depends on actual number of breakpoints supported, and typical values are 13 (for 28 breakpoints).
3112	RSRV0	RZ	Reserved

#### 7.1.2. BPCONTROL [0x7C1]

BRKM's Breakpoint Control register is shown in Table 35. This register contains information about supported breakpoint features, and allows to enable these.

In general, breakpoint match logic is as follows:

SCR1 supports subset of the matching functionality. However, all given equations hold true assuming that corresponding features cannot be enabled and den, drangeen and dmask are always zero.

Table 35: Structure of BPCONTROL register

Bits	Name	Attribu tes	Description	
0	RSRV0	RZ	Reserved	
1	DMASKEN	RZ	Data Mask Matching Enable. Not supported in SCR1. Hardwired to zero.	
2	DRANGEEN	RZ	Data Range Matching Enable. Not supported in SCR1. Hardwired to zero.	
3	DEN	RZ	Data Exact Matching Enable. Not supported in SCR1. Hardwired to zero.	
4	RSRV1	RZ	Reserved	
5	AMASKEN	RW	Address Mask Matching Enable. If 1, causes breakpoint to match when (address & bphiaddr) == bploaddr.	
6	ARANGEEN	RZ	Address Range Matching Enable. Not supported in SCR1. Hardwired to zero.	
7	AEN	RW	Address Exact Matching Enable. If 1, causes breakpoint to match when address == bploaddr.	
8	EXECEN	RW	Execution Operation Matching Enable. If 1, enables breakpoint for instruction execution.	
9	STOREEN	RW	Store Operation Matching Enable. If 1, enables breakpoint for data memory store operation.	
10	LOADEN	RW	Load Operation Matching Enable. If 1, enables breakpoint for data memory load operation.	
11	RSRV2	RZ	Reserved	
1412	ACTION	RW	Action. Determines what happens when this breakpoint matches. 0 means nothing happens. 1 means cause a debug exception. 2 means enter Debug Mode. Other values are reserved for future use.	
15	MATCHED	RW	Breakpoint Matched. BRKM sets this bit to 1 when this hardware breakpoint matched. The debugger is responsible for clearing this bit once it has seen it's set.	
16	RSRV3	RZ	Reserved	
17	DMASKSUP	RZ	Data Mask Matching Support. In SCR1 this bit is hardwired to zero.	
18	DRANGESUP	RZ	Data Range Matching Support. In SCR1 this bit is hardwired to zero.	
19	DSUP	RZ	Data Exact Matching Support. In SCR1 this bit is hardwired to zero.	
20	RSRV4	RZ	Reserved	
21	AMASKSUP	RO	Address Mask Matching Support. If 1, this breakpoint supports address mask matching.	
22	ARANGESUP	RZ	Address Range Matching Support. In SCR1 this bit is hardwired to zero.	

Bits	Name	Attribu tes	Description
23	ASUP	RO	Address Exact Matching Support. If 1, this breakpoint supports exact address matching.
24	EXECSUP	RO	Execution Operation Matching Support. If 1, this breakpoint supports matching on instruction execution.
25	STORESUP	RO	Store Operation Matching Support. If 1, this breakpoint supports matching on data memory store.
26	LOADSUP	RO	Load Operation Matching Support. If 1, this breakpoint supports matching on data memory load.
3127	RSV	RZ	Reserved

#### 7.1.3. BPLOADDR [0x7C2]

BRKM's Breakpoint Low Address register is shown in Table 36. This register is used for exact match or lower bound (inclusive) of the address match for this breakpoint.

Table 36: Structure of BPLOADDR register

Bits	Name	Attribu tes	Description
310	BPLOADDR	RW	Breakpoint Low Address.

#### 7.1.4. BPHIADDR [0x7C3]

BRKM's Breakpoint High Address register is shown in Table 37. This register is used for upper bound (exclusive) of the address match for this breakpoint, or as address mask.

Table 37: Structure of BPHIADDR register

Bits	Name	Attribu tes	Description
310	BPHIADDR	RW	Breakpoint High Address.

#### 7.1.5. BPLODATA [0x7C4]

BRKM's Breakpoint Low Data register. This register is not implemented in SCR1.

#### 7.1.6. BPHIDATA [0x7C5]

BRKM's Breakpoint High Data register. This register is not implemented in SCR1.

#### 7.1.7. **BPCTRLEXT** [0x7C6]

BRKM's Breakpoint Control Extension register is shown in Table 38. This register allows some extensions to standard breakpoint control features to be enabled.

Table 38: Structure of BPCTRLEXT register

Bits	Name	Attribu tes	Description	
120	RSRV0	RZ	Reserved	
13	DRYRUN	RW	Dry Run. If 1, and BPCONTROL.ACTION = 0, this feature allows to check functionality of matching logic under certain breakpoint parameters. Result is reflected in the BPCONTROL.MATCHED bit as usual, but there are no other side effects like exception rising etc.	
14	AMASKEXT_EN	RW	Address Mask Matching Extension Enable. If 1, address mask matching rules are checked not only for base operation address, but for addresses of all bytes involved in the operation.	
15	ARANGEEXT_EN	RZ	Address Range Matching Extension Enable. In SCR1 this bit is hardwired to zero.	
3116	RSRV1	RZ	Reserved	

## 7.1.8. BRKMCTRL [0x7C7]

BRKM's Breakpoint Module Control register is shown in Table 39. This register contains bits for overall BRKM control.

Table 39: Structure of BRKMCTRL register

Bits	Name	Attribu tes	Description	
110	RSRV0	RZ	Reserved	
12	MATCHED	RO	Matched. The bit is set if at least one breakpoint is matched.	
13	RSRV1	RZ	Reserved	
14	BP_I_SKIP	RW	Instruction Breakpoint Skip. If 1, causes skipping of the first instruction breakpoint after execution resuming.	
15	INIT	R/W1TP	BRKM Initialization. In SCR1, writing of 1 initializes Instruction Breakpoint Skipping mechanism.	
16	MODE	RW	Mode. If 0, clearing of BPCONTROL.MATCHED is performed by writing 0. If 1, clearing of the bit is done by writing 1.	
3117	RSRV2	RZ	Reserved	

# 8. Debug

## 8.1. TAPC Block Diagram

TAP controller block diagram is shown in Figure 8.

#### TAPC (TAP Controller)

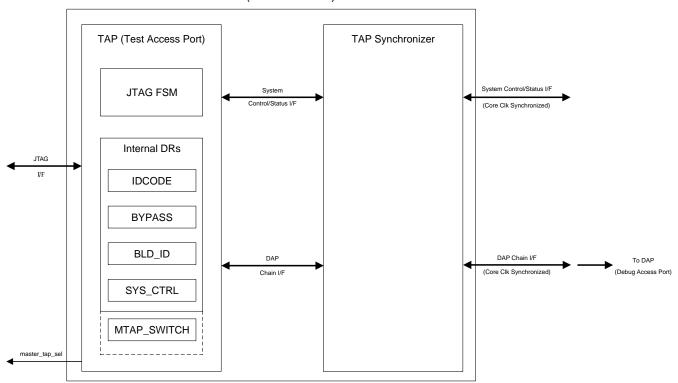


Figure 8: TAP Controller Block Diagram

## 8.2. TAP Controller (TAPC)

#### 8.2.1. TAPC Intoduction

TAP Controller is compliant with IEEE 1149.1 standard [3].

**IMPORTANT** Following ratio between sys\_clk and tck must be met:

- sys\_clk/tck >= 12
- IR registers size 4 bits

## **8.2.2. TAP Controller Instructions**

#### 8.2.2.1. TAP Controller Instructions Overview

TAP Controller Instructions are listed in Table 40.

Table 40: TAP Controller Instructions

Instruction mnemonic	IR code	Description	
DBG_ID	0b0011	DBG_ID Register Read	
BLD_ID	0b0100	BLD_ID Register Read	
DBG_STATUS	0b0101	DBG_STATUS Register Read	
DAP_CTRL	0b0110	DAP_CTRL Register Write	
DAP_CTRL_RD	0b0111	DAP_CTRL Register Read	
DAP_CMD	0b1000	Debug Access Port Command (DAP Command).	
SYS_CTRL	0b1001	SYS_CTRL Register Access	
TARGET_ID	0b1011	TARGET_ID Register Read	
MTAP_SWITCH	0b1101	MTAP_SWITCH Register Access	
IDCODE	0b1110	IDCODE Register Read	
BYPASS	0b1111	BYPASS instruction	

The rest of the IR encoding space is reserved.

#### 8.2.2.2. Public Instructions

TAP Controller Public Instructions are shown in Table 41.

Table 41: TAP Controller Public Instructions

Instruction mnemonic	Data Register mnemonic	DR scan length	Description
IDCODE	IDCODE_DR	32	IDCODE Register Read. Conventional mandatory Device Identification instruction compliant with IEEE 1149.1 Standard. It connects IDCODE_DR register between TDI and TDO pins.
BYPASS	BYPASS_DR	1	<b>BYPASS</b> instruction. IEEE 1149.1 Standard compliant mandatory instruction. It connects BYPASS_DR register between TDI and TDO pins.

#### 8.2.2.3. Private Instructions

#### 8.2.2.3.1. TAPC Identification

TAPC Identification Instructions are shown in Table 42.

Table 42: TAPC Identification Instructions

Instruction mnemonic	Data Register mnemonic	DR scan length	Description
DBG_ID	DBG_ID_DR	32	<b>DBG_ID Register Read.</b> It connects DBG_ID_DR register between TDI and TDO pins, and is used for identification of debug facilities version implemented in the given processor subsystem's DBGC.
BLD_ID	BLD_ID_DR	32	<b>BLD_ID Register Read.</b> Connects BLD_ID_DR between TDI and TDO pins, which identifies an entire processor subsystem's RTL build revision.
TARGET_ID	TARGET_ID_DR	32	TARGET_ID Register Read. Connects TARGET_ID_DR between TDI and TDO pins, which properly identifies processor core as a debug target.

#### 8.2.2.3.2. Debug Operation Instructions

TAPC Debug Operation Instructions are shown in Table 43.

Table 43: TAPC Debug Operation Instructions

Instruction mnemonic	Data Register mnemonic	DR scan length	Description
DBG_STATUS	DBG_STATUS_DR	32	<b>DBG_STATUS Register Read.</b> Connects DBG_STATUS_DR register providing general status information about debug operations and core state.
DAP_CTRL	DAP_CTRL_DR	4	DAP_CTRL Register Write. Connects DAP_CTRL_DR register allowing to change Debug Access Port Control Context (DAPCC) residing in the DAP_CONTEXT register, which, in turn, determines interpretation of all further Debug Access Port (DAP) operations made with DAP_CMD instructions.
DAP_CTRL_RD	DAP_CTRL_RD_DR	4	DAP_CTRL Register Read. Connects DAP_CTRL_RD_DR register allowing to read current DAP Control Context (DAPCC) from the DAP_CONTEXT register.
DAP_CMD	DAP_CMD_DR	36	Debug Access Port Command (DAP Command). Connects DAP_CMD_DR register which is used for main command/status interchange between debugger software and DBGC. Thus, its two key operations are: 1) capturing current DAP operational status (in Capture-DR state); and 2) issuing of DAP Commands toward DAP (in Update-DR state). Interpretation of a DAP Command strongly depends on the DAP Control Context (DAPCC) determined by the DAP_CONTEXT register.

#### 8.2.2.3.3. Processor Subsystem Control/Status

TAPC Processor Subsystem Control/Status Instructions is shown in Table 44.

Table 44: TAPC Processor Subsystem Control/Status Instructions

Instruction	Data Register	DR scan	Description
mnemonic	mnemonic	length	
SYS_CTRL	SYS_CTRL_DR	1	SYS_CTRL Register Access. Connects SYS_CTRL_DR register, used to control state of the Processor Subsystem Reset net, and to get its current status.

#### 8.2.2.3.4. SOC TAP Network Configuration

TAPC SOC TAP Network Configuration Instruction is shown in Table 45.

Table 45: TAPC SOC TAP Network Configuration Instructions

Instruction	Data Register	DR scan	Description
mnemonic	mnemonic	length	
MTAP_SWITCH	MTAP_SWITCH_D R	1	MTAP_SWITCH Register Access. Connects MTAP_SWITCH_DR register, used to control state of the Master TAP Switch Control output, and to get its current status.

## 8.2.3. TAP Controller Data Registers

#### 8.2.3.1. Overview

TAP Controller Front-End Data Registers are shown in Table 46.

Table 46: TAPC Front-End Data Registers

Register	Width	Description
DBG_ID_DR	32	Debug Subsystem Version ID.
BLD_ID_DR	32	<b>Processor Subsystem Build ID.</b> The register corresponds to MIMPID register in the CSRs.
TARGET_ID_DR	32	Debug Target ID.
DBG_STATUS_DR	32	Debug Subsystem Operational Status Register.
DAP_CTRL_DR	4	DAP Control Register.
DAP_CTRL_RD_DR	4	DAP Control Read Register.
DAP_CMD_DR	36	DAP Command Register.
SYS_CTRL_DR	1	<b>Processor Subsystem Boundary Signals Control/Status Register.</b> Controls external HW reset of the Processor Subsystem.
MTAP_SWITCH_DR	1	Master TAP Controller Switch Register.
IDCODE_DR	32	<b>Device ID Register.</b> IEEE 1149.1 [3] compliant mandatory register.
BYPASS_DR	1	<b>Bypass Register.</b> IEEE 1149.1 [3] compliant mandatory register.

TAP Controller Back-End Data Registers are shown in Table 47.

Table 47: TAPC Back-End Data Registers

Register	Width	Description
DAP_CONTEXT	4	DAP Control Context Register.
DAP_OPCODE	4	DAP Operation Code Register.
DAP_OPSTATUS	4	DAP Operational Status Register.
DAP_DATA	4	DAP Data Register.

#### 8.2.3.2. DBG\_ID\_DR

The DBG\_ID\_DR register indicates a version number of the debug facilities implemented by the Debug Subsystem. It is expressed in the form "VC0.VC1.VC2.VT", where "VC0.VC1.VC2" designates compatibility-critical part of the version number, and "VT" is a compatibility-tolerant part. For instance, if debug software is compatible with version 0.80.0.00, it is compatible with all versions numbered as 0.80.0.XX (XX - any 8-bit value), and is not compatible with version 0.80.1.00.

Structure of DBG\_ID\_DR register is shown in Table 48.

Table 48: DBG\_ID\_DR Register

Bits	Name	Attributes	Description
3124	VC0	RO	Most significant fraction of compatibility-critical version part
2316	VC1	RO	Middle fraction of compatibility-critical version part
158	VC2	RO	Least significant fraction of compatibility-critical version part
70	VT	RO	Compatibility-tolerant version part

Current value of the DBG\_ID\_DR register for SCR1 is 0x00820000.

#### 8.2.3.3. BLD\_ID\_DR

The BLD\_ID\_DR register indicates date and intra-day release number for the SW build. Structure of BLD\_ID\_DR register is shown in Table 49.

Table 49: BLD\_ID\_DR Register

Bits	Name	Attributes	Description
3124	Year	RO	BCD-coded value of a year
2316	Mon	RO	BCD-coded value of a month
158	Day	RO	BCD-coded value of a day
70	Rel	RO	8-bit value of an intra-day release number

#### 8.2.3.4. TARGET\_ID\_DR

The ID is supposed to be a second part of a two-factor debug target identification, including also DBG\_ID register check as mandatory starting point. Main goal of the TARGET\_ID is to provide JTAG debugger with information about target-under-debug, sufficient for its proper identification and critical debug functionality support. Structure of TARGET\_ID\_DR register is shown in Table 50.

Table 50: TARGET\_ID\_DR Register

Bits	Name	Attributes	Description
3124	CORE_ID	RO	<ul> <li>Core Identifier. CORE_ID structure:</li> <li>bits [6:0] - ARCH_ID - SC Core Architecture ID. SCR1 core's ARCH_ID = 0x01.</li> <li>bit 7 - Private. Encoding: <ul> <li>1 - private, proprietary core IP;</li> <li>0 - open-source core IP.</li> </ul> </li> <li>Thus, open-source SCR1 core has CORE_ID = 0x01.</li> </ul>
23	BRKM	RO	<b>Hardware Breakpoint Module (BRKM) Present.</b> Value of the bit depends on SCR1_BRKM_EN core configuration parameter.
2216	RSRV1	RZ	Reserved.
1512	PSPEC	RO	<ul> <li>Privileged ISA Specification Supported. Encoding:</li> <li>0b0000 - 1.7;</li> <li>0b00001 - 1.10;</li> <li>others - reserved.</li> <li>SCR1 has value 0b0001 in these bits.</li> </ul>
113	RSRV0	RZ	Reserved.
2	MPU	RO	<b>MPU Present.</b> The bit is 0 in the SCR1.
1	MMU	RO	<b>MMU Present.</b> The bit is 0 in the SCR1.
0	CACHE	RO	Cache Present (I\$ and/or D\$). The bit is 0 in the SCR1.

#### **8.2.3.5. DBG\_STATUS\_DR**

The DBG\_STATUS\_DR register indicates a summary of the Debug Subsystem state. The register is a TAPC view of the DBGC Core Debug Status Register (CORE\_DBG\_STS, CDSR). Structure of DBG\_STATUS\_DR register is shown in Table 51.

Table 51: DBG\_STATUS\_DR Register

Bits	Name	Attributes	Description
31	Ready	RO	DAP Ready
30	Lock	RO	DAP Lock
29	Rst_Stky	RO	Reset Status Sticky
28	Rst	RO	Reset Status
2721	RSRV2	RZ	RSRV2 reserved bit field
20	Err_DAP_Opcode	RO	Error DAP OpCode
19	Err_FsmBusy	RO	Error FSM Busy
18	Err_HwCore	RO	Error HW Core
17	Err_Stky	RO	Error Sticky
16	Err	RO	Error
158	RSRV1	RZ	RSRV1 reserved bit field
76	HARTO_PLVL	RO	HART[0] Privilege Level. The field is hardwired to value 0b11 corresponding to the only SCR1 operational mode: Machine Mode.
5	RSRV0	RZ	RSRV0 reserved bit field
4	HART0_Err_Stky	RO	HART[0] Error Sticky Status
3	HARTO_Err	RO	HART[0] Error Status
2	HART0_Rst_Stky	RO	HART[0] Reset Sticky Status
1	HART0_Rst	RO	HART[0] Reset Status
0	HARTO_DMODE	RO	HART[0] Debug Mode

#### 8.2.3.6. DAP\_CTRL\_DR

The DAP\_CTRL\_DR register is used to update DAP\_CONTEXT register and capture DAP\_OPSTATUS register as shown in Table 52.

Table 52: DAP\_CTRL\_DR Actions

DR Scan	Action in TAP state		
Length	Capture-DR	Update-DR	
4	$ShiftReg[3:0] \leftarrow DAP\_OPSTATUS$	$DAP\_CONTEXT \leftarrow ShiftReg[3:0]$	

When TAPC is in Capture-DR state, at rising edge of tck clock it writes current DAP\_OPSTATUS register value into bits [3:0] of shift register. When TAPC is in Update-DR state, at falling edge of tck clock it writes content of bits [3:0] of shift register into the DAP\_CONTEXT register.

#### 8.2.3.7. DAP\_CTRL\_RD\_DR

The DAP\_CTRL\_RD\_DR register is used to capture DAP\_CONTEXT register as shown in Table 53.

Table 53: DAP\_CTRL\_RD\_DR Actions

DR Scan	Action in TAP state		
Length	Capture-DR	Update-DR	
4	$ShiftReg[3:0] \leftarrow DAP\_CONTEXT$	NULL ← ShiftReg[3:0]	

When TAPC is in Capture-DR state, at rising edge of tck clock it writes current DAP\_CONTEXT register value into bits [3:0] of shift register. When TAPC is in Update-DR state, content of shift register is ignored.

#### 8.2.3.8. DAP CMD DR

The DAP\_CMD\_DR register is used to update DAP\_OPCODE and DAP\_DATA registers and capture DAP\_OPSTATUS and DAP\_DATA registers as shown in Table 54.

Table 54: DAP\_CMD\_DR Actions

DR Scan	Action in	TAP state
Length	Capture-DR	Update-DR
36	ShiftReg[35:32] ← DAP_OPSTATUS, ShiftReg[31:00] ← DAP_DATA	DAP_OPCODE ← ShiftReg[35:32], DAP_DATA ← ShiftReg[31:00]

When TAPC is in Capture-DR state, at rising edge of tck clock it updates shift register as follows:

- bits [31:00] from current DAP\_DATA register value;
- bits [35:32] from current DAP\_OPSTATUS register value.

When TAPC is in Update-DR state, at falling edge of tck clock it writes content of shift register as follows:

• bits [31:00] to DAP\_DATA register;

• bits [35:32] to DAP\_OPCODE register.

#### 8.2.3.9. SYS\_CTRL\_DR

The SYS\_CTRL\_DR register is used to provide CPU Subsystem Reset Control and capture CPU Subsystem Reset Status as shown in Table 55.

Table 55: SYS\_CTRL\_DR Register

DR Scan	Action in TAP state		
Length	Capture-DR	Update-DR	
1	ShiftReg[0] ← CPU Subsystem Reset Status	CPU Subsystem Reset Control ← ShiftReg[0]	

#### 8.2.3.10. MTAP\_SWITCH\_DR

The MTAP\_SWITCH\_DR register is used to provide Master TAP Switch Control and capture Master TAP Switch Status as shown in Table 56.

Table 56: MTAP\_SWITCH\_DR Register

DR Scan	Action in TAP state		
Length	Capture-DR	Update-DR	
1	ShiftReg[0] ← Master TAP Switch Status	Master TAP Switch Control ← ShiftReg[0]	

#### 8.2.3.11. IDCODE\_DR

The IDCODE\_DR register is used to capture Device ID as shown in Table 57. It is mandatory IEEE 1149.1 compliant register [3].

Table 57: IDCODE\_DR, DR-Capture Value

Bits	Name	Attributes	Description
310	IDCODE	RO	IDCODE Value. Current value of the IDCODE register for SCR1 is 0xDEB01001.

#### 8.2.3.12. BYPASS\_DR

The BYPASS\_DR register is 1 bit mandatory IEEE 1149.1 compliant register [3]. The BYPASS\_DR register is shown in Table 58.

Table 58: BYPASS\_DR, DR-Capture Value

Bits	Name	Attributes	Description
0	Zero	RO	Zero.

#### 8.2.3.13. DAP\_CONTEXT

The DAP\_CONTEXT register is used to define DAP context as shown in Table 59.

Table 59: DAP\_CONTEXT

Bits	Name	Attributes	Description
32	UNIT	-	<ul> <li>Unit ID:</li> <li>0b00 : HART[0]; the unit contains DBGC resources (registers etc.) associated with the Hardware Thread #0 of the core;</li> <li>0b01 : reserved for HART[1];</li> <li>0b10 : reserved;</li> <li>0b11 : CORE; the unit contains DBGC resources associated with the core as a whole, and, in particular, common core parts being used cooperatively by all harts.</li> </ul>
10	FGRP		<ul> <li>Functional Group. Each Unit has its own set of Functional Groups.</li> <li>HART Functional Groups:</li> <li>Ob00: REGTRANS (Register Data Transfer); the group contains debug commands for access to DBGC HART[x] Debug Registers;</li> <li>Ob01: DBGCMD (Debug Command); group with debug commands for debug actions itself (e.g. transition between Run-Mode and Debug-Mode, instruction execution etc.) addressed to a corresponding hart (HART[x]);</li> <li>Ob10: CSR_CAP (Capability CSRs); the group contains debug commands for access to DBGC HART[x] Capability CSRs.</li> <li>CORE Functional Groups:</li> <li>Ob00: REGTRANS (Register Data Transfer); the group contains debug commands for access to DBGC CORE Debug Registers;</li> <li>Ob01: reserved;</li> <li>Ob10: reserved;</li> <li>Ob11: reserved.</li> </ul>

#### 8.2.3.14. DAP\_OPCODE

The DAP\_OPCODE register is used to define DAP operation codes depending on chosen functional group in DAP\_CONTEXT register:

- Operation codes for REGTRANS functional group are shown in Table 60;
- Operation codes for DBGCMD functional group are shown in Table 61;
- Operation codes for CSR\_CAP functional group are shown in Table 62.

Table 60: DAP\_OPCODE, FGRP: REGTRANS

Bits	Name	Attributes	Description
3	Write	WO	<b>Write.</b> Operation type: 1 - write to DBGC register, 0 - read from DBGC register.
20	Reg_Index	WO	Register Index. HART's registers encoding:  • 0x0: HART_DBG_CTRL;  • 0x1: HART_DBG_STS;  • 0x2: HART_DMODE_ENBL;  • 0x3: HART_DMODE_CAUSE;  • 0x4: HART_CORE_INSTR;  • 0x5: HART_DBG_DATA;  • 0x6: HART_PC_SAMPLE;  • 0x7: reserved.  CORE's registers encoding:  • 0x0: CORE_DEBUG_ID;  • 0x1: CORE_DBG_CTRL;  • 0x2: CORE_DBG_STS;  • 0x30x4: reserved;  • 0x5: CORE_TARGET_ID;
			• 0x60x7 : reserved.

Table 61: DAP\_OPCODE, FGRP: DBGCMD

Bits	Name	Attributes	Description	
30	OPCODE	WO	<ul> <li>DbgCmd OpCode. Encoding:</li> <li>0x0: DBG_CTRL (Debug Control Operation); command for Debug Subsystem state change (includes an important option for transition between Run-Mode and Debug-Mode);</li> <li>0x1: CORE_EXEC (Debug Core Instruction Execution) command carries out execution of a RISC-V instruction resided in the DBGC's HART_CORE_INSTR register, on a</li> </ul>	
			<ul> <li>ox2: DBGDATA_WR (Debug Data Register Write); command writes 32-bit data into the HART_DBG_DATA register;</li> <li>ox3: UNLOCK; command unlocks DAP which has been previously locked due to error(s) during preceding operations.</li> </ul>	

Table 62: DAP\_OPCODE, FGRP: CSR\_CAP

Bits	Name	Attributes	Description	
3	Rsrv	MBZ	Reserved. Must be zero for writes.	
20	Reg_Index	WO	Register Index. Encoding:	
			• 0x0: HART_MVENDORID;	
			• 0x1: HART_MARCHID;	
			• 0x2: HART_MIMPID;	
			• 0x3: HART_MHARTID;	
			• 0x4: HART_MISA.	

#### **8.2.3.15. DAP\_OPSTATUS**

The DAP\_OPSTATUS register structure is shown in Table 63.

Table 63: DAP\_OPSTATUS Register

Bits	Name	Attributes	Description
3	Ready	RO	DAP Ready
2	Lock	RO	DAP Lock
1	Error	RO	DAP Error
0	Except	RO	DAP Exception

#### 8.2.3.16. DAP\_DATA

The DAP\_DATA register is used to update DAP Data Register and and capture DAP Data Register

Status as shown in Table 64.

Table 64: DAP\_DATA Register

DR Scan	Action in TAP state				
Length	Capture-DR	Update-DR			
32	ShiftReg[310] ← DAP Data Register Status	DAP Data Register ← ShiftReg[310]			

For debug command DBGCMD with OPCODE = DBG\_CTRL the DAP\_DATA field is used as DAP OpCode Extension as shown in Table 65.

Table 65: DAP OpCode Extension (UNIT: HART[x], FGRP: DBGCMD, OPCODE: DBG\_CTRL)

Bits	Name	Attributes	Description
313	RSRV	RZ/MBZ	Reserved Must be zero for writes
2	Sticky_Clr	WO	<b>Sticky Clear.</b> Clears sticky status bits for corresponding HART
1	Resume	WO	<b>Resume.</b> Transits a corresponding hart from Debug- Mode to Run-Mode (restarts the hart)
0	Halt	WO	<b>Halt.</b> Transits a corresponding hart from Run-Mode to Debug-Mode (halts the hart)

## 8.3. Debug Controller

## 8.3.1. Register Reference

#### 8.3.1.1. Overview

DBGC registers are divided into three groups with corresponding DAP\_CTRL context for access per each one as shown in Table 66.

Table 66: DBGC Register Groups

Unit ID	FGRP	Group name	Description
0b00	0b00	HART[0] Debug Registers	Contains debug control/status registers for HART[0]
0b00	0b10	HART[0] Capability CSRs	Provides DBGC'c view of the hart's CSRs with critical version/configuration/capabilities information
0b11	0b00	Core Debug Registers	Contains registers reflecting debug context and allowing control over the whole processor core

#### 8.3.1.2. HART Debug Registers

HART[0] Debug Registers are shown in Table 67.

Table 67: HART[0] Debug Registers

Index	Name	Short Name	Description
0b000	HART_DBG_CTRL	HDCR	Hart Debug Control Register
0b001	HART_DBG_STS	HDSR	Hart Debug Status Register
0b010	HART_DMODE_ENBL	HDMER	Hart Debug Mode Enable Register
0b011	HART_DMODE_CAUSE	HDMCR	Hart Debug Mode Cause Register
0b100	HART_CORE_INSTR	HDCIR	Hart Debug Core Instruction Register
0b101	HART_DBG_DATA	HDDR	Hart Debug Data Register
0b110	HART_PC_SAMPLE	HPCSR	Hart PC Sample Register
0b111	RSRV	RSRV	Reserved

#### 8.3.1.2.1. Hart Debug Control Register

Structure of Hart Debug Control Register (HART\_DBG\_CTRL, HDCR) is shown in Table 68.

Table 68: Hart Debug Control Register

Bits	Name	Attributes	Reset Value	Description
317	RSRV1	RZ/MBZ	0	Reserved. Must be zero for writes
6	PC_Advmt_Dsbl	R/W	0	Hart PC Advancement Disable
51	RSRV0	RZ/MBZ	0	Reserved. Must be zero for writes
0	Rst	R/W	0	Hart Reset

#### 8.3.1.2.2. Hart Debug Status Register

Structure of Hart Debug Status Register (HART\_DBG\_STS, HDSR) is shown in Table 69.

Table 69: Hart Debug Status Register

Bits	Name	Attributes	Reset Value	Description
31	Lock_Stky	RO	0	Hart DAP Lock Sticky Status
302	RSRV1	RZ	0	Reserved
22	Err_Timeout	RO	0	Hart Debug Operation Time-out Error Status
21	Err_Unexp_Rst	RO	0	Hart Unexpected Reset Error Status
20	Err_Illeg_Contxt	RO	0	Hart Illegal Debug Context Error Status
19	Err_DbgCmd_NA CK	RO	0	Hart Debug Command NACK Error Status
18	Err_DAP_OpCode	RO	0	Hart DAP OpCode Error Status
17	Err_HwThread	RO	0	Hart HW Error Status
16	Err	RO	0	Hart Error Summary Status
156	RSRV0	RZ	0	Reserved
54	PLVL	RO	0b11	Hart Privilege Level. The field is hardwired to value 0b11 corresponding to the only SCR1 operational mode: Machine Mode.
3	Except	RO	0	Hart Exception Status
2	Rst_Stky	RO	0	Hart Reset Sticky Status
1	Rst	RO	0	Hart Reset Status
0	DMODE	RO	0	Hart Debug Mode Status

#### 8.3.1.2.3. Hart Debug Mode Enable Register (HART\_DMODE\_ENBL, HDMER)

Structure of Hart Debug Mode Enable Register (HART\_DMODE\_ENBL, HDMER) is shown in Table 70.

Table 70: Hart Debug Mode Enable Register

Bits	Name	Attributes	Reset Value	Description
31	RSRV3	RZ/MBZ	0	Reserved. Must be zero for writes
30	Rst_Exit	R/W	0	Hart Reset Exit DMODE Redirection Enable
29	RSRV2	RZ/MBZ	0	Reserved. Must be zero for writes
28	SStep	R/W	0	Hart Single Step DMODE Redirection Enable
274	RSRV1	RZ/MBZ	0	Reserved. Must be zero for writes
3	Brkpt	R/W	0	Hart Breakpoint Exception DMODE Redirection Enable
20	RSRV0	RZ/MBZ	0	Reserved. Must be zero for writes

#### 8.3.1.2.4. Hart Debug Mode Cause Register

Structure of Hart Debug Mode Cause Register (HART\_DMODE\_CAUSE, HDMCR) is shown in Table 71.

Table 71: Hart Debug Mode Cause Register

Bits	Name	Attributes	Reset Value	Description
31	Enforce	RO	0	Hart Debug Mode Enforcement
30	Rst_Exit	RO	0	Hart Reset Exit Break
29	Rst_Entr	RO	0	Hart Reset Entrance Break
28	SStep	RO	0	Hart Single Step
27	Hw_Brkpt	RO	0	Hart HW Breakpoint
264	RSRV1	RO	0	Reserved
3	Brkpt	RO	0	Hart Breakpoint Exception
20	RSRV0	RO	0	Reserved

#### 8.3.1.2.5. Hart Debug Core Instruction Register

Structure of Hart Debug Core Instruction Register (HART\_CORE\_INSTR, HDCIR) is shown in Table 72.

Table 72: Hart Debug Core Instruction Register

Bits	Name	Attributes	Reset Value	Description
310	Instruction	R/W	0	Hart Debug Core Instruction

#### 8.3.1.2.6. Hart Debug Data Register

Structure of Hart Debug Data Register (HART\_DBG\_DATA, HDDR) is shown in Table 73.

Table 73: Hart Debug Data Register

Bits	Name	Attributes	Reset Value	Description
31 0	Data	R/W		Hart Debug Data. Corresponds to the DBG_SCRATCH (0x7C8) core's CSR

#### 8.3.1.2.7. Hart PC Sample Register

Structure of Hart PC Sample Register (HART\_PC\_SAMPLE, HPCSR) is shown in Table 74.

Table 74: Hart PC Sample Register

Bits	Name	Attributes	Reset Value	Description
31 0	PC	RO	0	Hart Program Counter (PC). Reflects current hart PC value

#### 8.3.1.3. HART Capability CSR

HART[0] Capability CSRs are shown in Table 75.

Table 75: HART[0] Capability CSRs

Index	Name	Short Name	Description
0b000	HART_MVENDORID	HMVENDORID	Hart MVENDORID Register
0b001	HART_MARCHID	HMARCHID	Hart MARCHID Register
0b010	HART_MIMPID	HMIMPID	Hart MIMPID Register
0b011	HART_MHARTID	HMHARTID	Hart MHARTID Register
0b100	HART_MISA	HMISA	Hart MISA Register
0b101 0b111	RSRV	RSRV	Reserved

#### 8.3.1.4. Core Debug Registers

Core Debug Registers are shown in Table 76.

Table 76: Core Debug Registers

Index	Name	Short Name	Description
0b000	CORE_DEBUG_ID	CDID	Core Debug ID Register
0b001	CORE_DBG_CTRL	CDCR	Core Debug Control Register
0b010	CORE_DBG_STS	CDSR	Core Debug Status Register
0b011 0b100	RSRV	RSRV	Reserved
0b101	CORE_TARGET_ID	CDTID	Core Debug Target ID Register
0b110 0b111	RSRV	RSRV	Reserved

#### 8.3.1.4.1. Core Debug ID Register

The register indicates a version number of the debug facilities implemented by the Debug Subsystem. It is expressed in the form "VC0.VC1.VC2.VT", where "VC0.VC1.VC2" designates compatibility-critical part of the version number, and "VT" is a compatibility-tolerant part. For instance, if debug software is compatible with version 0.80.0.00, it is compatible with all versions numbered as 0.80.0.XX (XX - any 8-bit value), and is not compatible with version 0.80.1.00.

Structure of Core Debug ID Register is shown in Table 77.

Table 77: Core Debug ID Register

Bits	Name	Attributes	Reset Value	Description
312	VC0	RO	0x00	Most significant fraction of compatibility-critical version's part
231	VC1	RO	0x82	Middle fraction of compatibility-critical version's part
158	VC2	RO	0x00	Least significant fraction of compatibility-critical version's part
70	VT	RO	0x00	Compatibility-tolerant version's part

#### 8.3.1.4.2. Core Debug Control Register

Structure of Core Debug Control Register (CORE\_DBG\_CTRL, CDCR) is shown in Table 78.

Table 78: Core Debug Control Register

Bits	Name	Attributes	Reset Value	Description
312 6	RSRV1	RZ/MBZ	0	Reserved. Must be zero for writes
25	Irq_Dsbl	R/W	0	Core IRQ Disable
24	Rst	R/W	0	Core Reset
231	RSRV0	RZ/MBZ	0	Reserved. Must be zero for writes
0	HART0_Rst	R/W	0	Hart[0] Reset. Reserved for future use

#### 8.3.1.4.3. Core Debug Status Register

Structure of Core Debug Status Register (CORE\_DBG\_STS, CDSR) is shown in Table 79.

Table 79: Core Debug Status Register

Bits	Name	Attributes	Reset Value	Description
31	Ready	RO	0	DAP Ready Status
30	Lock	RO	0	DAP Lock Status
29	Rst_Stky	R/W1TC	0	Core Reset Sticky Status
28	Rst	RO	0	Core Reset Status
272 1	RSRV2	RZ	0	Reserved
20	Err_DAP_OpCode	RO	0	Core DAP OpCode Error Status
19	Err_FsmBusy	RO	0	Core DBGC FSM Busy Error Status
18	Err_HwCore	RO	0	Core HW Error Status
17	Err_Stky	R/W1TC	0	Core Error Summary Sticky Status
16	Err	RO	0	Core Error Summary Status
158	RSRV1	RZ	0	RSRV1 reserved bit field
76	HARTO_PLVL	RO	0b11	HART[0] Privilege Level. The field is hardwired to value 0b11 corresponding to the only SCR1 operational mode: Machine Mode.
5	RSRV0	RZ	0	RSRV0 reserved bit field
4	HART0_Err_Stky	R/W1TC	0	HART[0] Error Sticky Status
3	HART0_Err	RO	0	HART[0] Error Status
2	HART0_Rst_Stky	R/W1TC	0	HART[0] Reset Sticky Status
1	HART0_Rst	RO	0	HART[0] Reset Status
0	HARTO_DMODE	RO	0	HART[0] Debug Mode Status

#### 8.3.1.4.4. Core Debug Target ID Register

The ID is supposed to be a second part of a two-factor debug target identification, including also CORE\_DEBUG\_ID register check as mandatory starting point. Main goal of the CORE\_TARGET\_ID is to provide debugger with information about target-under-debug, sufficient for its proper identification and critical debug functionality support. Structure of CORE\_TARGET\_ID register is shown in Table 80.

Table 80: Core Debug Target ID Register

Bits	Name	Attributes	Reset Value	Description
312	CORE_ID	RO	0x01	<ul> <li>Core Identifier. CORE_ID structure:</li> <li>bits [6:0] - ARCH_ID - SC Core Architecture ID. SCR1 core's ARCH_ID = 0x01.</li> <li>bit 7 - Private. Encoding: <ul> <li>1 - private, proprietary core IP;</li> <li>0 - open-source core IP.</li> </ul> </li> <li>Thus, open-source SCR1 core has CORE_ID = 0x01.</li> </ul>
23	BRKM	RO	<cfg_prm></cfg_prm>	Hardware Breakpoint Module (BRKM) Present. Value of the bit depends on SCR1_BRKM_EN core configuration parameter.
221 6	RSRV1	RZ	0	Reserved.
151	PSPEC	RO	0b0001	Privileged ISA Specification Supported. Encoding:  • 0b0000 - 1.7;  • 0b0001 - 1.10;  • others - reserved.  SCR1 has value 0b0001 in these bits.
113	RSRV0	RZ	0	Reserved.
2	MPU	RO	0	<b>MPU Present.</b> The bit is 0 in the SCR1.
1	MMU	RO	0	<b>MMU Present.</b> The bit is 0 in the SCR1.
0	CACHE	RO	0	Cache Present (I\$ and/or D\$). The bit is 0 in the SCR1.

# 9. External Interfaces

## 9.1. AHB-Lite Interface

AHB-Lite external interface consists of two separate AHB-Lite master buses for instructions and data. Interface signals are listed in Table 81.

Table 81: AHB-Lite external interface

Name	Direction	Description
	AHB-	Lite instruction interface
imem_hprot[3:0]	output	The protection control signals provide additional information about a bus access and are primarily intended for use by any module that wishes to implement some level of protection
imem_hburst[2:0]	output	Indicates if the transfer forms part of a burst
imem_hsize[2:0]	output	Indicates the size of the transfer
imem_htrans[1:0]	output	Indicates the type of the current transfer
imem_hmastlock	output	Indicates that the current transfer is part of a locked sequence
imem_haddr[31:0]	output	The 32-bit address bus
imem_hready	input	When '1' the HREADY signal indicates that a transfer has finished on the bus
imem_hrdata[31:0]	input	The read data bus is used to transfer data from bus slaves to the bus master during read operations
imem_hresp[1:0]	input	The transfer response provides additional information on the status of a transfer
	Al	HB-Lite data interface
dmem_hprot[3:0]	output	The protection control signals provide additional information about a bus access and are primarily intended for use by any module that wishes to implement some level of protection
dmem_hburst[2:0]	output	Indicates if the transfer forms part of a burst
dmem_hsize[2:0]	output	Indicates the size of the transfer
dmem_htrans[1:0]	output	Indicates the type of the current transfer
dmem_hmastlock	output	Indicates that the current transfer is part of a locked sequence
dmem_haddr[31:0]	output	The 32-bit address bus
dmem_hwrite	output	1 - write transfer; 0 - read transfer
dmem_hwdata[31:0]	output	The write data bus is used to transfer data from the master to the bus slaves during write operations
dmem_hready	input	When '1' the HREADY signal indicates that a transfer has finished on the bus

Name	Direction	Description
dmem_hrdata[31:0]	input	The read data bus is used to transfer data from bus slaves to the bus master during read operations
dmem_hresp[1:0]	input	The transfer response provides additional information on the status of a transfer

Both AHB-Lite bridges (instruction and data) have optional input and output registers, which can be switched on to meet design timing requirements. The registers are disabled by default. See Core configurable parameters for details.

## 9.2. AHB-Lite Timing diagrams

Figure 9 shows example of data memory AHB-Lite read/write.

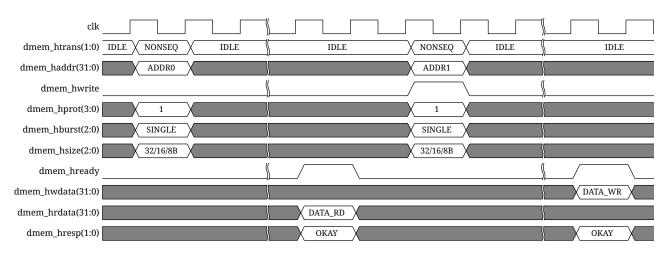


Figure 9: Data memory AHB-Lite read/write

IMPORTANT

SCR1 does not perform sequential read or write requests to **data memory**, it always waits for a transaction to finish before initiating another one.

Figure 10 shows example of instruction memory AHB-Lite read with delay.

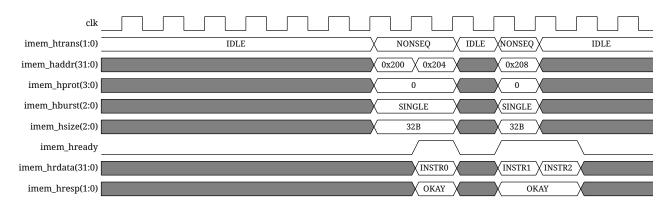


Figure 10: Instruction memory AHB-Lite read with delay

## 9.3. AXI4 Interface

Instruction memory AXI4 write data channel signals are shown in Table 82.

The IMEM AXI4 write data channel, IMEM AXI4 write response channel, and IMEM AXI4 write address channel are provided for compatibility with AXI4 specification. All output ports of these three channels are hardwired to 0. All input ports of these three channels must be connected to constant 0.

Table 82: IMEM AXI4 write data channel signals

Name	Direction	Description
io_axi_imem_wdata[31:0]	output	Master Write data
io_axi_imem_wstrb[3:0]	output	Master Write strobes. This signal indicates which byte lanes hold valid data. There is one write strobe bit for each eight bits of the write data bus
io_axi_imem_wlast	output	Master Write last. This signal indicates the last transfer in a write burst
io_axi_imem_wuser[3:0]	output	Master User signal. Optional User-defined signal in the write data channel
io_axi_imem_wvalid	output	Master Write valid. This signal indicates that valid write data and strobes are available
io_axi_imem_wready	input	Slave Write ready. This signal indicates that the slave can accept the write data

Instruction memory AXI4 write response channel signals are shown in Table 83.

Table 83: IMEM AXI4 write response channel signals

Name	Direction	Description
io_axi_imem_bid[3:0]	input	Slave Response ID tag. This signal is the ID tag of the write response
io_axi_imem_bresp[1:0]	input	Slave Write response. This signal indicates the status of the write transaction
io_axi_imem_bvalid	input	Slave Write response valid. This signal indicates that the channel is signaling a valid write response
io_axi_imem_buser[3:0]	input	Slave User signal. Optional User-defined signal in the write response channel
io_axi_imem_bready	output	Master Response ready. This signal indicates that the master can accept a write response

Instruction memory AXI4 write address channel signals are shown in Table 84.

Table 84: IMEM AXI4 write address channel signals

Name	Direction	Description
io_axi_imem_awid[3:0]	output	Master Write address ID. This signal is the identification tag for the write address group of signals

Name	Direction	Description
io_axi_imem_awaddr[31:0	output	Master Write address. The write address gives the address of the first transfer in a write burst transaction
io_axi_imem_awlen[7:0]	output	Master Burst length. The burst length gives the exact number of transfers in a burst. This information determines the number of data transfers associated with the address
io_axi_imem_awsize[2:0]	output	Master Burst size. This signal indicates the size of each transfer in the burst
io_axi_imem_awburst[1:0]	output	Master Burst type. The burst type and the size information, determine how the address for each transfer within the burst is calculated
io_axi_imem_awlock	output	Master Lock type. Provides additional information about the atomic characteristics of the transfer
io_axi_imem_awcache[3:0]	output	Master Memory type. This signal indicates how transactions are required to progress through a system
io_axi_imem_awprot[2:0]	output	Master Protection type. This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access
io_axi_imem_awregion[3:0]	output	Master Region identifier. Permits a single physical interface on a slave to be used for multiple logical interfaces
io_axi_imem_awuser[3:0]	output	Master User signal. Optional User-defined signal in the write address channel
io_axi_imem_awqos[3:0]	output	Master Quality of Service, QoS. The QoS identifier sent for each write transaction
io_axi_imem_awvalid	output	Master Write address valid. This signal indicates that the channel is signaling valid write address and control information
io_axi_imem_awready	input	Slave Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals

Instruction memory AXI4 read address channel signals are shown in Table 85.

Table 85: IMEM AXI4 read address channel signals

Name	Direction	Description
io_axi_imem_arid[3:0]	output	Master Read address ID. This signal is the identification tag for the read address group of signals. This output is hardwired to constant 0
io_axi_imem_araddr[31:0]	output	Master Read address. The read address gives the address of the first transfer in a read burst transaction
io_axi_imem_arlen[7:0]	output	Master Burst length. This signal indicates the exact number of transfers in a burst. This output is hardwired to constant 0

Name	Direction	Description
io_axi_imem_arsize[2:0]	output	Master Burst size. This signal indicates the size of each transfer in the burst. This output is hardwired to constant 2
io_axi_imem_arburst[1:0]	output	Master Burst type. The burst type and the size information determine how the address for each transfer within the burst is calculated. This output is hardwired to constant 1
io_axi_imem_arlock	output	Master Lock type. This signal provides additional information about the atomic characteristics of the transfer. This output is hardwired to constant 0
io_axi_imem_arcache[3:0]	output	Master Memory type. This signal indicates how transactions are required to progress through a system. This output is hardwired to constant 2
io_axi_imem_arprot[2:0]	output	Master Protection type. This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access. This output is hardwired to constant 0
io_axi_imem_arregion[3:0]	output	Master Region identifier. Permits a single physical interface on a slave to be used for multiple logical interfaces. This output is hardwired to constant 0
io_axi_imem_aruser[3:0]	output	Master User signal. Optional User-defined signal in the read address channel. This output is hardwired to constant 0
io_axi_imem_arqos[3:0]	output	Master Quality of Service, QoS. QoS identifier sent for each read transaction. This output is hardwired to constant 0
io_axi_imem_arvalid	output	Master Read address valid. This signal indicates that the channel is signaling valid read address and control information
io_axi_imem_arready	input	Slave Read address ready. This signal indicates that the slave is ready to accept an address and associated control signals

Instruction memory AXI4 read data channel signals are shown in Table 86.

 $\it Table~86: IMEM~AXI4~read~data~channel~signals$ 

Name	Direction	Description
io_axi_imem_rid[3:0]	input	Slave Read ID tag. This signal is the identification tag for the read data group of signals generated by the slave
io_axi_imem_rdata[31:0]	input	Slave Read data
io_axi_imem_rresp[1:0]	input	Slave Read response. This signal indicates the status of the read transfer
io_axi_imem_rlast	input	Slave Read last. This signal indicates the last transfer in a read burst
io_axi_imem_ruser[3:0]	input	Slave User signal. Optional User-defined signal in the read data channel

Name	Direction	Description
io_axi_imem_rvalid	input	Slave Read valid. This signal indicates that the channel is signaling the required read data
io_axi_imem_rready	output	Master Read ready. This signal indicates that the master can accept the read data and response information

Data memory AXI4 write address channel signals are shown in Table 87.

Table 87: DMEM AXI write address channel signals

Name	Direction	Description
io_axi_dmem_awid[3:0]	output	Master Write address ID. This signal is the identification tag for the write address group of signals. This output is hardwired to constant 1
io_axi_dmem_awaddr[31:0]	output	Master Write address. The write address gives the address of the first transfer in a write burst transaction
io_axi_dmem_awlen[7:0]	output	Master Burst length. The burst length gives the exact number of transfers in a burst. This output is hardwired to constant 0
io_axi_dmem_awsize[2:0]	output	Master Burst size. This signal indicates the size of each transfer in the burst
io_axi_dmem_awburst[1:0]	output	Master Burst type. The burst type and the size information, determine how the address for each transfer within the burst is calculated. This output is hardwired to constant 1
io_axi_dmem_awlock	output	Master Lock type. Provides additional information about the atomic characteristics of the transfer. This output is hardwired to constant 0
io_axi_dmem_awcache[3:0]	output	Master Memory type. This signal indicates how transactions are required to progress through a system. This output is hardwired to constant 2
io_axi_dmem_awprot[2:0]	output	Master Protection type. This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access. This output is hardwired to constant 0
io_axi_dmem_awregion[3: 0]	output	Master Region identifier. Permits a single physical interface on a slave to be used for multiple logical interfaces. This output is hardwired to constant 0
io_axi_dmem_awuser[3:0]	output	Master User signal. Optional User-defined signal in the write address channel. This output is hardwired to constant 0
io_axi_dmem_awqos[3:0]	output	Master Quality of Service, QoS. The QoS identifier sent for each write transaction. This output is hardwired to constant 0
io_axi_dmem_awvalid	output	Master Write address valid. This signal indicates that the channel is signaling valid write address and control information

Name	Direction	Description
io_axi_dmem_awready	•	Slave Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals

Data memory AXI4 write data channel signals are shown in Table 88.

Table 88: DMEM AXI write data channel signals

Name	Direction	Description
io_axi_dmem_wdata[31:0]	output	Master Write data
io_axi_dmem_wstrb[3:0]	output	Master Write strobes. This signal indicates which byte lanes hold valid data. There is one write strobe bit for each eight bits of the write data bus
io_axi_dmem_wlast	output	Master Write last. This signal indicates the last transfer in a write burst
io_axi_dmem_wuser[3:0]	output	Master User signal. Optional User-defined signal in the write data channel. This output is hardwired to constant 0
io_axi_dmem_wvalid	output	Master Write valid. This signal indicates that valid write data and strobes are available
io_axi_dmem_wready	input	Slave Write ready. This signal indicates that the slave can accept the write data

Data memory AXI4 write response channel signals are shown in Table 89.

Table 89: DMEM AXI4 write response channel signals

Name	Direction	Description
io_axi_dmem_bid[3:0]	input	Slave Response ID tag. This signal is the ID tag of the write response
io_axi_dmem_bresp[1:0]	input	Slave Write response. This signal indicates the status of the write transaction
io_axi_dmem_bvalid	input	Slave Write response valid. This signal indicates that the channel is signaling a valid write response
io_axi_dmem_buser[3:0]	input	Slave User signal. Optional User-defined signal in the write response channel
io_axi_dmem_bready	output	Master Response ready. This signal indicates that the master can accept a write response

Data memory AXI4 read address channel signals are shown in Table 90.

Table 90: DMEM AXI read address channel signals

Name	Direction	Description
io_axi_dmem_arid[3:0]	output	Master Read address ID. This signal is the identification tag for the read address group of signals. This output is hardwired to constant 0

Name	Direction	Description
io_axi_dmem_araddr[31:0]	output	Master Read address. The read address gives the address of the first transfer in a read burst transaction
io_axi_dmem_arlen[7:0]	output	Master Burst length. This signal indicates the exact number of transfers in a burst. This output is hardwired to constant 0
io_axi_dmem_arsize[2:0]	output	Master Burst size. This signal indicates the size of each transfer in the burst
io_axi_dmem_arburst[1:0]	output	Master Burst type. The burst type and the size information determine how the address for each transfer within the burst is calculated. This output is hardwired to constant 1
io_axi_dmem_arlock	output	Master Lock type. This signal provides additional information about the atomic characteristics of the transfer. This output is hardwired to constant 0
io_axi_dmem_arcache[3:0]	output	Master Memory type. This signal indicates how transactions are required to progress through a system. This output is hardwired to constant 2
io_axi_dmem_arprot[2:0]	output	Master Protection type. This signal indicates the privilege and security level of the transaction, and whether the transaction is a data access or an instruction access. This output is hardwired to constant 0
io_axi_dmem_arregion[3:0]	output	Master Region identifier. Permits a single physical interface on a slave to be used for multiple logical interfaces. This output is hardwired to constant 0
io_axi_dmem_aruser[3:0]	output	Master User signal. Optional User-defined signal in the read address channel. This output is hardwired to constant 0
io_axi_dmem_arqos[3:0]	output	Master Quality of Service, QoS. QoS identifier sent for each read transaction. This output is hardwired to constant 0
io_axi_dmem_arvalid	output	Master Read address valid. This signal indicates that the channel is signaling valid read address and control information
io_axi_dmem_arready	input	Slave Read address ready. This signal indicates that the slave is ready to accept an address and associated control signals

Data memory AXI4 read data channel signals are shown in Table 91.

Table 91: DMEM AXI4 read data channel signals

Name	Direction	Description
io_axi_dmem_rid[3:0]	input	Slave Read ID tag. This signal is the identification tag for the read data group of signals generated by the slave
io_axi_dmem_rdata[31:0]	input	Slave Read data
io_axi_dmem_rresp[1:0]	input	Slave Read response. This signal indicates the status of the read transfer

Name	Direction	Description
io_axi_dmem_rlast	input	Slave Read last. This signal indicates the last transfer in a read burst
io_axi_dmem_ruser[3:0]	input	Slave User signal. Optional User-defined signal in the read data channel
io_axi_dmem_rvalid	input	Slave Read valid. This signal indicates that the channel is signaling the required read data
io_axi_dmem_rready	output	Master Read ready. This signal indicates that the master can accept the read data and response information

## 9.4. AXI4 Timing diagrams

The AXI4 interface of the core defines the following independent transaction channels between the core (master) and external memory (slave) [4]:

- · read address channel;
- read data channel;
- write address channel;
- write data channel;
- write response channel.

An address channel carries control information that describes the nature of the data to be transferred. The data is transferred between master and slave using either:


- A write data channel to transfer data from the master to the slave. In a write transaction, the slave uses the write response channel to signal to the master the completion of the transfer;
- A read data channel to transfer data from the slave to the master.

The AXI4 interface of the core permits address information to be issued ahead of the actual data transfer.

Figure 11 shows read and write transaction from perspective of used channels.

# Read address channel Read address Read address Read address Slave Read data channel Read data

Read transaction

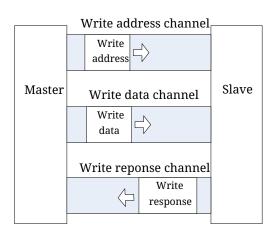

Write transaction

Figure 11: AXI4 read and write channels

Following timing diagrams show example of two read transactions and two write transactions that could happen in the following sequence scenario:

- 1) Read RD0 data word from address RA0;
- 2) Read RD1 data word from address RA1;
- 3) Write WD0 data word to address WA0;
- 4) Write WD1 data word to address WA1.

Figure 12 shows read word transaction from perspective of interface signals.

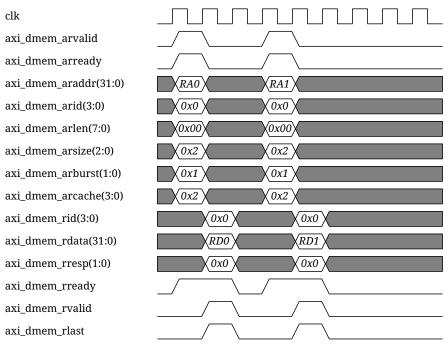


Figure 12: AXI4 read word transaction

Figure 13 shows write word transaction from perspective of interface signals.

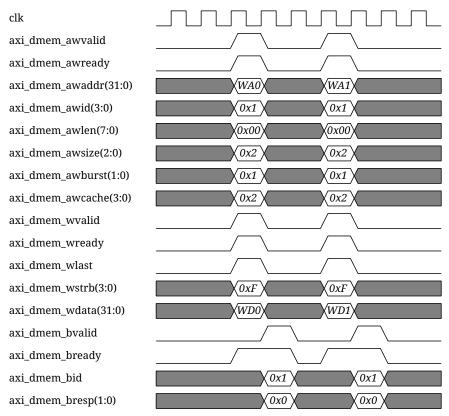


Figure 13: AXI4 write word transaction

AXI4 interface has no ordering restrictions between read and write transactions. They can complete in any order, even if the axi\_dmem\_arid value of a read transaction is the same as the axi\_dmem\_awid value of a write transaction. If a master requires a given relationship between a read transaction and a write transaction then it must ensure that the earlier transaction is complete before it issues the later transaction.

A master can only consider the earlier transaction is complete when:

- for a read transaction, it receives the last of the read data;
- for a write transaction, it receives the write response.

Sending all of the write data for the write transaction must not be considered as completion of that transaction.

AXI4 interface is able to flag as an error the DECERR and SLVERR types of responses that may appear in bresp[1:0] or rresp[1:0] signals, as presented in [4]. The EXOKAY type of response is also considered as error since the exclusive access is never requested by the core. All types of errors are processed in the same way and flagged as memory access fault, resulting in instruction, load or store access fault synchronous exception in the core.

### 9.5. Control Interface

Control interface signals of the SCR1 core are shown in Table 92.

Table 92: Control interface signals

Name	Direction	Description
clk	input	System clock
rst_n	input	System reset
rst_n_out	output	System reset output for peripherals
rtc_clk	input	Real-time clock
test_mode	input	Test mode signal
fuse_mhartid [31:0]	input	Core hardware thread ID

# 9.6. JTAG Interface

Standard JTAG interface is provided by SCR1 core to access TAP registers and DBGC module registers. JTAG interface signals do comply with IEEE 1149.1 [3]. JTAG interface signals are shown in Table 93.

Table 93: JTAG Interface Signals

Name	Direction	Description
trst_n	input	Test reset (active low)
tck	input	Test clock
tms	input	Test mode select
tdi	input	Test data input
tdo	output	Test data output
tdo_en	output	Test data output enable

# 9.7. IRQ Interface

IRQ interface signals are shown in Table 94.

Table 94: IRQ Interface Signals

Name	Direction	Description					
soft_irq *	input	Software interrupt					
ext_irq *	input	External interrupt (only with IPIC disabled)					
irq_lines[15:0]	input	External IRQ lines (only with IPIC enabled)					

<sup>\*</sup> Must be synchronous to the internal clock.

## 10. Clocks and Resets

### 10.1. Clock Distribution

The core supports three clock domains as shown in Figure 14.

Following clock domains are supported:

- Core clock domain (clk);
- RTC clock domain (rtc\_clk);
- TAP controller (TAPC) clock domain (tck).

Different clock domains have clocks which have a different frequency, a different phase (due to either differing clock latency or a different clock source), or both. Either way the relationship between the clock edges in the various domains cannot be relied upon and may cause undesired metastability in some cases.

The core assumes that clk frequency is higher than frequency of both rts\_clk and tck. Synchronizing a single bit signal to a clock domain with a higher frequency is accomplished by registering the signal through a flip-flop that is clocked by the source domain, thus holding the signal long enough to be detected by the higher frequency clocked destination domain. To avoid metastability in the destination domain, 2 stages of re-synchronization flip-flops are included independently for rtc\_clk and tck received from corresponding inputs.

The core and memory subsystem do utilize clk directly.

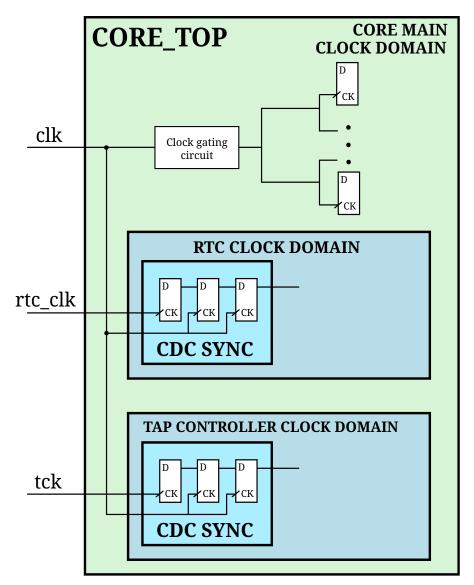


Figure 14: SCR1 Clock Distribution Diagram

## 10.2. Power saving features

The core has power saving features that can be utilized for low-power applications:

• Global clock gating in wait-for-interrupt state

When a WFI instruction is executed and no enabled pending interrupts are present at the moment, the core transitions to the low-power mode. In this mode all core logic is switched off except CYCLE and TIME performance counters, and IPIC (if present). The core returns to normal operation after any enabled interrupt becomes pending.

Software control of performance counters

It is possible to disable individual performance counters (CYCLE, TIME, INSTRET) via software. By default, after reset, all three counters are enabled. For more information, see MCOUNTEN [0x7E0], TIMER\_CTRL [TIMER\_BASE].

### 10.3. Core Reset Circuit

The core may receive reset signal from three different sources:

- signal from external rst\_n pin;
- signal tapc\_sys\_rst\_ctrl driven by SYS\_CTRL\_RD register of the TAP controller (TAPC);
- signal dbgc\_core\_rst\_ctrl driven by Rst bit in the HART\_DBG\_CTRL register of the Debug controller (DBGC).

Core reset circuit is shown in Figure 15.

In operational mode the circuit provides following functionality:

- asynchronous assertion and synchronous deassertion of the reset from external rst\_n pin for the core and DBGC;
- asynchronous assertion and synchronous deassertion of the reset from signal tapc\_sys\_rst\_ctrl for the core and DBGC;
- synchronous assertion and synchronous deassertion of the reset from signal dbgc\_core\_rst\_ctrl for the core.

In test mode the circuit provides asynchronous assertion and deassertion of the reset to every flipflop of the internal scan chain of the core.

#### SCR1 Core local reset generation test\_mode Reset Sync Reset Sync clk core\_rst\_n sys\_rst\_n test mode test\_mode **CORE** rst\_r rst\_n rst\_n\_din rst\_n\_din <del>L</del>D rst\_n\_out **r**ŁCK sys\_rstn\_status core\_rstn\_status trst\_n trst\_n TAP CONTROLLER sys\_rst\_n DEBUG CONTROLLER sys\_rst\_n dbgc\_core\_rst\_ctrl tapc\_sys\_rst\_ctrl sys\_rstn\_status core\_rstn\_status

Figure 15: Core reset circuit

# 11. Initialization

### **11.1. Reset**

After reset signal is de-asserted, the following happens:

- Core begins instruction fetch at address 0x200
- General-purpose registers are reset to zero
- Control and status registers are reset to their default values (Table 95)

Table 95: CSR reset values

CSR name	Reset value
MSTATUS	0x1880
MIE	0
MTVEC	0x1C0
MSCRATCH	0
MEPC	0
MCAUSE	0
MTVAL	0
MIP	0
MCYCLE[H]	0
MINSTRET[H]	0
MTIME[H]	0
MTIMECMP[H]	0
TIMER_CTRL	0x1
TIMER_DIV	0
DBG_SCRATCH	0
MCOUNTEN	0x5

Figure 16 shows reset de-assertion and instruction fetch start on the AHB-Lite bus.

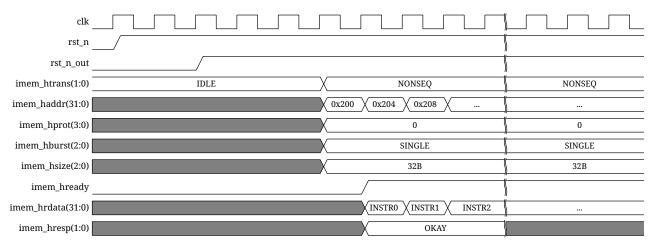


Figure 16: Reset timing diagram

## 11.2. C-runtime code example

The following is a CRT code example, which can be used to initialize the core (assuming that .text section is linked at 0x1C0).

```
#include "riscv_csr_encoding.h"
# define LREG lw
# define SREG sw
# define REGBYTES 4
    .globl _start
    .globl main
    .globl trap_entry
    .globl handle_trap
    .globl sc_exit
    .weak trap_entry, handle_trap, sc_exit
    .text
    .align 6
machine_trap_entry:
    j trap_entry
    .align 6
_start:
    auipc
            gp, %hi(_gp)
    addi
            gp, gp, %lo(_gp)
    # clear bss
            a1, __BSS_START__
    la
            a2, __BSS_END__
    la
            4f
    j
            zero, 0(a1)
3: sw
    add
            a1, a1, 4
    bne
            a1, a2, 3b
            sp, __C_STACK_TOP__
    la
```

```
// Timer init
            t0, mtime_ctrl
   li
   li
            t1, (1 << SCR1_MTIME_CTRL_EN)
            t1, (t0)
    SW
   li
            t0, mtime div
            t1, (100-1)
   li
            t1, (t0)
    SW
   li
            t0, mtimecmp
   li
            t1, -1
            t1, (t0)
    SW
            t1, 4(t0)
    SW
            a0, 0
   li
   li
            a1, 0
    jal
            main
    j
            sc_exit
trap_entry:
    addi sp, sp, -124
    SREG x1, 1*REGBYTES(sp)
    SREG x2, 2*REGBYTES(sp)
    SREG x3, 3*REGBYTES(sp)
    SREG x4, 4*REGBYTES(sp)
   SREG x5, 5*REGBYTES(sp)
   SREG x6, 6*REGBYTES(sp)
    SREG x7, 7*REGBYTES(sp)
   SREG x8, 8*REGBYTES(sp)
   SREG x9, 9*REGBYTES(sp)
    SREG x10, 10*REGBYTES(sp)
    SREG x11, 11*REGBYTES(sp)
    SREG x12, 12*REGBYTES(sp)
    SREG x13, 13*REGBYTES(sp)
    SREG x14, 14*REGBYTES(sp)
    SREG x15, 15*REGBYTES(sp)
#ifndef __RVE_EXT
    SREG x16, 16*REGBYTES(sp)
    SREG x17, 17*REGBYTES(sp)
    SREG x18, 18*REGBYTES(sp)
    SREG x19, 19*REGBYTES(sp)
    SREG x20, 20*REGBYTES(sp)
    SREG x21, 21*REGBYTES(sp)
    SREG x22, 22*REGBYTES(sp)
    SREG x23, 23*REGBYTES(sp)
    SREG x24, 24*REGBYTES(sp)
    SREG x25, 25*REGBYTES(sp)
    SREG x26, 26*REGBYTES(sp)
    SREG x27, 27*REGBYTES(sp)
    SREG x28, 28*REGBYTES(sp)
    SREG x29, 29*REGBYTES(sp)
```

```
SREG x30, 30*REGBYTES(sp)
    SREG x31, 31*REGBYTES(sp)
#endif // __RVE_EXT
    csrr a0, mcause
    csrr a1, mepc
   mv a2, sp
    jal handle_trap
    LREG x1, 1*REGBYTES(sp)
   LREG x2, 2*REGBYTES(sp)
   LREG x3, 3*REGBYTES(sp)
   LREG x4, 4*REGBYTES(sp)
   LREG x5, 5*REGBYTES(sp)
   LREG x6, 6*REGBYTES(sp)
   LREG x7, 7*REGBYTES(sp)
   LREG x8, 8*REGBYTES(sp)
   LREG x9, 9*REGBYTES(sp)
   LREG x10, 10*REGBYTES(sp)
   LREG x11, 11*REGBYTES(sp)
   LREG x12, 12*REGBYTES(sp)
   LREG x13, 13*REGBYTES(sp)
    LREG x14, 14*REGBYTES(sp)
   LREG x15, 15*REGBYTES(sp)
#ifndef __RVE_EXT
    LREG x16, 16*REGBYTES(sp)
   LREG x17, 17*REGBYTES(sp)
    LREG x18, 18*REGBYTES(sp)
   LREG x19, 19*REGBYTES(sp)
   LREG x20, 20*REGBYTES(sp)
    LREG x21, 21*REGBYTES(sp)
   LREG x22, 22*REGBYTES(sp)
    LREG x23, 23*REGBYTES(sp)
   LREG x24, 24*REGBYTES(sp)
   LREG x25, 25*REGBYTES(sp)
   LREG x26, 26*REGBYTES(sp)
    LREG x27, 27*REGBYTES(sp)
   LREG x28, 28*REGBYTES(sp)
    LREG x29, 29*REGBYTES(sp)
    LREG x30, 30*REGBYTES(sp)
   LREG x31, 31*REGBYTES(sp)
#endif // __RVE_EXT
    addi sp, sp, 124
   mret
handle_trap:
sc_exit:
1: wfi
    j 1b
```

# 12. Instruction set summary

Table 96 and Table 97 present the summary for RV32I instruction set.

Table 96: RV32I instruction set summary

3125	2420	1915	1412	117	60	Name
	imm[31:12]			rd	0110111	LUI
	imm[31:12]			rd	0010111	AUIPC
imi	m[20 10:1 11	19:12]	rd	1101111	JAL	
imm[11	:0]	rs1	000	rd	1100111	JALR
imm[12 10:5]	rs2	rs1	000	imm[4:1 11]	1100011	BEQ
imm[12 10:5]	rs2	rs1	001	imm[4:1 11]	1100011	BNE
imm[12 10:5]	rs2	rs1	100	imm[4:1 11]	1100011	BLT
imm[12 10:5]	rs2	rs1	101	imm[4:1 11]	1100011	BGE
imm[12 10:5]	rs2	rs1	110	imm[4:1 11]	1100011	BLTU
imm[12 10:5]	rs2	rs1	111	imm[4:1 11]	1100011	BGEU
imm[11	:0]	rs1	000	rd	0000011	LB
imm[11	:0]	rs1	001	rd	0000011	LH
imm[11	:0]	rs1	010	rd	0000011	LW
imm[11	:0]	rs1	100	rd	0000011	LBU
imm[11	:0]	rs1	101	rd	0000011	LHU
imm[11:5]	rs2	rs1	000	imm[4:0]	0100011	SB
imm[11:5]	rs2	rs1	001	imm[4:0]	0100011	SH
imm[11:5]	rs2	rs1	010	imm[4:0]	0100011	SW
imm[11	:0]	rs1	000	rd	0010011	ADDI
imm[11	:0]	rs1	010	rd	0010011	SLTI
imm[11	:0]	rs1	011	rd	0010011	SLTIU
imm[11	:0]	rs1	100	rd	0010011	XORI
imm[11	:0]	rs1	110	rd	0010011	ORI
imm[11	:0]	rs1	111	rd	0010011	ANDI

Table 97: RV32I instruction set summary (continued)

31	25	2420	1915	1412	117	60	Name
00000	000	shamt	rs1	001	rd	0010011	SLLI
00000	000	shamt	rs1	101	rd	0010011	SRLI
01000	000	shamt	rs1	101	rd	0010011	SRAI
00000	000	shamt	rs1	000	rd	0110011	ADD
01000	000	shamt	rs1	000	rd	0110011	SUB
00000	000	shamt	rs1	001	rd	0110011	SLL
00000	000	shamt	rs1	010	rd	0110011	SLT
0000	000	shamt	rs1	011	rd	0110011	SLTU
00000	000	shamt	rs1	100	rd	0110011	XOR
00000	000	shamt	rs1	101	rd	0110011	SRL
01000	000	shamt	rs1	101 rd		0110011	SRA
00000	000	shamt	rs1	110	rd	0110011	OR
00000	000	shamt	rs1	111 rd		0110011	AND
0000	pred	succ	00000	000	00000	0001111	FENCE
0000	0000	0000	00000	001	00000	0001111	FENCE.I
0	0000000	0000	00000	000	00000	1110011	ECALL
0	0000000	0001	00000	000	00000	1110011	EBREAK
0	0110000	0010	00000	000	00000	1110011	MRET
0	0010000	0101	00000	000	00000	1110011	WFI
	csr		rs1	001	rd	1110011	CSRRW
	csr		rs1	010	rd	1110011	CSRRS
	csr		rs1	011	rd	1110011	CSRRC
	csr		zimm	101	rd	1110011	CSRRWI
	csr		zimm	110	rd	1110011	CSRRSI
	csr		zimm	111	rd	1110011	CSRRCI

Table 98 presents the summary for RV32M instruction set.

Table 98: RV32M instruction set summary

3125	2420	1915	1412	117	60	Name
0000001	rs2	rs1	000	rd	0110011	MUL
0000001	rs2	rs1	001	rd	0110011	MULH
0000001	rs2	rs1	010	rd	0110011	MULHSU
0000001	rs2	rs1	011	rd	0110011	MULHU
0000001	rs2	rs1	100	rd	0110011	DIV
0000001	rs2	rs1	101	rd	0110011	DIVU
0000001	rs2	rs1	110	rd	0110011	REM
0000001	rs2	rs1	111	rd	0110011	REMU

Table 99 and Table 100 present the summary for RVC instruction set.  $\,$ 

Table 99: RVC instruction set summary

1513	12	11 10	9	8 7	6	5	4	3	2	1.0	Name
Quadrant 0											
000	0							0		00	Illegal instruction
000		nzimm	[5:4	9:6 2 3	3]			rd'		00	C.ADDI4SPN (RES,nzimm=0)
010	imm[5	:3]		rs1'	imm	[2 6]		rd'		00	C.LW
110	imm[5	:3]		rs1'	imm	[2 6]		rs2	1	00	C.SW
					Q	uadra	nt 1	-			
000	0		0				0			01	C.NOP
000	nzimm[5]	r	s1/rd	<b>≠</b> 0		nzim	m[4:	0]		01	C.ADDI (HINT,nzimm=0)
001	offset[11 4 9:8 10 6 7 3:1									01	C.JAL (RV32)
010	imm[5]	r	s1/rd	<b>≠</b> 0		imm[4:0]				01	C.LI (HINT,rd=0)
011	nzimm[9]		2		nzi	nzimm[4 6 8:7 5]			5]	01	C.ADDI16SP (RES,nzimm=0)
011	nzimm[17]	rs1	/rd≠{	[0, 2]	n	nzimm[16:12]				01	C.LUI (RES,nzimm=0; HINT,rd=0)
100	nzimm[5]	00	r	s1'/rd'		nzim	m[4:	0]		01	C.SRLI (RV32 NSE,nzimm[5]=1)
100	nzimm[5]	01	r	s1'/rd'		nzim	m[4:	0]		01	C.SRAI (RV32 NSE,nzimm[5]=1)
100	imm[5]	10	r	s1'/rd'		imn	n[4:0	]		01	C.ANDI
100	0	11	r	s1'/rd'	0	0		rs2	1	01	C.SUB
100	0	11	r	s1'/rd'	0	1		rs2	ı	01	C.XOR
100	0	11	r	s1'/rd'	1	0		rs2	ı	01	C.OR
100	0	11	r	s1'/rd'	1	1		rs2	1	01	C.AND
101		offset	[11 4	9:8 10	0 6 7 3	3:1 5]				01	C.J
110	offset[8	4:3]		rs1'	of	fset[7	:6 2:	1 5	]	01	C.BEQZ
111	offset[8	4:3]		rs1'	of	fset[7	:6 2:	1 5	]	01	C.BNEZ

Table 100: RVC instruction set summary (continued)

1513	12	11	10	9	8	7	6	5	4	3	2	1.0	Name
	Quadrant 2												
000	nzimm[5]	rd≠0					nzimm[4:0]					10	C.SLLI (HINT,rd=0; RV32 NSE,nzimm[5]=1)
010	imm[5]	rd≠0				imm[4:2 7:6]					10	C.LWSP (RES,rd=0)	
100	0	rs1≠0				0					10	C.JR (RES,rs1=0)	
100	0	rd≠0				rs2≠0					10	C.MV (HINT,rd=0)	
100	1	0				0					10	C.EBREAK	
100	1	rs1≠0				0					10	C.JALR	
100	1	rd≠0					rs2≠0					10	C.ADD (HINT,rd=0)
110	imm[5:2 7:6]					rs2					10	C.SWSP	

# **Referenced documents**

- [1] The RISC-V Instruction Set Manual Volume I: User-Level ISA Version 2.2 https://riscv.org/specifications/
- [2] The RISC-V Instruction Set Manual Volume II: Privileged Architecture Version 1.10 https://riscv.org/specifications/privileged-isa/
- [3] IEEE Std-1149.1 Standard Specification for boundary-scan http://standards.ieee.org/findstds/standard/1149.1-2001.html
- [4] AMBA AXI and ACE Protocol Specification (Issue E)
   http://infocenter.arm.com/help/index.jsp?topic=/com.arm.doc.ihi0022e/index.html