Application Note

AN2485/D 8/2003

HCS12 Software Stationery





By Eduardo Montañez 8/16 Bit Applications Engineering Austin, Texas

Introduction

This application note describes a standardized software stationery that takes advantage of system on a chip (SoC) capabilities to make software development for the HCS12 Family of microcontrollers more efficient and reusable.

Defining each microcontroller peripheral individually according to SoC ideology provides a library complete with all necessary MCU parameter and definition files. This stationery architecture promotes:

- Increased version control
- Easy upgrades
- Pre-silicon development
- Reduced development time
- Easy portability/compatibility/adaptability
- Software reuse

With all the MCU definition files readily available, you can begin developing applications immediately.

The sofware stationery, *HCS12_Stationery_VX_X.zip*, and an example serial communication project example using the stationery, *AN2485SW.zip*, are available from the Motorola website, http://motorola.com/semiconductors.

NOTE:

With the exception of mask set errata documents, if any other Motorola document contains information that conflicts with the information in the device data sheet, the data sheet should be considered to have the most current and correct data.

Overview

The HCS12 software stationery was developed using Metrowerks' CodeWarrior® tool for HC(S)12 MCUs (version 1.2 or greater¹) and was written in the C programming language. The stationery displays all the necessary project files for your target MCU in a CodeWarrior (CW) project window.

The stationery is accessible through two unique methods:

- Mass MCU Stationery (_MC9S12_ALL.mcp) CW project that includes all HCS12 Family definitions. You must follow MCU selection steps discussed in Selecting a Target MCU (Steps 9, 10, 11) to select which MCU peripheral and parameter files will be compiled for your defined application. One advantage of using the mass MCU stationery is increased portability. Using the CW project window, you can modify your application's target MCU with a few clicks.
- Single MCU Stationery (_PartNumber_Maskset.mcp) Separate CW projects for each supported HCS12 MCU. Project includes only the definition files necessary for that device, so there is no need for the target MCU selection process. An advantage of this method is that there are fewer files in the project window.

This application note will refer to the mass MCU stationery method. However, all stationery functionality remains the same for the single MCU stationery, with the exception of the MCU selection steps described in **Selecting a Target MCU (Steps 9, 10, 11)**.

The stationery was developed to use the CodeWarrior interface, but the stationery's software architecture is unique and can be modified to function on different embedded tools.

The SoC architecture of the stationery allows for easy upgrades to support growth in the HCS12 Family. Also, the SoC structure allows you to develop your application software for a targeted MCU prior to receiving silicon. This advantage can boost efficiency and allow you more time for debugging and improving your application. This concept will be explained in more detail in **System on a Chip Ideology**.

^{1.} CodeWarrior $^{\circledR}$ is a registered trademark of Metrowerks, Inc., a wholly owned subsidiary of Motorola, Inc.

System on a Chip Ideology

The HCS12 Family is based on system on a chip ideology. SoC allows the reuse of existing peripherals in multiple HCS12 MCU derivatives. SoC provides design with a convenient way to mix-and-match peripherals to easily customize an MCU. Therefore, as more and more HCS12 MCU derivatives are introduced, compatibility across the family of parts increases.

By standardizing the software peripheral definitions, the stationery follows the SoC method. Therefore, when you develop an application for a target MCU, your project will include only the necessary module definitions for that part. For example, when designing with an MC9S12DP256 (K79X) in mind, only the module definitions listed in **Table 1** would be included in the compilation:

Table 1. MC9S12DP256 (K79X) Peripherals

Peripheral	Version	Document Number	Header File
HCS12 V1.5 Core	V1.2	S12CPU15UG/D ⁽¹⁾	S12CPU15V1_2.h
CRG	V02	S12CRGV2/D	S12CRGV2.h
ECT_16B8C	V01	S12ECT16B8CV1/D	S12ECT16B8CV1.h
ATD_10B8C	V02	S12ATD10B8CV2/D	S12ATD10B8CV2.h
IIC	V02	S12IICV2/D	S12IICV2.h
SCI	V02	S12SCIV2/D	S12SCIV2.h
SPI	V02	S12SPIV2/D	S12SPIV2.h
PWM_8B8C	V01	S12PWM8B8CV1/D	S12PWM8B8CV1.h
FTS256K	V02	S12FTS256KV2/D	S12FTS256KV2.h
EETS4K	V02	S12EETS4KV2/D	S12EETS4KV2.h
BDLC	V01	S12BDLCV1/D	S12BDLCV1.h
MSCAN	V02	S12MSCANV2/D	S12MSCANV2.h
PIM_9DP256	V02	S12DP256PIMV2/D	S12DP256PIMV2.h

^{1.} The HCS12 Family MCU Core User Guide has been parted into sovereign documents. The naming convention for header files will continue to be derived from the title of the collective core document as demonstrated. See Naming Convention for further explanation.

Naming Convention

Notice in Table 1 that each peripheral name and version number corresponds with the appropriate document order number. The HCS12 Family follows this naming convention to create a concise correlation between the peripheral and the corresponding documentation. In order to keep up with peripheral revisions, the stationery module definition files (also known as header files) maintain a standard naming convention, which directly reflects the equivalent documentation. For example, the S12SCIV2,h definition file reflects all the registers in the S12SCIV2/D block guide. The software stationery uses this as a form of version control. When you develop an application based on the HCS12 V1.5 Core V1.2, you will be well aware by the equivalent header file (S12CPU15V1 2.h) that you do not have access to additional features like the on-chip debug module included in the new HCS12 V1.5 Core V1.5 (S12CPU15V1 5.h). In addition, if you were to receive an MCU with a revised mask set, the software stationery would identify any revisions in the peripherals from a previous mask set — enabling you to correct any functionality differences in your software. Overall, the software stationery SoC method allows you to develop using only functionality available in your target MCU.

Early Development

You can benefit from the SoC method when developing application software for a future MCU for which you have not yet received silicon. For example, if you wanted to program an application which involves using a 16-bit/ 8-channel enhanced capture timer (ECT), you could use the MC9S12DP256 (K79X) stationery to write and debug your software. In turn, when you receive your MC9S12D64 (L86D) silicon you can easily port your 16-bit, 8-channel ECT application that you had developed on the MC9S12DP256. In this example, both MCUs have identical ECT peripherals. The software stationery allows you to make easy transitions between MCUs by Selecting a Target MCU (Steps 9, 10, 11). The ability to change the target device for your development software on the fly will also allow for convenient reuse of existing software routines. Software written for a primary MCU can be easily transferred to a compatible target MCU.

Software Stationery Architecture

The software stationery is composed of three stages with files that must be included in the compilation to access all the MCU features via software:

- Definition Stage Contains files that are consistent to MCU documentation and need no modification by the user.
 - Peripheral definition files
 - Parameter files
- Control Stage Contains files that require minimum user modification for access to stationery features.
 - Project globals file
 - Project vectors file
 - Driver files
- Development Stage Contains files developed completely by the user using stationery resources.
 - Application software file

Each stage is essential to the stationery for developing a complete software application. Figure 1 illustrates the three stages and the files creating the software stationery. The arrows represent where the files must be included for a successful software compilation.

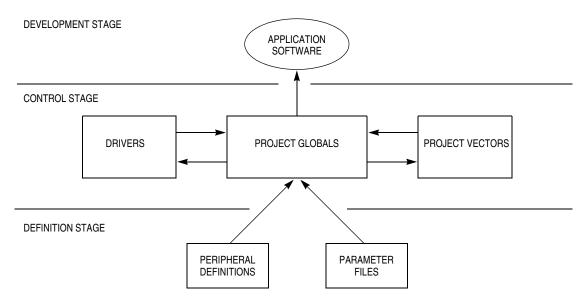


Figure 1. Software Stationery Architecture

Figure 1 demonstrates the software stationery's pyramid structure. The following sections will breakdown each individual stage and explain the role of each software file in the stationery's scheme. Also, the sections below will describe how each software file is created for a target MCU.

Definition Stage

The definition stage is the backbone of the software stationery. This stage allows your software to access the hardware functionality of your MCU by associating labels with all register and bit field names from the MCU data sheet. The definition stage then sets these labels to the appropriate address and bit positions. The definition stage is composed of both peripheral definitions and parameter files. Both of these file types obey the HCS12 SoC architecture by defining a complete target MCU in software, dependent on the part number and mask set.

Peripheral Definitions

The first block in the definition stage contains the peripheral definitions, which is built in two levels:

- Module Definitions (S12ModuleVersion.h) Create register-level definitions per module by using structures in C programming language. The sequential structures in header files also specify register locations. Structure definitions allow the user access to register space via software.
- MCU Definitions (per_partnumber_maskset.c and per_partnumber_maskset.h) Include only the necessary module definitions per part number and mask set for a single MCU. Develops a module memory map by defining the beginning address of each peripheral. The C source and header file are dependent on each other and contain almost identical information. However, the header files allow the peripheral structures to be accessible to the application software by making the peripheral definitions "extern." (In the C programming language, the label "extern" makes an object accessible by other files.)

Module Definitions

Figure 2 illustrates the construction of a register structure in a module definition file based on the register level information provided by the MCU documentation. The example builds a C programming structure for the serial communication interface baud rate (SCIBD) register in the SCI peripheral. This particular example demonstrates three register structures. The first two structures are the SCIBDH (high byte — msb) and SCIBDL (low byte — lsb), which allow for both byte-wise and bit-wise access to the registers via software. The third structure concatenates SCIBDH and SCIBDL into a single SCIBD structure, enabling word access to the SCI baud rate register.

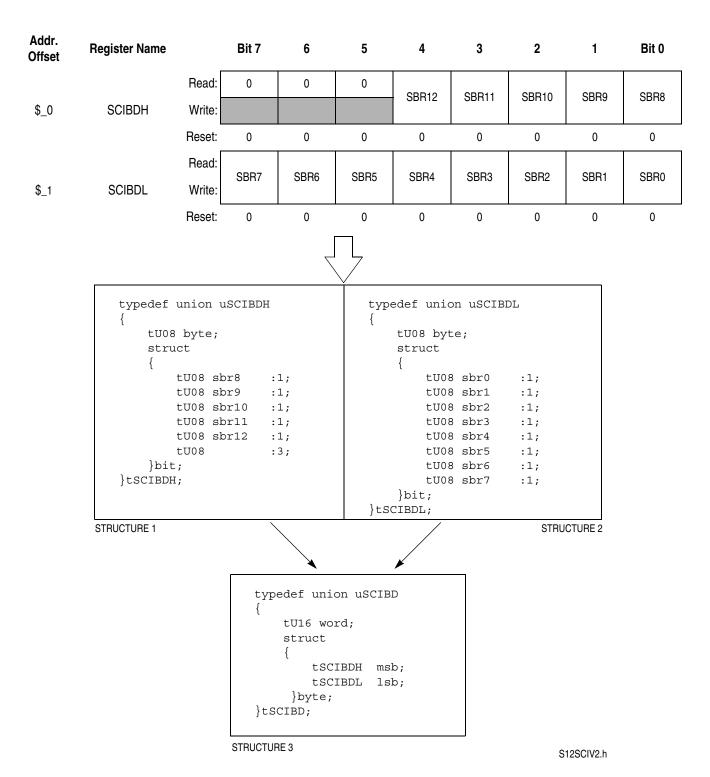


Figure 2. Constructing the SCIBD Register Structure

The module definition files characterize register structures for all peripheral registers with an identical format to **Figure 2**. **Figure 2** only represents one 16-bit register in the SCI module definition file. Recall that structure 1 defines a byte-length register with three reserved bits. Next, structure 2 defines a byte-length register with all bits defined. Then, structure 3 concatenates structures 1 and 2 to define a word-length register.

To complete the module definition file, you must organize the registers within a larger structure sequentially (by address) after defining all the register structures for a peripheral. For example, the SCIBD register is the first of eight registers for the SCI peripheral. **Figure 3** shows an example structure organizing the SCI peripheral registers in sequential order.

Offset	Use	Access
\$_0	SCI baud rate register high (SCIBDH)	Read/Write
\$_1	SCI baud rate register low (SCIBDL)	Read/Write
\$_2	SCI baud rate register 1 (SCICR1)	Read/Write
\$_3	SCI baud rate register 2 (SCICR2)	Read/Write
\$_4	SCI status register 1 (SCISR1) Read	
\$_5	SCI status register 2 (SCISR2)	Read/Write
\$_6	SCI data register high (SCIDRH)	Read/Write
\$_7	SCI data register low (SCIDRL)	Read/Write



Figure 3. Sequentially Organizing the SCI Peripheral Registers

MCU Definitions

After all the module definition files are complete, construct the MCU definition files. Recall that an MCU definition file includes the module definition files that make a particular MCU. It also specifies the peripheral's offset address from the documented module memory map. The SoC architecture allows you to include only the module definition files necessary to build an MCU by part number and mask set via software. **Figure 4** demonstrates how an MCU definition file is constructed from the module definition files for an MC9S12DP256 (K79X).

The MCU definition files mold the register space for all the supported MCUs. Note that in **Figure 4**, only the peripheral definitions and header files pertaining to an MC9S12DP256 (K79X) are included in the MCU definition file. Also note that some peripherals are duplicated within MCUs. For example, an MC9S12DP256 (K79X) has two identical SCI peripherals. The peripheral definition structures accommodate the presence of multiple peripherals by allowing the structures to be renamed per peripheral occurrence. Renaming the structure definitions allows access to a single peripheral definition by multiple peripherals. Therefore, you can access each repeating peripheral individually — ensuring that you modify the correct peripheral by associating them with the appropriate name in the MCU documentation. SCI peripherals (Sci0 and Sci1) use the same tSCI structure defined by the SCI module definition file, but they access register space at two different memory locations. The MCU definition file shown in **Figure 4** is created for each new MCU mask set and completes the peripheral definitions block in the definition stage.

MC9S12DP256 (K79X) Register Mapping

Address	Module
\$0000 - \$0017	CORE (Ports A, B, E, modes, inits, test)
\$0018 - \$0019	Reserved
\$001A-\$001B	Device ID register (PARTID)
\$001C - \$001F	CORE (MEMSIZ, IRQ, HPRIO)
\$0020 - \$0027	Reserved
\$0028 – \$002F	CORE (BDM)
\$0030 - \$0033	CORE (PPAGE, Port K)
\$0034- \$003F	Clock and reset generator (PLL, RTI, COP)
\$0040 – \$007F	ECT 16-bit, 8 channels
\$0080 - \$009F	ATD 10-bit, 8 channels (ATD0)
\$00A0 - \$00C7	PWM 8-bit, 8 channels
\$00C8 - \$00CF	SCI0
\$00D0 - \$00D7	SCI1
\$00D8 – \$00DF	SPI0
\$00E0 - \$00E7	IIC
\$00E8 - \$00EF	BDLC
\$00F0 - \$00F7	SPI1
\$00F8 - \$00FF	SPI2
\$0100 – \$010F	FLASH control register
\$0110 – \$011B	EEPROM control register
\$011C- \$011F	Reserved
\$0120- \$013F	ATD 10-bit, 8 channels (ATD1)
\$0140 – \$017F	CAN0
\$0180- \$01BF	CAN1
\$01C0 - \$01FF	CAN2
\$0200 – \$023F	CAN3
\$0240 – \$027F	PIM
\$0280 - \$02BF	CAN4
\$02C0 - \$03FF	Reserved

```
#include "S12ATD10B8CV2.h"
                                 //ATD
#include "S12BDLCV1.h"
                                 //BDLC
#include "S12CPU15V1 2.h"
                                 //CORE (PAGE/REG)
#include "S12CRGV2.h"
                                 //CRG
#include "S12EETS4KV2.h"
                                 //EEPROM
#include "S12FTS256KV2.h"
                                 //FLASH
#include "S12IICV2.h"
                                 //IIC
#include "MOTTYPES.h"
                                 //TYPE DEFS
#include "S12MSCANV2.h"
                                 //MSCAN
#include "S12DP256PIMV2.h"
                                 //PIM
#include "S12PWM8B8CV1.h"
                                 //PWM
#include "S12SCIV2.h"
                                 //SCI
                                 //SPI
#include "S12SPIV2.h"
#include "S12ECT16B8CV1.h"
                                 //TIMER
extern tREGISTER Regs
                        @ (0x0000 + REG BASE);
extern tPAGE
                 Page
                        @ (0x0030 + REG BASE);
extern tCRG
                        @ (0x0034 + REG BASE);
                 Crg
extern tTIMER
                 Tim0
                        @ (0x0040 + REG BASE);
extern tATD
                 Atd0
                        @ (0x0080 + REG BASE);
                 Pwm
                        @ (0x00A0 + REG BASE);
extern tPWM
extern tSCI
                 Sci0
                        @ (0x00C8 + REG BASE);
extern tSCI
                 Sci1
                        @ (0x00D0 + REG BASE);
                        @ (0x00D8 + REG BASE);
extern tSPI
                 Spi0
extern tIIC
                 Iic
                        @ (0x00E0 + REG BASE);
                 Bdlc
extern tBDLC
                        @ (0x00E8 + REG BASE);
extern tSPI
                 Spi1
                        @ (0x00F0 + REG BASE);
extern tSPI
                 Spi2
                        @ (0x00F8 + REG BASE);
extern tFLASH
                 Flash
                        @ (0x0100 + REG BASE);
                 Eeprom @ (0x0110 + REG BASE);
extern tEEPROM
extern tATD
                        @ (0x0120 + REG BASE);
extern tMSCAN
                 Can0
                        @ (0x0140 + REG BASE);
                        @ (0x0180 + REG BASE);
extern tMSCAN
                 Can1
```

@ (0x01C0 + REG BASE);

@ (0x0200 + REG_BASE);
@ (0x0240 + REG_BASE);

@ (0x0280 + REG BASE);

per_DP256_K79X.h

Figure 4. Building an MCU Definition File for an HC9S12DP256 (K79X)

extern tMSCAN

extern tMSCAN

extern tMSCAN

extern tPIM

Can2

Can3

Pim

Can4

ifndef REG BASE

#endif

#define REG BASE 0x0000

Parameter Files

Parameter files:

- Specify memory locations for a target MCU.
- Provide the development tool linker with available memory locations to be programmed for your application software.
- Define an interrupt vector lookup table by assigning an interrupt handler label to each exception.


The parameter files block is composed of three types of parameter files per MCU part number. The three types of parameter files are:

- RAM parameter file (_partnumber_RAM.prm) Specifies only RAM and EEPROM memory locations for a target MCU. No interrupt vector addresses are defined. File limits development of software applications to the maximum RAM size available in your target MCU.
- FLASH parameter file (_partnumber_FLAT.prm) Specifies RAM, EEPROM, and non-banked FLASH memory locations for a target MCU. Defines an interrupt vector table. Intended for development of software applications with less than 48K of FLASH. (Does **not** use banked FLASH.)
- BANKED FLASH parameter file (_partnumber_BANKED.prm) —
 Specifies RAM, EEPROM, and banked FLASH memory locations for a
 target MCU. File defines an interrupt vector table. Most commonly used
 for development of software applications with more than 48K of FLASH
 and limits development to the maximum FLASH size available in your
 target MCU. File uses a PPAGE value, which allows access to multiple
 16K FLASH windows. (Uses banked FLASH.)

Memory Mapping

Even though there are three types of parameter files per MCU, only one is selected for use when developing your application software. Choose the parameter file according to the size and requirements of your application software. **Figure 5** demonstrates how an MC9S12DP256 memory map is translated into a BANKED FLASH parameter file.

MC9S12DP256 (K79X) MEMORY MAP

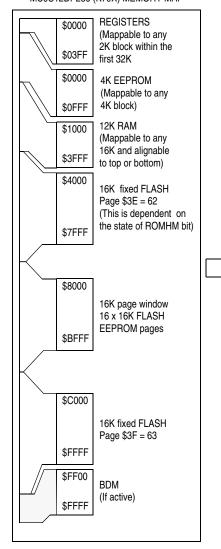

```
NAMES
END
SECTIONS
             = READ WRITE 0x1000 TO 0x3FFF; /* 12K */
    RAM
             = NO INIT
                         0x0400 TO 0x0FFF /* 3K - first 1K hidden under registers */
              ALIGN 2 [<= 2: 2] [>2: 4]; /* default alignment = 2 */
                                            /* char & int assigned to x2 boundary */
                                            /* elements > 3 bytes to x4 boundary */
                                            /* < 100% use of EEPROM if byte data used */
    /* unbanked FLASH ROM */
    ROM 4000 = READ ONLY 0x4000 TO 0x7FFF; /* 16K */
    ROM C000 = READ ONLY 0xC000 TO 0xFEFF; /* ~16K */
    SECURITY = READ ONLY 0xFF00 TO 0xFF0F;
   ROM FF10 = READ ONLY 0xFF10 TO 0xFF7F;
    /* banked FLASH ROM */
    PAGE 30 = READ ONLY 0x308000 TO 0x30BFFF;
    PAGE 31 = READ ONLY 0x318000 TO 0x31BFFF;
    PAGE 32 = READ ONLY 0x328000 TO 0x32BFFF;
    PAGE 33 = READ ONLY 0x338000 TO 0x33BFFF;
    PAGE 34 = READ ONLY 0x348000 TO 0x34BFFF;
    PAGE 35 = READ ONLY 0x358000 TO 0x35BFFF;
    PAGE 36 = READ_ONLY 0x368000 TO 0x36BFFF;
    PAGE 37 = READ ONLY 0x378000 TO 0x37BFFF;
    PAGE 38 = READ ONLY 0x388000 TO 0x38BFFF;
    PAGE 39 = READ ONLY 0x398000 TO 0x39BFFF;
    PAGE 3A = READ ONLY 0x3A8000 TO 0x3ABFFF;
    PAGE 3B = READ ONLY 0x3B8000 TO 0x3BBFFF;
    PAGE 3C = READ ONLY 0x3C8000 TO 0x3CBFFF;
    PAGE 3D = READ_ONLY 0x3D8000 TO 0x3DBFFF;
     PAGE_3E = READ_ONLY 0x3E8000 TO 0x3EBFFF; not used: equivalent to MY_ROM_1 */
     PAGE_3F = READ_ONLY 0x3F8000 TO 0x3FBFFF; not used: equivalent to MY_ROM_2 */
PLACEMENT
    PRESTART, STARTUP,
    ROM VAR, STRINGS,
   NON BANKED, COPY
                               INTO ROM 4000, ROM C000, ROM FF10;
                               INTO PAGE 30, PAGE 31, PAGE 32, PAGE 33, PAGE 34, PAGE 35, PAGE 36,
   DEFAULT ROM
                                      PAGE 37, PAGE 38, PAGE 39, PAGE 3A, PAGE 3B, PAGE 3C, PAGE 3D;
                               INTO RAM;
    DEFAULT RAM
    EEPROM DATA
                               INTO EEPROM;
END
STACKSIZE 0x0600 /* 1.5K bytes = 1/8 of RAM */
                                                                            MC9S12Dx256 BANKED.prm
```

Figure 5. Building an MCU Parameter File

Note that each individual memory location on the memory map is allocated in the parameter file (RAM, EEPROM, non-banked FLASH, and banked FLASH). Because this example shows a banked parameter file, each FLASH page window is defined to total 16 x 16K paged FLASH memory locations on the 256K FLASH device.

Vector Table

To complete the parameter file, **Figure 6** illustrates how the interrupt vector lookup table is defined. Each exception is labeled with an interrupt service routine handler and defined with the appropriate vector address location.

MC9S12DP256 (F	(79X) Vector Ta	ble
----------------	-----------------	-----

Vector Address	Interrupt Source
\$FFFE, \$FFFF	Reset
\$FFFC, \$FFFD	Clock monitor fail reset
\$FFFA, \$FFFB	COP failure reset
\$FFF8, \$FFF9	Unimplemented instruction trap
\$FFF6, \$FFF7	SWI
\$FFF4, \$FFF5	XIRQ
\$FFF2, \$FFF3	IRQ
\$FFF0, \$FFF1	Real-time interrupt
\$FFEE, \$FFEF	Enhanced capture timer channel 0
\$FFEC, \$FFED	Enhanced capture timer channel 1
\$FFEA, \$FFEB	Enhanced capture timer channel 2
\$FFE8, \$FFE9	Enhanced capture timer channel 3
\$FFE6, \$FFE7	Enhanced capture timer channel 4
\$FFE4, \$FFE5	Enhanced capture timer channel 5
\$FFE2, \$FFE3	Enhanced capture timer channel 6
\$FFE0, \$FFE1	Enhanced capture timer channel 7
\$FFDE, \$FFDF	Enhanced capture timer overflow



```
VECTOR ADDRESS 0xFFFE
                          Startup
                                               /* 0xFFFE Reset
                                               /* OXFFFE Reset /
/* OXFFFC Clock monitor fail reset */
/* OXFFFA COP failure reset */
VECTOR ADDRESS 0xFFFC
                         clockmonitor_isr
VECTOR ADDRESS 0xFFFA
                         cop_isr
                                               /* 0xFFF8 Unimplemented instruction trap */
VECTOR ADDRESS 0xFFF8
                         trap isr
VECTOR ADDRESS 0xFFF6
                                               /* 0xFFF4 XIRQ */
/* 0xFFF2 IRQ */
VECTOR ADDRESS 0xFFF4
                         xirq_isr
VECTOR ADDRESS 0xFFF2
                         irq_isr
VECTOR ADDRESS 0xFFF0
                                               /* 0xFFF0 real Time Interrupt
                                               /* 0xFFEE Timer channel 0
VECTOR ADDRESS OXFFEE
                         ect_ch0_isr
                                               /* 0xFFEC Timer channel 1
VECTOR ADDRESS 0xFFEC
                         ect chl isr
                         ect_ch2_isr
VECTOR ADDRESS 0xFFEA
                                               /* 0xFFEA Timer channel 2
                                               /* 0xFFE8 Timer channel 3
VECTOR ADDRESS 0xFFE8
                         ect ch3 isr
                                               /* 0xFFE6 Timer channel 4
VECTOR ADDRESS 0xFFE6
                         ect ch4 isr
                                               /* 0xFFE4 Timer channel 5
/* 0xFFE2 Timer channel 6
VECTOR ADDRESS 0xFFE4
                         ect_ch5_isr
VECTOR ADDRESS 0xFFE2
                         ect_ch6_isr
VECTOR ADDRESS 0xFFE0
                        ect ch7 isr
                                               /* 0xFFE0 Timer channel 7
VECTOR ADDRESS 0xFFDE
                                               /* 0xFFDE Timer overflow
                         ect overflow isr
                                                                                                         MC9S12Dx256_BANKED.prm
```

Figure 6. Creating an Interrupt Vector Table for an MC9S12DP256 (K79X)

Figure 6 only shows a portion of the MCU interrupt vectors for an MC9S12DP256 (K79X). Note that the labeled interrupt handler routines will be executed when the CPU requests the corresponding interrupt.

Control Stage

The purpose of the control stage is to construct the software stationery. The stage provides a bridge between the development and definition stages. The settings defined in the control stage enable you to specify the definition files necessary for your application software. Also, this stage gives you flexibility to mold your projects by providing an area to define global parameters, macro definitions, driver inclusions, and interrupt service routines. The control stage is comprised of three blocks:

- Project globals
- Software drivers
- Project vectors

Project Globals

The project globals block is made up of a single file labeled projectglobals.h, which gives you the option to select which MCU to include in the compilation with your application software (for mass MCU method only). Recall from the **Definition Stage** that an MCU definition file is created per MCU, which in turn includes each corresponding module definition file and the relative base address for each peripheral. **Figure 7** demonstrates the piece of software in projectglobals.h in which the user selects an MCU/maskset for software development (for mass MCU method only). For step-by-step instructions on how to set up your software application for development on a specific MCU, refer to **Developing Using the HCS12 Software Stationery**.

```
#ifdef Dx512 L00M
#include "per_Dx512_L00M.h"
#define Flash_Sector_Size 0x400
#endif /*Dx512_L00M*/
#ifdef DP256_K79X
#include "per_DP256_K79X.h"
#define Flash_Sector_Size 0x200
                                                           //* MCU Maskset Selection:
#endif /*DP256_K79X*/
                                                           //********
#ifdef Dx256_L91N
#include "per_Dx256_L91N.h"
#define Flash_Sector_Size 0x200
#endif /*Dx256_L91N*/
                                                           /*D-Family*/
                                                           //#define Dx512 L00M
#ifdef Dx128 L40K
                                                           //#define DP256 K79X
#include "per_Dx128_L40K.h"
#define Flash_Sector_Size 0x200
#endif /*Dx128_L40K*/
                                                           //#define Dx256 L91N
                                                           //#define Dx128 L40K
#ifdef Dx64 L86D
                                                           //#define Dx64 L86D
#include "per_Dx64_L86D.h"
#define Flash_Sector_Size 0x200
#endif /*Dx64_L86D*/
                                                           /*A-Family*/
                                                           //#define A512 L00M
#ifdef A512 L00M
#include "per_A512_L00M.h"
#define Flash_Sector_Size 0x400
                                                           //#define A256 L91N
                                                           //#define A128 L40K
#endif /*A512_L00M*/
                                                           //#define A64 L86D
#ifdef A256_L91N
#include "per_A256_L91N.h"
#define Flash_Sector_Size 0x200
                                                           /*H-Family*/
#endif /*A256_L91N*/
                                                           //#define H256 K78X
#ifdef A128 L40K
                                                           //#define H128 K78X
#include "per_A128_L40K.h"
#define Flash_Sector_Size 0x200
#endif /*A128 L40K*/
                                                           /*E-Family*/
#ifdef A64 L86D
                                                           //#define E128_L15P
#include "per_A64_L86D.h"
#define Flash_Sector_Size 0x200
#endif /*A64_L86D*/
                                                           /*C-Family*/
#ifdef H256_K78X
                                                           //#define C32 L45J
#include "per_H256_K78X.h"
#define Flash_Sector_Size 0x200
#endif /*H256_K78X*/
#ifdef H128_K78X
#include "per_H128_K78X.h"
#define Flash_Sector_Size 0x200
                                                         To define the device and mask set for your application,
#endif /*H128_K78X*/
                                                        remove the comment indicator ("//") in front of "#define".
#ifdef E128_L15P
#include "per_E128_L15P.h"
#define Flash_Sector_Size 0x400
#endif /*E128_L15P*/
#ifdef C32 L45J
#include "per_C32_L45J.h"
#define Flash_Sector_Size 0x200
#endif /*C32 L45J*/
                                                                                                 projectglobals.h
```

Figure 7. MCU/Mask Set Selection

The second function of the projectglobals.h file allows you to identify any global parameters or macro definitions. Since the definition stage is standardized and should remain unmodified until any module revisions, the control stage is used to develop additional definitions directly related to the application software and not the MCU. **Figure 8** illustrates some example macro definitions that would be created within the projectglobals.h file.

```
/*Macro Definitions
                                                         */
#define int_enable() {asm andcc
                         #0xEF; }
                                   //interrupts enabled
#define int disable() {asm orcc
                         #0x10;}
                                   //interrupts disabled
#define wait()
                {asm wait;}
                                   //enter wait mode
#define stop enable() {asm andcc
                         #0x7F;}
                                   //stop mode enabled
#define stop()
               {asm stop;}
                                   //enter stop mode
#define nop()
                {asm nop;}
                                   //enter NOP asm instruction
#define bgnd()
                {asm bgnd; asm nop;}
                                   //enter BGND asm instruction
                                   //ON
#define ON 1
#define OFF 0
                                   //OFF
```

Figure 8. Macro Definition Samples

The third function of the projectglobals.h file allows you to add software drivers to the compilation of your application software. The addition of software drivers is not necessary in all applications, but an area in the projectglobals.h file is allocated for the selection of software drivers, if available. The majority of software drivers included in an application serve as low-level drivers made up of module initialization subroutines, which set up the MCU modules so they can function when executing the application. Figure 9 demonstrates how a software driver can be included in the application. For more information on how to develop using additional software drivers, refer to **Developing Using the HCS12 Software Stationery**.

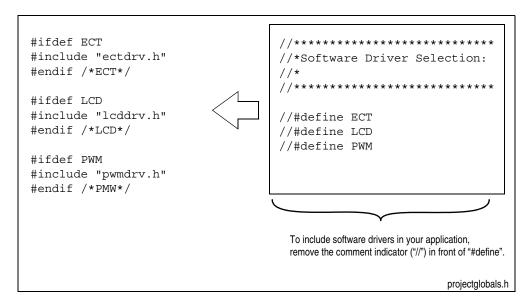


Figure 9. Software Driver Selection Examples

Software Drivers

The drivers block is directly related to the software driver selection in the project globals block. It provides an accessible directory in the stationery architecture to maintain a library of software drivers, which can be included in your application software via the projectglobals.h file as mentioned in **Project Globals**. Once the driver is included in the application project, you can access any driver subroutine.

Project Vectors

The project vectors block stores both projectvectors.c and projectvectors.h files. These two files establish an interrupt vector handler corresponding to all the supported HCS12 MCU exceptions declared in the parameter files (when using the mass MCU method). In single MCU method, only the vectors pertaining to that MCU are included. Usually, interrupt vector handlers would be labeled as an unused interrupt service routine (unused_isr) or a dummy interrupt service routine (dummy_isr) if they were not applied in the application software. These routines would not execute a trap in order to capture an unexpected interrupt and would be left to you to declare.

This stationery predefines all the interrupt vector handler labels per MCU. Therefore, the stationery reduces the amount of user effort to re-label the interrupts for different software applications. Also, the stationery places these interrupt vector handlers within non-banked memory so they can be accessed regardless of the executing banked address. Refer to **Figure 10** for an example interrupt service handler declared in a parameter file and made accessible within the projectvectors.c file. Note that the interrupt vector handler in **Figure 10** is unimplemented. Therefore the interrupt includes only a subroutine

labeled software_trap (), which executes a trap if it unexpectedly occurs. This routine is a safeguard to prevent software runaway. For more information on how to set up an interrupt service routine in your software application, refer to **Developing Using the HCS12 Software Stationery**.

```
#pragma CODE_SEG NON_BANKED
interrupt void swi_isr(void) { (void) software_trap(); }
#pragma CODE_SEG DEFAULT

projectvectors.c
```

Figure 10. Example Unimplemented Interrupt Service Handler

Development Stage

The development stage allows you the ability to focus strictly on developing your application. With the standardized module definitions in the definition stage and the predetermined global settings in the control stage, the user can begin development almost immediately. This stage initially includes only a single main.c file, which is made accessible to build routines and functionality for the target MCU. Due to the stationery architecture, all module registers are readily accessible in the development stage.

For a complete software project example using all the features in the HCS12 Software Stationery, refer to **Developing Using the HCS12 Software Stationery**.

Developing Using the HCS12 Software Stationery

This section will provide:

- Step-by-step instructions on how to set up the stationery
- Detailed steps on how to develop an application using the stationery
- Example using the stationery's features (low-level drivers, global variables, interrupt vectors, macro definitions, and register accesses) to write a serial communication software example
- Demonstration on how to port your application software from one target MCU to another target MCU

Setting Up the Stationery

The steps below assume that Metrowerks' CodeWarrior for HC(S)12 (version 1.2 or greater) is installed on your computer.

- 1. Download the HCS12 software stationery.
- 2. Extract HCS12_Stationery.zip file into any directory.
- 3. Open the generated HCS12_Stationery root directory.

NOTE:

Steps 4-6 are not necessary. However, they allow the user to create a working directory while preserving the stationery template for subsequent applications.

- 4. Create a new project using either the mass or single MCU stationery method by duplicating (copy and paste) the appropriate directory within the HCS12_Stationery root directory.
 - Mass MCU duplicate the _MC9S12_ALL directory generating a working copy labeled Copy of _MC9S12_ALL.
 - Single MCU duplicate the _PartNumber_Maskset directory generating a working copy labeled Copy of _PartNumber_Maskset.
- 5. Rename the new project directory (Copy of _MC9S12_ALL or Copy of _PartNumber_Maskset) to a name more appropriate to your project. (ex. ProjectName_PartNumber -> MotorControlDemo_E128)
- Open the new project directory (ProjectName_Partnumber ->
 MotorControlDemo_E128) and rename the *.mcp file to match the new
 project directory name (ex. ProjectName_PartNumber.mcp ->
 MotorControlDemo_E128.mcp)
- 7. Open the *.mcp file (CW project file) in the new project directory (if you executed Steps 4-6) or in the original Mass or Single MCU directories as shown in Fig. 11. This will load a ready-to-go template project using the stationery (Mass or Single MCU) that you selected.
- 8. Select build target among RAM, FLASH and BANKED applications from the drop-down menu at the top of the CW project window.

NOTE: Steps 9 through 11 are not necessary in the single MCU stationery method. Selections are already configured.

- 9. Select the target MCU within the projectglobals.h file under the MCU/mask set selection area by removing the "//" in front of the #define statement of your MCU.
- 10. Select the target MCU peripheral file by clicking under the red bull's eye column next to your desired MCU peripheral file (included file is marked by a bullet) in the CW project window.
- 11. Select the target MCU parameter file by clicking under the red bull's eye column next to your desired MCU parameter file (included file is marked by a bullet) in the CW project window.
- 12. Begin application software development within the unimplemented main.c file. Interrupt vectors can be added within the projectvectors.c file.

Download, Extract, and Open (Steps 1, 2, 3) The first three steps of setting up the stationery consist of attaining and placing the stationery on the computer that you use for software development.

Figure 11 illustrates the first three steps.

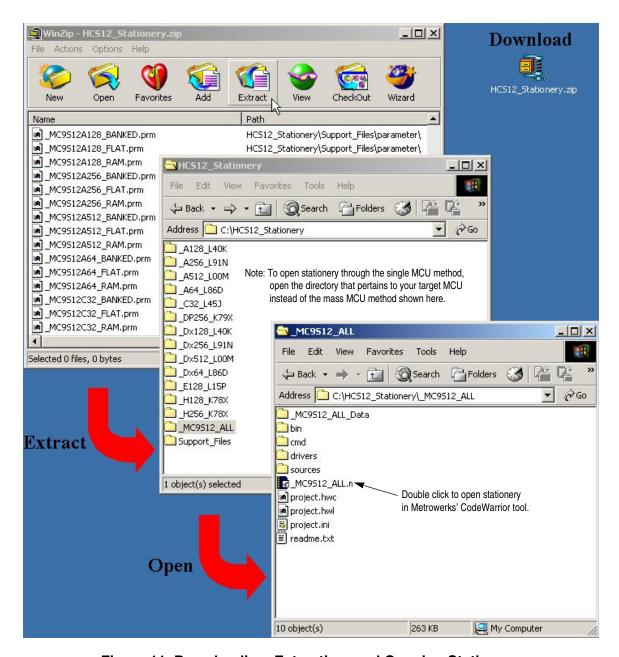


Figure 11. Downloading, Extracting, and Opening Stationery

Note that by extracting the HCS12_Stationery.zip, a root folder labeled HCS12_Stationery is created with the following subdirectories:

- _MC9S12_All directory Contains main project source files for mass MCU stationery method (*.c and *.mcp)
- _PartNumber_Maskset Contains main project source files for single MCU stationery method (*.c and *.mcp)
- Support_Files directory Contains the following subdirectories
 - Definitions directory Contains all module definition files (*.h files)
 - Documentation directory Contains stationery documentation (guides)
 - Parameter directory Contains all MCU parameter files (*.prm files)
 - Peripherals directory Contains all MCU definition files (*.h files)

Duplicate Template (Optional Steps 4–6)

If you decide to duplicate the stationery template to preserve it for subsequent use, follow the steps detailed in steps 4–6 of **Setting Up the Stationery**. The examples and instructions in this document refer to files by their original template names. These names may differ from the names used in your project if you follow these steps.

Open the Project File (Step 7)

By double-clicking on the MC9S12_All.mcp file (mass MCU method) in the HCS12_Stationery_MC9S12_All directory, the stationery opens in the Metrowerks' CodeWarrior environment and brings up the main project window and displays all necessary global, source, peripheral, parameter, and definition files needed to develop your application (as shown in Figure 12).

Recall that the *.mcp file that you double-click to open the project might differ in name or location if you follow the optional steps 4–6.

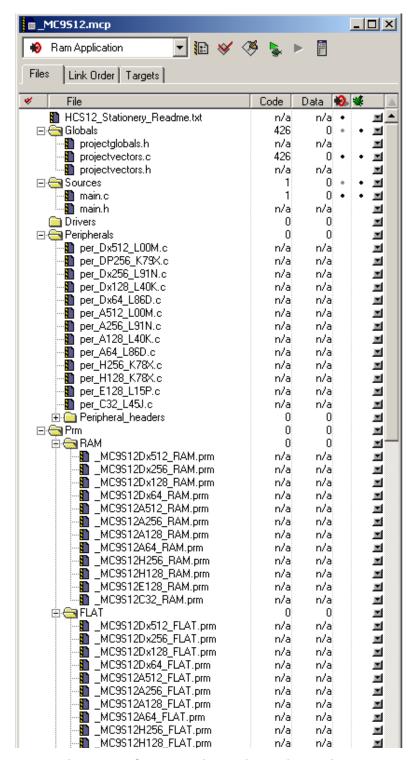


Figure 12. CodeWarrior Main Project Window

Selecting a Build Target (Step 8) Once you have established the stationery in your desired directory and have launched the project in the Metrowerks' CodeWarrior environment, you can focus on selecting the correct files to develop for your target MCU. Step 4 requires that you select the desired build target for your application. A build target is the intended memory space for which the compiler will build your software. When selecting a build target, you should match the target with the corresponding parameter file. For example, the available build targets listed below match up with the parameter files associated next to them.

- Archive_Target None (used as a null target and not used for development)
- Ram application RAM parameter file (partnumber RAM.prm)
- Flash application FLASH parameter file (_partnumber_FLAT.prm)
- Banked_Flash BANKED FLASH parameter file (_partnumber_BANKED.prm)

To determine which build target best fits your application, refer to **Parameter Files**.

Figure 13 demonstrates how to select your build target via the Metrowerks' CodeWarrior main project window. Note that the build target is selected via a pull-down menu.

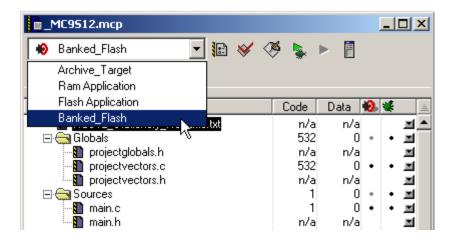


Figure 13. Selecting a Build Target

Selecting a Target MCU (Steps 9, 10, 11)

Following the selection of the build target, you must set up the stationery to include all necessary definition files for your application's target device. To complete step 5, you must select your MCU part number and mask set within the projectglobals.h file. To do so, open projectglobals.h by double-clicking on the file as shown in **Figure 14** and scroll down to the MCU_maskset selection area.

NOTE: Steps 9 through 11 are not necessary in the single MCU stationery method. Selections are already configured.

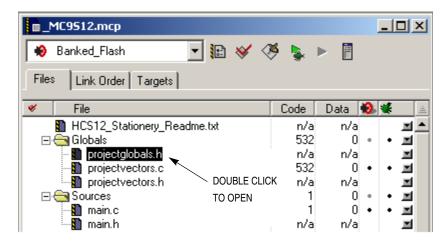


Figure 14. Opening Project Globals File

To include and compile MCU files for a device, remove the double forward slashes ("//") in front of the #define command for that device. See **Figure 15**.

```
projectglobals.h

| The first of the comment indicator ("/") in Front of "#Define".

| The first of the comment indicator ("/") in Front of "#Define".

| The first of the comment indicator ("/") in Front of "#Define".
```

Figure 15. Selecting a Target MCU

You must include the respective MCU definition and parameter files that are necessary for the tool to compile and link your application software successfully for your chosen target MCU. Step 6, illustrated by **Figure 16** shows how to add the MCU definition file by placing a bullet next to the file name. For this example, continue to select an MC9S12DP256 (K79X) for your target MCU by selecting the per_DP256_K79X.c file.

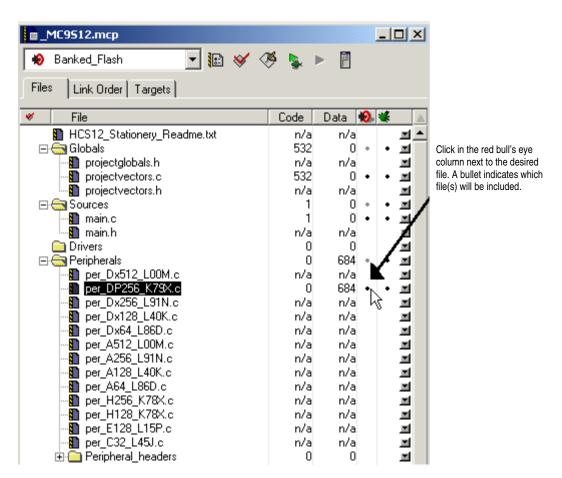


Figure 16. Selecting an MCU Definition File

Complete the stationery setup process by selecting the MCU parameter file corresponding to your chosen target MCU. Recall that the MCU parameter file must match the target build chosen. Include the MCU parameter file by placing a bullet next to the relevant file. Figure 17 shows step 7 (selecting the MCU parameter file), and lists the relationship between the target build and parameter files. Note, that an MC9S12DP256 (K79X) is still our primary device for development when the user selects the MC9S12Dx256_BANKED.prm file.

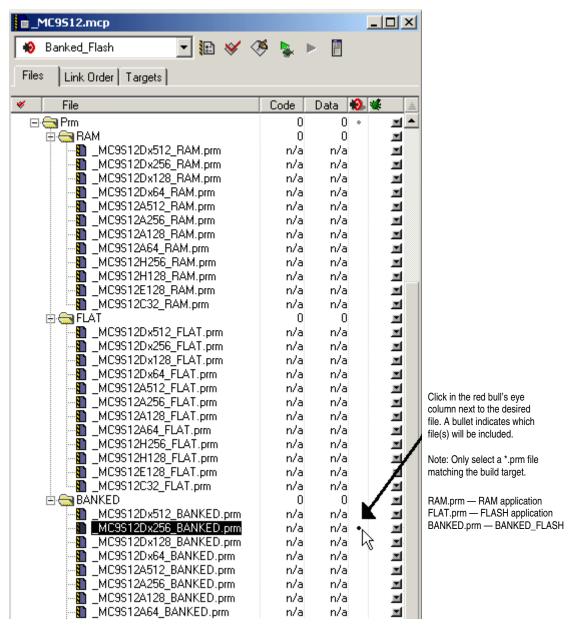


Figure 17. Selecting an MCU Parameter File

Developing Software Using the Stationery Features

This section will use a serial communication application example built on the HCS12 software stationery to highlight the following features:

- Developing a main routine Including calls to function subroutines, references to global variables, and application sequences
- Using global variables Allowing access to variables throughout the software project
- Using software drivers Including initialization routines and function subroutines
- Accessing register space Reading and writing to memory registers via words, bytes, and bits
- Using macro definitions Creating memory masks for register initialization, conditional statements, and in-line assembly inclusion
- Using interrupt service routines Developing routines that service a CPU interrupted request

Overview of Serial Communication Application Example The example used in this application note is a serial communication project built on a MC9S12DP256 (K79X) target MCU and uses a banked FLASH target build. The project initializes an SCI module to transmit and receive data at 19200 baud rate via an RS-232 interface connected to a computer's serial port. The project is similar to the common "Hello World" C++ programming language example. The difference is that this project uses the MCU's SCI module to output characters to a display on a computer terminal window. Characters are also received by the MCU through computer keyboard inputs entered on the terminal window display. These input characters are echoed back through the SCI module for display on the terminal window.

This example project prompts you for your name. Following the input, the MCU recalls the user's name and returns a greeting using the input name. Figure 18 captures the complete terminal window display following the user's input.



Figure 18. Serial Communication Example — Terminal Window Display

Developing a Main Routine To commence a software application, the flow of events must be programmed in the main source file (main.c). The main source file is considered to be the top level of development since it contains the main routine. The main routine typically calls initialization and other function routines in a specific order to fulfill the application. To begin your software, open the main.c file by double clicking on the filename in the main project window. The file should initially look like Figure 19.

```
#include "main.h"

void main ()
{
    //Insert Application Software Here.
    for (;;);
}

main.c
```

Figure 19. Unimplemented Main Source File

A header file (*.h) should be created for each application source file (*.c). In this example, the corresponding header file for main.c file is named main.h file. You should include the header file (main.h) in the corresponding source file (main.c). The example above shows the main.h file being included within the main.c file through the #include "filename" declaration. The corresponding header file is typically used to list the function prototypes for any routines programmed in the source file. These function prototypes are commonly prefixed with an "extern" command, which allows the functions to be accessible by other files in the project. The header file is also used to include project files that contribute routines or variables to the source file. For example, the main.h file includes the projectglobals.h file, which in turn includes all the necessary MCU peripheral definitions, global variables, and software drivers included in the projectglobals.h file. When using the stationery, a common header file would include the projectglobals.h file as shown in Figure 20.

```
#ifndef MAIN_H /*prevent duplicated includes*/
#define MAIN_H

#include "projectglobals.h"

#endif /*MAIN_H*/

main.h
```

Figure 20. Traditional Main Header File

All function prototypes would be inserted in the header file, between the #ifndef and #endif condition commands. Those commands are to prevent duplicate file, subroutine, and variable includes.

Next in the development of the serial communication example, we insert the appropriate local variables and fill in the main routine with functions that create the communication described in **Overview of Serial Communication Application Example**. Refer to **Figure 21** for the updated main.c file.

```
/*******************************
    DESCRIPTION: Serial Communication Application Example
     SOURCE:
                main.c
                © 04/2003
     COPYRIGHT:
    AUTHOR:
                rat579
 ************************************
#include "main.h"
/* Local Variable Declarations */
uchar temp string[20];
                              // Temporary Array to Store ASCII Characters
/* Main Routine */
void main ()
   SEI();
                             // Disable Interrupts
   oscclk = 16000;
busclk = oscclk/2;
                             // Set Oscillator Freq. = 16 MHz
                             // Set Bus Freq. = (1/2) * Oscillator Freq.
                             // Initialize SCI module @ 19200 Baud Rate
   (void) InitSCI(19200);
                             // Enable Interrupts
   CLI();
   for (;;)
                             // Interactive Terminal Display Prompt
       (void) printf("Hello!!, Please Enter Your Name > ");
       (void) scanf("%s",&temp string);
                                    // Gets User Info
       (void) printf("\n\r\n\rWelcome ");
      (void) printf("%s",&temp string);
                                    // Displays User Info
      (void) printf("\n\rEnjoy the HCS12 Software Stationery!!\n\r\n\r");
}
```

Figure 21. Implemented Main Source File

Note that the implemented main.c file contains several C programming language basics. For example, the main.c file demonstrates the use of a local variable declaration, macro definitions, references to global variables, calls to external routines, and a conditional "for" loop.

Also, notice that the global variables, macro definitions, and routines are not defined within the main.c file, so an additional source file (typically called a software driver) must be existent in the project. This driver consists of the external routines called by the main.c file. Also, the projectglobals.h file maintains the global variables and macro definitions referenced in the main.c file. In the creation of the software driver for the serial communication example, several stationery methods will be covered.

Using Global Variables Global variables are very common in projects involving MCUs that allocate memory space associated with a label. They differ from local variables, because multiple functions in a project reference them as opposed to being reference by a single function. In the serial communication example, there are two global variables referenced, which are oscclk (oscillator clock frequency) and busclk (bus clock frequency). Both of these variables are referenced in main.c and sci.c files. In the main.c file, you set the variables to a specific value. In the sci.c file, the values are used to calculate the SCI baud rate value to write into the SCI baud rate register (SCIBD). The sharing of both these variables by multiple functions means that they must be declared globally. To declare a global variable in the stationery, the variable declaration must be made within the projectglobals.h file. By placing the variable declaration within the projectglobals.h file, the variable becomes propagated throughout all the source files that include the projectglobals.h file in their corresponding header files as recommended in **Developing a Main Routine**. Refer to Figure 22 for the source code line declaring these two global variables.

extern ulong oscclk, busclk; projectglobals.h

Figure 22. Global Variable Declaration

Using Software Drivers

Notice that the main routine in the main.c file called a routine labeled (void) InitSCI (19200). The InitSCI routine is intended to initialize the SCI module to communicate at a 19200 baud rate. The InitSCI routine is not defined within the main.c file, but it is defined at a lower level, within a software driver (sci.c). Software drivers are source files most commonly used to define function routines, which either initialize an MCU peripheral or execute a series of instructions. Drivers are intended to be like stationery definition files and typically remain untouched by the user. These files, when included in projectglobals.h, allow your main routine in main.c to call specific routines

defined in the drivers. Refer to **Figure 23** for an illustration of how to include a software driver (like the sci.c file) in your application project.

```
#ifdef SCI
#include "sci.h"
extern int sprintf (const char *format, ...);
extern int printf (const char *format, ...);
                                                               //*Software Driver Selection:
extern int scanf (const char *format, ...);
extern ulong oscclk, busclk;
#define XOn 0x11
                                                               #define SCI
#define XOff 0x13
#define RxBufSize 64
#define TxBufSize 32
#define XOnCount RxBufSize - 8
                                                                     Within projectglobals.h, define a label associated
#define XOffCount 18
                                                                     with the driver, which includes the file and any
                                                                     global parameters or macro definitions.
#endif /*SCI*/
                                                                                                   sci.c
```

Figure 23. Including a Software Driver

You must include all the necessary software drivers with any global parameters needed by your application. Notice that the #include "sci.h" instruction makes all the routines within the SCI driver available to any file, which includes the projectglobals.h file. The instructions declared by the #define are macro definitions used within the SCI software driver. These macro definitions are specific to the SCI driver, but were made global in this example in order to adjust them without modifying the sci.c file. When including a software driver, you must add the file to the CodeWarrior main project window and select the source file (*.c) by placing a bullet next to the file's label. For the serial communication example, we will place a bullet next to the only driver labeled sci.c.

Accessing Register Space

There are three main types of register accesses using the module definition files. They are provided with a prototype and example from our serial communication example project, showing how they would be entered in a C language program:

- Word (16-bit) access
 - Modulename.registername.word = 0x1234;
 - Sci0.scibd.word = 0x1234;
 - Sci0.scibd.word = (uint)((((busclk/16)*1000)/baud));

- Byte (8-bit) access
 - Modulename.registername.byte = 0x12;
 - Sci0.scicr2.byte = 0x2C;
 - Sci0.scicr2.byte = TE + RE + RIE;
- Bit (1-bit) access
 - Modulename.registername.bit.bitname. = 1;
 - Sci0.scicr2.bit.te = 1;

The types of register accesses above write to a register location in memory, but differ in the amount (words, bytes, bits) that they manipulate. These registers can be written to with a numerical value of that type size, solutions to equations (SCIBD = ((busclk/16)*1000)/baud), or masked with predefined macro definitions (TE + RE + RIE). For more information regarding the use of macro definitions, refer to **Using Macro Definitions**. These structures can also be read and stored in local variables of equal type size. These examples, showing methods for using structures in order to access registers in memory, are used in the sci.c file to initialize the SCI module. For more information on how these module definition files are constructed, refer to **MCU Definitions**.

There are a few exceptions within the module definition files that require a slightly different method for accessing register space:

- Modulename.registername[index].word = 0x1234;
 - Tim0.tc[3].word = 0x1234;
- Modulname.registername[index].byte = 0x12;
 - Pwm.pwmper[4].byte = 0x12;
- Modulename.registername.byte.msb.byte = 0x12;
 - Sci0.scibd.byte.msb.byte = 0x12;
- Modulename.registername.byte.lsb.byte = 0x34;
 - Sci0.scibd.byte.lsb.byte = 0x34;

The exceptions listed above differ from the main types in two ways. The first two examples use an array structure with an index to a single word or byte in a series of multiple registers. The last two examples access the most significant byte (msb) or least significant byte (lsb) individually within a word register structure. These four structure examples are not commonly used and are unique to a few modules.

Using Macro Definitions Macro definitions are labels associated with a value or instructions that are inserted within your software to take the place of the defined parameter. They are useful when an instruction is used repetitively. Their symbolic representation also simplifies the visibility of your software by making it more self-documented. Macro definitions are usually used as memory masks for register initialization, conditional statements, and in-line assembly inclusion. Refer to Figure 24 for several examples using macro definitions. These examples come directly from the serial communication example project.

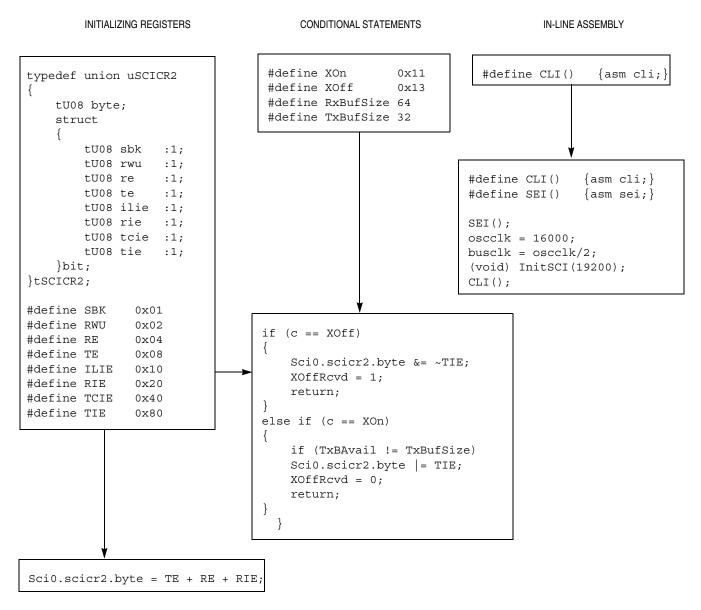


Figure 24. Macro Definitions in Software

Note that macro definitions can be declared for local or global use, depending on where they are included. For global use, you should place macro definitions within the projectglobals.h file. Also, each module definition file contains macro definitions for each register structure intended to be memory masks most commonly used for register initialization.

Using Interrupt Service Routines Interrupt service routines (ISRs) in the stationery are managed like an ordinary function routine. The difference is that the ordinary function routine gets called in a specific location in software as instructed by the program sequence, but an ISR occurs when a predetermined combination of events becomes true. This combination of events messages the CPU for permission to interrupt the ongoing program sequence. Once the CPU grants the interrupt request, the interrupt's vector address is fetched. Within the interrupt vector address is stored the location of the service routine, which will service the request. The stationery dictates the vector handler label for the ISR associated with that interrupt in the MCU parameter file. The ISRs for all the HCS12 MCUs are located in the projectvectors.c file, For more information regarding the projectvectors.c file, refer to Control Stage.

To demonstrate setting up an ISR within a project, we will use the same serial communication example, which only calls for a single SCI module interrupt. The routine that services the interrupt should be written within the software driver and the prototype should be labeled "extern" in the driver's corresponding header file. This enables easier portability of your software routines. Once the routine that services the interrupt is written ((void) sci0_handler ()), you can enter the prototype label within the corresponding ISR (interrupt void sci0_isr ()) in the projectvectors.c file. Note that the unimplemented ISRs initially have a software trap routine in them. You must remove this routine prior to adding your new routine. Figure 25 shows how a routine to service an interrupt is set up to execute when an ISR is fetched.

```
SERVICE
                                                ROUTINE
extern void sci0_handler(void);
                                               PROTOTYPE
void sci0_handler(void)
/* Begin Function SCIISR() */
                                                                       SERVICE
                                                                       ROUTINE
if (Sci0.scisr1.byte & (RDRF + ORF))
    RxISR();
if ((Sci0.scicr2.byte & TIE) && (Sci0.scisr1.byte & TDRE))
    TxISR();
    /* end SCTISR */
#pragma CODE SEG NON BANKED
interrupt void sci0 isr(void)
                                             INTERRUPT
                                              SERVICE
    sci0 handler();
                                              ROUTINE
#pragma CODE SEG DEFAULT
```

Figure 25. Implementing an ISR

Porting Your Application Software to a Target MCU The stationery makes porting an application from one HCS12 device to another easy. Before porting your software onto another MCU, you must first check that both devices are compatible. Each MCU contains a set of peripherals that might not match in type or version. Only the peripherals accessed by your software application must be compatible. For example, the serial communication example only uses a single SCI module. Because this example application was developed for the MC9S12DP256 (K79X) as a target MCU, it can be ported to any MCU with the identical SCI module with no software modifications. The SCI module definition file pertaining to this target MCU is the S12SCIV2.h file. A compatible MCU that contains at least a single SCI module (S12SCIV2.h) is the MC9S12E128 (L15P). To port your software (when using mass MCU stationery method) to the new MCU, you must repeat the steps described in Selecting a Target MCU (Steps 9, 10, 11). Make sure that when you select a different target MCU within projectglobals.h, you add the comment indicator "//" in front of the label for any previously selected MCU(s) that you want to exclude. Also, when adding a bullet next to the label for the new MCU peripheral and parameter files, make sure to remove the bullet next to the previously selected MCU peripheral and parameter files by clicking on the respective bullet in the red bull's eye (see Figure 17).

Software applications that do not contain identical peripherals between MCUs can also be ported within the software stationery. However, software modifications will be necessary to guarantee proper software execution.

Conclusion

The HCS12 software stationery enables you to develop software applications for your target MCU faster and with more ease. All the MCU definition files are readily available, enabling you to begin software development immediately. The stationery provides a standardized architecture that produces well organized and better documented software. Plus, the strict file naming convention eliminates confusion during development. By following the SoC ideology, the stationery will accommodate new HCS12 MCUs and future stationery platforms. This application note introduces the stationery architecture, explains the SoC ideology used by the HCS12 Family, and gives detailed examples covering the proper methods for developing your application using the stationery. Overall, this software stationery improves on limitations encountered on previous software stationery while emphasizing a more comfortable development environment for the user.

The sofware stationery, *HCS12_Stationery_VX_X.zip*, and an example serial communication project example using the stationery, *AN2485SW.zip*, are available from the Motorola website, http://motorola.com/semiconductors.

HOW TO REACH US:

USA/EUROPE/LOCATIONS NOT LISTED:

Motorola Literature Distribution P.O. Box 5405, Denver, Colorado 80217 1-800-521-6274 or 480-768-2130

JAPAN:

Motorola Japan Ltd. SPS, Technical Information Center 3-20-1, Minami-Azabu Minato-ku Tokyo 106-8573, Japan 81-3-3440-3569

ASIA/PACIFIC:

Motorola Semiconductors H.K. Ltd. Silicon Harbour Centre 2 Dai King Street Tai Po Industrial Estate Tai Po, N.T. Hong Kong 852-26668334

HOME PAGE:

http://motorola.com/semiconductors

Information in this document is provided solely to enable system and software implementers to use Motorola products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part.



Motorola and the Stylized M Logo are registered in the U.S. Patent and Trademark Office. digital dna is a trademark of Motorola, Inc. All other product or service names are the property of their respective owners. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

© Motorola, Inc. 2003