Introduction


- What are embedded computing systems?
- Challenges in embedded computing system design.
- Design methodologies.

1.1 Complex systems & Microprocessors

- Embedded computing system: any device that includes a programmable computer but itself is not a generalpurpose computer.
- Take advantage of application characteristics to optimize the design:
 - don't need all the general-purpose bells and whistles.

 Overheads for Computers as

1.1.1 Embedding a computer

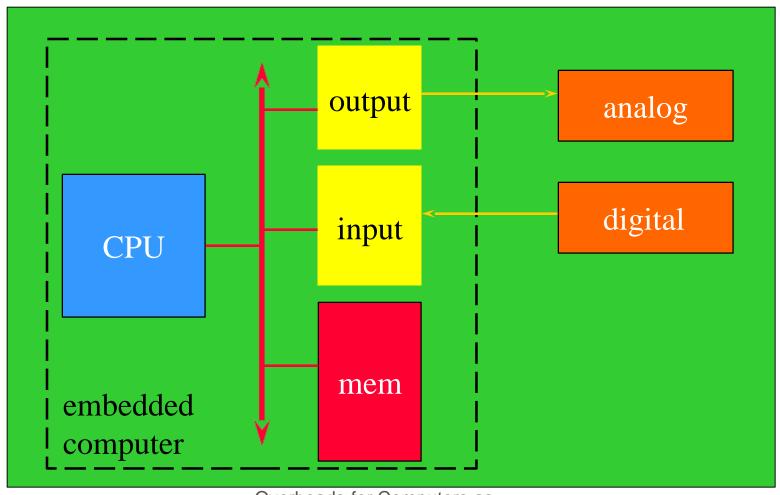

Examples

- Cell phone.
- Printer.
- Automobile: engine, brakes, dash, etc.
- Airplane: engine, flight controls, nav/comm.
- Digital television.
- Household appliances.

Early history

- Late 1940's: MIT Whirlwind computer was designed for real-time operations.
 - Originally designed to control an aircraft simulator.
- First microprocessor was Intel 4004 in early 1970's.:Calcualator
- HP-35 first handheld calculator used several chips to implement a

Early history, cont'd.

- Automobiles used microprocessorbased engine controllers starting in 1970's.
 - Control fuel/air mixture, engine timing, etc.
 - Multiple modes of operation: warm-up, cruise, hill climbing, etc.
 - Provides lower emissions, better fuel efficiency.

Microprocessor

- **Microtes** 1/0 devices, on- board memory.
- Digital signal processor (DSP): microprocessor optimized for digital signal processing.
- Typical embedded word sizes: 8-bit, 16- bit, 32-bit.

Application examples

- Simple control: front panel of microwave oven, thermo stat systems, modern camera etc,
- Canon EOS 3 has three microprocessors.
 - 32-bit RISC CPU runs autofocus and eye control systems.
- Digital TV: programmable CPUs + hardwired logic for video/audio


Automotive embedded

- **Systems** high-end automobile may have 100 microprocessors:
 - 4-bit microcontroller checks seat belt;
 - microcontrollers run dashboard devices;
 - 16/32-bit microprocessor controls engine.

BMW 850i brake and stability control system

- Anti-lock brake system (ABS): pumps brakes to reduce skidding.
- Automatic stability control (ASC+T): controls engine to improve stability.
- ABS and ASC+T communicate.
 - ABS was introduced first---needed to interface to existing ABS module.

BMW 850i, cont'd.

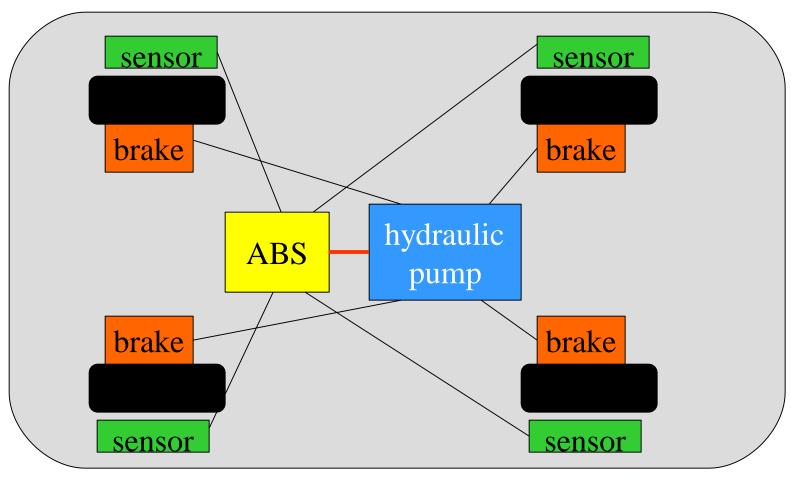

1.1.2 Characteristics of embedded computing applications

- Sophisticated functionalities: Complex Algorithms & User Interface
- Dead lined Operations:Real-time operation & Multirate
- Cost s: Low manufacturing cost.
 & Low power.
- Designed to tight deadlines by small teams.

Sophisticated functionalities:

- Complex Algorithms :Often have to run sophisticated algorithms or multiple algorithms.
- Cell phone,
- laser printer.
- Microprocessor that controls an automobile engine must perform complicated filtering functions to optimize the performance of the car while minimizing pollution and fuel utilization.

•

Sophisticated functionalities:

User Interface: Often provide sophisticated user interfaces.

• Eg:The moving maps in Global Positioning System (GPS) navigation

Real-time operation

- Must finish operations by deadlines.
 - Hard real time: missing deadline causes failure.
 - Soft real time: missing deadline results in degraded performance.
- Many systems are multi-rate: must handle operations at widely varying rates.

Non-functional requirements

- Many embedded systems are mass- market items that must have low manufacturing costs.
 - Limited memory, microprocessor power, etc.
- Power consumption is critical in battery- powered devices.
 - Excessive power consumption increases system cost even in wallpowered devices.

Design teams

- Often designed by a small team of designers.
- Often must meet tight deadlines.
 - 6 month market window is common.
 - Can't miss back-to-school window for calculator.

1.1.3 Why use microprocessors?

- Alternatives: field-programmable gate arrays (FPGAs), custom logic, etc.
- Microprocessors are often very efficient: can use same logic to perform many different functions.
- Microprocessors simplify the design of families of products.

The performance paradox

- Microprocessors use much more logic to implement a function than does custom logic.
- But microprocessors are often at least as fast:
 - heavily pipelined;
 - large design teams;
 - aggressive VLSI technology.

Power

- Custom logic uses less power, but CPUs have advantages:
 - Modern microprocessors offer features to help control power consumption.
 - Software design techniques can help reduce power consumption.
- Heterogeneous systems: some custom logic for well-defined functions, CPUs+software for everything else.

Platforms

- Embedded computing platform: hardware architecture + associated software.
- Many platforms are multiprocessors.
- Examples:
 - Single-chip multiprocessors for cell phone baseband.
 - Automotive network + processors.

1.1.4 The physics of software

- Computing is a physical act.
 - Software doesn't do anything without hardware.
- Executing software consumes energy, requires time.
- To understand the dynamics of software (time, energy), we need to characterize the platform on which the software runs.

1.1.5 Challenges in embedded system design

- How much hardware do we need?
 - How big is the CPU? Memory?
- How do we meet our deadlines?
 - Faster hardware or cleverer software?
- How do we minimize power?
 - Turn off unnecessary logic? Reduce memory accesses?

Challenges, etc.

- Does it really work?
 - Is the specification correct?
 - Does the implementation meet the spec?
 - How do we test for real-time characteristics?
 - How do we test on real data?
- How do we work on the system?
 - Observability, controllability?
 - What is our development platform?

1.1.6 What does "performance" mean?

- In general-purpose computing, performance often means averagecase, may not be well-defined.
- In real-time systems, performance means meeting deadlines.
 - Missing the deadline by even a little is bad.
 - Finishing ahead of the deadline may not help.

Characterizing performance

- We need to analyze the system at several levels of abstraction to understand performance:
 - CPU.
 - Platform.
 - Program.
 - Task.
 - Multiprocessor.


Design methodologies

- A procedure for designing a system.
- Understanding your methodology helps you ensure you didn't skip anything.
- Compilers, software engineering tools, computer-aided design (CAD) tools, etc., can be used to:
 - help automate methodology steps;
 - keep track of the methodology itself.

Design goals

- Performance.
 - Overall speed, deadlines.
- Functionality and user interface.
- Manufacturing cost.
- Power consumption.
- Other requirements (physical size, etc.)

Levels of abstraction

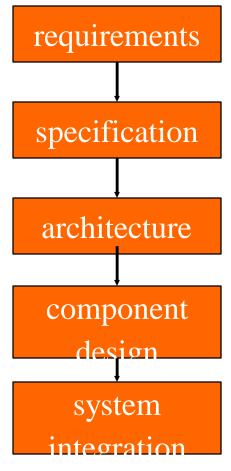

Overheads for Computers as Components, 2nd ed.

Top-down vs. bottom-up

- Top-down design:
 - start from most abstract description;
 - work to most detailed.
- Bottom-up design:
 - work from small components to big system.
- Real design uses both techniques.

Stepwise refinement

- At each level of abstraction, we must:
 - analyze the design to determine characteristics of the current state of the design;
 - refine the design to add detail.

Requirements

- Plain language description of what the user wants and expects to get.
- May be developed in several ways:
 - talking directly to customers;
 - talking to marketing representatives;
 - providing prototypes to users for comment.

Functional vs. non-functional requirements


- Functional requirements:
 - output as a function of input.
- Non-functional requirements:
 - time required to compute output;
 - size, weight, etc.;
 - power consumption;
 - reliability;
 - etc.

Our requirements form

```
name
purpose
inputs
outputs
functions
performanc
e
manufacturing
cost power
physical size/
weight
              Overheads for Computers as
                Components, 2nd ed.
```

Example: GPS moving map requirements

 Moving map obtains position from GPS, paints map from local database.

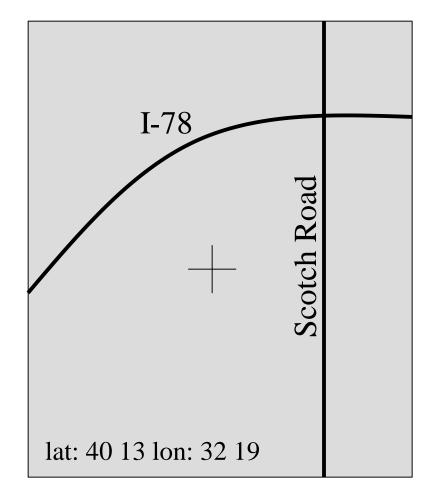

GPS moving map needs

- Functionality: For automotive use. Show major roads and landmarks.
- User interface: At least 400 x 600 pixel screen. Three buttons max. Pop-up menu.
- Performance: Map should scroll smoothly. No more than 1 sec power-up. Lock onto GPS within 15 seconds.
- Cost: \$120 street price = approx. \$30 cost of goods sold.

GPS moving map needs, cont'd.

- Physical size/weight: Should fit in hand.
- Power consumption: Should run for 8 hours on four AA batteries.

GPS moving map requirements form

S

name GPS moving map

purpos consumer-grade

e moving map for

driving

inputs power button,

two control

outputs buttons

function back-lit LCD 400 X

600

5-receiver GPS;

three resolutions;

performance displays current

lat/lon updates

manufacturing screen within

0.25 sec of

cost power movement

\$100 cost-of-

physical size/ Overheads for 9999 Sters old weight Components 9999 Sters old

Specification

- A more precise description of the system:
 - should not imply a particular architecture;
 - provides input to the architecture design process.
- May include functional and nonfunctional elements.
- May be executable or may be in mathematical form for

© 20proofs.

Overheads for Computers as Components, 2nd ed.


GPS specification

- Should include:
 - What is received from GPS;
 - map data;
 - user interface;
 - operations required to satisfy user requests;
 - background operations needed to keep the system running.


Architecture design

- What major components go satisfying the specification?
- Hardware components:
 - CPUs, peripherals, etc.
- Software components:
 - major programs and their operations.
- Must take into account functional and non-functional specifications.


GPS moving map block diagram

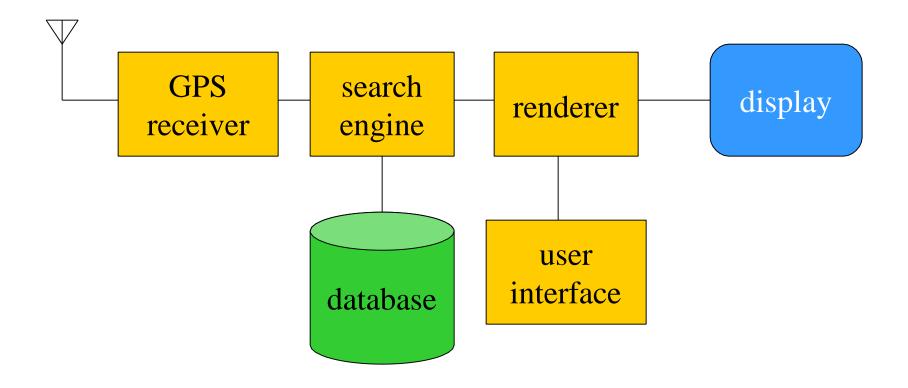

GPS moving map hardware architecture

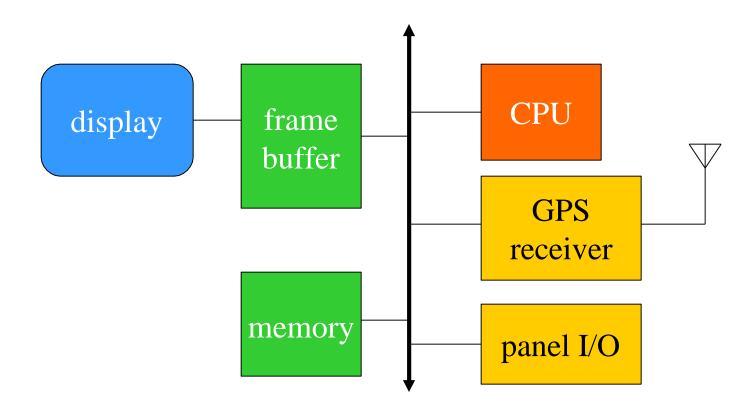

GPS moving map software architecture

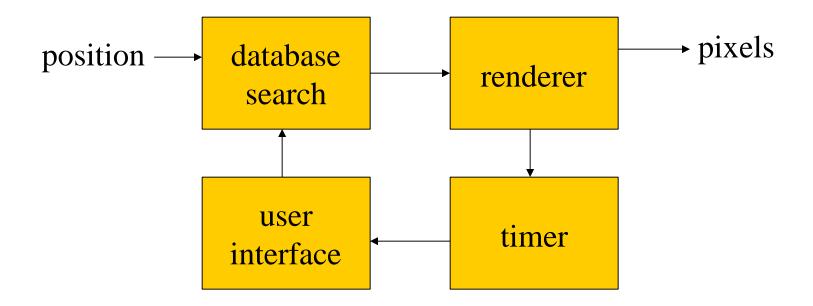

Designing hardware and software components

- Must spend time architecting the system before you start coding.
- Some components are ready-made, some can be modified from existing designs, others must be designed from scratch.

System integration

- Put together the components.
 - Many bugs appear only at this stage.
- Have a plan for integrating components to uncover bugs quickly, test as much functionality as early as possible.

Summary

- Embedded computers are all around us.
 - Many systems have complex embedded hardware and software.
- Embedded systems pose many design challenges: design time, deadlines, power, etc.
- Design methodologies help us manage the design process.