




# CADCAM: Lab Prep Exercises

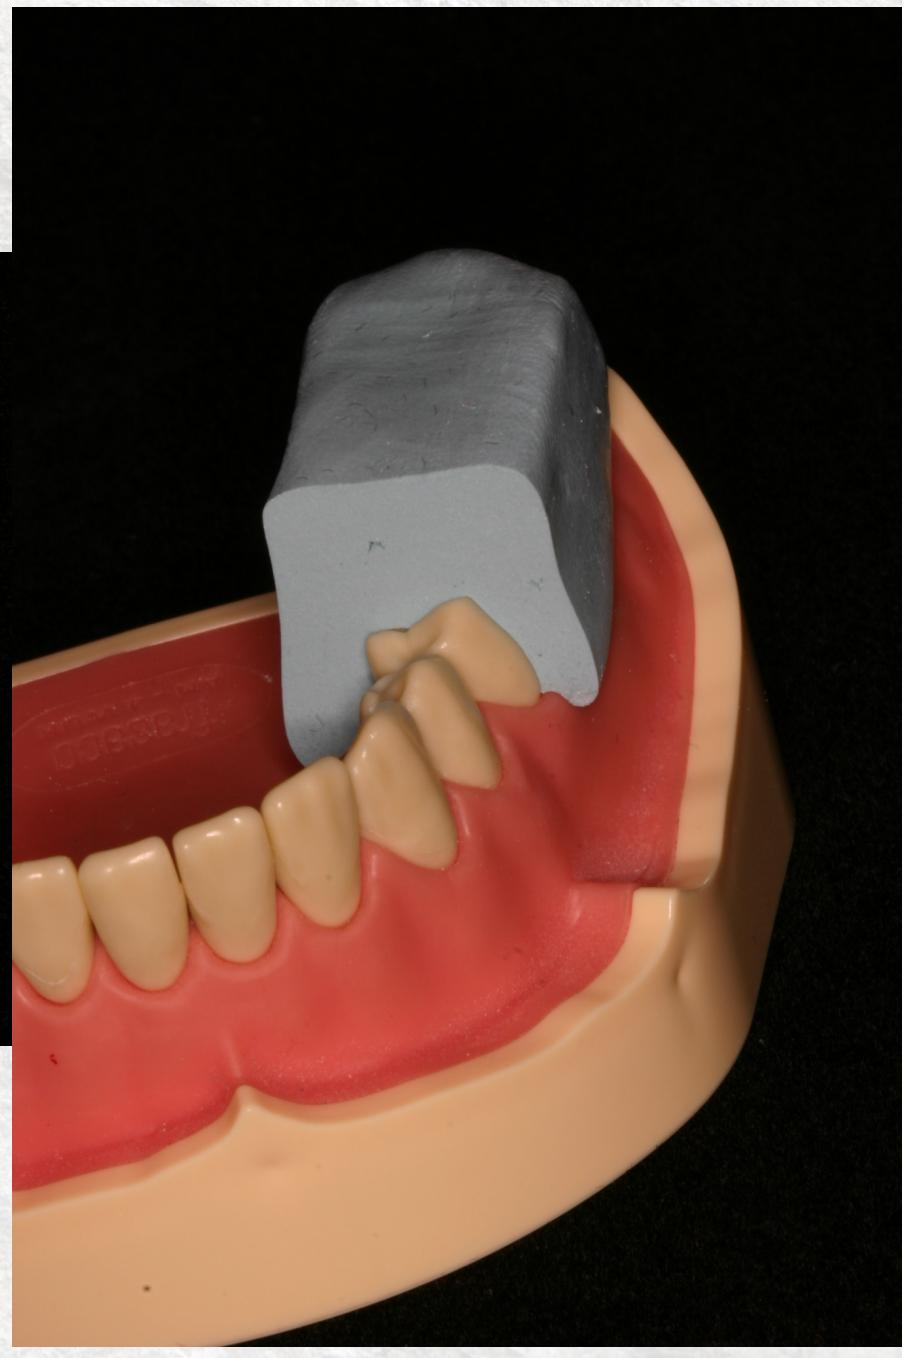


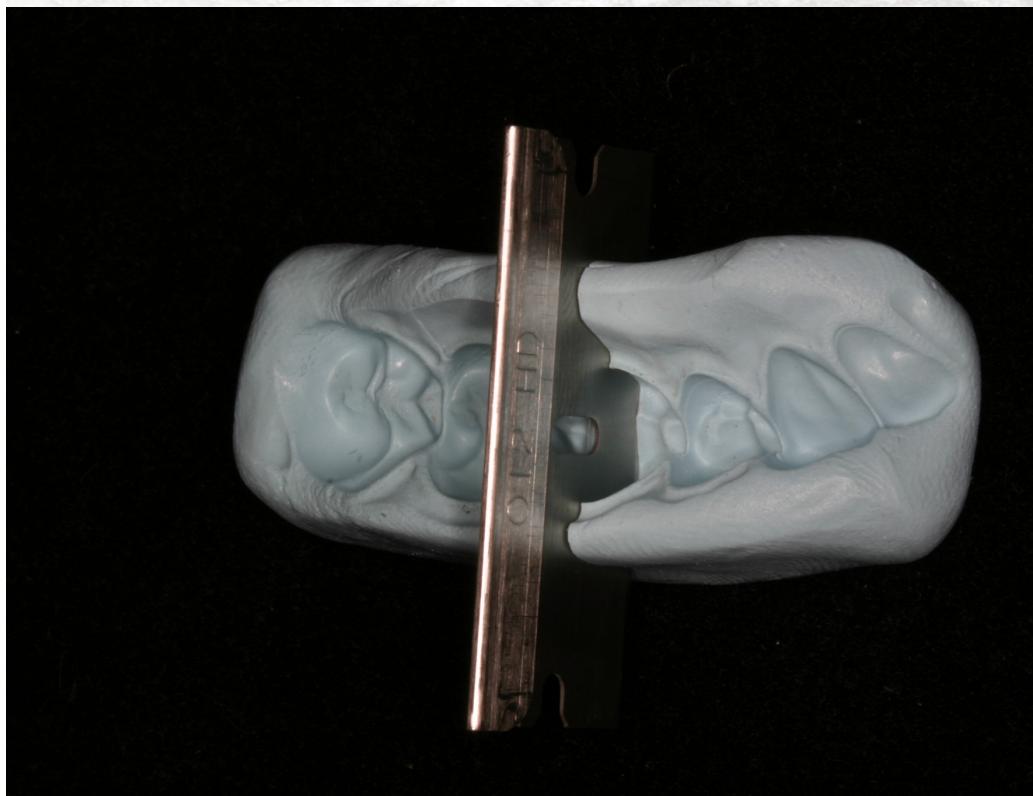




#330: 2.0mm  
Meisinger depth cutting bur: 1.8m

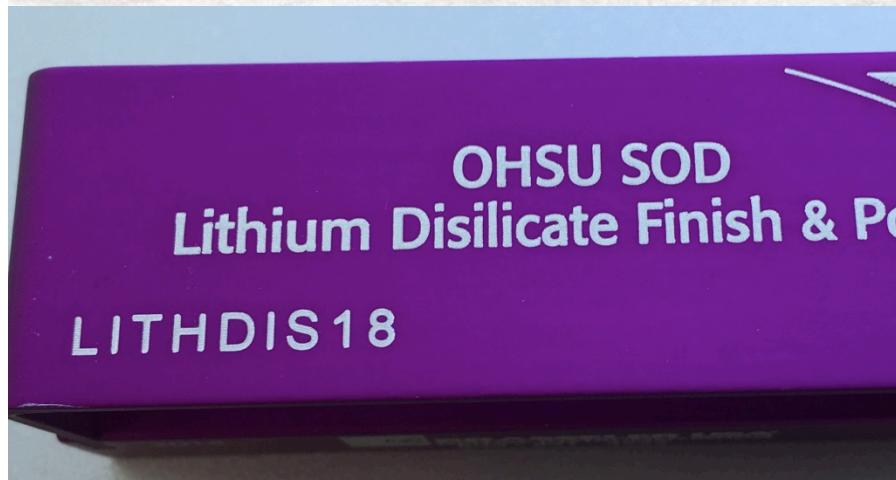

flared part prevents overreduction

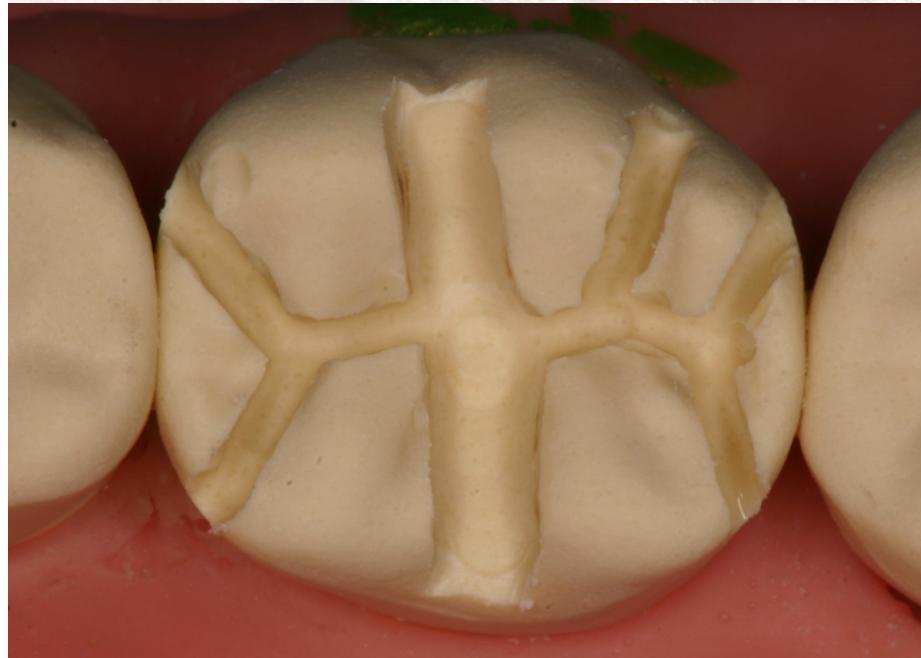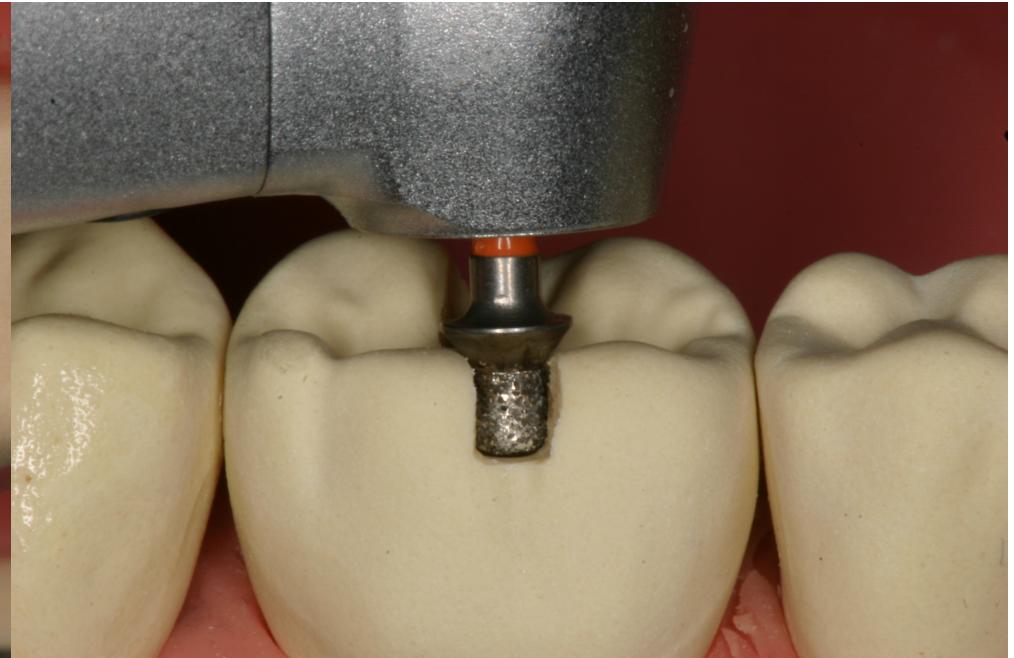

thin shelf to prevent adjacent damage

8856-012




pop the shelf out with hatchet





know diameter at tip



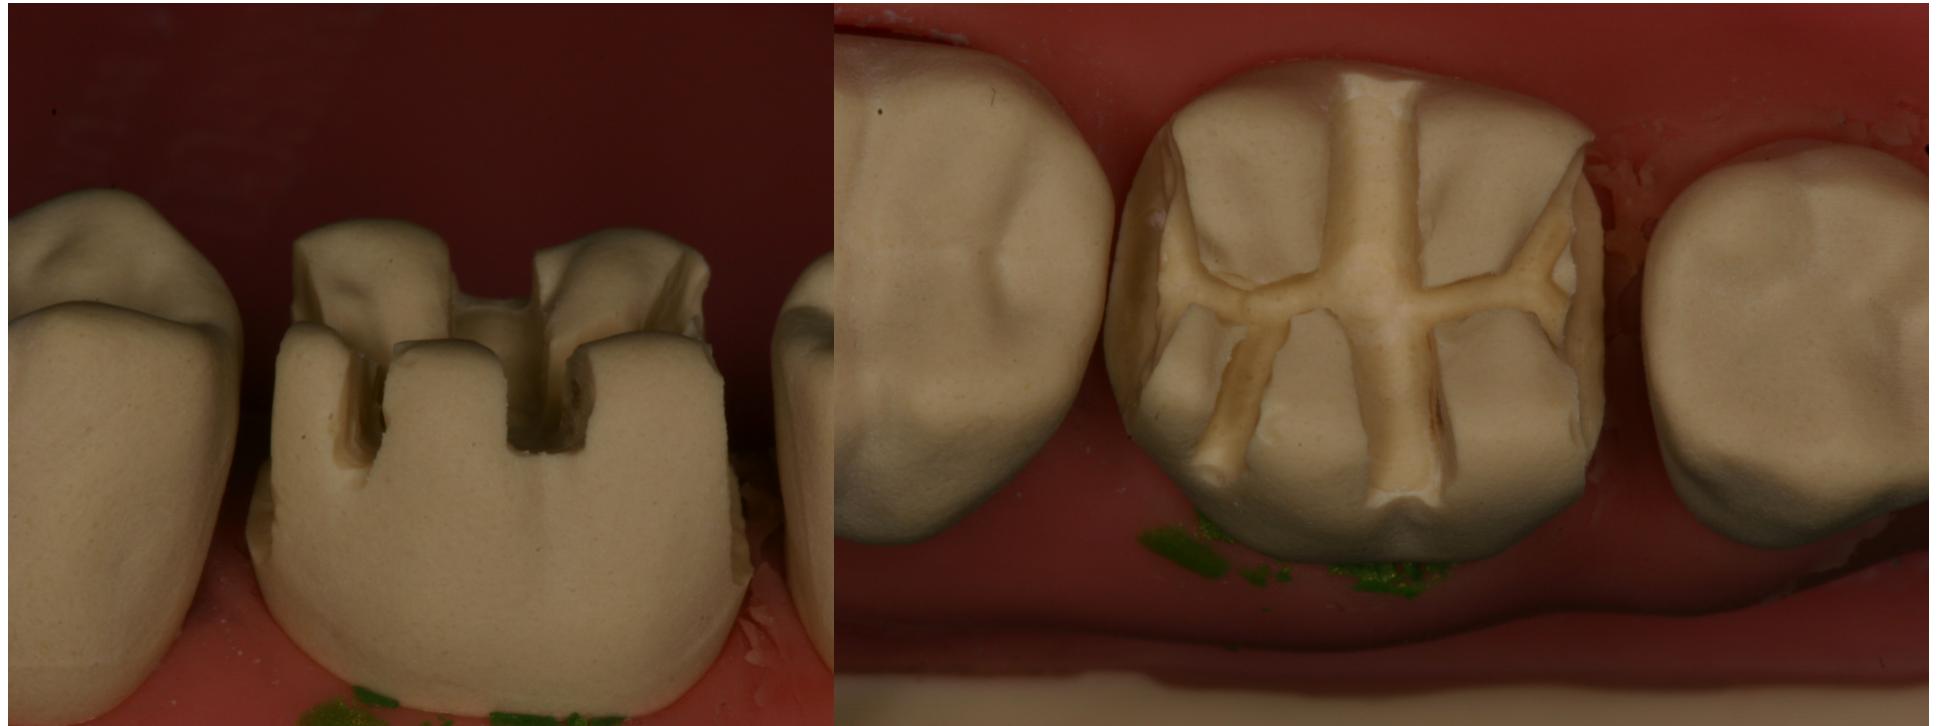

chamfer for axial prep. beware of J lip







856-016




**OHSU Crown & Bridge Kit**  
**A303RED Tracking 9230-B**

	#1	#2	#3	#4	#5	
<b>Top Row FG</b>						
US#						
Part#	379	379F				
Shank	31	31				
Head Size	023	023				
Diamond Grit	Med	Fine				
	#6	#7	#8	#9	#10	
<b>Middle Row FG</b>						
US#				170	170L	
Part#	856	8856	8856	H23	H23L	
Shank	31	31	31	31	31	
Head Size	016	016	012	010	010	
Diamond Grit	Med	Fine	Fine			
	#11	#12	#13	#14	#15	
<b>Bottom Row FG</b>						
US#				KS0		
Part#	845KR	845KR	8845KR	30005	10839	
Shank	31	31	31	31	31	
Head Size	025	018	018	077	016	
	Med	Med	Fine	Med		

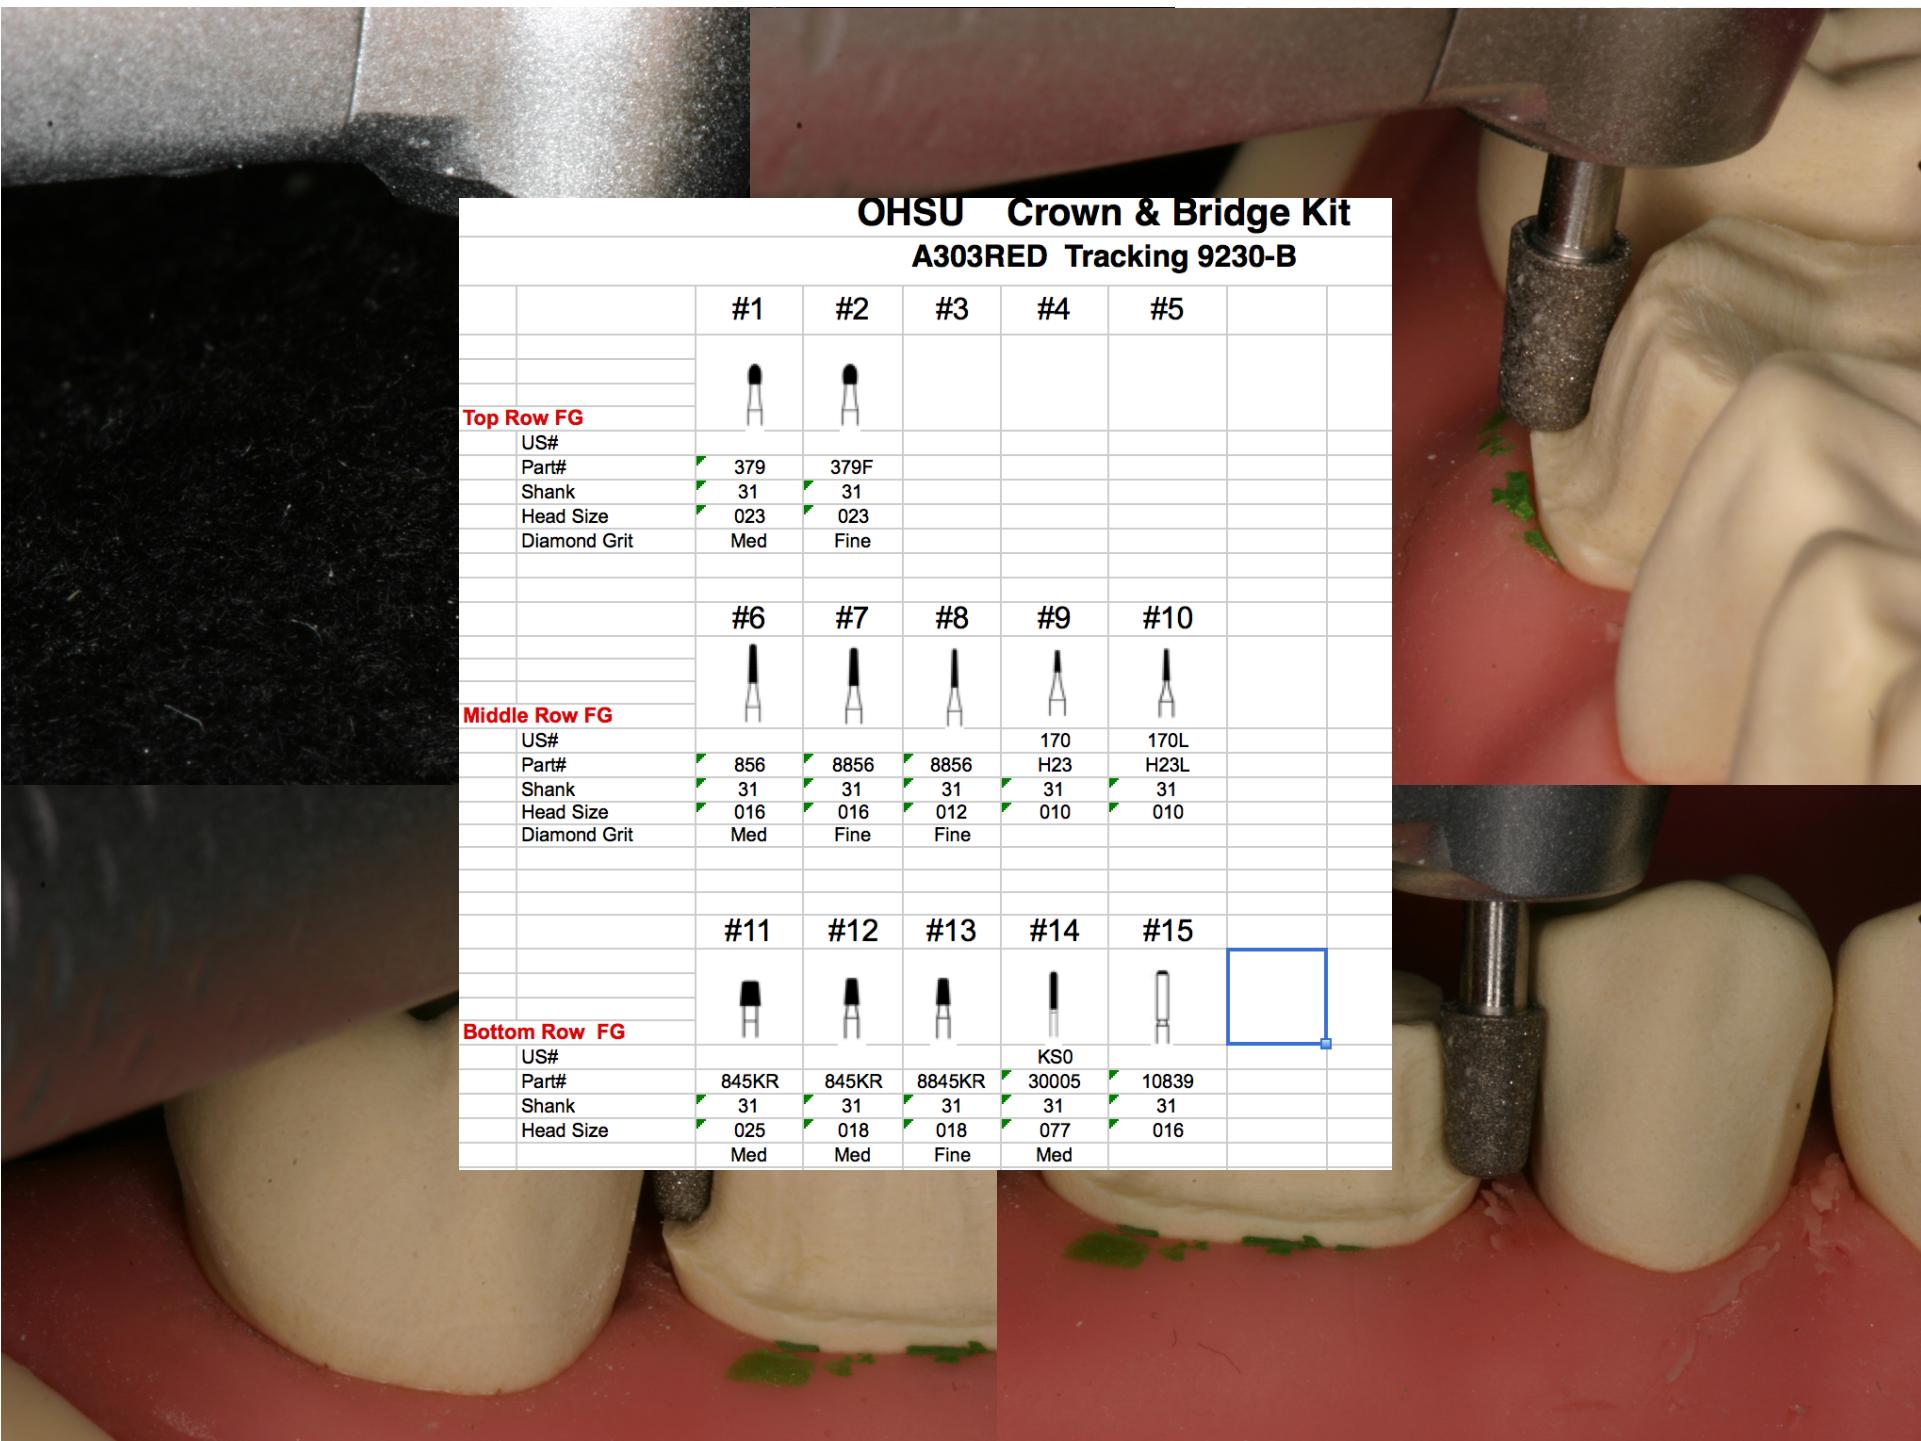

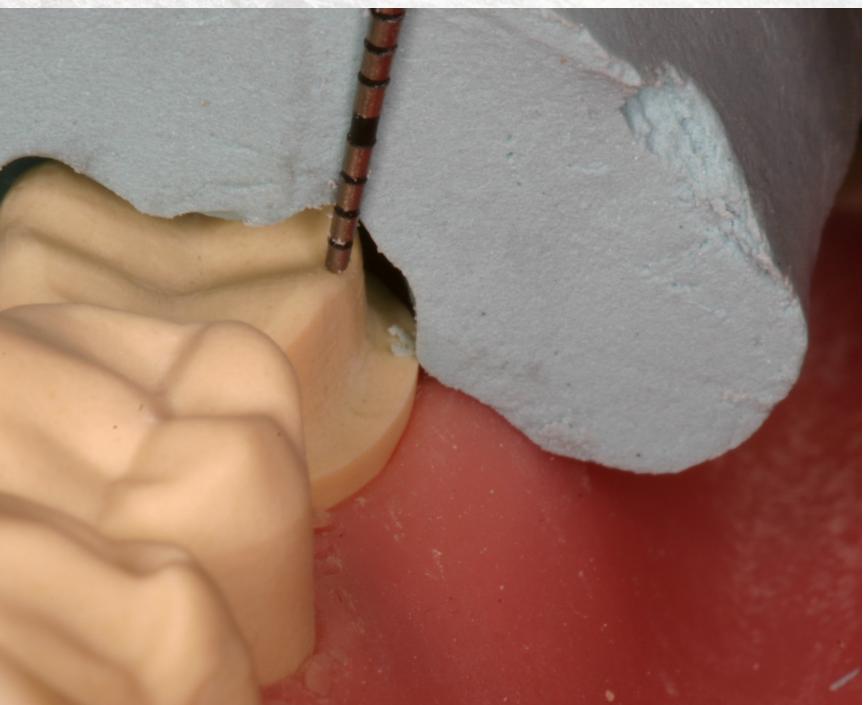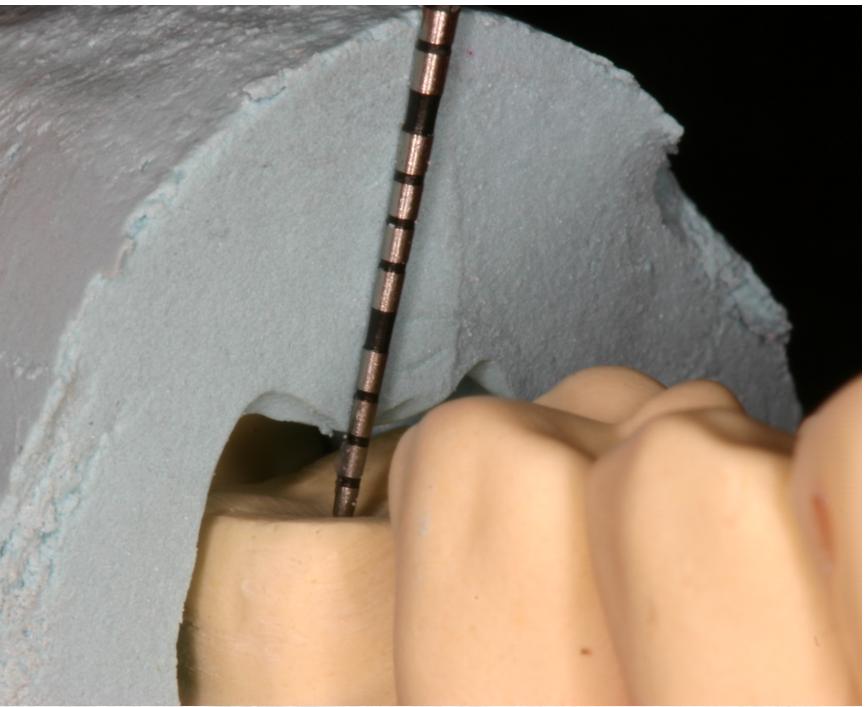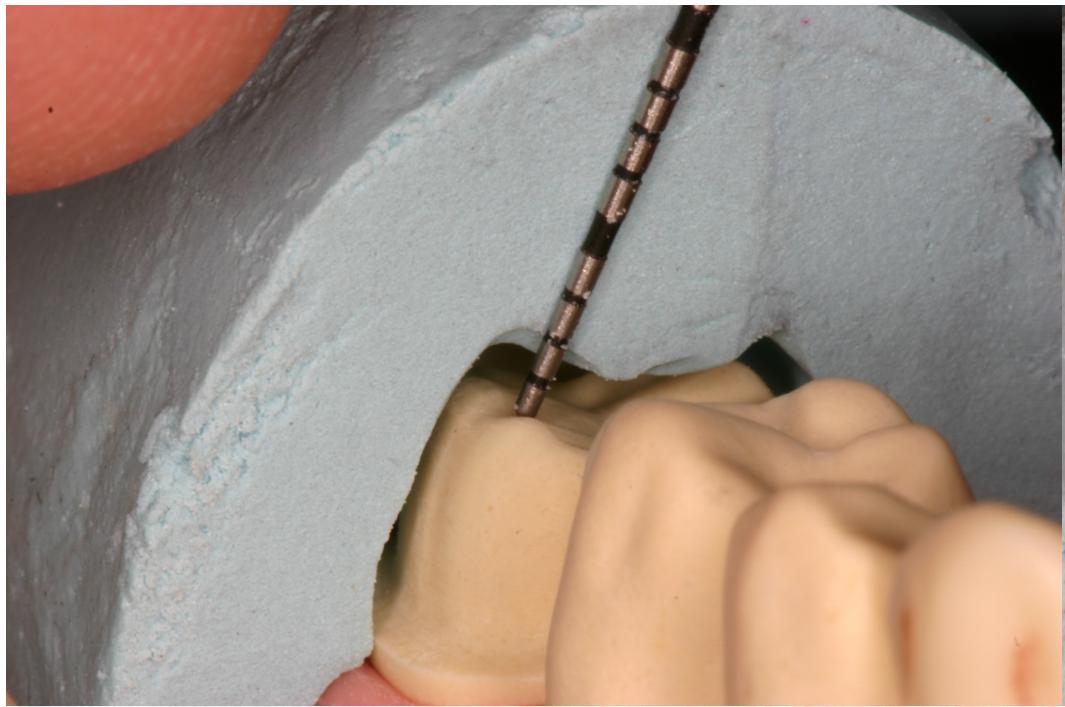

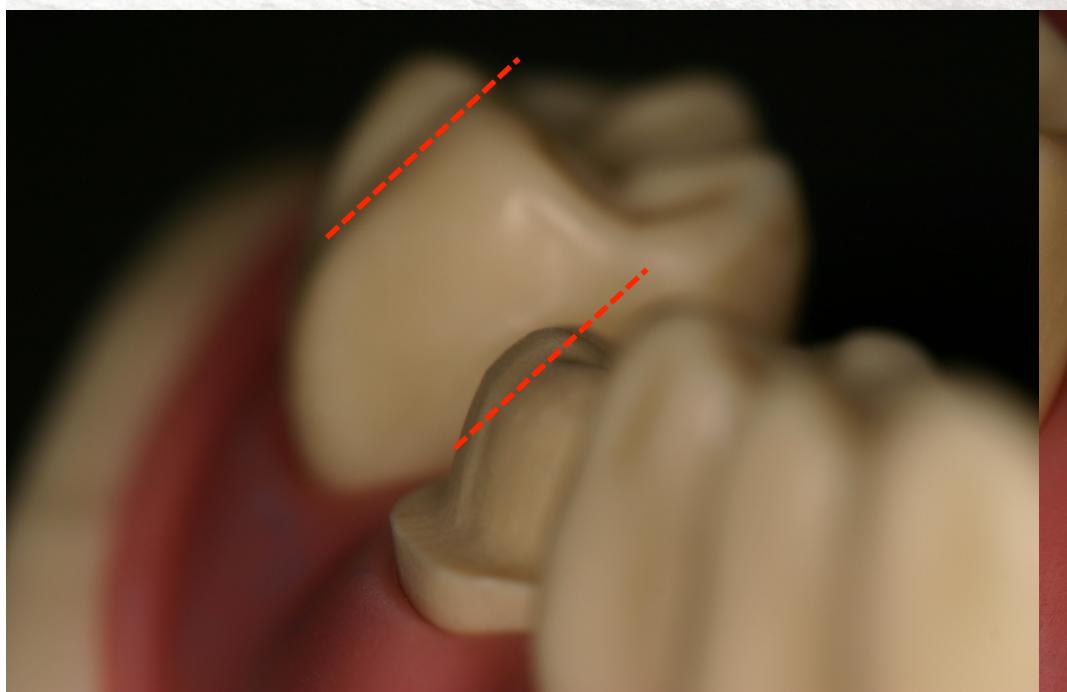






8847-018

fine chamfer or brownie

“Brownie” polishing  
point

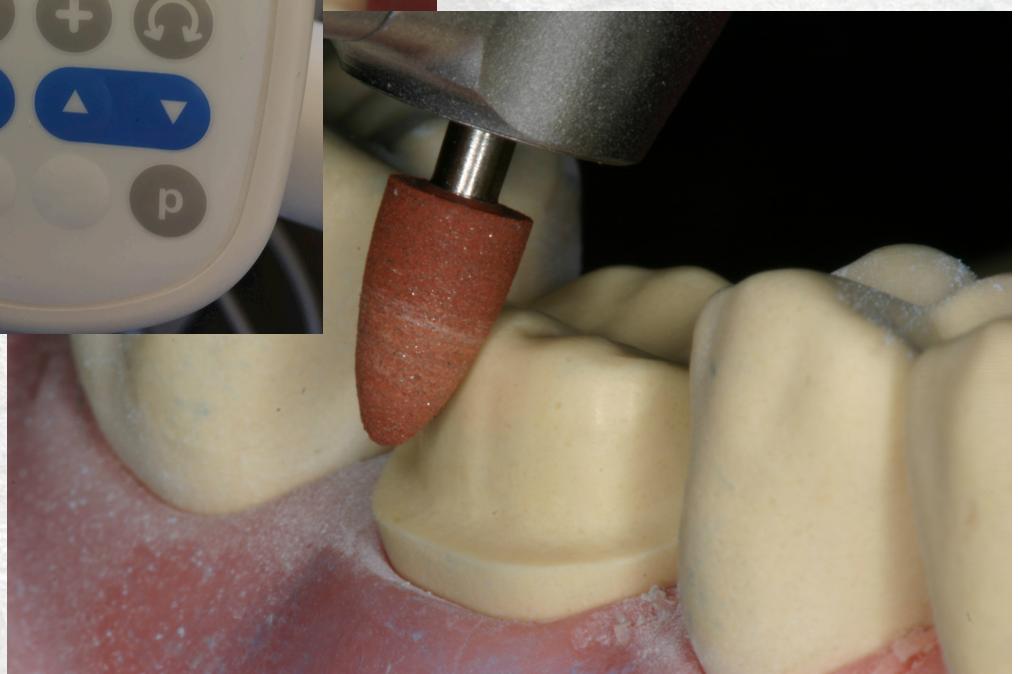



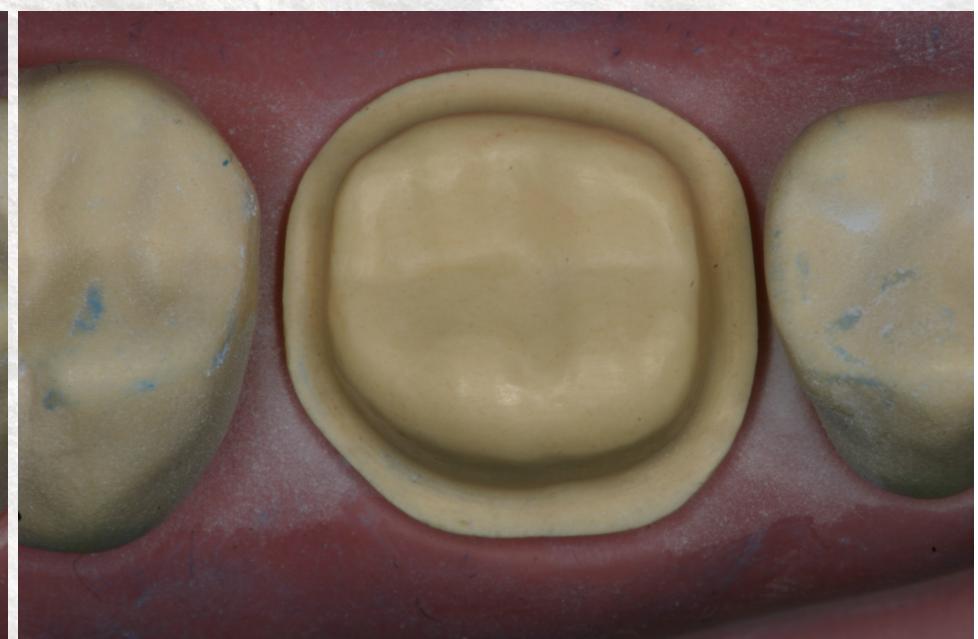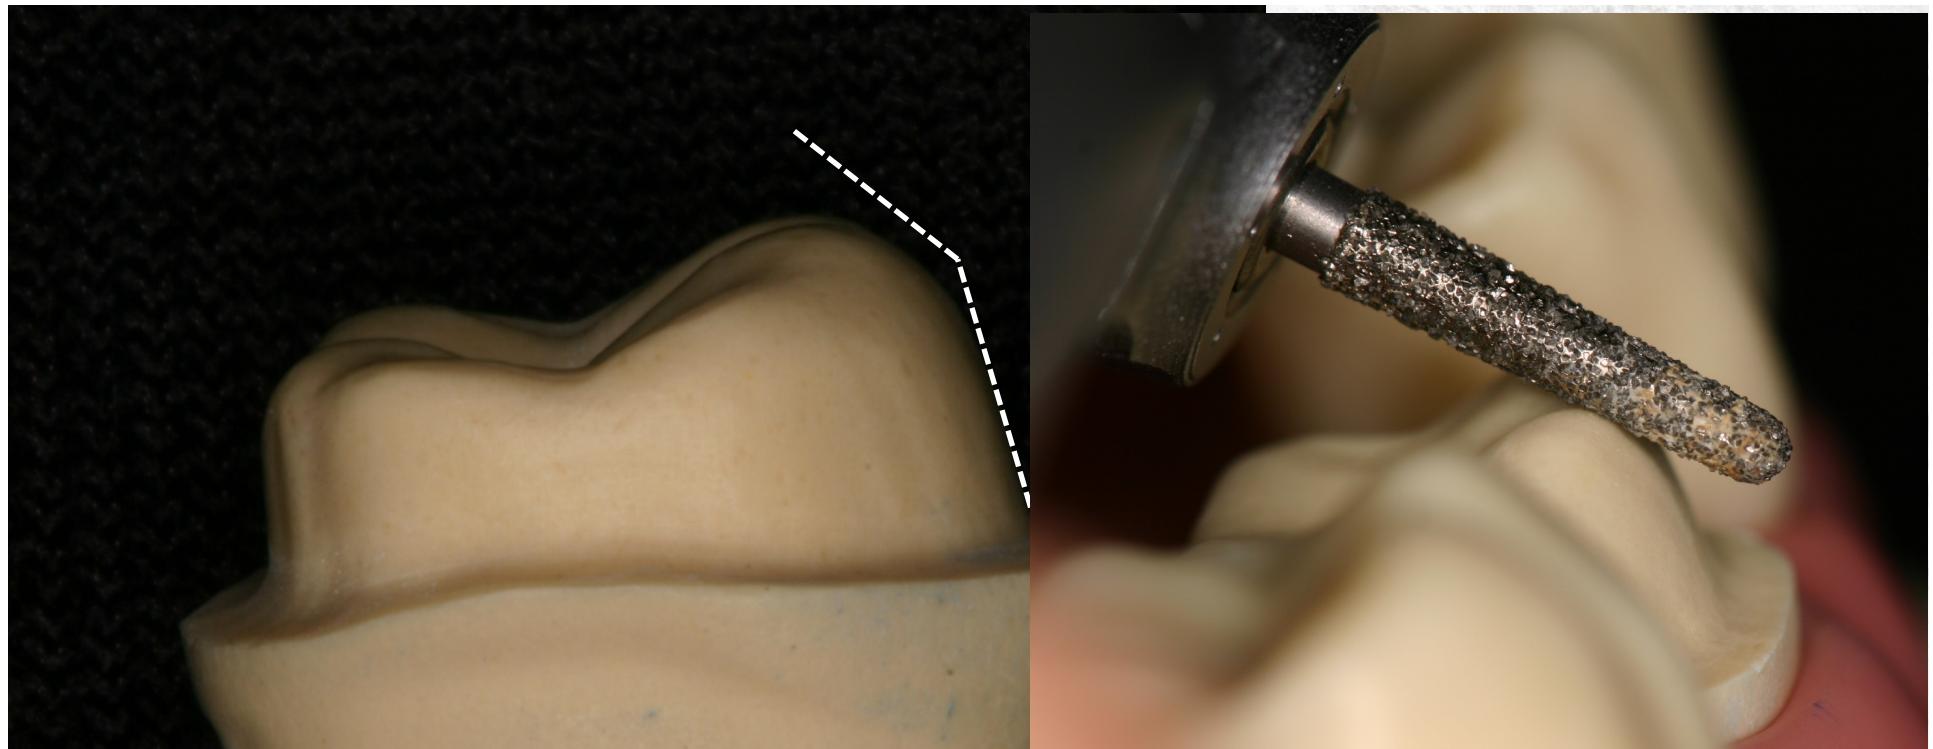



crownlay - good for bonded porcelain restoration



8856-012

