







ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

SITE APPLICABILITY:

All Medical Imaging (MI) sites in Fraser Health (FH), Providence Healthcare (PHC), Provincial Health Services Authority (PHSA), and Vancouver Coastal Health (VCH).

PURPOSE:

To ensure consistent image quality over the CT scanner system's lifetime and to establish and maintain a regular Quality assurance (QA) program.

To comply with the Diagnostic Accreditation Program (DAP) standard for Daily CT QC testing.

SCOPE:

Applicable to sites with a Siemens Somatom Def Flash Dual Tube CT scanner.

RESPONSIBILITIES:

The CT department (CT technologist) at the site will perform the Daily QC and ensure that a water phantom is scanned under a prescribed set of conditions and:

- Ensure that the mean CT number falls within the range of the manufacturer's specifications.
- Ensure that the standard deviation representing image noise and the calculations for image uniformity are within acceptable parameters.
- Repeat this test on a daily basis to detect changes in image quality values before the problem becomes visible. This fully replaces the Weekly Phantom test.
- Perform a "Checkup" scan or "FastCal" if it was last performed more than 12 hours ago.
- Ten Baseline QC scans must be performed by the site's CT technologists when specifically
 requested to do so by the physicist or a quality coordinator. This would occur when QC data
 does not fall within acceptable parameters in the 2 weeks following the replacement of CT
 imaging components. (tube, detector, collimator, etc.)

The CT Technologist will record baseline data (when required) and subsequent QC data in the **Daily** QC logbook and record on the Medical Imaging (MI) Quality [HealthBC] SharePoint site specific CT folder.

The CT technologist will compare the subsequent QA results from Daily QC against the baseline results.

- If degradation in image quality/obvious artifacts, failing noise and uniformity calculations, or CT number outside of the manufactures specifications is observed, contact radiology service.
- Early intervention could prevent a major breakdown and/or negative impacts to patient care.

Note: This is a **controlled** document for LMMI internal use. Any documents appearing in paper form should always be checked against the electronic version prior to use. The electronic version is always the current version.









ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

REQUIREMENTS:

Personnel required: 1	Phantom Weight: 4 kg (8.8 lbs)		
<u>Task</u>	Estimated time (minutes)		
Phantom setup time	2		
Acquisition time	2		
Analysis time and data entry	If Passes, ~ 4 minute / If Fails, ~ 6 minutes		
Dismantle phantom setup	2		
Total Time	10 - 12 minutes		

PROCEDURE:

Tools and Test Equipment

Water Phantom: 20 cm water

Figure 1: Attachment of the Water Phantom to the Table Gantry

Figure 1a: System Phantom

Figure 1b: **Phantom Holder** (attaches to bed)



Adhere to the following guidelines when handling or positioning the Water Phantom:

- The water phantom must be stored at a constant temperature of +21± 3 Celsius. For measurements, the water temperature in the phantom must be +21± 3 Celsius.
- The density of the water in the phantom is dependent on the water temperature. Changing the temperature by +1 Kelvin (1°C) corresponds to changing the water equivalent to 0.3 HU (Hounsfield unit) in the CT image
- Be careful when handling the phantom. Do not touch the ball phantom at the very end when lifting it up.
- Air bubbles in the 20 cm water phantom can lead to an abort of the table generation procedure. Therefore, be very careful when filling the 20 cm water phantom with water.
- In Somaris/ 7, some Table Generation procedures use different phantoms compared to the previous software. For example, the channel correction now uses the 20 cm water phantom.







ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

Procedure

Daily Quality Control scans should be done after the daily start up (reboot), tube warmup, and system calibrations (fast cal).

1. Position the Water Phantom

Be careful when handling the phantom.

Do not touch the ball phantom at the very end when lifting it up.

- 1.1 Attach and secure the phantom holder to the table (**Figures 1a** and **1b**) and ensure the locking button is in locked position.
 - a. The phantom holder is secured by a locking button in the receptacle on the underside of the patient table. Press this button in to pull the holder out of the guide again after removing the phantom set.
- 1.2 Slide the phantom onto the phantom holder (Figure 1a).
- 1.3 Use the laser alignment lights to position the phantom (Figure 1a).

a. Set the gantry vertical (0 degrees)	167°	
b. Activate the light marker		
c. Set the appropriate table height by aligning the horizontal laser light with the horizontal reference marker on the phantom (The numerical value for the correct table height will be displayed after the phantom position check)	« «Ç» »	
d. Move the patient table into the gantry. Align the vertical laser light with the vertical reference marking of the slice thickness phantom in the centre of the gantry	« «Ç» »	
e. Press the offset key until the table movement stops		

2. Scan Acquisition

2.1 Prior to scan acquisition, it is necessary to create an entry for the <u>Quality Assurance Patient</u> in the local database, if one does not already exist.

To do so, use site/scanner specific <u>QC patient name</u> entry. See Cerner or MediTech support documents.









ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

a. Select Scheduler .	
b. Select site specific QC patient name. Formulated as: QC/Site, CT/unit number (ie: QCVH,CTONE)	
c. Select QC test required "CT QC Daily 10 minute" folder.	
d. Load patient using the PATIENT REGISTER button on keyboard keypad. (rectangular key with small image of keyboard and person on it).	*
e. Then end the exam using the CLOSE CURRENT PATIENT icon.	
f. Site specific "QC patient" should now be at the top of the Local Database list.	
g. Close Patient Browser	

2.2 Choose **Setup** and **Quality** from menu



2.3 Click on **OK**

- a. The tilt of the gantry is automatically set to 0° , if necessary.
- b. The Quality Assurance Patient is automatically selected.
- c. The patient table is positioned such that the water phantom is in the scan plane.
- 2.4 Press the **Start** key on the control box when prompted in the dialog box.
 - **a.** The position of the phantom set is checked and displayed. Then the first measurement is started automatically.
 - d. For incorrect positioning of the phantom set, a message is displayed. Correct the position, if necessary.
 - e. Two measurements are performed at each available kV setting. After the second, the difference between the first and second measurement is calculated and displayed with the following evaluations.
 - i. ROI
 - ii. Mean value of the CT Value
 - iii. Standard deviation










ABCD-21-16-90199


Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

- 2.5 **Review information in the dialogue box** to see if the Quality scan was successful. If it fails, repeat the scan. If it fails a second time, call service immediately.
- 2.6 Click on **O.K**. when the Quality test is complete
- 3. Analyze the QA Images for CT number, Noise and Uniformity
- > ME = Center ROI Mean CT number of water, SD= Standard deviation representing Noise
- ➤ **ME 12, 3, 6, 9 o'clock** = Peripheral Mean numbers used to calculate Uniformity = the absolute difference between the CT numbers from the Centre ROI and the each of the 12, 3, 6 and 9 o'clock ROIs
- 3.1 Locate Series (16) and Image (3) to Display ROIs
 - a. Click on the Viewing tab
 - b. Open the Patient Browser
 - c. Select the Quality Assurance Patient in the Local Database
 - d. Double-click on "CT QC Daily" Folder

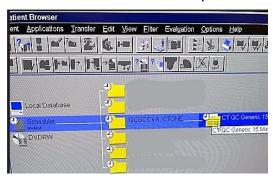

3.2 **Display Series 16**. Scroll to **Image number 3 of 6**. (Figure 2) Figure 2: **ROI Position**

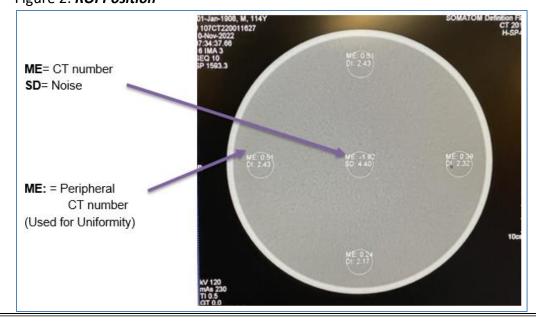

Note: This is a **controlled** document for LMMI internal use. Any documents appearing in paper form should always be checked against the electronic version prior to use. The electronic version is always the current version.









ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

- 3.3 Record the following in the Daily QC log sheet
 - a. The Centre ROI Mean (ME) CT Number
 - b. The Standard Deviation (SD)
 - c. The Mean (ME) CT number for each of the four peripheral ROIs
- 3.4 Compare the current values to previously recorded values
- 3.5 Report significant change or values that fall outside suggested ranges to the supervisor. An orange-coloured cell indicates a failing value. Follow facility procedures to notify service personnel.
 - Record the failed and repeated data on the log sheet.
- 3.6 **If performing ten baseline scans**, repeat steps 2.1 through 3.2 for each of the ten baseline scans.

4. Analyze the QA Images for Artifacts

- 4.1 Assess reconstructed phantom images from **Series 16** for obvious artifacts. If present, repeat scan to confirm artifact. Immediately report artifact to the supervisor and follow facility procedures to notify service personnel.
- 4.2 Record in Daily QC and room checklist on MI Quality site

5. Finalization

- 5.1 Close any image files still open on the screen
- 5.2 <u>Do not</u> send routine phantom images to PACS. Save to PACS, <u>only</u> those images that have obvious artifacts (Ensure that auto-push is <u>not</u> on)
- 5.3 Delete QC images from Acquisition works
 - a. Press Delete key on keyboard
 - b. Yes at prompt
 - c. Yes to All at prompt
- 5.4 Remove the phantom from the system bore and return to storage location
- 5.5 Record the <u>all data</u> on the MI Quality Daily CT QC log sheet, and complete the QC room checklist
- 5.6 Complete the exam in the RIS and then PACS system

6. Typical Results and Allowable Variations

Siemens expects the standards of allowable variation in image quality parameters to vary with the installation and image evaluator(s).

Ensure the prescribed technique is used and facility guidelines are followed to inform service when the variations reach the specified maximum deviation as indicated by the log sheet or observations.





ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

6.1 CT Number, Noise, and Uniformity

When the water section of the phantom is correctly imaged and analyzed the:

- CT number of the center ROI within the range of 0 ± 4 HU
- Standard deviation (Noise) of the center ROI should not vary from the baseline by more than **0.2 HU.**
- Uniformity does not exceed the allowable range of 2 HU from the established acceptance baseline values

6.2 **Phantom Image Artifacts**


Because the human eye determines clinical image quality, it remains subjective and difficult to define.

No obvious artifacts should be visible when viewing the reconstructed image with standard window width and window level.

Examples of artifacts that are serious enough to be reported to radiology service are shown in *Figures 3 and 4* below.

Figure 3: **Cupping Artifact**

Figure 4: *Ring Artifact*

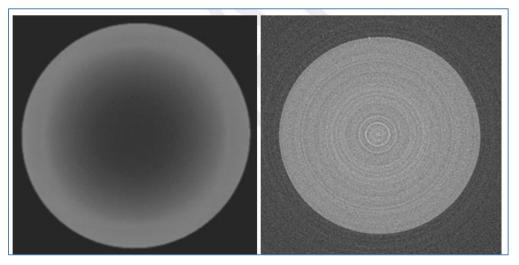

REFERENCES/ ASSOCIATED DOCUMENTS:

Diagnostic Accreditation Program Accreditation Standards – Diagnostic Imaging https://www.cpsbc.ca/accredited-facilities/dap/accreditation-standards-DI

QA Manual = Siemens On-line Help Manual, Somatom Def./AS/Flash, Rev# 11.09, CT00-000.880.01.02.02 (basis for this procedure).









ABCD-21-16-90199

Standard Operating Procedure

Daily CT QC Phantom Test: Siemens Definition Flash

First Released Date:	27-JAN-2023					
Posted Date:	05-MAR-2024					
Last Revised:	23-FEB-2024					
Last Reviewed:	23-FEB-2024					
Approved By:	Medical Physicist Lead, MI					
Owners:	Medical Physicist Lead, MI					
	Regional Quality Coordinator, MI					
Revision History:	Version	Date	Description/ Key Changes	Revised By (Name and Position)		
	1.0	27-JAN-2023	Initial release	Cheryl Mason, Quality Coordinator		
	2.0	07-JUL-2023	Standard deviation allowable variation corrected to 10% Distinguish QA/Water phantom terminology	Cheryl Mason, Quality Coordinator		
	3.0	05-MAR-2024	Revise responsibility section, Change QA to Water phantom, Add "Series 16" to analyze QA images, Change 10% to 0.2 HU, Change WW and WL from default to standard	Cheryl Mason, Quality Coordinator		

Note: This is a **controlled** document for LMMI internal use. Any documents appearing in paper form should always be checked against the electronic version prior to use. The electronic version is always the current version.