






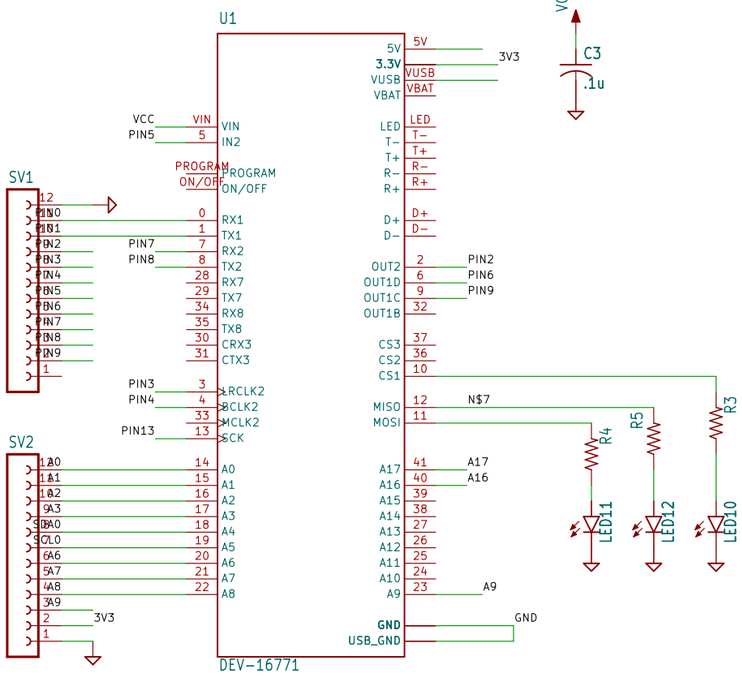



















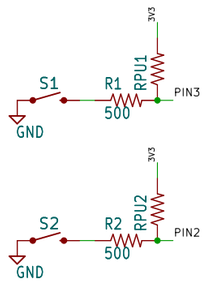


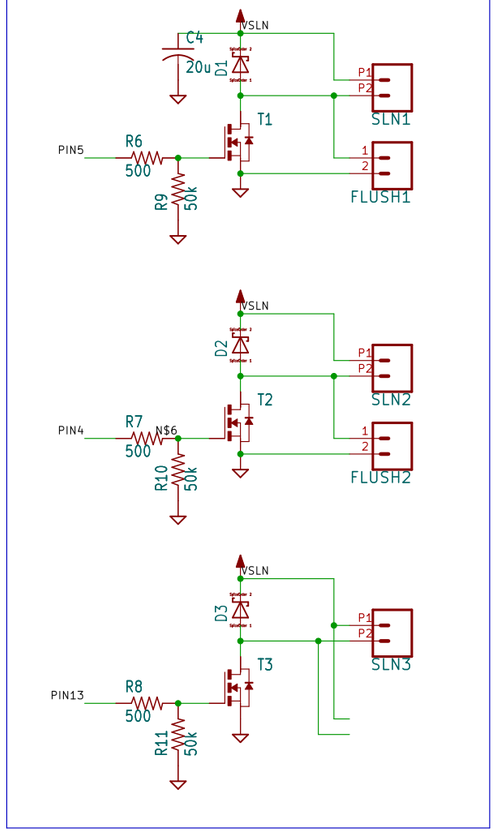


TODO:
smaller corner mounting holes,
flip bottom silk screen,
add polarity labels to servo connectors,
silkscreen to identify which pot pin goes to Teensy;
break out and label Vin;
label switch pins
fix miswired qwicc connector. Power to i2C should be from 3.3V and lines are swapped~{
Check} and Fix solenoid flush~{
Add} different pot footprint.

















HMS RIC	
Sheet: /	
File: TeensyBreakout_Alpha1b.kicad_sch	
Title: General Purpose Teensy breakout	
Size: A3	Date:
KiCad E.D.A. 10.0.1	**Rev: Alpha1b** Id: 1/1