

Step Entry

lot g

Dt.

28/11/26

Part no.,

Qty

SA 0011

156

+

SA 0012

120

~~+~~





SA 0053

60

PCB type

SA 0011 → G13 digital RC 120mm PCB

SA 0011 - G13 digital re 120mm PCB

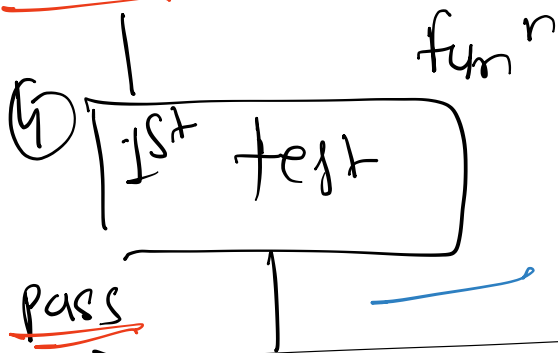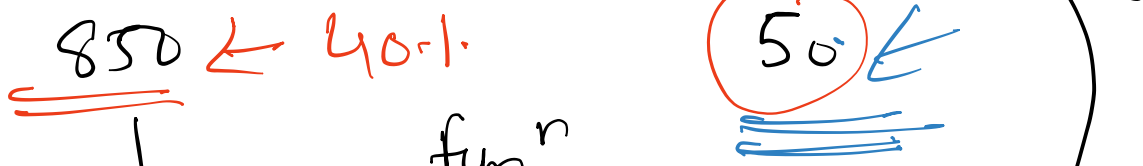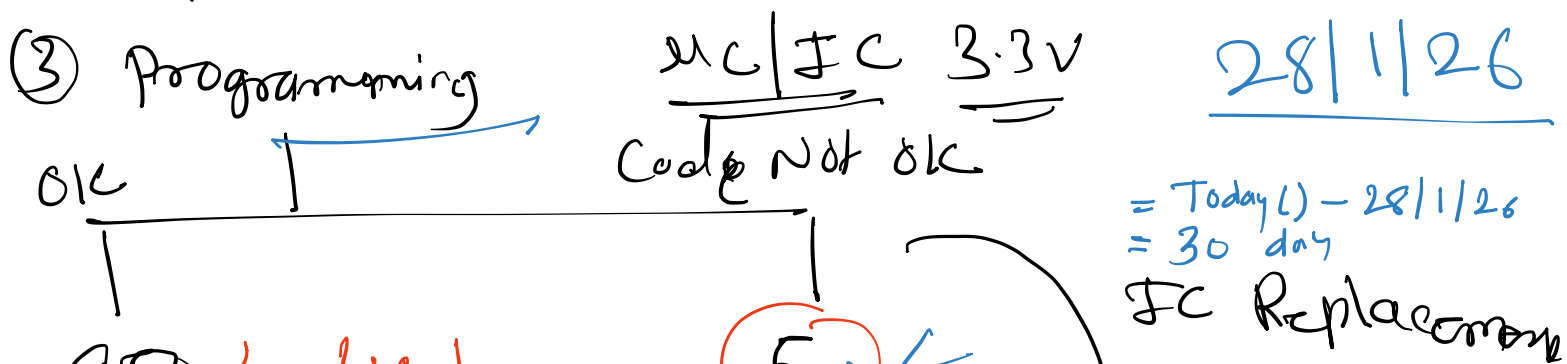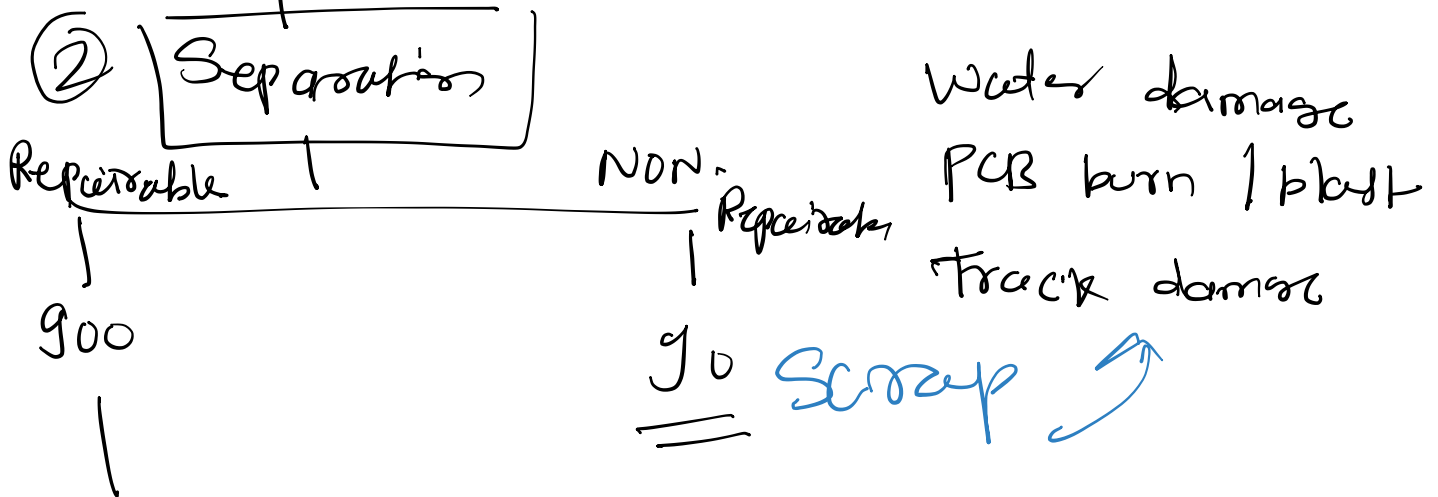

Debug OK

500

Critical ✓

10 = 60


PCB OK / NG

Ageing

6 Entry = PCB cool 67j

840

7 cleaning =

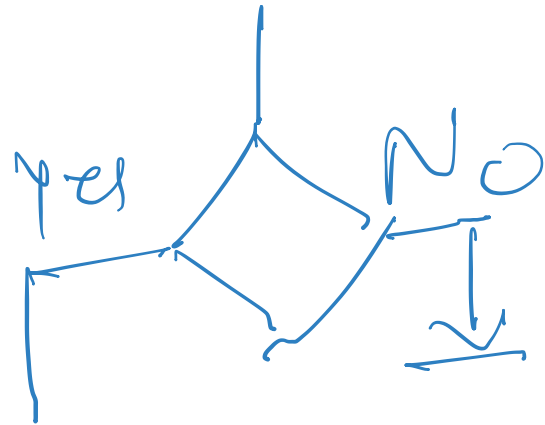


8 AC
pass | fail
800 | 40
↓

9. Marking & Coating

800
↓

10 final testing

P.T. 0

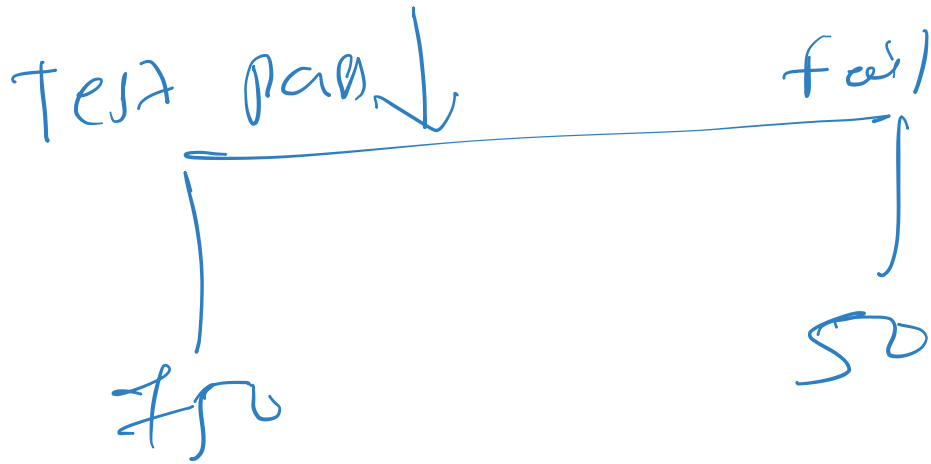

11. final Entry

750 ✓✓

12 ↓
packing