#### **Course Site:**


http://cc.sjtu.edu.cn/G2S/site/aca.html





# Computer Architecture

A Quantitative Approach, Fifth Edition

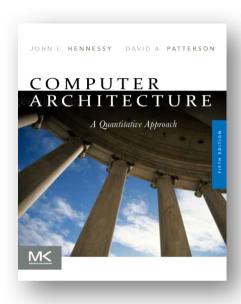

#### Chapter 2

Memory Hierarchy Design



#### **Outline**

- Memory Hierarchy
- Cache Design
- Basic Cache Optimizations
- Advanced Cache Optimizations
- Memory and its Optimizations
- Flash Memory
- Protection and Isolation





#### Introduction

- Programmers want unlimited amounts of memory with low latency
- Fast memory technology is more expensive per bit than slower memory
- Solution: organize memory system into a hierarchy
  - Entire addressable memory space available in largest, slowest memory
  - Incrementally smaller and faster memories, each containing a subset of the memory below it, proceed in steps up toward the processor
- Temporal and spatial locality insures that nearly all references can be found in smaller memories
  - Gives the allusion of a large, fast memory being presented to the processor




#### **Memory Hierarchy**

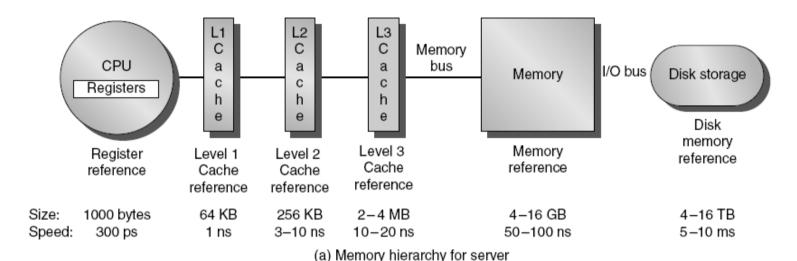

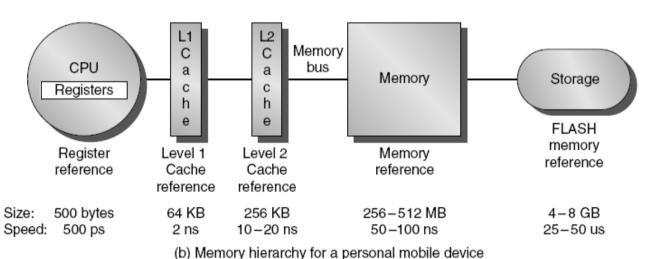



# **Memory Performance Gap**

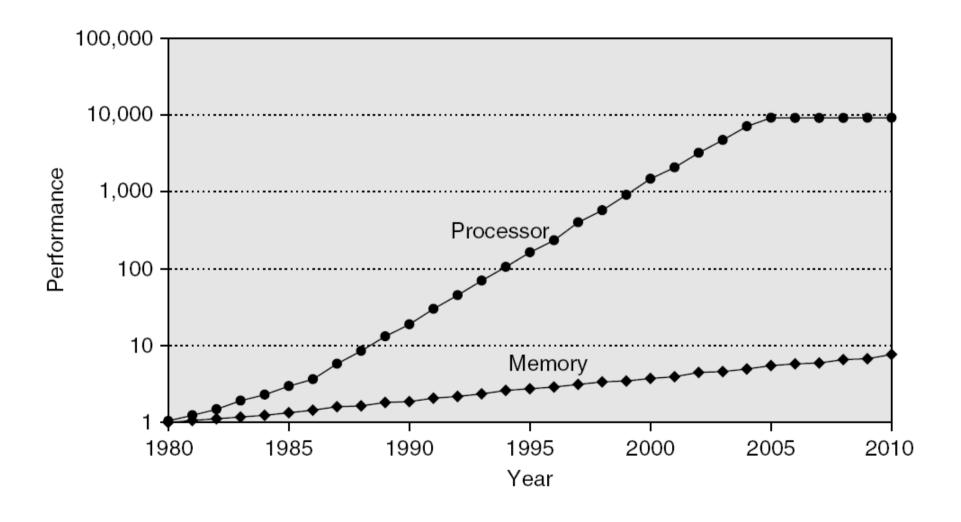



## **Memory Hierarchy Design**

- Memory hierarchy design becomes more crucial with recent multi-core processors:
  - Aggregate peak bandwidth grows with # cores:
    - Intel Core i7 can generate two references per core per clock
    - Four cores and 3.2 GHz clock
      - 25.6 billion 64-bit data references/second +
      - 12.8 billion 128-bit instruction references
      - = 409.6 GB/s!
    - DRAM bandwidth is only 6% of this (25 GB/s)
    - Requires:
      - Multi-port, pipelined caches
      - Two levels of cache per core
      - Shared third-level cache on chip



#### **Performance and Power**

- High-end microprocessors have >10 MB on-chip cache
  - Consumes large amount of area and power budget





- When a word is not found in the cache, a miss occurs:
  - Fetch word from lower level in hierarchy, requiring a higher latency reference
  - Lower level may be another cache or the main memory
  - Also fetch the other words contained within the block
    - Takes advantage of spatial locality
  - Place block into cache in any location within its set, determined by address
    - block address MOD number of sets



- n sets => n-way set associative
  - Direct-mapped cache => one block per set
  - Fully associative => one set
- Writing to cache: two strategies
  - Write-through
    - Immediately update lower levels of hierarchy
  - Write-back
    - Only update lower levels of hierarchy when an updated block is replaced
  - Both strategies use write buffer to make writes asynchronous



- Miss rate
  - Fraction of cache access that result in a miss
- Causes of misses
  - Compulsory
    - First reference to a block
  - Capacity
    - Blocks discarded and later retrieved
  - Conflict
    - Program makes repeated references to multiple addresses from different blocks that map to the same location in the cache



$$\frac{\text{Misses}}{\text{Instruction}} = \frac{\text{Miss rate} \times \text{Memory accesses}}{\text{Instruction count}} = \frac{\text{Miss rate} \times \frac{\text{Memory accesses}}{\text{Instruction}}$$

Average memory access time = Hit time + Miss rate  $\times$  Miss penalty

- Note that speculative and multithreaded processors may execute other instructions during a miss
  - Reduces performance impact of misses

- Six basic cache optimizations:
  - Larger block size
    - Reduces compulsory misses
    - Increases capacity and conflict misses, increases miss penalty
  - Larger total cache capacity to reduce miss rate
    - Increases hit time, increases power consumption
  - Higher associativity
    - Reduces conflict misses
    - Increases hit time, increases power consumption
  - Higher number of cache levels
    - Reduces overall memory access time

```
Hit time<sub>L1</sub> + Miss rate<sub>L1</sub> × (Hit time<sub>L2</sub> + Miss rate<sub>L2</sub> × Miss penalty<sub>L2</sub>)
```

- Giving priority to read misses over writes
  - Reduces miss penalty
- Avoiding address translation in cache indexing
  - Reduces hit time



## **Ten Advanced Optimizations**

Average memory access time = Hit time + Miss rate  $\times$  Miss penalty

- Advanced Cache Optimizations
  - Reducing the hit time
  - Increasing cache bandwidth
  - Reducing the miss penalty
  - Reducing the miss rate
  - Reducing the miss penalty or miss rate via parallelism




## 1. Small and simple L1 caches

- Small and simple first level caches
  - Critical timing path:
    - addressing tag memory, then
    - comparing tags, then
    - selecting correct set
  - Direct-mapped caches can overlap tag compare and transmission of data
  - Lower associativity reduces power because fewer cache lines are accessed




#### L1 Size and Associativity

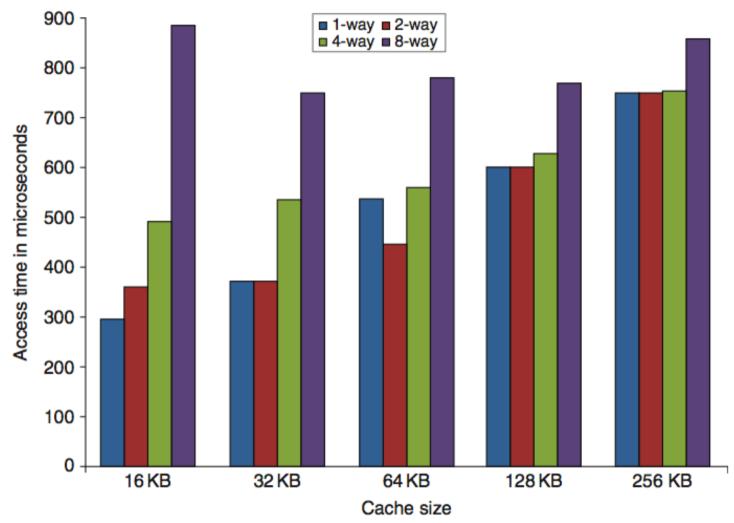

Access time vs. size and associativity



### L1 Size and Associativity

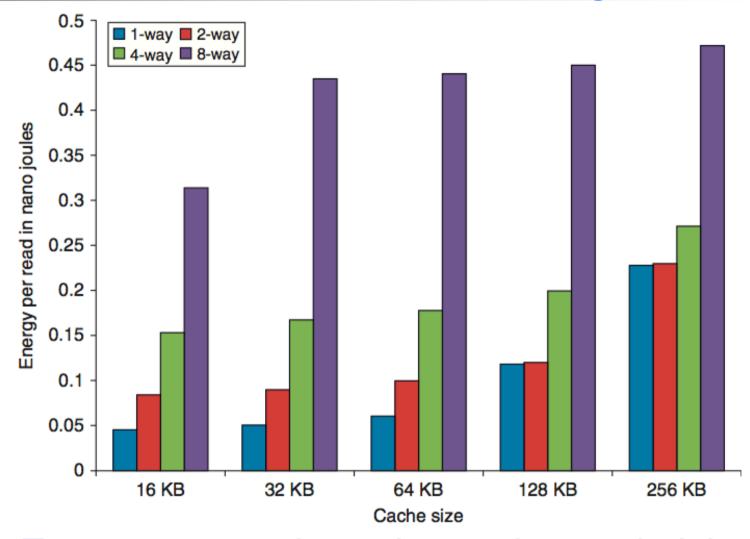

Energy per read vs. size and associativity



## 2. Way Prediction

- To improve hit time, predict the way to pre-set mux
  - Mis-prediction gives longer hit time
  - Prediction accuracy
    - > 90% for two-way
    - > 80% for four-way
    - I-cache has better accuracy than D-cache
  - First used on MIPS R10000 in mid-90s
  - Used on ARM Cortex-A8
- Extend to predict block as well
  - "Way selection"
  - Increases mis-prediction penalty



### 3. Pipelining Cache

- Pipeline cache access to improve bandwidth
  - Examples:
    - Pentium: 1 cycle
    - Pentium Pro Pentium III: 2 cycles
    - Pentium 4 Core i7: 4 cycles
- Increases branch mis-prediction penalty
- Makes it easier to increase associativity




#### 4. Nonblocking Caches

- Allow hits before previous misses complete
  - "Hit under miss"
  - "Hit under multiple miss"
- L2 must support this technique
- In general, processors can hide L1 miss penalty but not L2 miss penalty



#### **Nonblocking Caches**

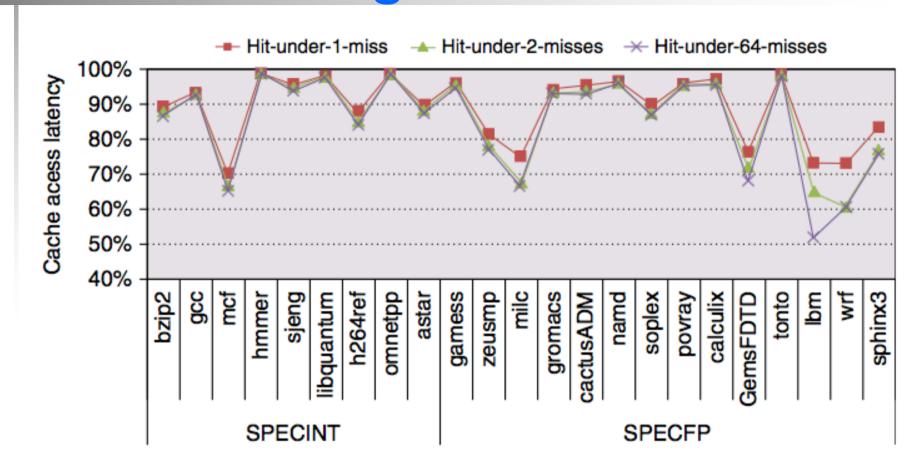


#### Effectiveness of a nonblocking cache



#### 5. Multibanked Caches

- Organize cache as independent banks to support simultaneous access
  - ARM Cortex-A8 supports 1-4 banks for L2
  - Intel i7 supports 4 banks for L1 and 8 banks for L2
- Interleave banks according to block address

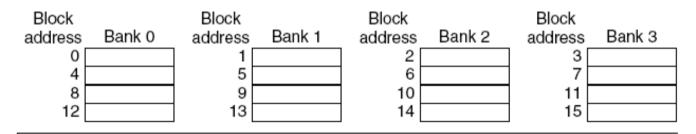

**Figure 2.6** Four-way interleaved cache banks using block addressing. Assuming 64 bytes per blocks, each of these addresses would be multiplied by 64 to get byte addressing.




# 6. Critical Word First, Early Restart

- Critical word first
  - Request missed word from memory first
  - Send it to the processor as soon as it arrives
- Early restart
  - Request words in normal order
  - Send missed work to the processor as soon as it arrives
- Effectiveness of these strategies depends on block size and likelihood of another access to the portion of the block that has not yet been fetched




#### 7. Merging Write Buffer

- When storing to a block that is already pending in the write buffer, update write buffer
- Reduces stalls due to full write buffer
- Do not apply to I/O addresses

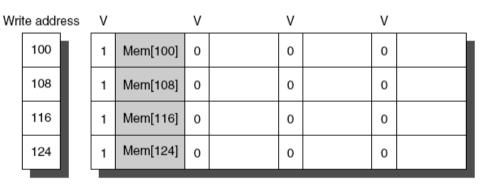

No write buffering

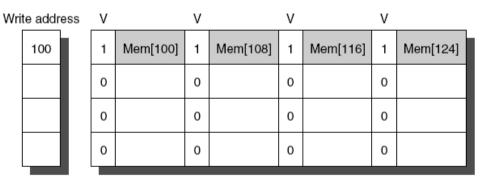

Write buffering




#### 8. Compiler Optimizations

- Loop Interchange
  - Swap nested loops to access memory in sequential order
- Blocking
  - Instead of accessing entire rows or columns, subdivide matrices into blocks
  - Requires more memory accesses but improves locality of accesses



#### 9. Hardware Prefetching

 Fetch two blocks on miss (include next sequential block)

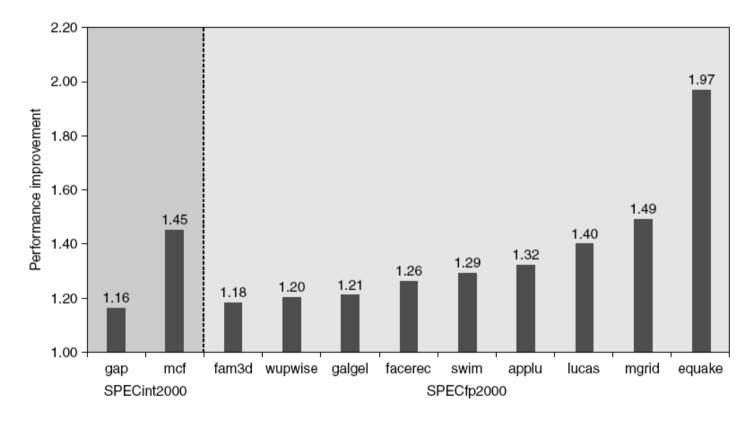

Pentium 4 Pre-fetching



## 10. Compiler Prefetching

- Insert prefetch instructions before data is needed
- Non-faulting: prefetch doesn't cause exceptions
- Register prefetch
  - Loads data into register
- Cache prefetch
  - Loads data into cache
- Combine with loop unrolling and software pipelining



#### **Summary**

Technique	Hit time	Band- width	Miss penalty	Miss rate	Power consumption	Hardware cost, complexity	/ Comment
Small and simple caches	+			-	+	0	Trivial; widely used
Way-predicting caches	+				+	1	Used in Pentium 4
Pipelined cache access	_	+				1	Widely used
Nonblocking caches		+	+			3	Widely used
Banked caches		+			+	1	Used in L2 of both i7 and Cortex-A8
Critical word first and early restart			+			2	Widely used
Merging write buffer			+			1	Widely used with write through
Compiler techniques to reduce cache misses				+		0	Software is a challenge, but many compilers handle common linear algebra calculations
Hardware prefetching of instructions and data			+	+	-	2 instr., 3 data	Most provide prefetch instructions; modern high- end processors also automatically prefetch in hardware.
Compiler-controlled prefetching			+	+		3	Needs nonblocking cache; possible instruction overhead; in many CPUs

**Figure 2.11** Summary of 10 advanced cache optimizations showing impact on cache performance, power consumption, and complexity. Although generally a technique helps only one factor, prefetching can reduce misses if done sufficiently early; if not, it can reduce miss penalty. + means that the technique improves the factor, – means it hurts that factor, and blank means it has no impact. The complexity measure is subjective, with 0 being the easiest and 3 being a challenge.



- Performance metrics
  - Latency is concern of cache
  - Bandwidth is concern of multiprocessors and I/O
  - Access time
    - Time between read request and when desired word arrives
  - Cycle time
    - Minimum time between unrelated requests to memory
- DRAM used for main memory, SRAM used for cache




#### SRAM

- Requires low power to retain bit
- Requires 6 transistors/bit

#### DRAM

- Must be re-written after being read
- Must also be periodically refeshed
  - Every ~ 8 ms
  - Each row can be refreshed simultaneously
- One transistor/bit
- Address lines are multiplexed:
  - Upper half of address: row access strobe (RAS)
  - Lower half of address: column access strobe (CAS)



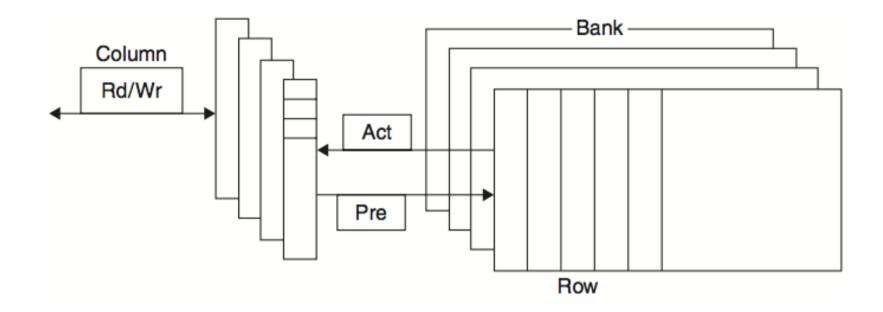

#### Organization of a DRAM



#### Amdahl:

- Memory capacity should grow linearly with processor speed
- Unfortunately, memory capacity and speed has not kept pace with processors

#### Some optimizations:

- Multiple accesses to same row
- Synchronous DRAM
  - Added clock to DRAM interface
  - Burst mode with critical word first
- Wider interfaces
- Double data rate (DDR)
- Multiple banks on each DRAM device



			Row access strobe (RAS)			
Production year	Chip size	DRAM Type	Slowest DRAM (ns)	Fastest DRAM (ns)	Column access strobe (CAS), data transfer time (ns)	/ Cycle time (ns)
1980	64K bit	DRAM	180	150	75	250
1983	256K bit	DRAM	150	120	50	220
1986	1M bit	DRAM	120	100	25	190
1989	4M bit	DRAM	100	80	20	165
1992	16M bit	DRAM	80	60	15	120
1996	64M bit	SDRAM	70	50	12	110
1998	128M bit	SDRAM	70	50	10	100
2000	256M bit	DDR1	65	45	7	90
2002	512M bit	DDR1	60	40	5	80
2004	1G bit	DDR2	55	35	5	70
2006	2G bit	DDR2	50	30	2.5	60
2010	4G bit	DDR3	36	28	1	37
2012	8G bit	DDR3	30	24	0.5	31

**Figure 2.13** Times of fast and slow DRAMs vary with each generation. (Cycle time is defined on page 95.) Performance improvement of row access time is about 5% per year. The improvement by a factor of 2 in column access in 1986 accompanied the switch from NMOS DRAMs to CMOS DRAMs. The introduction of various burst transfer modes in the mid-1990s and SDRAMs in the late 1990s has significantly complicated the calculation of access time for blocks of data; we discuss this later in this section when we talk about SDRAM access time and power. The DDR4 designs are due for introduction in mid- to late 2012. We discuss these various forms of DRAMs in the next few pages.



Standard	Clock rate (MHz)	M transfers per second	DRAM name	MB/sec/DIMM	DIMM name
DDR	133	266	DDR266	2128	PC2100
DDR	150	300	DDR300	2400	PC2400
DDR	200	400	DDR400	3200	PC3200
DDR2	266	533	DDR2-533	4264	PC4300
DDR2	333	667	DDR2-667	5336	PC5300
DDR2	400	800	DDR2-800	6400	PC6400
DDR3	533	1066	DDR3-1066	8528	PC8500
DDR3	666	1333	DDR3-1333	10,664	PC10700
DDR3	800	1600	DDR3-1600	12,800	PC12800
DDR4	1066–1600	2133–3200	DDR4-3200	17,056–25,600	PC25600

Figure 2.14 Clock rates, bandwidth, and names of DDR DRAMS and DIMMs in 2010. Note the numerical relationship between the columns. The third column is twice the second, and the fourth uses the number from the third column in the name of the DRAM chip. The fifth column is eight times the third column, and a rounded version of this number is used in the name of the DIMM. Although not shown in this figure, DDRs also specify latency in clock cycles as four numbers, which are specified by the DDR standard. For example, DDR3-2000 CL 9 has latencies of 9-9-9-28. What does this mean? With a 1 ns clock (clock cycle is one-half the transfer rate), this indicate 9 ns for row to columns address (RAS time), 9 ns for column access to data (CAS time), and a minimum read time of 28 ns. Closing the row takes 9 ns for precharge but happens only when the reads from that row are finished. In burst mode, transfers occur on every clock on both edges, when the first RAS and CAS times have elapsed. Furthermore, the precharge in not needed until the entire row is read. DDR4 will be produced in 2012 and is expected to reach clock rates of 1600 MHz in 2014, when DDR5 is expected to take over. The exercises explore these details further.




- DDR:
  - DDR2
    - Lower power (2.5 V -> 1.8 V)
    - Higher clock rates (266 MHz, 333 MHz, 400 MHz)
  - DDR3
    - 1.5 V
    - 800 MHz
  - DDR4
    - 1-1.2 V
    - 1600 MHz
- GDDR5 is graphics memory based on DDR3



- Graphics memory:
  - Achieve 2-5 X bandwidth per DRAM vs. DDR3
    - Wider interfaces (32 vs. 16 bit)
    - Higher clock rate
      - Possible because they are attached via soldering instead of socketted DIMM modules
- Reducing power in SDRAMs:
  - Lower voltage
  - Low power mode (ignores clock, continues to refresh)



#### **Memory Power Consumption**

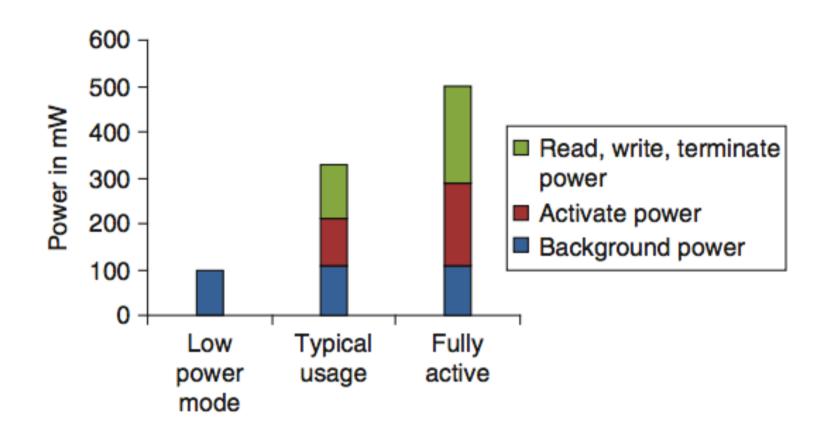

Power consumption for a DDR3 SDRAM



#### Flash Memory

- Type of EEPROM
- Must be erased (in blocks) before being overwritten
- Non volatile
- Limited number of write cycles
- Cheaper than SDRAM, more expensive than disk
- Slower than SRAM, faster than disk



#### **Memory Dependability**

- Memory is susceptible to cosmic rays
- Soft errors: dynamic errors
  - Detected and fixed by error correcting codes (ECC)
- Hard errors: permanent errors
  - Use sparse rows to replace defective rows
- Chipkill: a RAID-like error recovery technique



#### **Virtual Memory**

- Protection via virtual memory
  - Keeps processes in their own memory space
- Role of architecture:
  - Provide user mode and supervisor mode
  - Protect certain aspects of CPU state
  - Provide mechanisms for switching between user mode and supervisor mode
  - Provide mechanisms to limit memory accesses
  - Provide TLB to translate addresses



#### **Virtual Machines**

- Supports isolation and security
- Sharing a computer among many unrelated users
- Enabled by raw speed of processors, making the overhead more acceptable
- Allows different ISAs and operating systems to be presented to user programs
  - "System Virtual Machines"
  - SVM software is called "virtual machine monitor" or "hypervisor"
  - Individual virtual machines run under the monitor are called "guest VMs"



# **Impact of VMs on Virtual Memory**

- Each guest OS maintains its own set of page tables
  - VMM adds a level of memory between physical and virtual memory called "real memory"
  - VMM maintains shadow page table that maps guest virtual addresses to physical addresses
    - Requires VMM to detect guest's changes to its own page table
    - Occurs naturally if accessing the page table pointer is a privileged operation

