
Mole Table Wiring

Ten 60 mm dome buttons carrying a 12-pixel NeoPixel ring and a Cherry D44X switch, plus two unlit start buttons, back to one Teensy 4.1. Pin assignments are mirrored from `firmware/WhackAMole/Config.h`.

> ### The one rule
>
> Power does not daisy-chain through the buttons. Only the data line does. A 12-pixel ring pulls **720 mA** at full white, so chaining 5 V through the button connectors would put **7.2 A** through the first one. Run a separate 5 V/GND bus and tap each button off it.

System topology


10 lit caps · 120 pixels

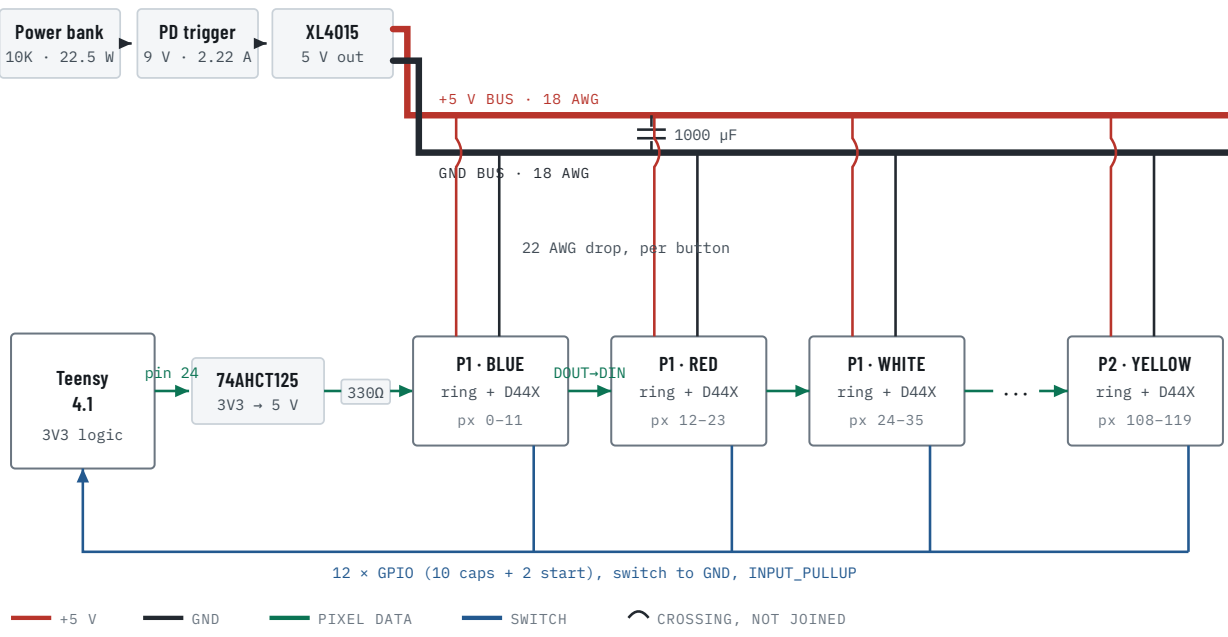

Two independent networks. Power fans out from a shared bus so no connector carries more than one ring's current; data runs series through every ring in turn, which is why one unplugged cap goes dark for everything downstream of it. The two start buttons sit outside both networks — switch only.

18 AWG bus, 22 AWG drops 26 AWG point to point 22 AWG returns

Inside one cap 6 conductors out

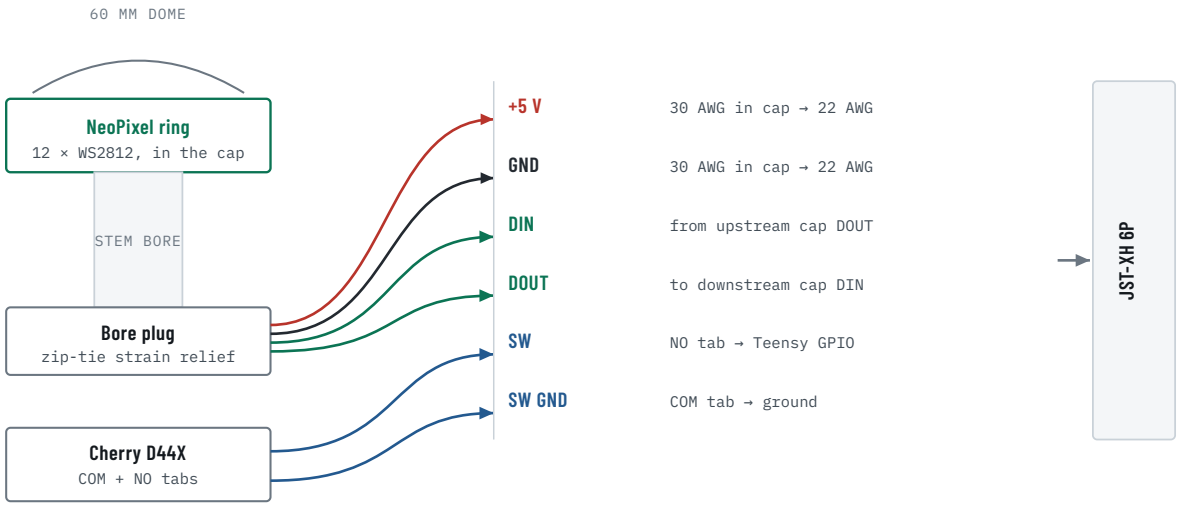

Keep the two grounds separate all the way back. A ring at full white returns 720 mA; sharing that return with the switch puts an IR offset across the input the Teensy is trying to read.

Current budget worst case is a debug screen

DRAW AT 5 V	PIXELS LIT	CURRENT	NOTES
Gameplay, two moles up	24	≈ 0.30 A	Amber, not white. The normal case.
Attract mode	0–24	≈ 0.15 A	Quiescent draw is ~1 mA per pixel.
Debug `LED ALL`, white	120	2.26 A	At `kPixelBrightness = 80`. The most the rings ever pull.
Same, brightness 255	120	7.20 A	Why the ceiling exists.
32×32 matrix panel	—	≈ 0.4 A	Scrolling text on black. Every pixel white would be ~2 A, which the game never displays — do not budget against that figure.
Teensy + level shifter	—	≈ 0.1 A	
Worst case — `LED ALL` plus the rest	**120**	**≈ 2.8 A**	**14 W out of the buck.**

What the supply can give back, on the other side of the converter:

SUPPLY	INTO THE BUCK	OUT AT 5 V	NOTES
Power bank, 9 V PD profile	2.22 A · 20 W	≈ 3.5 A	At ~88% buck efficiency. About 20% headroom over worst case.
Power bank, 5 V direct	3 A · 15 W	—	Not usable. USB PD caps 5 V at 3 A, and it would bypass the buck entirely.
2× 21700 in series	8.4 → 6.0 V	sags	Falls below the XL4015's 8 V input floor for most of the discharge.

Two things to verify, not assume

The 9 V profile has to exist. A 22.5 W bank's headline `10 V / 2.25 A` is usually SCP, a proprietary protocol no PD trigger can negotiate. What a trigger can reach is the PD 3.0 list, typically `5 V / 3 A` and `9 V / 2.22 A`. Check the label before buying the trigger.

The bank has to stay awake. Power banks shut down below roughly 50–200 mA, and attract mode is the quietest the table ever gets. An active PD contract usually prevents it, but it varies by model — leave the table idling for half an hour before an event, not during one.

Then put a meter on the 5 V rail on the `LED ALL` screen, which is the only state that reaches worst case. If it sags, drop `kPixelBrightness`; gameplay never approaches this, so lowering it costs nothing you will see.

Chain order `must match Config.h`

The physical daisy-chain order and the pixel indices in `Config.h` are the same fact written twice. Wire them in this sequence or the wrong cap lights.

POSITION	BUTTON	PIXELS	SWITCH PIN
1–5	P1 mole caps — blue, red, white, green, yellow	0–59	2, 3, 4, 5, 9
6–10	P2 mole caps — blue, red, white, green, yellow	60–119	11, 12, 14, 15, 16
—	P1 start · P2 start (no lamp)	none	22 · 25

The start buttons are switch-only

They are plain arcade buttons with no lamp, so they contribute a switch and nothing else: two conductors, no ring, and no place in the pixel chain. `kPixelCount` is `kButtonsPerPlayer × 2 × kPixelsPerButton` — 120, not 144. Allocating pixels for them would shift nothing electrically but would leave the chain expecting two rings that are not there.

Teensy 4.1 pins `from Config.h`

FUNCTION	PINS	NOTES
Display link, Serial1	`0 RX · 1 TX`	To the Matrix Portal at 115200.
Pixel data	`24`	Serial6 TX. WS2812Serial only drives certain pins.
P1 buttons	`2, 3, 4, 5, 9`	All `INPUT_PULLUP`, switch to ground.
P2 buttons	`11, 12, 14, 15, 16`	
Start buttons	`22 · 25`	
Reserved for audio	`6, 7, 10, 18, 19, 20, 21, 23`	Do not use. Pin 7 is I2S data, which is why the display moved off Serial2.
PRNG seed	`17`	Left floating deliberately.

Parts beyond the buttons

PART	QTY	WHY
USB-C PD trigger board	1	Set to 9 V. Turns the power bank into a plain DC supply above the XL4015's 8 V input floor.
74AHCT125 quad level shifter	1	Teensy is 3.3 V; WS2812B wants 0.7×VDD on data. The usual cause of flaky pixel builds. Tie unused inputs and `OE` low.
330–470 Ω resistor	1	Series on the data line at the first pixel.
1000 µF electrolytic, ≥ 6.3 V	1	Across 5 V and ground at the bus entry.
JST-XH 6-pin pairs	10	One per lit cap, so it unplugs for service.
JST-XH 2-pin pairs	2	The start buttons — switch only.
Terminal strip or lever nuts	1	The 5 V/GND bus taps. Ten pairs.
30 AWG silicone wire	—	Inside the lit caps only; it has to survive the 3 mm of plunger travel.
0.187" female spade crimps	24	Onto the D44X tabs.

Build order test as you go

01 **Wire one cap completely**
Ring, switch, connector, all six conductors. Getting the first one right tells you the gauge and connector choices work before you repeat them nine times.

02 **Run it on the bench**
Level shifter, resistor, cap, one button. Flash the firmware with `WAM_LIGHTS_PIXELS 1` and open the debug `LED WALK` screen — one ring is enough to prove the data path.

03 **Build the power bus first**
Before any daisy-chaining. Confirm 5 V at every tap with nothing else connected.

04 **Add caps to the chain one at a time**
Each addition is a new failure point, and `LED WALK` names the cap it is lighting. A break shows up immediately as everything downstream going dark.

05 **Meter the rail on `LED ALL`**

The only screen that reaches worst-case current. Do this before the table sees players, not after.

06 **Verify every switch on `BUTTONS`**

Press all twelve, the two start buttons included, and confirm each decodes as the right name. This is what catches a swapped pair in the loom.
