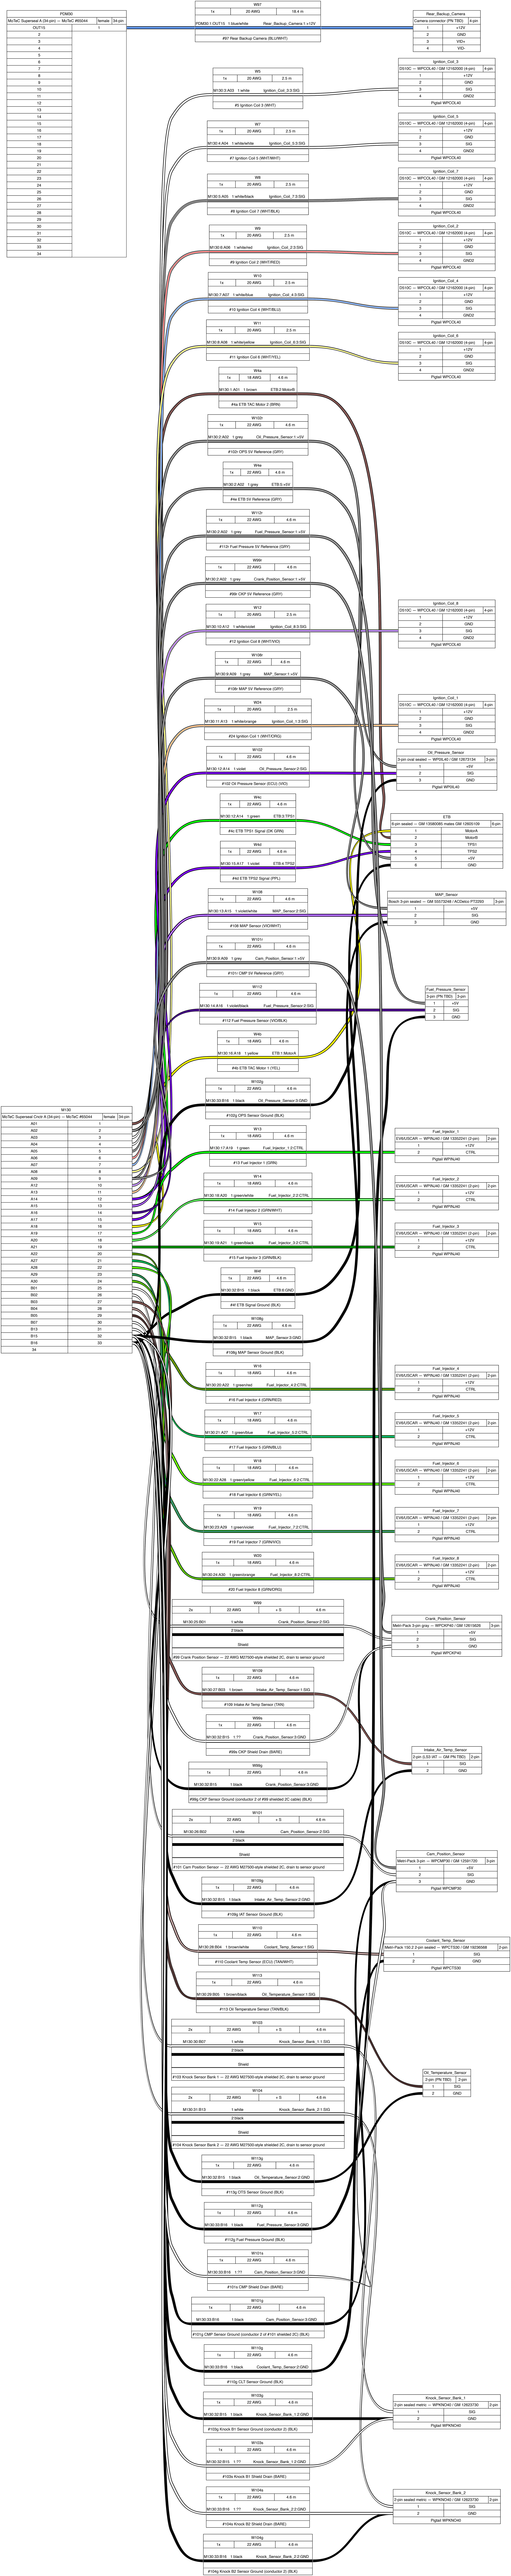

PDM30		
MoTeC Superseal A (34-pin) — MoTeC #65044	female	34-pin
OUT15	1	
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		

M130		
MoTeC Superseal Cnctr A (34-pin) — MoTeC #65044	female	34-pin
A01	1	
A02	2	
A03	3	
A04	4	
A05	5	
A06	6	
A07	7	
A08	8	
A09	9	
A12	10	
A13	11	
A14	12	
A15	13	
A16	14	
A17	15	
A18	16	
A19	17	
A20	18	
A21	19	
A22	20	
A27	21	
A28	22	
A29	23	
A30	24	
B01	25	
B02	26	
B03	27	
B04	28	
B05	29	
B07	30	
B13	31	
B15	32	
B16	33	
34		

W97		
1x	20 AWG	18.4 m
PDM30:1:OUT15	1:blue/white	Rear_Backup_Camera:1:+12V
#97 Rear Backup Camera (BLU/WHT)		

W5		
1x	20 AWG	2.5 m
M130:3:A03	1:white	Ignition_Coil_3:3:SIG
#5 Ignition Coil 3 (WHT)		

W7		
1x	20 AWG	2.5 m
M130:4:A04	1:white/white	Ignition_Coil_5:3:SIG
#7 Ignition Coil 5 (WHT/WHT)		

W8		
1x	20 AWG	2.5 m
M130:5:A05	1:white/black	Ignition_Coil_7:3:SIG
#8 Ignition Coil 7 (WHT/BLK)		

W9		
1x	20 AWG	2.5 m
M130:6:A06	1:white/red	Ignition_Coil_2:3:SIG
#9 Ignition Coil 2 (WHT/RED)		

W10		
1x	20 AWG	2.5 m
M130:7:A07	1:white/blue	Ignition_Coil_4:3:SIG
#10 Ignition Coil 4 (WHT/BLU)		

W11		
1x	20 AWG	2.5 m
M130:8:A08	1:white/yellow	Ignition_Coil_6:3:SIG
#11 Ignition Coil 6 (WHT/YEL)		

W4a		
1x	18 AWG	4.6 m
M130:1:A01	1:brown	ETB:2:MotorB
#4a ETB TAC Motor 2 (BRN)		

W102r		
1x	22 AWG	4.6 m
M130:2:A02	1:grey	Oil_Pressure_Sensor:1:+5V
#102r OPS 5V Reference (GRY)		

W4e		
1x	22 AWG	4.6 m
M130:2:A02	1:grey	ETB:5:+5V
#4e ETB 5V Reference (GRY)		

W112r		
1x	22 AWG	4.6 m
M130:2:A02	1:grey	Fuel_Pressure_Sensor:1:+5V
#112r Fuel Pressure 5V Reference (GRY)		

W99r		
1x	22 AWG	4.6 m
M130:2:A02	1:grey	Crank_Position_Sensor:1:+5V
#99r CKP 5V Reference (GRY)		

W12		
1x	20 AWG	2.5 m
M130:10:A12	1:white/violet	Ignition_Coil_8:3:SIG
#12 Ignition Coil 8 (WHT/VIO)		

W108r		
1x	22 AWG	4.6 m
M130:9:A09	1:grey	MAP_Sensor:1:+5V
#108r MAP 5V Reference (GRY)		

W24		
1x	20 AWG	2.5 m
M130:11:A13	1:white/orange	Ignition_Coil_1:3:SIG
#24 Ignition Coil 1 (WHT/ORG)		

W102		
1x	22 AWG	4.6 m
M130:12:A14	1:violet	Oil_Pressure_Sensor:2:SIG
#102 Oil Pressure Sensor (ECU) (VIO)		

W4c		
1x	22 AWG	4.6 m
M130:12:A14	1:green	ETB:3:TPS1
#4c ETB TPS1 Signal (DK GRN)		

W4d		
1x	22 AWG	4.6 m
M130:15:A17	1:violet	ETB:4:TPS2
#4d ETB TPS2 Signal (PPL)		

W108		
1x	22 AWG	4.6 m
M130:13:A15	1:violet/white	MAP_Sensor:2:SIG
#108 MAP Sensor (VIO/WHT)		

W101r		
1x	22 AWG	4.6 m
M130:9:A09	1:grey	Cam_Position_Sensor:1:+5V
#101r CMP 5V Reference (GRY)		

W112		
1x	22 AWG	4.6 m
M130:14:A16	1:violet/black	Fuel_Pressure_Sensor:2:SIG
#112 Fuel Pressure Sensor (VIO/BLK)		

W4b		
1x	18 AWG	4.6 m
M130:16:A18	1:yellow	ETB:1:MotorA
#4b ETB TAC Motor 1 (YEL)		

W102g		
1x	22 AWG	4.6 m
M130:33:B16	1:black	Oil_Pressure_Sensor:3:GND
#102g OPS Sensor Ground (BLK)		

W13		
1x	18 AWG	4.6 m
M130:17:A19	1:green	Fuel_Injector_1:2:CTRL
#13 Fuel Injector 1 (GRN)		

W14		
1x	18 AWG	4.6 m
M130:18:A20	1:green/white	Fuel_Injector_2:2:CTRL
#14 Fuel Injector 2 (GRN/WHT)		

W15		
1x	18 AWG	4.6 m
M130:19:A21	1:green/black	Fuel_Injector_3:2:CTRL
#15 Fuel Injector 3 (GRN/BLK)		

W4f		
1x	22 AWG	4.6 m
M130:32:B15	1:black	ETB:6:GND
#4f ETB Signal Ground (BLK)		

W108g		
1x	22 AWG	4.6 m
M130:32:B15	1:black	MAP_Sensor:3:GND
#108g MAP Sensor Ground (BLK)		

W16		
1x	18 AWG	4.6 m
M130:20:A22	1:green/red	Fuel_Injector_4:2:CTRL
#16 Fuel Injector 4 (GRN/RED)		

W17		
1x	18 AWG	4.6 m
M130:21:A27	1:green/blue	Fuel_Injector_5:2:CTRL
#17 Fuel Injector 5 (GRN/BLU)		

W18		
1x	18 AWG	4.6 m
M130:22:A28	1:green/yellow	Fuel_Injector_6:2:CTRL
#18 Fuel Injector 6 (GRN/YEL)		

W19		
1x	18 AWG	4.6 m
M130:23:A29	1:green/violet	Fuel_Injector_7:2:CTRL
#19 Fuel Injector 7 (GRN/VIO)		

W20		
1x	18 AWG	4.6 m
M130:24:A30	1:green/orange	Fuel_Injector_8:2:CTRL
#20 Fuel Injector 8 (GRN/ORG)		

W99			
2x	22 AWG	+ S	4.6 m
M130:25:B01	1:white	Crank_Position_Sensor:2:SIG	
	2:black		
	Shield		
#99 Crank Position Sensor — 22 AWG M27500-style shielded 2C, drain to sensor ground			

W109		
1x	22 AWG	4.6 m
M130:27:B03	1:brown	Intake_Air_Temp_Sensor:1:SIG
#109 Intake Air Temp Sensor (TAN)		

W99s		
1x	22 AWG	4.6 m
M130:32:B15	1:??	Crank_Position_Sensor:3:GND
#99s CKP Shield Drain (BARE)		

W99g		
1x	22 AWG	4.6 m
M130:32:B15	1:black	Crank_Position_Sensor:3:GND
#99g CKP Sensor Ground (conductor 2 of #99 shielded 2C cable) (BLK)		

W101			
2x	22 AWG	+ S	4.6 m
M130:26:B02	1:white	Cam_Position_Sensor:2:SIG	
	2:black		
	Shield		
#101 Cam Position Sensor — 22 AWG M27500-style shielded 2C, drain to sensor ground			

W109g		
1x	22 AWG	4.6 m
M130:32:B15	1:black	Intake_Air_Temp_Sensor:2:GND
#109g IAT Sensor Ground (BLK)		

W110		
1x	22 AWG	4.6 m
M130:28:B04	1:brown/white	Coolant_Temp_Sensor:1:SIG
#110 Coolant Temp Sensor (ECU) (TAN/WHT)		

W113		
1x	22 AWG	4.6 m
M130:29:B05	1:brown/black	Oil_Temperature_Sensor:1:SIG
#113 Oil Temperature Sensor (TAN/BLK)		

W103			
2x	22 AWG	+ S	4.6 m
M130:30:B07	1:white	Knock_Sensor_Bank_1:1:SIG	
	2:black		
	Shield		
#103 Knock Sensor Bank 1 — 22 AWG M27500-style shielded 2C, drain to sensor ground			

W104			
2x	22 AWG	+ S	4.6 m
M130:31:B13	1:white	Knock_Sensor_Bank_2:1:SIG	
	2:black		
	Shield		
#104 Knock Sensor Bank 2 — 22 AWG M27500-style shielded 2C, drain to sensor ground			

W113g		
1x	22 AWG	4.6 m
M130:32:B15	1:black	Oil_Temperature_Sensor:2:GND
#113g OTS Sensor Ground (BLK)		

W112g		
1x	22 AWG	4.6 m
M130:33:B16	1:black	Fuel_Pressure_Sensor:3:GND
#112g Fuel Pressure Ground (BLK)		

W101s		
1x	22 AWG	4.6 m
M130:33:B16	1:??	Cam_Position_Sensor:3:GND
#101s CMP Shield Drain (BARE)		

W101g		
1x	22 AWG	4.6 m
M130:33:B16	1:black	Cam_Position_Sensor:3:GND
#101g CMP Sensor Ground (conductor 2 of #101 shielded 2C) (BLK)		

W110g		
1x	22 AWG	4.6 m
M130:33:B16	1:black	Coolant_Temp_Sensor:2:GND
#110g CLT Sensor Ground (BLK)		

W103g		
1x	22 AWG	4.6 m
M130:32:B15	1:black	Knock_Sensor_Bank_1:2:GND
#103g Knock B1 Sensor Ground (conductor 2) (BLK)		

W103s		
1x	22 AWG	4.6 m
M130:32:B15	1:??	Knock_Sensor_Bank_1:2:GND
#103s Knock B1 Shield Drain (BARE)		

W104s		
1x	22 AWG	4.6 m
M130:33:B16	1:??	Knock_Sensor_Bank_2:2:GND
#104s Knock B2 Shield Drain (BARE)		

W104g		
1x	22 AWG	4.6 m
M130:33:B16	1:black	Knock_Sensor_Bank_2:2:GND
#104g Knock B2 Sensor Ground (conductor 2) (BLK)		

Rear_Backup_Camera	
Camera connector (PN TBD)	4-pin
1	+12V
2	GND
3	VID+
4	VID-

Ignition_Coil_3	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_5	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_7	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_2	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_4	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_6	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_8	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Ignition_Coil_1	
D510C — WPCOL40 / GM 12162000 (4-pin)	4-pin
1	+12V
2	GND
3	SIG
4	GND2
Pigtail WPCOL40	

Oil_Pressure_Sensor	
3-pin oval sealed — WP0IL40 / GM 12673134	3-pin
1	+5V
2	SIG
3	GND
Pigtail WP0IL40	

ETB	
6-pin sealed — GM 13580085 mates GM 12605109	6-pin
1	MotorA
2	MotorB
3	TPS1
4	TPS2
5	+5V
6	GND

MAP_Sensor	
Bosch 3-pin sealed — GM 55573248 / ACDelco PT2293	3-pin
1	+5V
2	SIG
3	GND

Fuel_Pressure_Sensor	
3-pin (PN TBD)	3-pin
1	+5V
2	SIG
3	GND

Fuel_Injector_1	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_2	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_3	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_4	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_5	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_6	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_7	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Fuel_Injector_8	
EV6/USCAR — WPINJ40 / GM 13352241 (2-pin)	2-pin
1	+12V
2	CTRL
Pigtail WPINJ40	

Crank_Position_Sensor	
Metri-Pack 3-pin gray — WPCKP40 / GM 12615626	3-pin
1	+5V
2	SIG
3	GND
Pigtail WPCKP40	

Intake_Air_Temp_Sensor	
2-pin (LS3 IAT — GM PN TBD)	2-pin
1	SIG
2	GND

Cam_Position_Sensor	
Metri-Pack 3-pin — WPCMP30 / GM 12591720	3-pin
1	+5V
2	SIG
3	GND
Pigtail WPCMP30	

Coolant_Temp_Sensor	
Metri-Pack 150.2 2-pin sealed — WPCTS30 / GM 19236568	2-pin
1	SIG
2	GND
Pigtail WPCTS30	

Oil_Temperature_Sensor	
2-pin (PN TBD)	2-pin
1	SIG
2	GND

Knock_Sensor_Bank_1	
2-pin sealed metric — WPKNO40 / GM 12623730	2-pin
1	SIG
2	GND
Pigtail WPKNO40	

Knock_Sensor_Bank_2	
2-pin sealed metric — WPKNO40 / GM 12623730	2-pin
1	SIG
2	GND
Pigtail WPKNO40	