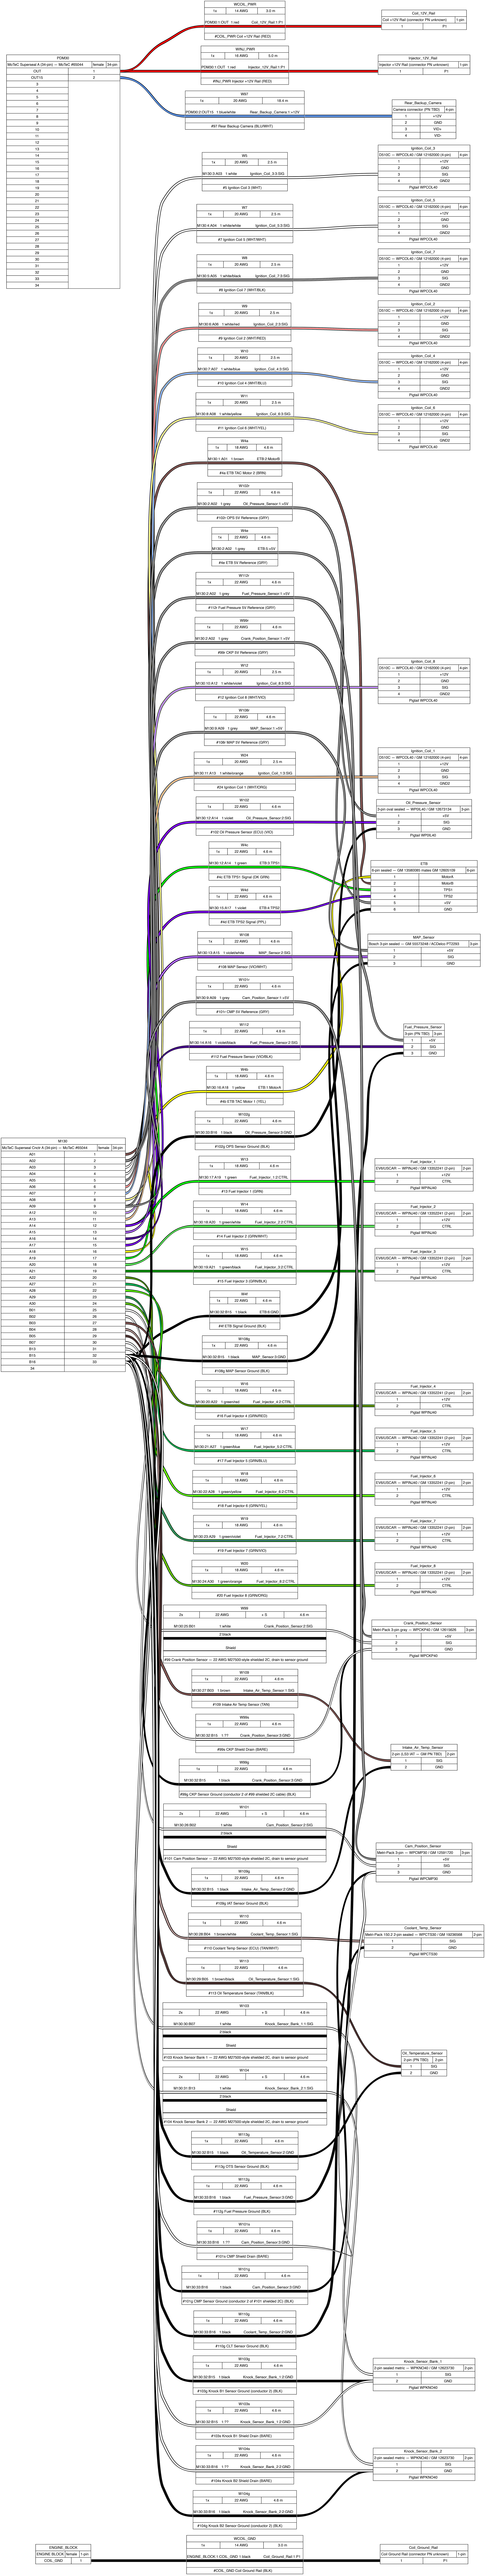
MCON_PWR
1x
14 AWG
5.0 m
PDM26 I OUT - I net
Coil_VIN_Rail I IPx
#CON_PWR Coil +12V Rail (RED)
MAU PWR
1x
14 AWG
5.0 m
PDM26 I OUT - I net
Injector_VIN_Rail I IPx
#Inj_PWR Injector +12V Rail (RED)
Coil_12V_Rail
Coil +12V Rail (connector PN unknown)
3 pin
1
P1
Injector_12V_Rail
Injector +12V Rail (connector PN unknown)
3 pin
1
P1
PDM26
MoTeC Supersack A (54-pin) — MoTeC #65044
female
54-pin
OUT
OUT26
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
#Inj_PWR Injector +12V Rail (RED)
W87
1x
20 AWG
18.6 in
PDM26 I OUT9 - I throttle/idle
Rear_Backup_Camera V +12V
#W Rear Backup Camera (BLU/WHT)
Rear_Backup_Camera
Camera connector (PN TBD)
4 pin
1
+12V
2
GND
3
VIDc
4
VIDc
Ignition_Coil_3
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W5
1x
20 AWG
2.5 in
M130.3.N23 - I white
Ignition_Coil_3 S SIG
#5 Ignition Coil 3 (WHT)
Ignition_Coil_3
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W7
1x
20 AWG
2.5 in
M130.4.N24 - I white/white
Ignition_Coil_4 S SIG
#7 Ignition Coil 5 (WHT/WHT)
Ignition_Coil_4
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W6
1x
20 AWG
2.5 in
M130.1.N25 - I white/black
Ignition_Coil_1 S SIG
#6 Ignition Coil 7 (WHT/BLK)
Ignition_Coil_1
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W9
1x
20 AWG
2.5 in
M130.2.A26 - I white/red
Ignition_Coil_2 S SIG
#9 Ignition Coil 2 (WHT/RED)
Ignition_Coil_2
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W12
1x
20 AWG
2.5 in
M130.7.N27 - I white/blue
Ignition_Coil_4 S SIG
#10 Ignition Coil 4 (WHT/BLU)
Ignition_Coil_4
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W11
1x
20 AWG
2.5 in
M130.8.A28 - I white/yellow
Ignition_Coil_6 S SIG
#11 Ignition Coil 6 (WHT/YEL)
Ignition_Coil_6
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W4a
1x
18 AWG
4.6 in
M130.1.A01 - I brown
ETB-3 MotoR
#4a ETB TAC Motor 2 (BRN)
W102r
1x
22 AWG
4.6 in
M130.2.A22 - I grey
Oil_Pressure_Sensor I +5V
#102r OPS 2V Reference (GRY)
W4a
1x
22 AWG
4.6 in
M130.2.A22 - I grey
ETB-3 +5V
#4a ETB 5V Reference (GRY)
W112r
1x
22 AWG
4.6 in
M130.2.A22 - I grey
Fuel_Pressure_Sensor I +5V
#112r Fuel Pressure 5V Reference (GRY)
W99r
1x
22 AWG
4.6 in
M130.2.A22 - I grey
Crank_Position_Sensor I +5V
#99r CKP 5V Reference (GRY)
W12
1x
20 AWG
2.5 in
M130.10.A12 - I white/violet
Ignition_Coil_8 S SIG
#12 Ignition Coil 8 (WHT/VIO)
Ignition_Coil_8
DI14C – IMPCOL40 / GM 12162000 (4 pin)
4 pin
1
+12V
2
GND
3
SIG
4
GND2
Pigtail IMPCOL40
W106r
1x
22 AWG
4.6 in
M130.9.A06 - I grey
MAP_Sensor I +5V
#106r MAP 5V Reference (GRY)
W21
1x
20 AWG
2.5 in
M130.11.A13 - I white/orange
Ignition_Coil_1 S SIG
#24 Ignition Coil 1 (WHT/ORG)
W102
1x
22 AWG
4.6 in
M130.12.A14 - I violet
Oil_Pressure_Sensor 2 SIG
#102 Oil Pressure Sensor (ECU) (VIO)
Oil_Pressure_Sensor
3-pin oval sealed — WPSL40 / GM 12873134
3 pin
1
+5V
2
SIG
3
GND
Pigtail WPSL40
W4a
1x
22 AWG
4.6 in
M130.12.A14 - I green
ETB-3 TPS1
#4a ETB TPS1 Signal (DK GRN)
ETB
5-pin sealed — GM 13585369 mates GM 13585109
5 pin
1
Motor A
2
Motor B
3
TPS1
4
TPS2
5
+5V
6
GND
W4d
1x
22 AWG
4.6 in
M130.13.A17 - I violet
ETB-3 TPS2
#4d ETB TPS2 Signal (PPL)
MAP_Sensor
Bosch 3-pin sealed — GM 55375348 / ACDelco PT23353
3 pin
1
+5V
2
SIG
3
GND
W108
1x
22 AWG
4.6 in
M130.13.A15 - I violet/white
MAP_Sensor 2 SIG
#108 MAP Sensor (VIO/WHT)
W101r
1x
22 AWG
4.6 in
M130.8.N39 - I grey
Cam_Position_Sensor 1 +5V
#101r CMP 5V Reference (GRY)
W112
1x
22 AWG
4.6 in
M130.14.A16 - I violet/black
Fuel_Pressure_Sensor 2 SIG
#112 Fuel Pressure Sensor (VIO/BLK)
Fuel_Pressure_Sensor
3-pin (PN TBD)
3 pin
1
+5V
2
SIG
3
GND
W4b
1x
18 AWG
4.6 in
M130.18.A18 - I yellow
ETB-1 MotoA
#4b ETB TAC Motor 1 (YEL)
W103g
1x
22 AWG
4.6 in
M130.20.A20 - I black
Oil_Pressure_Sensor 3 GND
#103g OPS Sensor Ground (BLK)
W13
1x
18 AWG
6.6 in
M130.15.A29 - I green
Fuel_Injector_1 LO CTRL
#13 Fuel Injector 1 (GRN)
W14
1x
18 AWG
6.6 in
M130.16.A30 - I green/white
Fuel_Injector_2 LO CTRL
#14 Fuel Injector 2 (GRN/WHT)
W15
1x
18 AWG
4.6 in
M130.17.A31 - I green/blue
Fuel_Injector_3 LO CTRL
#15 Fuel Injector 3 (GRN/BLU)
W16
1x
18 AWG
4.6 in
M130.18.A21 - I green/yellow
Fuel_Injector_4 LO CTRL
#16 Fuel Injector 4 (GRN/YEL)
W4f
1x
22 AWG
4.6 in
M130.32.B15 - I black
ETB-2 GND
#4f ETB Signal Ground (BLK)
W106g
1x
22 AWG
4.6 in
M130.32.B15 - I black
MAP_Sensor 3 GND
#106g MAP Sensor Ground (BLK)
W13
1x
18 AWG
6.6 in
M130.20.A32 - I green/red
Fuel_Injector_5 LO CTRL
#13 Fuel Injector 5 (GRN/RED)
W14
1x
18 AWG
6.6 in
M130.21.A33 - I green/white
Fuel_Injector_6 LO CTRL
#14 Fuel Injector 6 (GRN/WHT)
W15
1x
18 AWG
4.6 in
M130.22.A34 - I green/black
Fuel_Injector_7 LO CTRL
#15 Fuel Injector 7 (GRN/BLK)
W16
1x
18 AWG
4.6 in
M130.23.A35 - I green/violet
Fuel_Injector_8 LO CTRL
#16 Fuel Injector 8 (GRN/VIO)
W99
2x
22 AWG
x 5
4.6 in
M130.25.B01 - I white
Crank_Position_Sensor S SIG
Shield
Shield
#99 Crank Position Sensor — 22 AWG M27500-style shielded 2C; drain to sensor ground
Crank_Position_Sensor
Main Pack 3-pin — IMPCOP40 / GM 12015726
3 pin
1
+5V
2
SIG
3
GND
Pigtail IMPCOP40
W105
1x
22 AWG
4.6 in
M130.27.B03 - I brown
Intake_Air_Temp_Sensor 1 SIG
#106 Intake Air Temp Sensor (TAN)
W99s
1x
22 AWG
4.6 in
M130.32.B15 - I 177
Crank_Position_Sensor S GND
#99s CKP Shield Drain (BARE)
Intake_Air_Temp_Sensor
4-pin (LS) AT – GM PN TBCL
4 pin
1
SIG
2
GND
W99g
1x
22 AWG
4.6 in
M130.32.B15 - I black
Crank_Position_Sensor S GND
#99g CKP Sensor Ground (conductor 3 of #99 shielded 2C cable) (BLK)
W101
2x
22 AWG
x 5
4.6 in
M130.29.B02 - I white
Cam_Position_Sensor 2 SIG
Shield
Shield
#101 Cam Position Sensor — 22 AWG M27500-style shielded 2C; drain to sensor ground
Cam_Position_Sensor
Main Pack 3-pin — IMPCOP150 / GM 12581720
3 pin
1
+5V
2
SIG
3
GND
Pigtail IMPCOP150
W105g
1x
22 AWG
4.6 in
M130.32.B15 - I black
Intake_Air_Temp_Sensor 2 GND
#105g IAT Sensor Ground (BLK)
W102
2x
22 AWG
x 5
4.6 in
M130.28.B04 - I brown/white
Coolant_Temp_Sensor 2 SIG
Shield
Shield
#102 Coolant Temp Sensor (ECU) (TAN/WHT)
Coolant_Temp_Sensor
Main Pack 150.2 2-pin sealed — WPCT026 / GM 15236568
2 pin
1
SIG
2
GND
Pigtail WPCT0260
W112
1x
22 AWG
4.6 in
M130.28.B05 - I brown/black
Oil_Temperature_Sensor 1 SIG
#113 Oil Temperature Sensor (TAN/BLK)
W103
2x
22 AWG
x 5
4.6 in
M130.30.B07 - I white
Knock_Sensor_Bank_1 1 SIG
Shield
Shield
#103 Knock Sensor Bank 1 — 22 AWG M27500-style shielded 2C; drain to sensor ground
Oil_Temperature_Sensor
2-pin (PN TBD)
2 pin
1
SIG
2
GND
W104
2x
22 AWG
x 5
4.6 in
M130.31.B13 - I white
Knock_Sensor_Bank_2 1 SIG
Shield
Shield
#104 Knock Sensor Bank 2 — 22 AWG M27500-style shielded 2C; drain to sensor ground
W112g
1x
22 AWG
4.6 in
M130.32.B15 - I black
Oil_Temperature_Sensor 2 GND
#112g OTS Sensor Ground (BLK)
W13g
1x
22 AWG
4.6 in
M130.32.B15 - I black
Fuel_Pressure_Sensor 3 GND
#13g Fuel Pressure Ground (BLK)
W101s
1x
22 AWG
4.6 in
M130.33.B16 - I 177
Cam_Position_Sensor S GND
#101s CMP Shield Drain (BARE)
W101g
1x
22 AWG
4.6 in
M130.33.B16 - I black
Cam_Position_Sensor 3 GND
#101g CMP Sensor Ground (conductor 3 of #101 shielded 2C) (BLK)
W112g
1x
22 AWG
4.6 in
M130.33.B16 - I black
Coolant_Temp_Sensor 2 GND
#112g OLT Sensor Ground (BLK)
W103g
1x
22 AWG
4.6 in
M130.32.B15 - I black
Knock_Sensor_Bank_1 2 GND
#103g Knock B1 Sensor Ground (conductor 2) (BLK)
Knock_Sensor_Bank_1
2-pin sealed metric — WPNCH40 / GM 12623730
2 pin
1
SIG
2
GND
Pigtail WPNCH40
W103s
1x
22 AWG
4.6 in
M130.33.B16 - I 177
Knock_Sensor_Bank_1 S GND
#103s Knock B1 Shield Drain (BARE)
W104g
1x
22 AWG
4.6 in
M130.33.B16 - I black
Knock_Sensor_Bank_2 2 GND
#104g Knock B2 Sensor Ground (conductor 2) (BLK)
Knock_Sensor_Bank_2
2-pin sealed metric — WPNCH40 / GM 12623730
2 pin
1
SIG
2
GND
Pigtail WPNCH40
W104s
1x
22 AWG
4.6 in
M130.33.B16 - I 177
Knock_Sensor_Bank_2 S GND
#104s Knock B2 Shield Drain (BARE)
W104g
1x
22 AWG
4.6 in
M130.33.B16 - I black
Knock_Sensor_Bank_2 2 GND
#104g Knock B2 Sensor Ground (conductor 2) (BLK)
MCON_GND
1x
14 AWG
5.0 m
ENGINE_BLOCK I GND - I GND
Coil_Ground_Rail I P1
#CON_GND Coil Ground Rail (BLK)
Coil_Ground_Rail
Coil Ground Rail (connector PN unknown)
1 pin
1
P1
M130
MoTeC Supersack Cont A (54-pin) — MoTeC #65044
female
54-pin
A01
1
A02
2
A03
3
A04
4
A05
5
A06
6
A07
7
A08
8
A09
9
A10
10
A11
11
A12
12
A13
13
A14
14
A15
15
A16
16
A17
17
A18
18
A19
19
A20
20
A21
21
A22
22
A23
23
A24
24
A25
25
A26
26
A27
27
A28
28
A29
29
A30
30
B01
31
B02
32
B03
33
B04
34
B05
35
B06
36
B07
37
B13
38
B14
39
B15
40
B16
41
ENGINE_BLOCK
ENGINE BLOCK female
1 pin
CON_GND
1